

PC800s/900s

SERVICE MANUAL

REVISION 0

PC860 (F13-8491	TYA00001-)	PC940 (F13-8436	TVD00001-)
PC880 (F13-8291	TZA00001-)	PC941 (F13-8437	TVE00001-)
PC890 (F13-8242	UAA00001-)	PC950 (F13-8231 F13-8241	TVF00001- PUF00001- PUG00001-)
PC920 (F13-8431 F13-8441 F13-8461	TVB00001- PUD00001- PUE00001- PUH00001-)	PC960 (F13-8434	TVG00001-)
PC921 (F13-8432	TVC00001-)	PC980 (F13-8232	TVH00001-)
		PC981 (F13-8233	TVJ00001-)

Canon

AUG. 1999

FY8-13GA-000

IMPORTANT

THIS DOCUMENTATION IS PUBLISHED BY CANON INC., JAPAN, TO SERVE AS A SOURCE OF REFERENCE FOR WORK IN THE FIELD.

SPECIFICATIONS AND OTHER INFORMATION CONTAINED HEREIN MAY VARY SLIGHTLY FROM ACTUAL MACHINE VALUES OR THOSE FOUND IN ADVERTISING AND OTHER PRINTED MATTER.

ANY QUESTIONS REGARDING INFORMATION CONTAINED HEREIN SHOULD BE DIRECTED TO THE COPIER SERVICE DEPARTMENT OF THE SALES COMPANY.

THIS DOCUMENTATION IS INTENDED FOR ALL SALES AREAS, AND MAY CONTAIN INFORMATION NOT APPLICABLE TO CERTAIN AREAS.

COPYRIGHT © 1999 CANON INC.

Printed in Japan

Imprimé au Japon

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

Prepared by

OFFICE IMAGING PRODUCTS TECHNICAL SUPPORT DIVISION

CANON INC.

5-1, Hakusan 7-chome, Toride-shi, Ibaraki 302-8501 Japan

INTRODUCTION

This service manual has been prepared for the PC800/900 Series machines, providing basic information used for servicing the machines in the field so as to ensure their quality and performance.


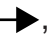
This service manual consists of the following chapters:

- Chapter 1 *General Description* introduces the machine's features, specifications, names of parts, and how originals are reproduced.
- Chapter 2 *Basic Operation* explains how copies are made on a step-by-step basis.
- Chapter 3 *Exposure System* discusses the principles of operation used for the machine's exposure system. It also explains the timing at which exposure-related mechanisms are operated, and shows how they may be disassembled/assembled and adjusted.
- Chapter 4 *Image Formation System* discusses the principles of operation used for the machine's image formation system. It also explains the timing at which image formation-related mechanisms are operated, and shows how they may be disassembled/assembled and adjusted.
- Chapter 5 *Pick-Up/Feeding System* discusses the principles of operation used for the machine's pickup/feeding system. It also explains the timing at which pickup/feeding-related mechanisms are operated, and shows how they may be disassembled/assembled and adjusted.
- Chapter 6 *Fixing System* discusses the principles of operation used for the machine's fixing system. It also explains the timing at which fixing-related mechanisms are operated, and shows how they may be disassembled/assembled and adjusted.
- Chapter 7 *Externals/Auxiliary Mechanisms* discusses the principles of operation used for the machine's externals/auxiliary mechanisms. It also explains the timing at which auxiliary mechanism-related mechanisms are operated, and shows how they may be disassembled/assembled and adjusted.
- Chapter 8 *ADF* explains the principles of operation of the ADF in view of electrical and mechanical functions and in relation to their timing of operation. It also shows how the unit may be disassembled/assembled and adjusted.
- Chapter 9 *Installation* introduces requirements for the site of installation, and shows how the machine may be installed using step-by-step instructions.
- Chapter 10 *Maintenance and Servicing* provides tables of periodically replaced parts and consumables/durables and scheduled servicing charts.
- Chapter 11 *Troubleshooting* provides tables of maintenance/inspection, standards/adjustments, and problem identification (image fault/malfunction).

Appendix contains a general timing chart and general circuit diagrams.

The following rules apply throughout this Service Manual:

1. Each chapter contains sections explaining the purpose of specific functions and the relationship between electrical and mechanical systems with reference to the timing of operation.

In the diagrams,  represents the path of mechanical drive—where a signal name accompanies the symbol , the arrow indicates the direction of the electric signal.

The expression “turn on the power” means flipping on the power switch, closing the front door, and closing the delivery unit door, which results in supplying the machine with power.

2. In the digital circuits, ‘1’ is used to indicate that the voltage level of a given signal is “High,” while ‘0’ is used to indicate “Low.” (The voltage value, however, differs from circuit to circuit.)

In practically all cases, the internal mechanisms of a microprocessor cannot be checked in the field. Therefore, the operations of the microprocessors used in the machines are not discussed: they are explained in terms of from sensors to the input of the DC controller PCB and from the output of the DC controller PCB to the loads.

The descriptions in this Service Manual are subject to change without notice for product improvement or other reasons, and major changes will be communicated in the form of Service Information bulletins.

All service persons are expected to have a good understanding of the contents of this Service Manual and all relevant Service Information bulletins and be able to identify and isolate faults in the machine.

- This service manual covers the models shown in the following table. Be sure to have a good understanding of the difference from model to model before referring to this manual.

Model	Type code	Multi-feeder	Single feeder	Zoom	Default ratio	Density correction switch (SW101)	ADF as standard	Cassette	Copying speed (cpm) at Direct
PC860	TYA		✓	✓	2R2E	✓		250 sheets	12
PC880	TZA	✓		✓	2R2E	✓		250 sheets	12
PC890	UAA	✓		✓	2R2E	✓	✓	250 sheets	12
PC920	PUD		✓	✓	2R2E	✓		Universal	10
PC920	PUE		✓	✓	2R2E	✓		Universal	10
PC920	PUH		✓	✓	2R2E	✓		Universal	10
PC920	TVB		✓	✓	3R1E			Universal	10
PC921	TVC		✓		3R1E			Universal	10
PC940	TVD		✓	✓	3R1E			Universal	13
PC941	TVE		✓		3R1E			Universal	13
PC950	PUF	✓		✓	2R2E	✓		Universal	12
PC950	PUG	✓		✓	2R2E	✓		Universal	12
PC950	TVF	✓		✓	3R1E			500 sheets	13
PC960	TVG	✓		✓	3R1E		✓	Universal	10
PC980	TVH	✓		✓	3R1E		✓	500 sheets	13
PC981	TVJ	✓			3R1E		✓	500 sheets	13

The notation “✓” indicates that the item in question is available.

CONTENTS

CHAPTER 1 GENERAL DESCRIPTION

I. FEATURES	1-1	IV. USING THE MACHINE	1-15
II. SPECIFICATIONS	1-2	A. Control Panel	1-15
A. Copier	1-2	V. ROUTINE MAINTENANCE	
B. ADF	1-8	BY THE USER	1-17
III. NAMES OF PARTS	1-10	VI. IMAGE FORMATION	1-20
A. External View	1-10	A. Outline	1-20
B. Cross Section	1-13		

CHAPTER 2 BASIC OPERATION

I. BASIC OPERATIONS	2-1	D. Controlling the Main Motor	
A. Functional Construction	2-1	(M1)	2-5
B. Outline of Electrical		E. Inputs to and Outputs from	
Circuitry	2-2	the DC Controller	2-7
C. Basic Sequence of			
Operations	2-3		

CHAPTER 3 EXPOSURE SYSTEM

I. OPERATIONS	3-1	A. Controlling the Scanning	
A. Outline	3-1	Lamp	3-9
B. Varying the Reproduction		III. DISASSEMBLY/ASSEMBLY	3-12
Ratio	3-2	A. Scanner Drive Assembly	3-13
C. Lens Drive System	3-3	B. Lens Drive Assembly	3-31
D. Scanner Drive System	3-4	C. Exposure System	3-37
II. EXPOSURE SYSTEM	3-9		

CHAPTER 4 IMAGE FORMATION SYSTEM

- | | |
|----------------------------------|------------------------------------|
| I. IMAGE FORMATION SYSTEM ...4-1 | F. Measuring the Density of |
| A. Outline4-1 | Originals 4-16 |
| B. Timing Chart for the Image | G. Controlling the Side Blanking |
| Formation System4-3 | Mechanism 4-21 |
| C. Controlling the Primary | II. DISASSEMBLY/ASSEMBLY 4-22 |
| Charging Roller Bias4-4 | A. Cartridge 4-23 |
| D. Controlling the Transfer | B. Transfer Charging |
| Roller Bias4-8 | Assembly 4-25 |
| E. Controlling the Developing/ | C. Blank Exposure 4-26 |
| Separation Static Eliminator | |
| Bias 4-11 | |

CHAPTER 5 PICK-UP/FEEDING SYSTEM

- | | |
|------------------------------------|-------------------------------------|
| I. PICKUP/FEEDING SYSTEM.....5-1 | A. Pickup Assembly 5-19 |
| A. Outline5-1 | B. Multifeeder Assembly 5-28 |
| B. Controlling the Pickup | C. Single-feeder Assembly 5-31 |
| Roller5-3 | D. Feeding Assembly 5-33 |
| C. Controlling the Movement of | E. Registration Roller |
| Paper5-9 | Assembly 5-34 |
| D. Detecting Jams 5-12 | F. Delivery Assembly 5-36 |
| II. DISASSEMBLY/ASSEMBLY 5-18 | |

CHAPTER 6 FIXING SYSTEM

- | | |
|---------------------------|------------------------------------|
| I. OPERATIONS6-1 | II. DISASSEMBLY/ASSEMBLY 6-10 |
| A. Outline6-1 | A. Fixing Assembly 6-11 |
| B. Controlling the Fixing | |
| Temperature6-3 | |

CHAPTER 7 EXTERNALS/AUXILIARY MECHANISMS

I. FANS	7-1	III. DISASSEMBLY/ASSEMBLY	7-7
II. POWER SUPPLY SYSTEM	7-3	A. External Covers	7-8
A. Outline of the Power Supply System	7-3	B. Control Panel	7-15
B. Power Supply Circuit	7-4	C. Copyboard Glass	7-16
C. Detecting an Error on the Composite Power Supply PCB	7-6	D. Main Motor/Main Drive Assembly	7-17
D. Protecting the Power Supply Circuit	7-6	E. Electrical System	7-21

CHAPTER 8 ADF

I. ADF	8-1	H. Controlling the Belt Motor ..	8-15
A. Outline	8-1	I. Detecting Original Jams	8-16
B. Basic Construction	8-2	J. Power Supply	8-17
C. Basic Operations	8-4	II. DISASSEMBLY/ASSEMBLY	8-18
D. Detecting an Original	8-6	A. Removing the ADF	8-19
E. Pickup Operation	8-8	B. External Covers	8-21
F. Delivery	8-12	C. Drive System	8-23
G. Controlling the Pickup Motor	8-14	D. Feeding System	8-26
		E. Electrical System	8-33

CHAPTER 9 INSTALLATION

I. SELECTING A SITE	9-1	B. Placing Copy Paper	9-9
II. UNPACKING AND INSTALLATION	9-2	III. MOVING THE MACHINE	9-12
A. Unpacking and Installation	9-2		

CHAPTER 10 MAINTENANCE AND SERVICING

I. PERIODICALLY REPLACED PARTS	10-1	A. Storing the Cartridge with the Packaging Seal Intact	10-2
II. DURABLES AND CONSUMABLES	10-1	B. Storing and Handling the Cartridge with the Packaging Seal Removed	10-3
III. SCHEDULED SERVICING	10-1		
IV. STORING AND HANDLING THE CARTRIDGE	10-2		

CHAPTER 11 TROUBLESHOOTING

I. MAINTENANCE AND INSPECTION	11-3	A. Troubleshooting Malfunctions	11-61
A. Image Adjustment Basic Procedure	11-3	V. TROUBLESHOOTING FEEDING PROBLEMS	11-75
B. Points to Note for Servicing	11-4	A. Copy Paper Jam	11-75
II. STANDARDS AND ADJUSTMENTS	11-5	B. Faulty Feeding	11-78
A. Mechanical	11-5	VI. ARRANGEMENT AND FUNCTIONS OF ELECTRICAL PARTS	11-79
B. ADF	11-30	A. Sensors and Solenoids	11-79
C. Electrical	11-41	B. Switches	11-80
III. TROUBLESHOOTING IMAGE FAULTS	11-48	C. Lamp, Heater, Motor, Etc.	11-81
A. Making Initial Checks	11-48	D. PCBs	11-82
B. Sample Image Faults	11-52	E. ADF	11-83
C. Troubleshooting Image Faults	11-53	F. Variable Resistors (VR) and Check Pins by PCB	11-84
IV. TROUBLESHOOTING MALFUNCTIONS	11-61	VII. SELF DIAGNOSIS	11-86

APPENDIX

A. GENERAL TIMING CHART	A-1	I. SENSOR CIRCUIT DIAGRAM	A-30
B. SIGNALS AND ABBREVIATIONS	A-3	J. NOISE FILTER CIRCUIT DIAGRAM	A-31
C. GENERAL CIRCUIT DIAGRAM	A-5	K. HIGH VOLTAGE CONTACT CIRCUIT DIAGRAM	A-32
D. DC CONTROLLER CIRCUIT DIAGRAM	A-7	L. BLANK EXPOSURE (front) CIRCUIT DIAGRAM	A-33
E. ADF CONTROLLER CIRCUIT DIAGRAM	A-15	M. BLANK EXPOSURE (rear) CIRCUIT DIAGRAM	A-34
F. COMPOSITE POWER SUPPLY CIRCUIT DIAGRAM	A-19	N. SPECIAL TOOLS	A-35
G. CONTROL PANEL CIRCUIT DIAGRAM	A-27	O. SOLVENTS/OILS	A-36
H. AE SENSOR CIRCUIT DIAGRAM	A-29		

CHAPTER 1

GENERAL DESCRIPTION

This chapter provides specifications of the machine, instructions on how to operate the machine, and an outline of copying process.

I. FEATURES	1-1	IV. USING THE MACHINE	1-15
II. SPECIFICATIONS	1-2	A. Control Panel.....	1-15
A. Copier	1-2	V. ROUTINE MAINTENANCE	
B. ADF	1-8	BY THE USER	1-17
III. NAMES OF PARTS	1-10	VI. IMAGE FORMATION	1-20
A. External View	1-10	A. Outline	1-20
B. Cross Section	1-13		

I. FEATURES

1. Personal Copier with a Zoom Function and a Fixed Copyboard

- You can choose either a default enlargement/reduction ratio or any ratio between 70% and 141% in 1% increments.

2. Ecology-Conscious

- The use of a roller charging method has resulted in a considerable reduction of ozone: 0.01 ppm or less on the average, 0.02 ppm or less at maximum (1/100 to 1/1000 compared with existing Canon machines).

3. SURF Fixing Assembly

- The wait time is 0 sec (at 20°C room temperature), enabling speedy copying work immediately after power-on.

4. Various Paper Sizes

- The paper may be between A4 (LGL) and A5 (STMT) (*Using the universal cassette).
- In manual feed mode, paper may be as large as A4 (LGL) or as small as a business card.

5. All-in-One Cartridge for Simple Maintenance

- The photosensitive drum, toner case, charging roller, developing assembly, and cleaning assembly are constructed as a single entity (cartridge).
The user may expect quality copy images at all times as long as he/she performs simple replacement/cleaning work.

6. Large Paper Source

- The source of paper may contain as many as 550 sheets of paper (500-sheet cassette + multifeeder; multifeeder type).

7. Separate top unit

- The machine's top unit may be opened to make jam removal easy.

8. ADF Type

- Continuous copying is possible with the use of the ADF.

II. SPECIFICATIONS

A. Copier

1. Type

Item	Descriptions
Body	Desk top
Copyboard	Fixed
Source of light	Halogen lamp (80 V/110 W for 120V-model; 150 V/160 W for 220/240 V-model)
Lens	Fixed focal point lens
Photosensitive medium	OPC drum (24-mm dia.)

Table 1-201

2. Mechanisms

Item	Descriptions
Reproduction	Indirect static reproduction
Charging	Roller (direct charging)
Exposure	Slit (moving light source)
Copy density adjustment	Auto or manual
Development	Dry (toner projection)
Pickup	Cassette (1 pc.) Single-feeder (single-feeder type) Multifeeder (multifeeder type)
Separation	Curvature separation + static eliminator
Fixing	Flat heater
Cleaning	Blade
Original orientation	Center reference (copyboard)

Table 1-202

3. Performance

Item	Descriptions
Original type	Sheet, book, 3-D object (2kg max.)
Maximum original size	A4 (297 × 210 mm)/LGL (216 × 356 mm)
Reproduction ratio	Inch/AB-configuration: 2R2E Inch-configuration: 3R1E
Zoom	70% to 141% (in 1% increments ^{*1})
Wait time	0 sec (at 20°C room temperature)
First copy time	10 sec or less (at 20°C room temperature; Direct, non-AE, from the cassette)
Continuous copying	100 (max.)
Copy size	A4/LGL (297 × 210 mm/216 × 356 mm max.) Business card (90 × 55 mm, min.)
Copy paper type	Cassette: Plain paper (64 to 80 g/m ²), tracing paper (SM-1, A4R/B5R), colored paper, recycled paper (64 to 80 g/m ² ; A4R/B5R), eco paper (80 g/m ² ; A4R) Manual Feeder: Plain paper (52 to 128 g/m ²), tracing paper (SM-1, GNT-80 ^{*2} ; A4R/B5R), transparency ^{*2,*4} (A4R/LTRR ^{*3}), colored paper, business card (200 g/m ² or less), label sheet ^{*2} (A4R/LTRR), recycled paper (64 to 80 g/m ² ; A4R/B5R), eco paper (80 g/m ² ; A4R), postcard ^{*3} Double-Sided/Overlay Copying ^{*5} : Plain paper (64 to 128 g/m ²), colored paper, business card (200 g/m ² or less), recycled paper (64 to 80 g/m ² ; A4R/B5R), eco paper (80 g/m ² ; A4R), postcard ^{*3}
Cassette	With claws Universal cassette (250 sheets of 80 g/m ² paper; A4/LGL to A5/STMT) 250-sheet cassette (250 sheets of 80 g/m ²) 500-sheet cassette (500 sheets of 80 g/m ²)
Multifeeder tray	5 mm deep (approx.; 50 sheets of 80 g/m ²)
Copy tray	100 sheets (A4; 80 g/m ²)
Non-image width	Leading edge: 2.0 ± 1.5 mm (Direct; 4.0 mm or less otherwise) Left/right: 0.0 + 2.0, -0.0 mm (0 + 4.0, -0.0 mm for LTR)
Auto power-off	Provided (5 min, approx.; fixed) ^{*6}

Table 1-203

- *1. Applies only to models with a zoom function.
- *2. Applies only to single pickup if the multifeeder is used.
- *3. Applies only to vertical feeding.
- *4. Upon delivery, be sure to remove each from the copy tray.
- *5. Be sure to remove any curling before feeding for a second time.
- *6. If stopped because paper ran out during copying operation, 1 hr.

4. Others

Item	Descriptions
Operating condition	
Temperature	7.5°C to 32.5°C/44.5°F to 90.5°F
Humidity	5% to 85% RH
Atmospheric pressure	607.95 to 1013.25 hPa (0.6 to 1 atm)
Power source	120 V 60 Hz 220/240 V 50 Hz, 60 Hz
Serial number	TVBxxxxx PUDxxxxx PUHxxxxx TVCxxxxx PUExxxxx TVDxxxxx PUFxxxxx TVExxxxx PUGxxxxx TVFxxxxx TYAxxxxx TVGxxxxx TZAxxxxx TVHxxxxx UAAxxxxx TVJxxxxx
Maximum power consumption	0.9 kW or less Standby: 1.2W (approx.; about 5min; reference only) Copying: 0.4kWh (approx.; reference only)
Noise	Standby: -(sound power level by ISO) Copying: (sound power level by ISO) • Single-feeder type: 68 dB or less • Multifeeder type: 66 dB or less
Ozone	0.01 ppm or less (average; 0.02 ppm or less, max.)
Dimensions (WxDxH)	Copyboard Type 484.9 × 448.2 × 297.5 mm ^{*1} / 329.0 mm ^{*2} 19.1 in. × 17.6 in × 11.7 in ^{*1} / 13.0 in ^{*2} ADF Type 484.9 × 448.2 × 358.3 mm ^{*1} / 389.8 mm ^{*2} 19.1 in × 17.6 in × 14.1 in ^{*1} / 15.3 in ^{*2}
Weight (including the cassette)	Copyboard Type Single-feeder type: 19.3 kg ^{*1} / 42.5 lb ^{*1} , 20.9 kg ^{*2} / 46.0 lb ^{*2} Multifeeder type: 19.5 kg ^{*1} / 42.9 lb ^{*1} , 21.1 kg ^{*2} / 46.4 lb ^{*2} ADF Type Single-feeder type: 23.8 kg ^{*1} / 52.4 lb ^{*1} , 25.2 kg ^{*2} / 55.4 lb ^{*2} Multifeeder type: 24.0 kg ^{*1} / 52.8 lb ^{*1} , 25.4 kg ^{*2} / 55.9 lb ^{*2}
Consumables	Copy paper: Keep wrapped, and protect against humidity. Toner: Avoid direct sunlight, and store at 40°C/104°F, 85% or less.

Table 1-204

*1. 250-sheet cassette type

*2. 500-sheet cassette type

5. Default Ratios

Item	2R2E (Inch/AB-configuration)	3R1E (Inch-configuration)
Direct	1:1.000	1:1.000
Reduce I	1:0.707	1:0.707
Reduce II		1:0.786
Reduce III	1:0.816	
Reduce IV		1:0.860
Enlarge I	1:1.154	
Enlarge II	1:1.414	1:1.414

Table 1-205

6. Copying Speed

Copying speed at Direct	Reproduction ratio	Copy size	Number of copies (Multifeeder*1) (Copies / min)
13	Direct Reduce I (70.7%) Reduce II (78.6%) Reduce IV (86.0%) Enlarge II (141.4%)	LTRR LGL STMTR MIN LGL → LTRR MARJIN MAX	13 (9) 11 (8) 13 (9) 13 (9) 13 (9) 13 (9) 10 (9)
12	Direct Reduce I (70.7%) Reduce III (81.6%) Enlarge I (115.4%) Enlarge II (141.4%)	A4R B5R A5R A4R → A5R B5R → A5R B5R → A4R A5R → A4R	12 (9) 12 (9) 12 (9) 12 (9) 12 (9) 12 (9) 10 (9)
10	Direct Reduce I (70.7%) Reduce III (81.6%) Enlarge I (115.4%) Enlarge II (141.4%)	A4R B5R A5R A4R → A5R B5R → A5R B5R → A4R A5R → A4R	10 (9) 10 (9) 10 (9) 10 (9) 10 (9) 10 (9) 10 m(9)
10	Direct Reduce I (70.7%) Reduce II (78.6%) Reduce III (86.0%) Enlarge II (141.4%)	LTRR LGL STMTR MIN LGL → LTRR MARJIN MAX	10 (9) 9 10 (9) 10 (9) 10 (9) 10 (9) 9

Table 1-206

- *1. The number of copies starting with the pickup operation that follows the delivery of the 19th copy in a continuous copying job. (See p.5-8)

The specifications are subject to change for product improvement.

B. ADF

Item	Descriptions
Original pickup	Auto pickup/delivery
Original orientation	Face-down
Original position	Center reference
Original separation	Top separation
Original type	Single-sided (50 to 128 g/m ²) A5 (STMT) to A4R (LTRR), LGL Length: 139.7 to 355.6 mm (feeding direction) Width: 139.7 to 215.9 mm
Stack	30 sheets (80 g/m ² or less; about 3 mm in height)
Original processing mode	Single-sided original to single-sided copy
Original size detection	Yes (in feeding direction)
Mixed original sizes	No
Original detection	Yes
Original feeding speed	446 mm/sec
Communication with host	IPC
Dimensions	Width: 474 mm/ 18.7 in. (659 mm/ 25.9 in. with the tray open) Depth: 394 mm/ 15.5 in. Height: 74 mm/ 2.9 in. (216 mm/ 8.5 in. with the tray open)
Weight	5 kg/ 11 lb (approx.)
Power source	24 VDC and 5 VDC (from the host)
Maximum power consumption	40 W or less
Operating environment	Temperature: same as the host Humidity: same as the host

Table 1-207

*1. The following may not be used as an original:

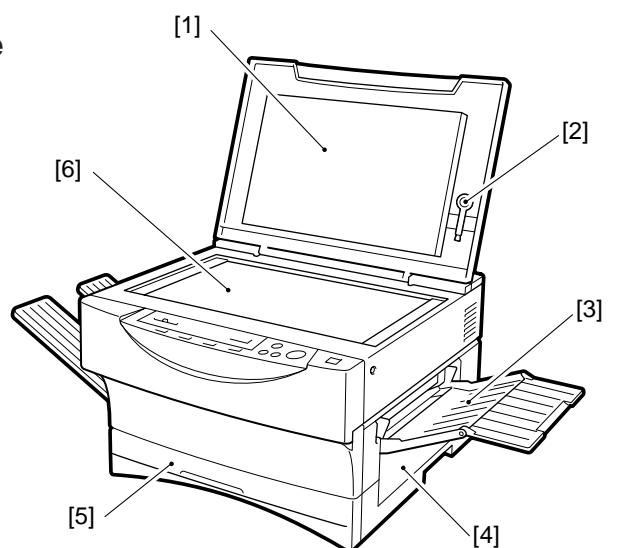
- Sheet with a staple, clip, or glue.
- Sheet with a cut, hole, or tear.
- Sheet with holes for binding.
- Sheet with a carbon back.
- Sheet with a cut-and-paste piece.
- Sheet with curling, bending, or wrinkling.

The specifications are subject to change for product improvement.

III. NAMES OF PARTS


A. External View

1. Copyboard Type



- | | |
|-------------------------------|---------------------|
| [1] Copyboard cover | [4] Right door |
| [2] Static eliminator cleaner | [5] Cassette |
| [3] Manual feed tray | [6] Copyboard glass |

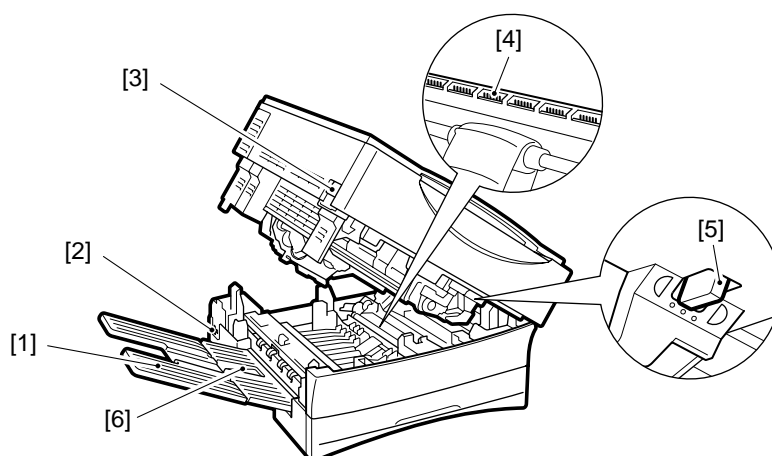
Figure 1-301



- | | |
|--------------------------|------------------------------------|
| [1] Copy tray | [4] Static eliminator |
| [2] Power cord connector | [5] Copy density correction switch |
| [3] Open/close lever | [6] Delivery guide plate |


Figure 1-302

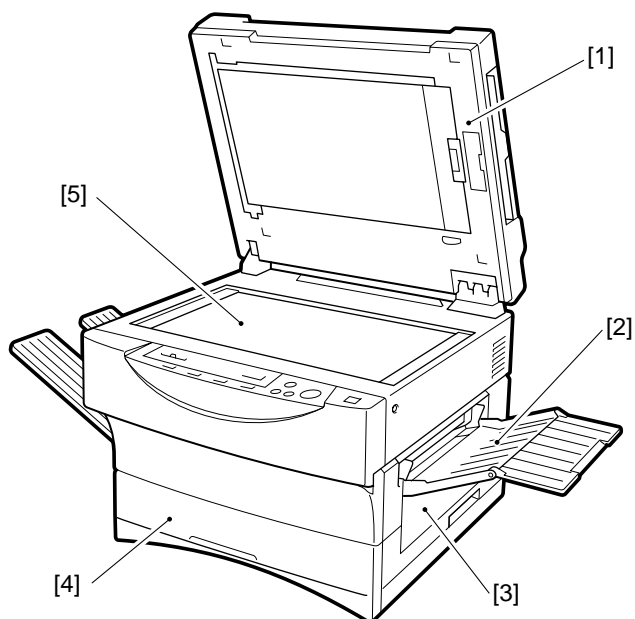2. ADF Type



- | | |
|----------------------|---------------------|
| [1] ADF | [4] Cassette |
| [2] Manual feed tray | [5] Copyboard glass |
| [3] Right door | |

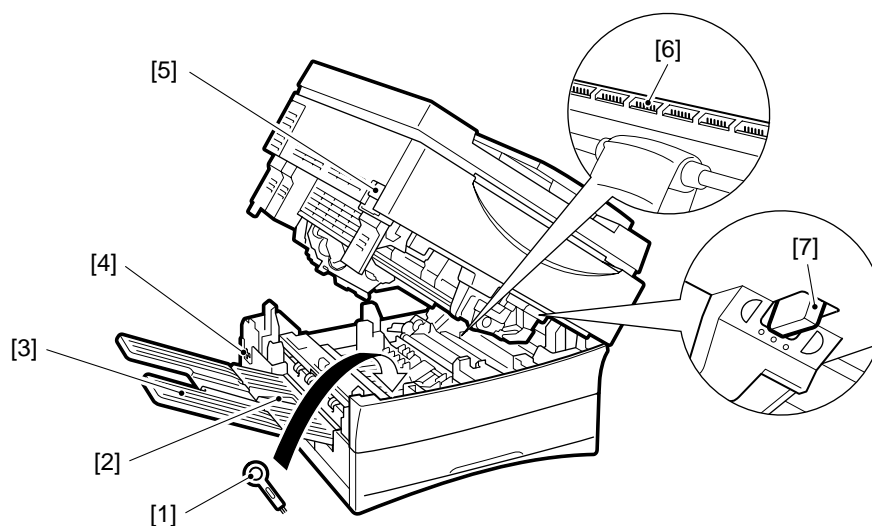
Figure 1-303



- | | |
|-------------------------------|------------------------------------|
| [1] Static eliminator cleaner | [5] Open/close lever |
| [2] Delivery guide plate | [6] Static eliminator |
| [3] Copy tray | [7] Copy density correction switch |
| [4] Power cord connector | |

Figure 1-304

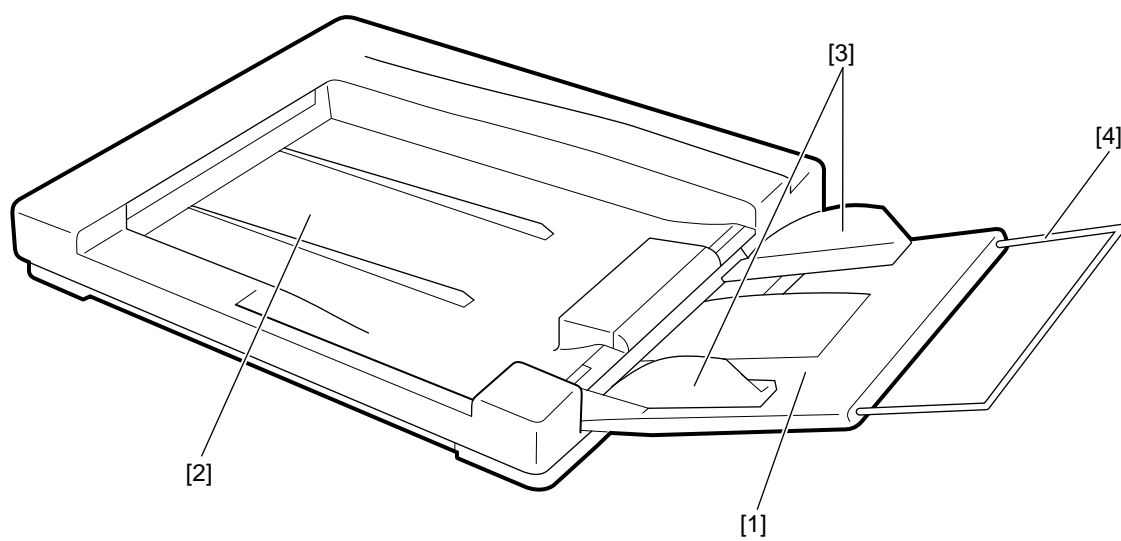3. ADF



- [1] Original tray
- [2] Original delivery tray

- [3] Slide guide
- [4] Auxiliary tray

Figure 1-305

B. Cross Section

1. Body

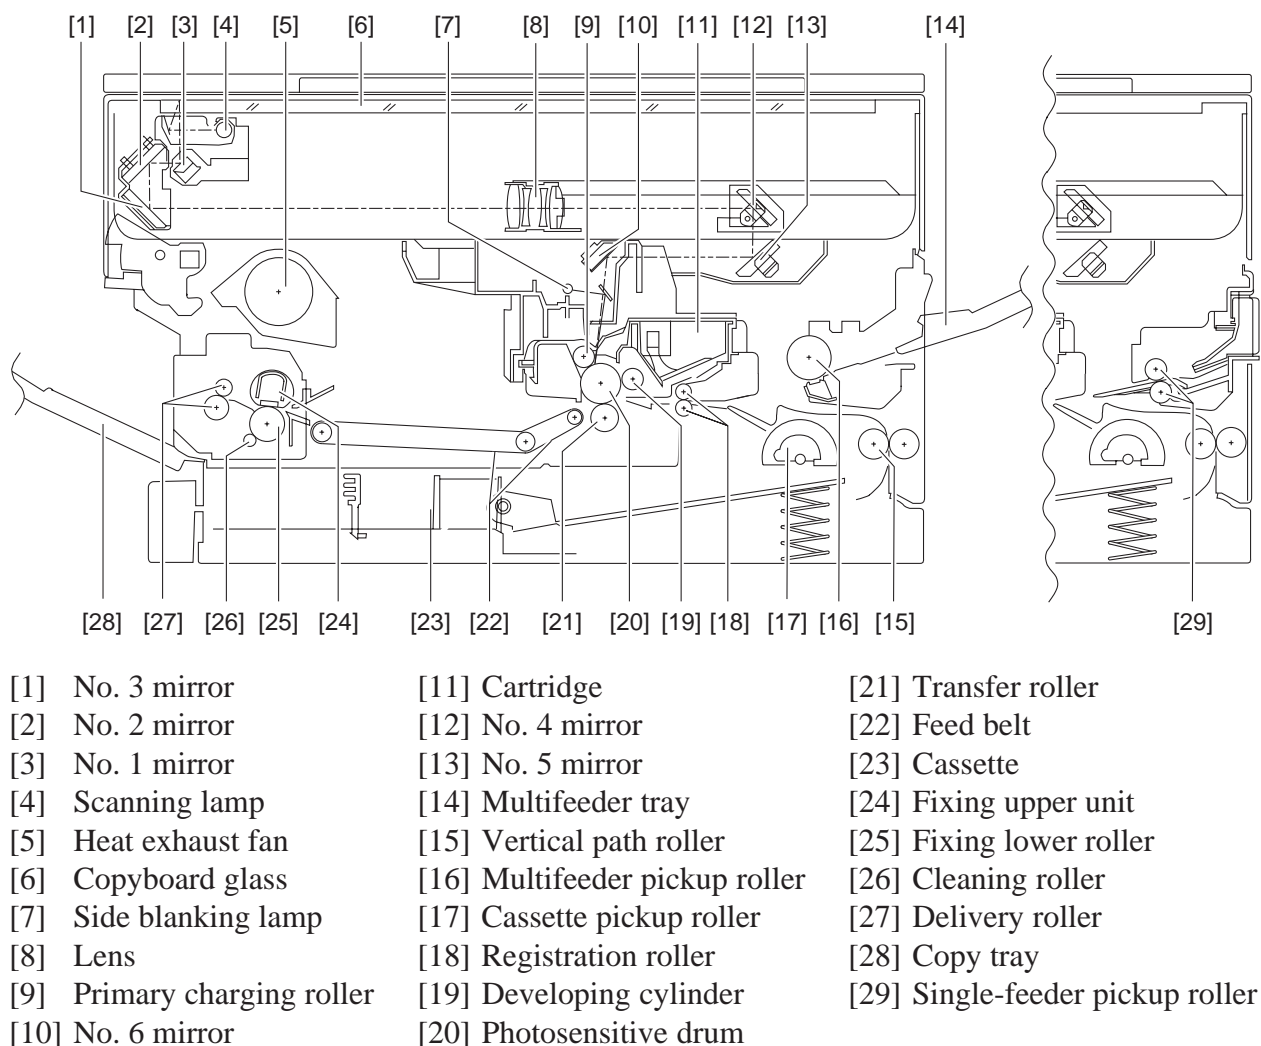


Figure 1-306

2. ADF

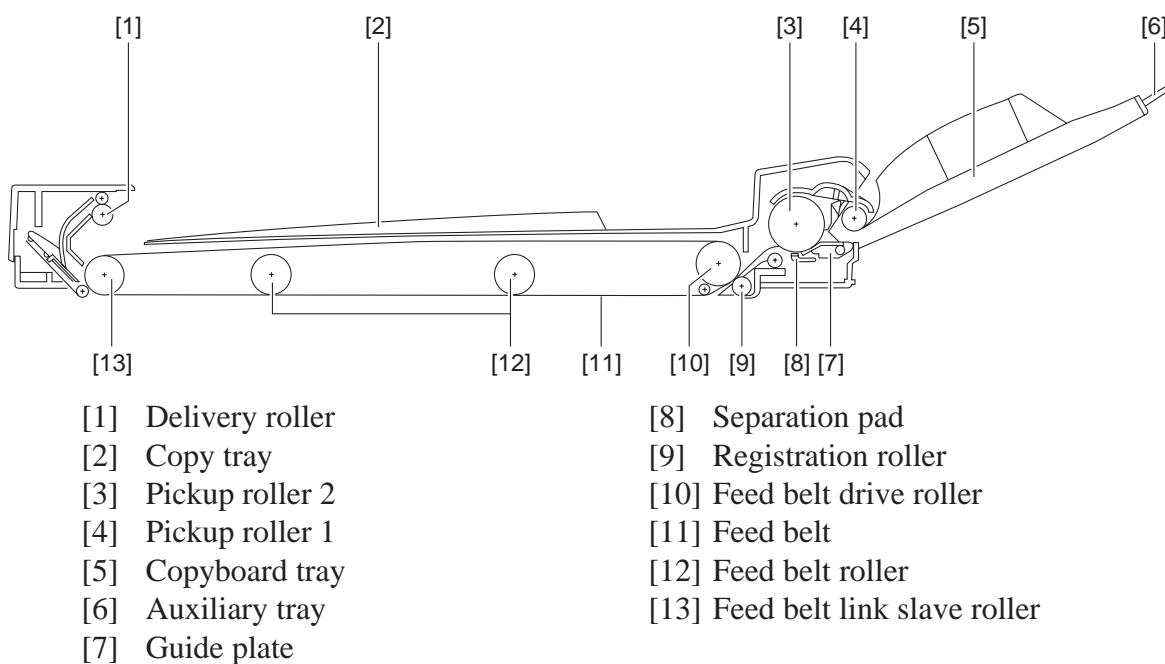


Figure 1-307

IV. USING THE MACHINE

A. Control Panel

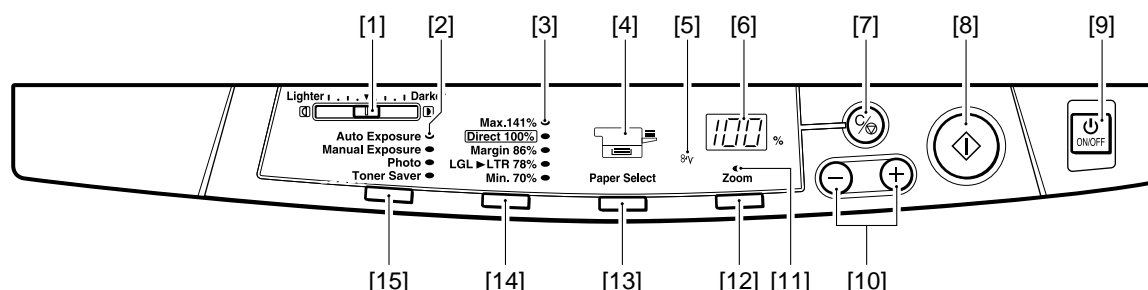


Figure 1-401

No.	Name	Description	Remarks
1	Copy density adjusting lever	Adjusts the density of copies manually.	
2	Copy density mode indicator	Indicates the selected copy density mode.	
3	Default ratio indicator	Indicates the selected default ratio.	
4	Paper selection indicator ^{*1}	Indicates the selected cassette/manual feed tray. If there is no paper loaded, it flashes.	
5	Jam indicator	Flashes in response to a jam.	
6	Count/ratio indicator	<ul style="list-style-type: none"> Indicates the number of copies or reproduction ratio. The symbol “%” turns on when indicating a ratio. 	100 (max.; continuous copying)
7	Clear/stop key	Stops copying or returns copying mode to standard mode.	Standard Mode Ratio: 100% Count: 1 Paper source: cassette Copy density: auto mode
8	Copy start key	Starts copying.	
9	Power switch	Turns on and off the power.	

No.	Name	Description	Remarks
10	Count/zoom set key	Sets the number of copies or a zoom ratio.	May be between 70% and 141% in 1% increments.
11	Zoom indicator ^{*2}	Turns on when zoom mode is selected.	
12	Zoom key ^{*2}	Selects/deselects zoom mode.	
13	Paper selection key ^{*1}	Selects the cassette/ manual feed tray.	
14	Default ratio key	Selects a default reproduction ratio.	
15	Copy density mode selection key	Selects copying density mode.	

Table 1-401

*1. Applies only to a multifeeder model.

*2. Applies only to a model equipped with a zoom function.

V. ROUTINE MAINTENANCE BY THE USER

Instruct the user to clean the following if images tend to be soiled or copy paper tends to jam often.

1. Soiled Images

a. Copyboard Glass/Copyboard Cover

Clean the cover with a moist cloth (with water or mild detergent solution); then, dry wipe it.

b. Feeding Belt (ADF type)

b.1 Cleaning in Feeder Cleaning Mode

- 1) Turn on the machine, and hold down the Copy Density Mode Selection key for 4 sec or more.
 - The count/ratio indicator will indicate 'U6'.

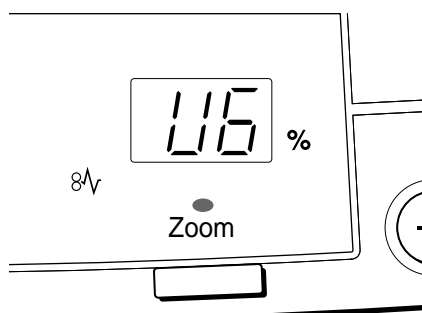


Figure 1-501

- 2) Place about 10 sheets of blank copy paper (A4/LTR) on the original tray of the ADF.
- 3) Press the Copy Start key.
 - Copy paper will be fed from the original tray.
 - The indicator flashes 'U6' while the feeder is being cleaned.
- 4) Press the Copy Density Mode Selection key to end the mode.

Caution:

- You cannot start feeder cleaning mode while the machine is making copies or if an error exists.
- The auto power-off mechanism does not operate while feeder cleaning mode is being executed.

b.2 Cleaning by Hand

- 1) Wipe the feed belt with a moist cloth (water or mild detergent solution) in the direction of the arrow in the figure; then, dry wipe it.

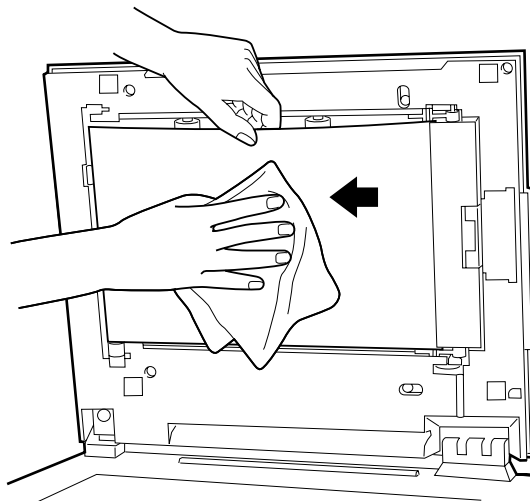


Figure 1-502

2. If Jams Occur Frequently

a. Static Eliminator

- 1) Remove the static eliminator cleaner from the machine.

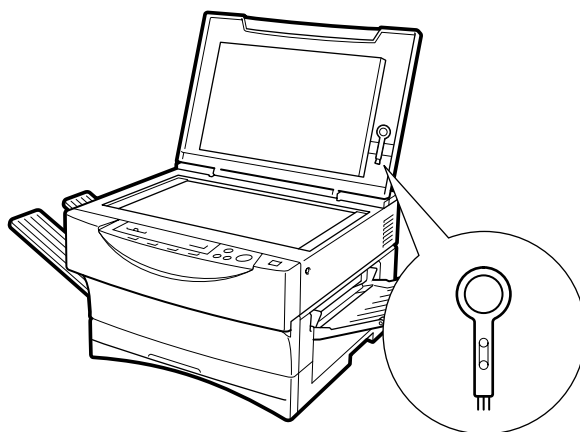


Figure 1-503 (Copyboard type)

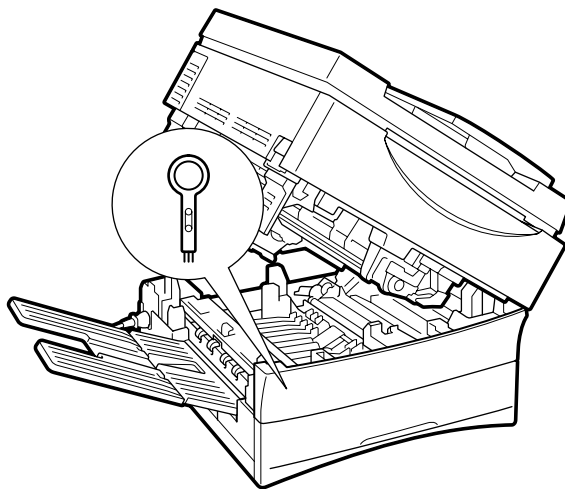


Figure 1-504 (ADF type)

- 2) Pull the open/close lever to open the machine.
- 3) Using the static eliminator cleaner, clean the static eliminator.
 - Brush out the paper lint or the like from the groove of the static eliminator.

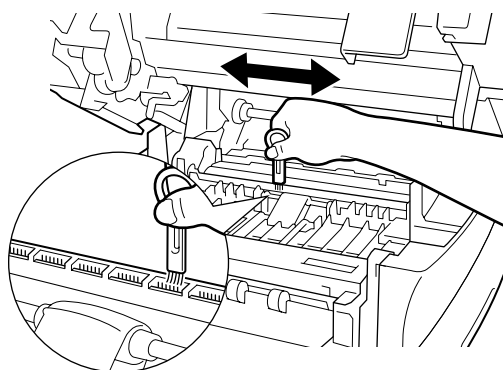


Figure 1-505

- 4) Close the machine as soon as you have finished cleaning. (Work briskly.)

VI. IMAGE FORMATION

A. Outline

The construction of the machine is as follows:

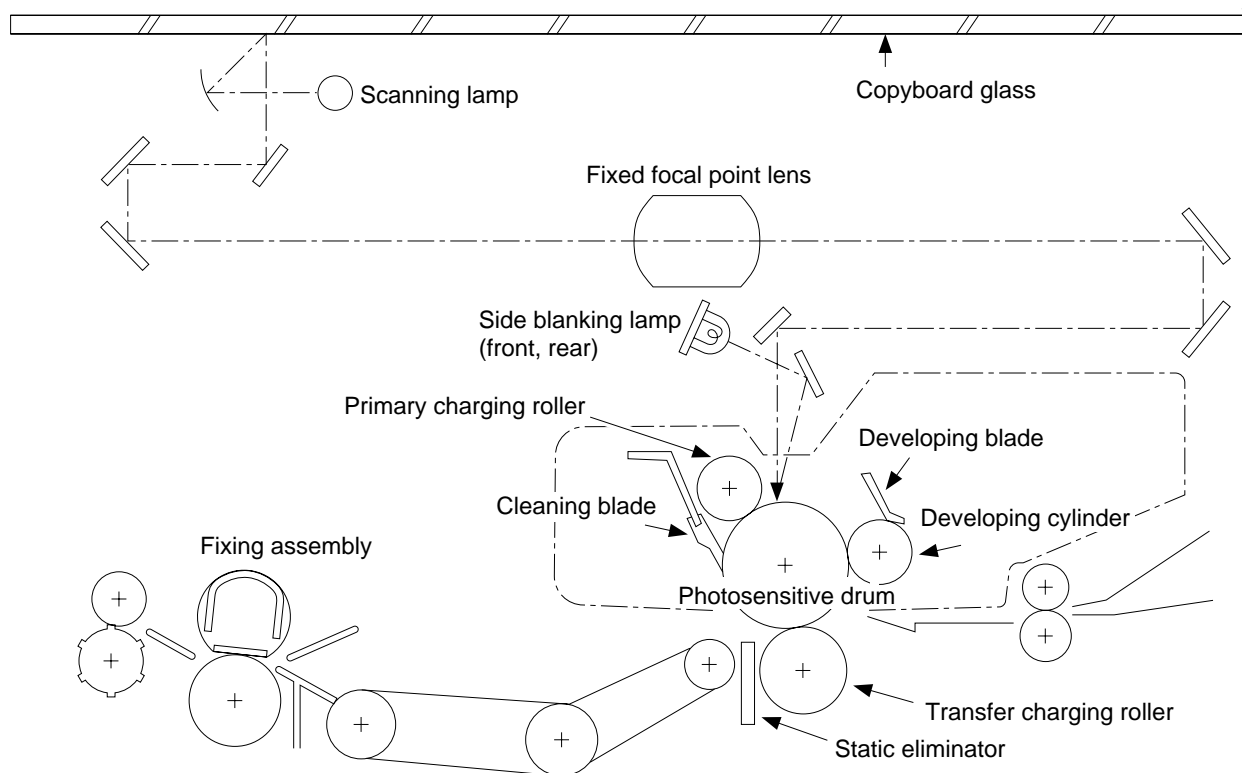


Figure 1-601

The machine's image formation process consists of the following seven steps:

- Step 1 Primary charging (AC + negative DC)
- Step 2 Image exposure
- Step 3 Development (AC + negative DC)
- Step 4 Transfer (negative DC)
- Step 5 Separation (curvature separation + static eliminator; positive DC)
- Step 6 Fixing
- Step 7 Drum cleaning

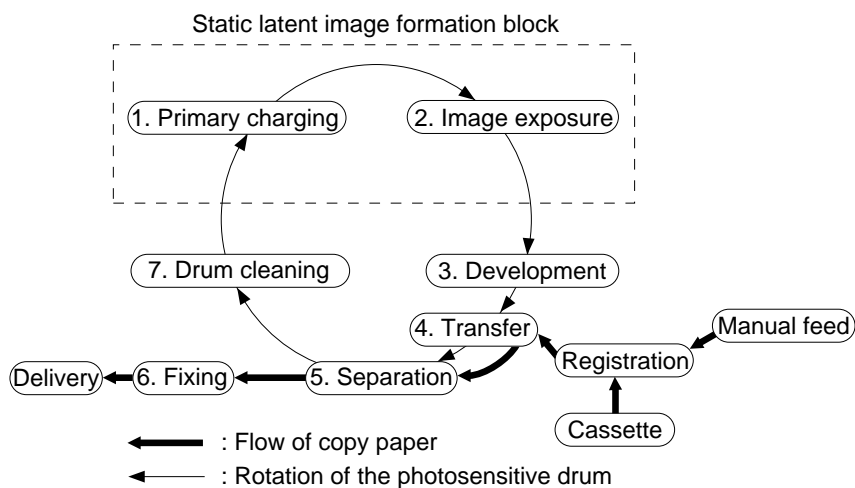


Figure 1-602

CHAPTER 2

BASIC OPERATION

This chapter provides descriptions on basic operations, functions of each operation, relationships between electrical and mechanical systems, and timing at which each associated part is turned on.

Process speed	96 mm/sec
---------------	-----------

I. BASIC OPERATIONS	2-1	D. Controlling the Main Motor	
A. Functional Construction	2-1	(M1)	2-5
B. Outline of Electrical		E. Inputs to and Outputs from	
Circuitry	2-2	the DC Controller	2-7
C. Basic Sequence of			
Operations	2-3		

I. BASIC OPERATIONS

A. Functional Construction

The machine consists of four functional blocks: pickup/feeding system, exposure system, image formation system, and control system.

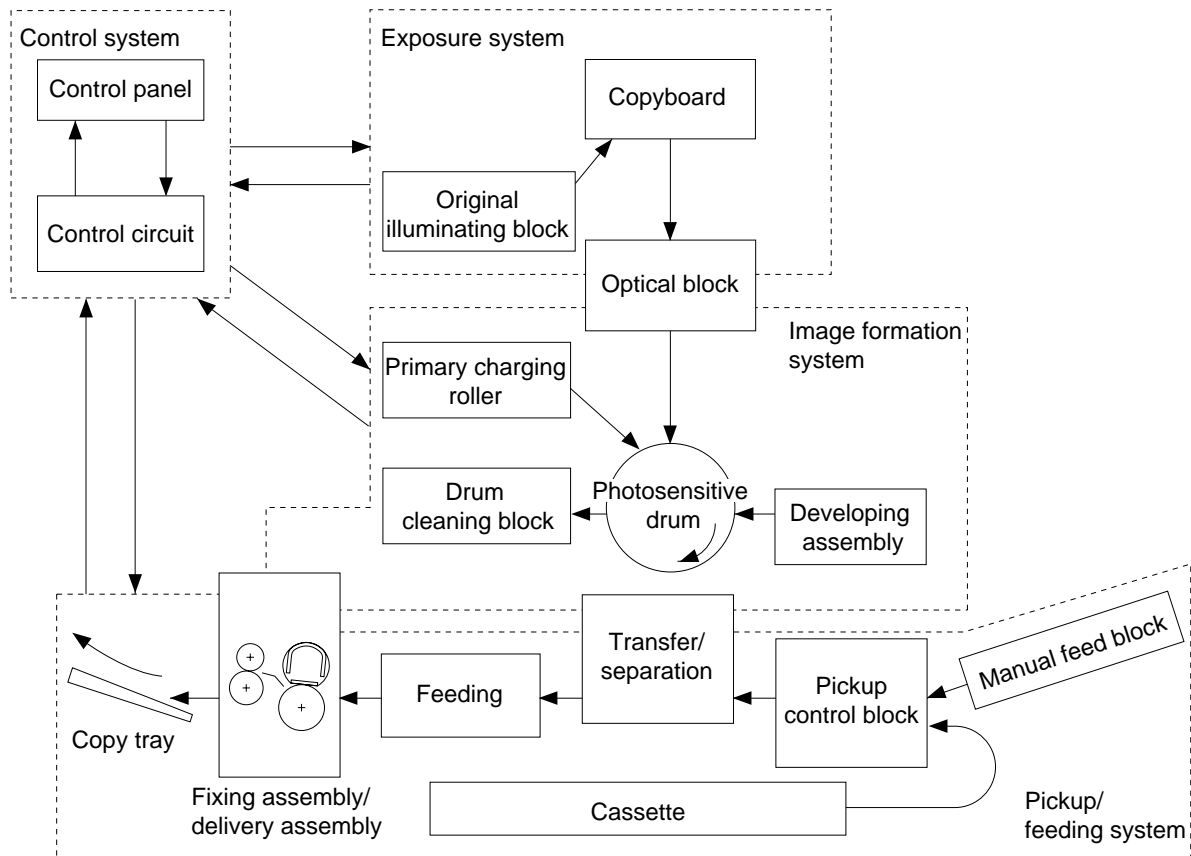


Figure 2-101

B. Outline of Electrical Circuitry

The machine's major electric mechanisms are controlled by the microprocessor mounted on the DC controller PCB, which reads input signals from sensors and operating keys according to the instructions of the program stored in advance and sends signals used to drive motors, solenoids, lamps, and other loads as needed.


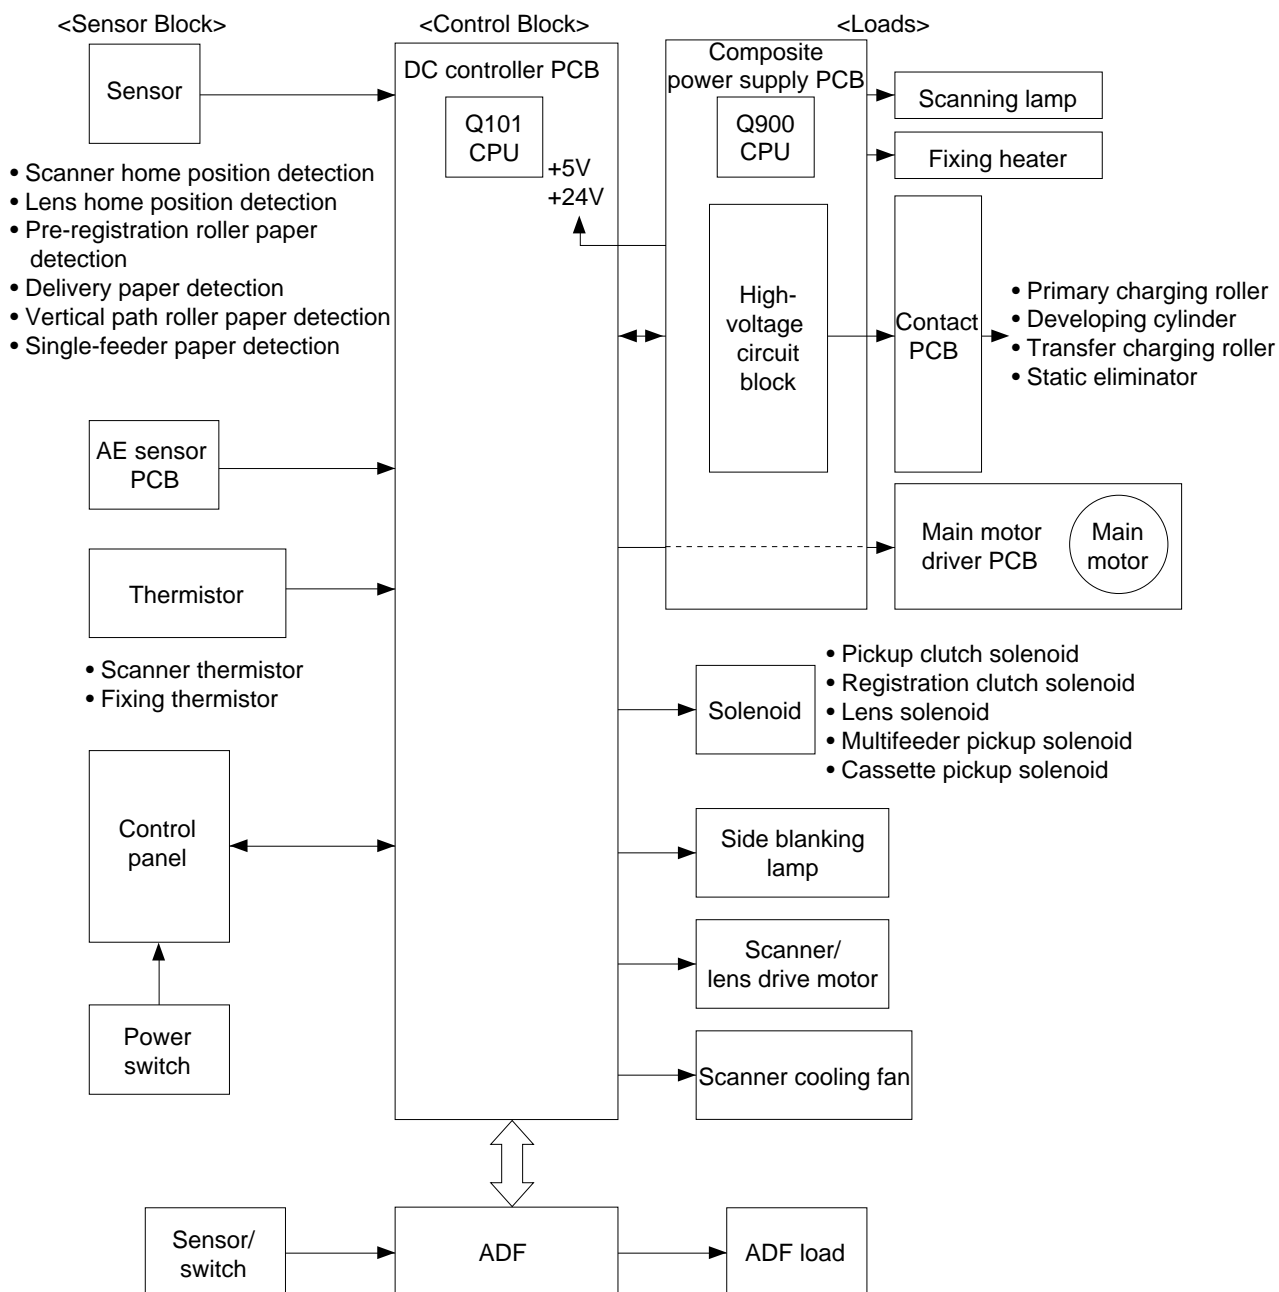


Figure 2-102

C. Basic Sequence of Operations

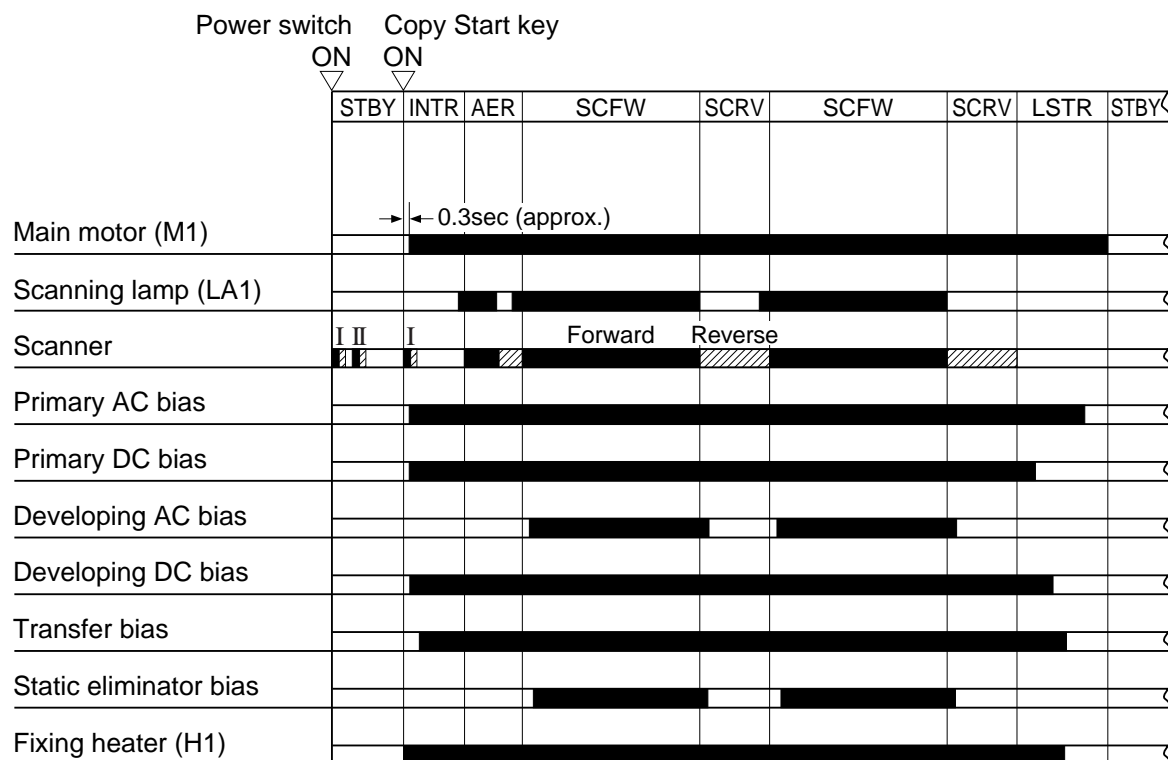- A4R, Direct, 2 Copies, Continuous, Cassette



I : Scanner home position detection

II : Lens home position detection

Figure 2-103

Period		Description
STBY (standby)	<ul style="list-style-type: none"> • From when the power switch is turned on to when the Copy Start key is pressed. • From when LSTR ends to when the Copy Start key is pressed. 	Waits until the Copy Start key is pressed.
INTR (initial rotation)	From when the Copy Start key is pressed to when the scanner moves forward.	Removes residual charges from the photosensitive drum, thereby ensuring a stable drum sensitivity.
AER (AE rotation)	While the scanner moves forward about 10 cm and then moves it in reverse.	Measures the density of the original.
SCFW (scanner forward)	While the scanner is moving forward. <ul style="list-style-type: none"> • The distance varies according to the selected copy size and reproduction ratio. • The forward speed varies according to the selected reproduction ratio. 	Illuminates the original by the scanning lamp, and the reflected optical image is projected to the photosensitive drum through mirrors and lenses.
SCRV (scanner reverse)	While the scanner is moving in reverse. <ul style="list-style-type: none"> • The reverse speed is about 3.3 as fast as the forward speed used in Direct. 	Moves the scanner to the home position in preparation for the next copying run.
LSTR (last rotation)	From when SCRV ends to when the main motor stops.	Neutralizes the drum surface potential as post-processing.

Table 2-101

D. Controlling the Main Motor (M1)

1. Outline

Table 2-102 shows the functions of the main motor control circuit, and Figure 2-104 is a block diagram of the circuit.

Item	Description
Power supply	24 VDC from the composite power supply.
Drive signal	Signal (MMD) from the DC controller PCB.
Moving/drive parts	Photosensitive drum, primary charging roller, developing assembly, transfer charging roller, pickup roller, vertical roller, registration roller, feeding assembly, fixing assembly, delivery roller, heat exhaust fan
Control	Executes on/off control. Executes constant speed rotation control.
Error detection	Issues 'E010'.

Table 2-102

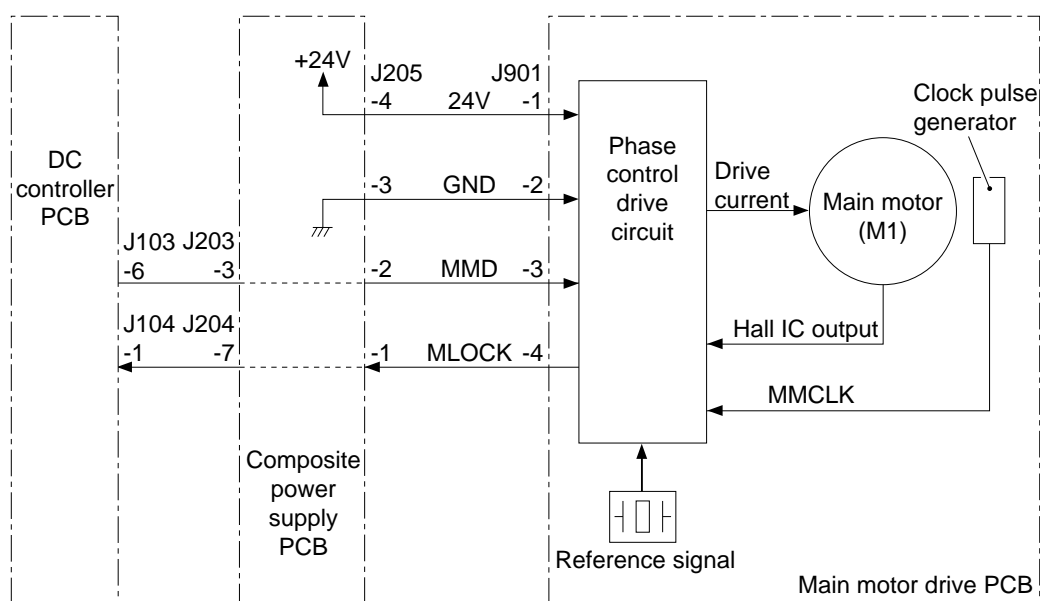


Figure 2-104

2. Operations

The main motor (M1) is a DC motor with a built-in clock pulse generator, which generates clock pulses (MMCLK) in relation to the rotation of the motor while the motor is rotating.

The speed control circuit controls the main motor (M1) so that it rotates at a specific speed by matching the frequency of these clock pulses and that of the reference signals.

When the main motor drive signal (MMD) from the DC controller circuit goes '1', the motor driver drive circuit turns on, causing the main motor (M1) to rotate at a specific speed.

While the main motor is rotating at a specific speed, the main motor driver PCB keeps sending the constant speed state signal (MLOCK=0) to the DC controller PCB. If the rotation of the motor starts to have fluctuations, the MLOCK signal goes '1'.

Related Error Code

E010

While the main motor drive signal is generated, the rotation of the main motor deviates from a specific number for 1 sec or more.

a. Turning On/Off the Main Motor

When the main motor drive signal (MMD) from the DC controller circuit goes '1', the main motor driver turns on to rotate the main motor (M1).

b. Rotating the Main Motor at a Constant Speed

The drive circuit on the motor driver PCB controls the main motor so that the phase of the frequency of the clock pulse signals (MMCLK) occurring when the motor rotates and that of the frequency of the reference signals match. The main motor driver PCB sends the constant speed state signal (MLOCK=0) to the DC controller circuit.

c. Detecting an Error (E010)

If the rotation of the main motor starts to have fluctuations for some reason, the MLOCK signal goes '1'. If the signal remains '1' for about 1 sec, the DC controller will find the condition to be a fault in the main motor, and will stop the main motor and, at the same time, indicate 'E010' in the display.

E. Inputs to and Outputs from the DC Controller

1. Inputs to the DC Control (1/2)

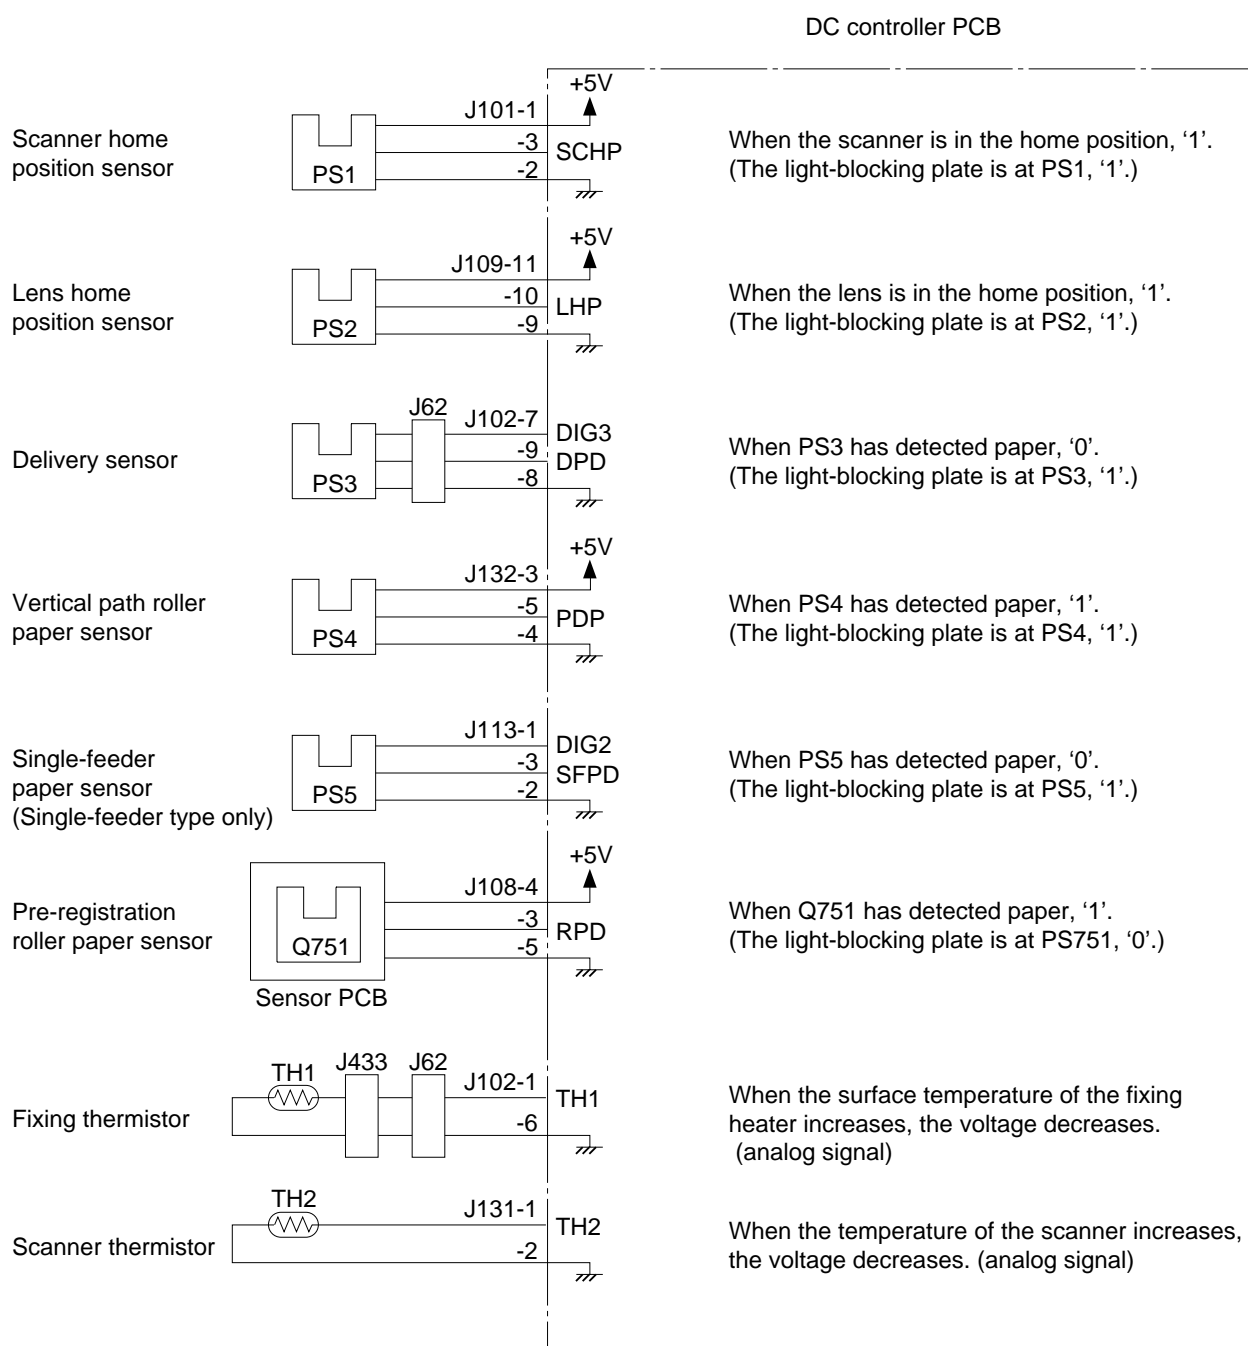


Figure 2-105

2. Inputs to the DC Controller (2/2)

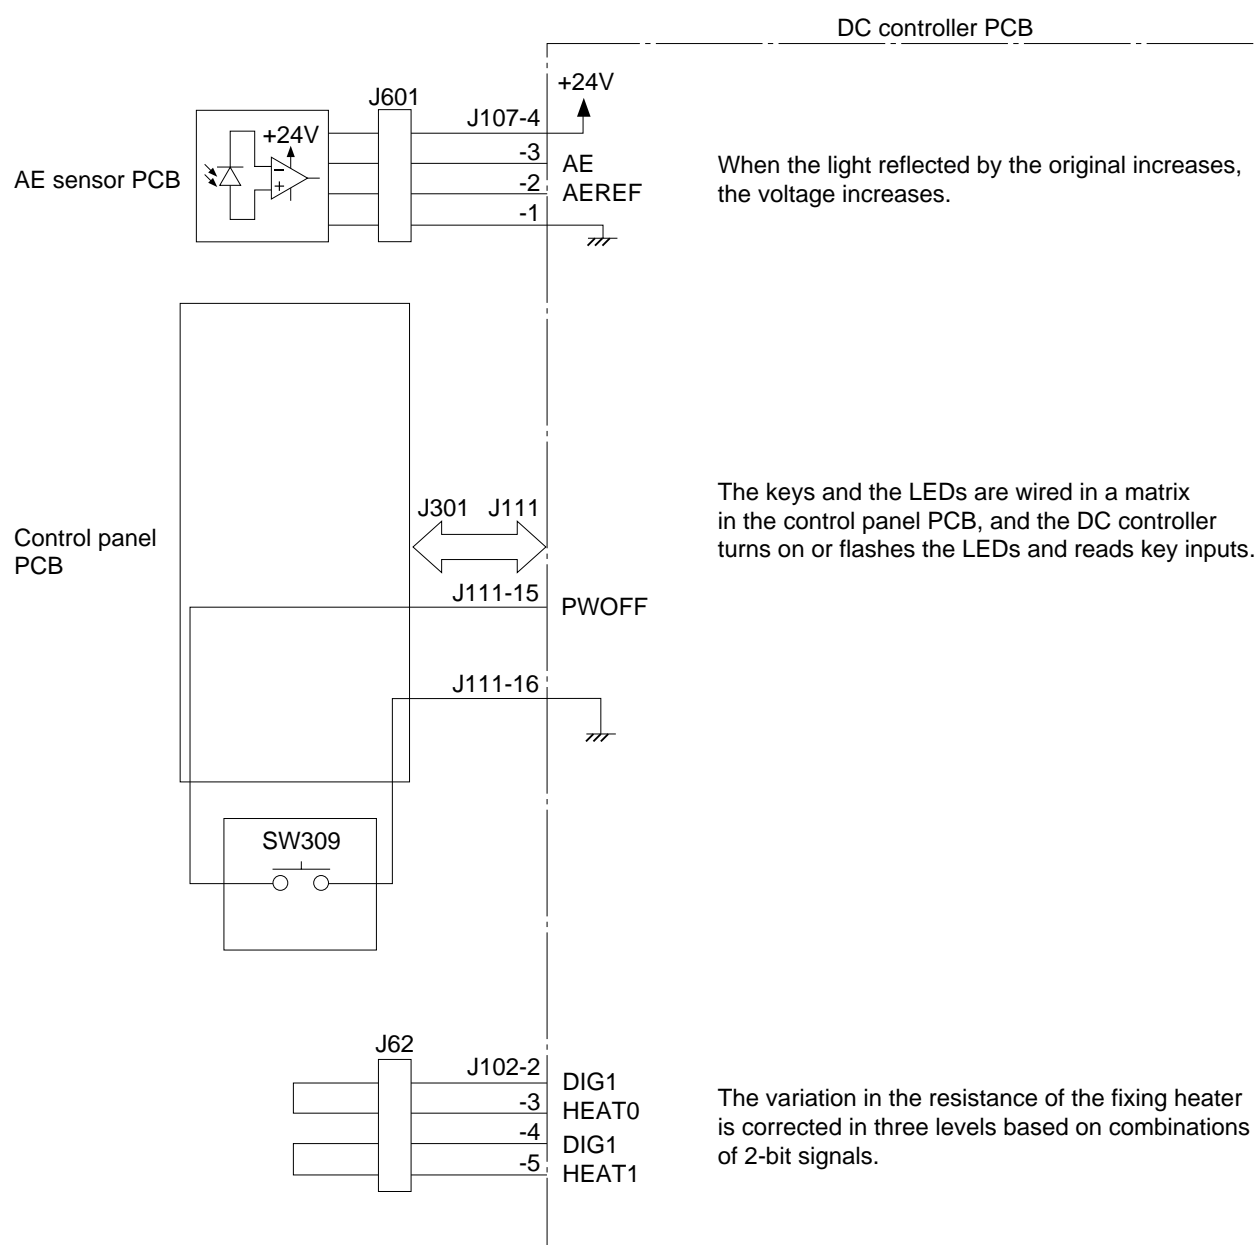


Figure 2-106

3. Outputs from the DC Controller (1/2)

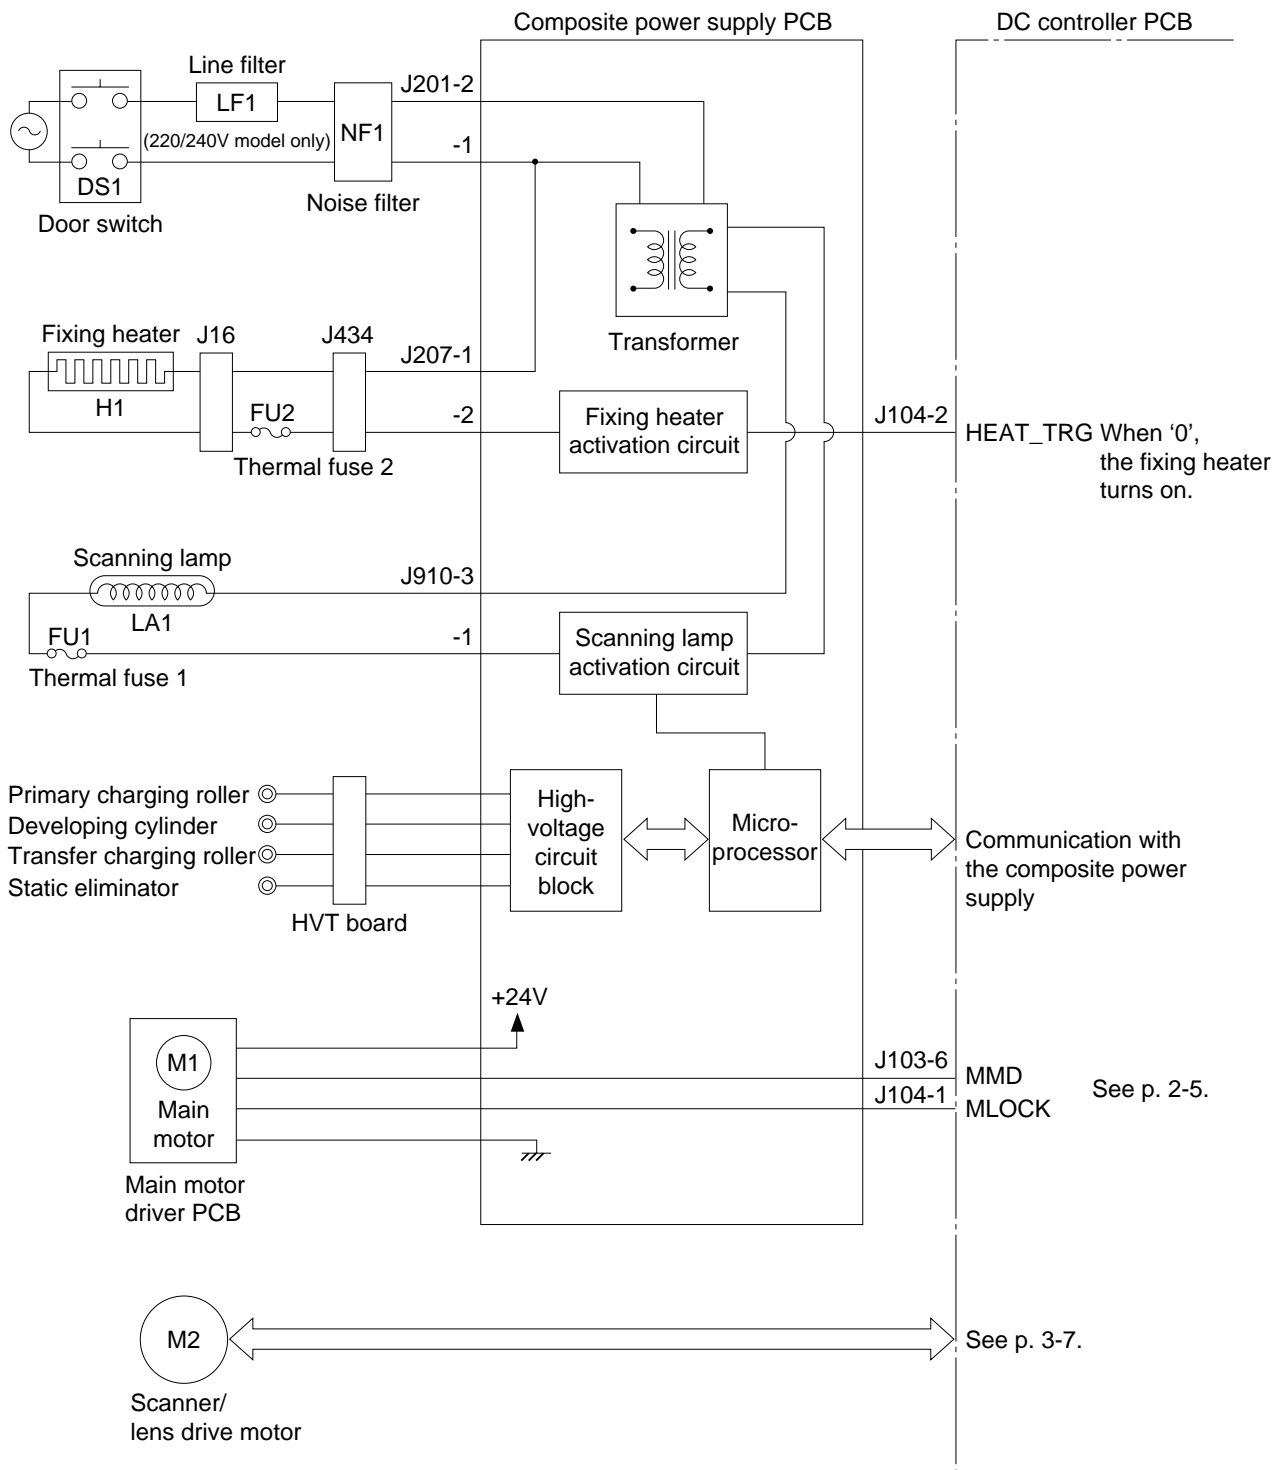


Figure 2-107

4. Outputs from the DC Control PCB (2/2)

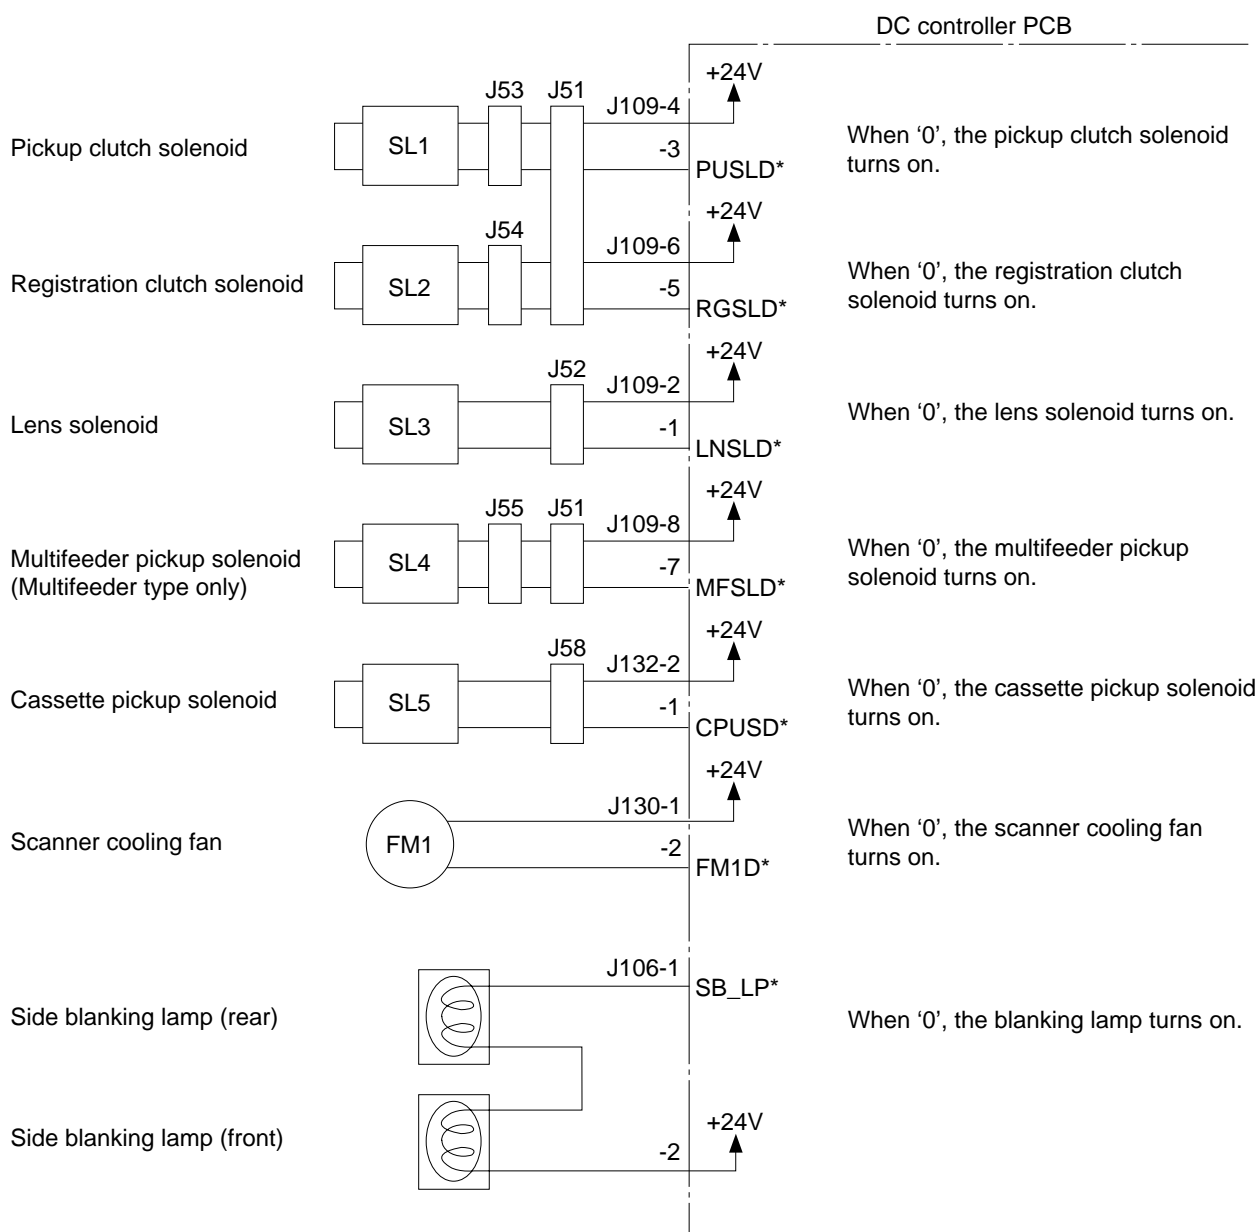


Figure 2-108

5. Inputs to and Outputs from the ADF

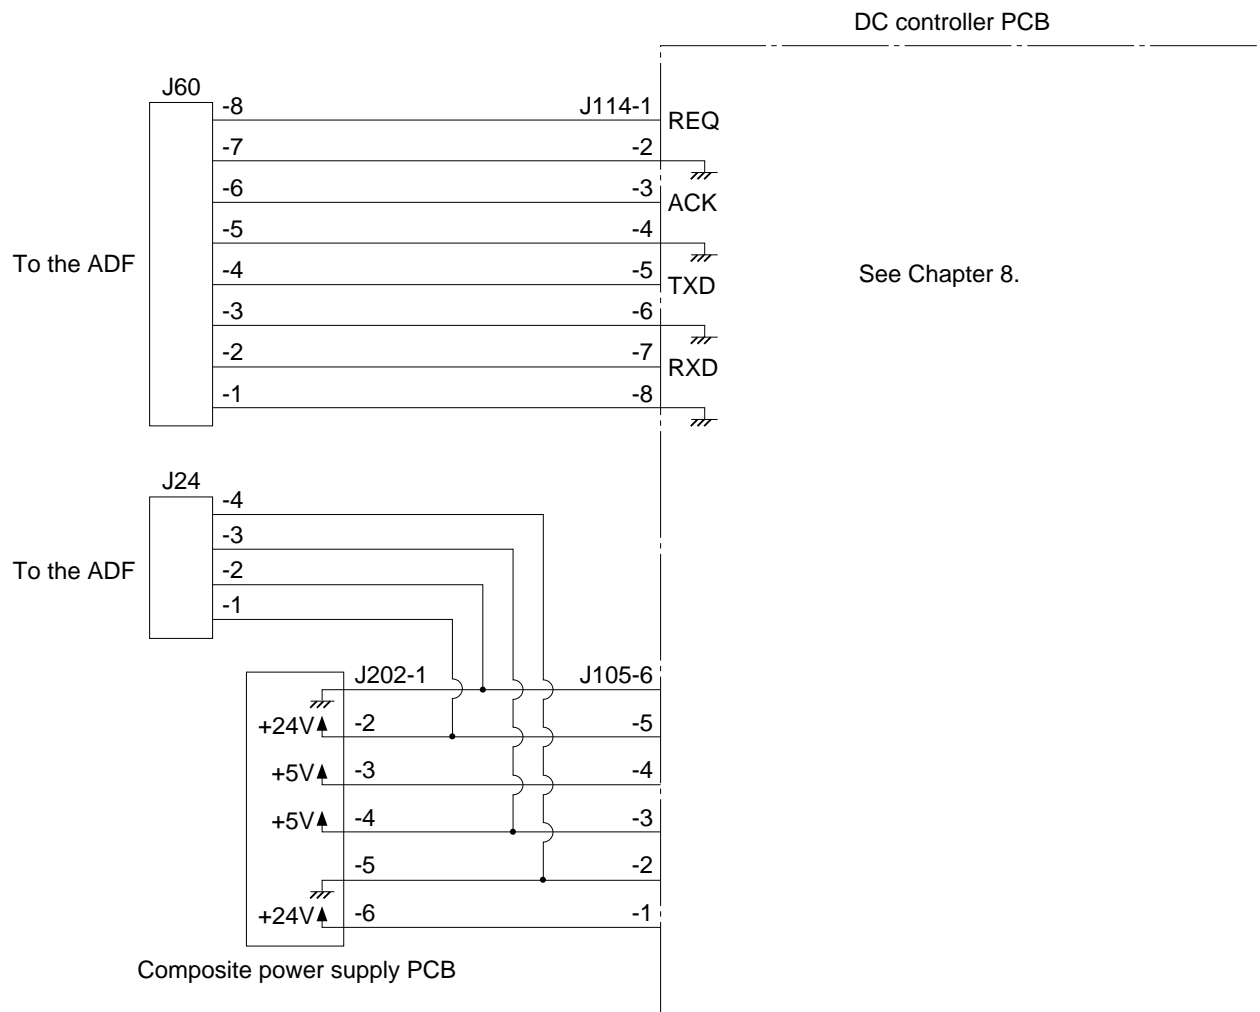


Figure 2-109

CHAPTER 3

EXPOSURE SYSTEM

This chapter discusses the principles of operation used for the machine's lens drive unit and scanner drive unit. It also explains the timing at which these drive units are operated, and shows how they may be disassembled/assembled and adjusted.

I. OPERATIONS	3-1	A. Controlling the Scanning	
A. Outline	3-1	Lamp	3-9
B. Varying the Reproduction		III. DISASSEMBLY/ASSEMBLY	3-12
Ratio	3-2	A. Scanner Drive Assembly	3-13
C. Lens Drive System	3-3	B. Lens Drive Assembly	3-31
D. Scanner Drive System	3-4	C. Exposure System	3-37
II. EXPOSURE SYSTEM	3-9		

I. OPERATIONS

A. Outline

Table 3-101 shows the major functions of the exposure system.

Item	Description
Lamp	Halogen
Scanning	By moving the No. 1 mirror mount
Scanner position detection	By a sensor (scanner home position sensor; PS1)
Ratio variation	Main scanning direction:by varying the optical length Sub scanning direction:by varying the speed of the No. 1 mirror mount
Lens drive control	Scanner/lens drive motor (M2) Fixed focal point lens unit Mobile No. 4/5 mirror unit
Scanner drive control	Scanner/lens drive motor (M2) Scanner thermistor (TH2)
Protective function	By a fuse (blows in response to overheating of the scanning lamp to cut power to the lamp) • Thermal fuse (FU1; blows at 128°C)

Table 3-101

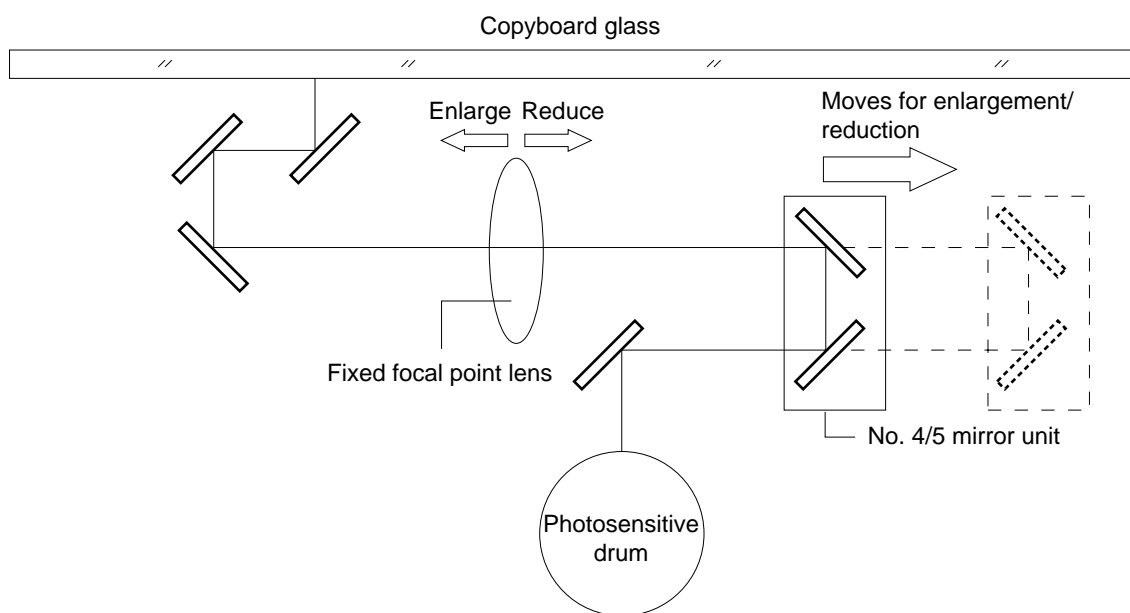


Figure 3-101

B. Varying the Reproduction Ratio

The reproduction ratio in the drum axial direction (main scanning direction) is varied by the lens drive system, and that in the drum peripheral direction (sub scanning direction) is changed by the scanner drive system.

In the lens drive system, the positions of the fixed focal point lens and the No. 4/5 mirror are changed to vary the reproduction ratio.

In the scanner system, the relative speed of the No. 1 mirror mount is made higher (for reduction) or lower (for enlargement) than the drum peripheral speed.

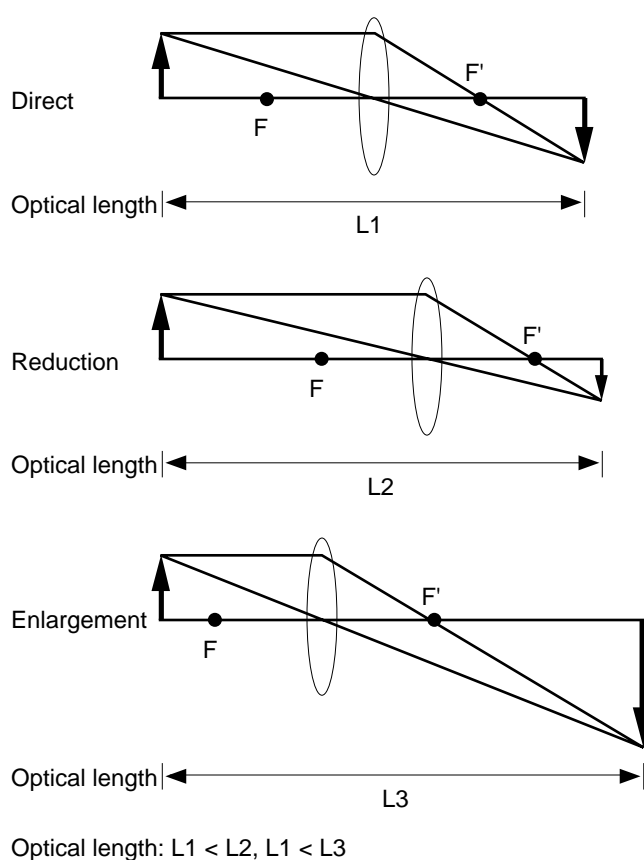


Figure 3-102

D. Scanner Drive System

1. Outline

The scanner is driven by the scanner/lens drive motor (M2), whose direction of rotation changes to move the scanner forward or in reverse.

When moving the scanner forward, the speed of rotation of the motor varies according to the selected reproduction ratio on a continuous basis; when moving the scanner in reverse, on the other hand, its speed remains the same regardless of the selected reproduction ratio in normal copying (312mm/sec, about 3.3 as fast as when moving the scanner forward in Direct).

The distance over which the scanner is moved varies according to the length of copy paper and the selected reproduction ratio.

The scanner/lens drive motor drives the lens drive system as well as the scanner.

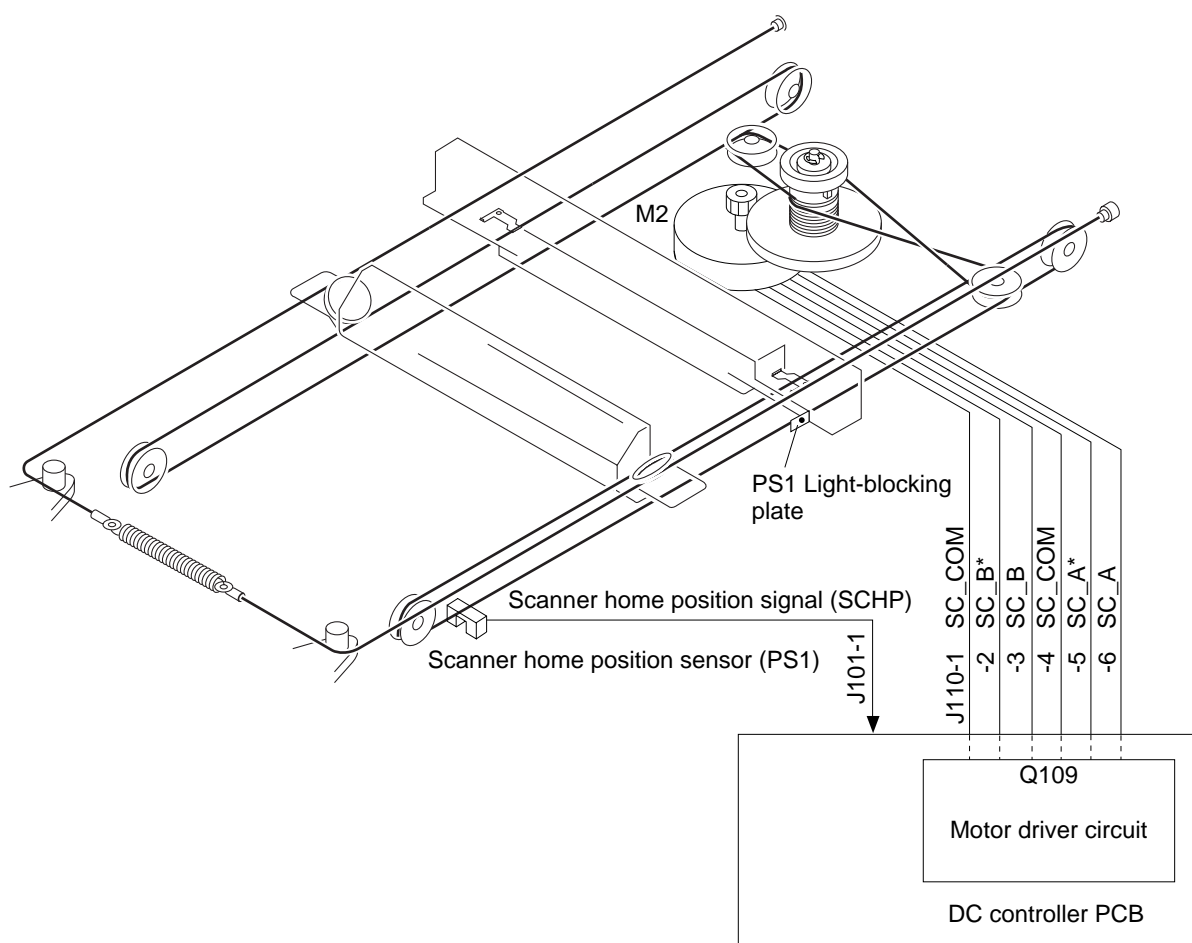



Figure 3-104

2. Relationship between Scanner Sensor and Signal

Scanner sensor	Signal	Scanner		Description
		Forward	Reverse	
PS1(scanner home position sensor)	SCHP			• Provides a means of reference for determining forward movement distance.
				• Stops the scanner moving in reverse in 0.1 sec.

Table 3-102

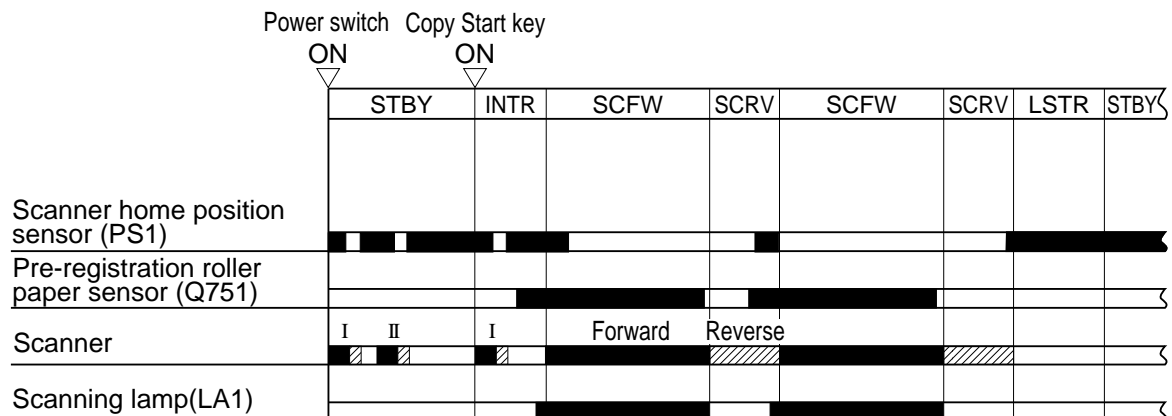3. Basic Sequence of Operations (scanner)



I : Scanner home position detection

II : Lens home position detection

Figure 3-105

The microprocessor on the DC controller PCB controls the forward movement distance of the scanner with reference to the falling edge of the scanner home position signal. The forward movement distance of the scanner varies according to the length of copy paper and reproduction ratio. If the ratio is less than 130%, the scanner is moved forward as if for A4 (297 mm); if it is 130% or more, the scanner is moved forward as if for LTR (279 mm).

For descriptions on how length is detected, see p. 5-10.

4. Controlling the Copying Speed

The machine uses a halogen lamp for scanning, and the heat of the lamp increases the temperature of the copyboard.

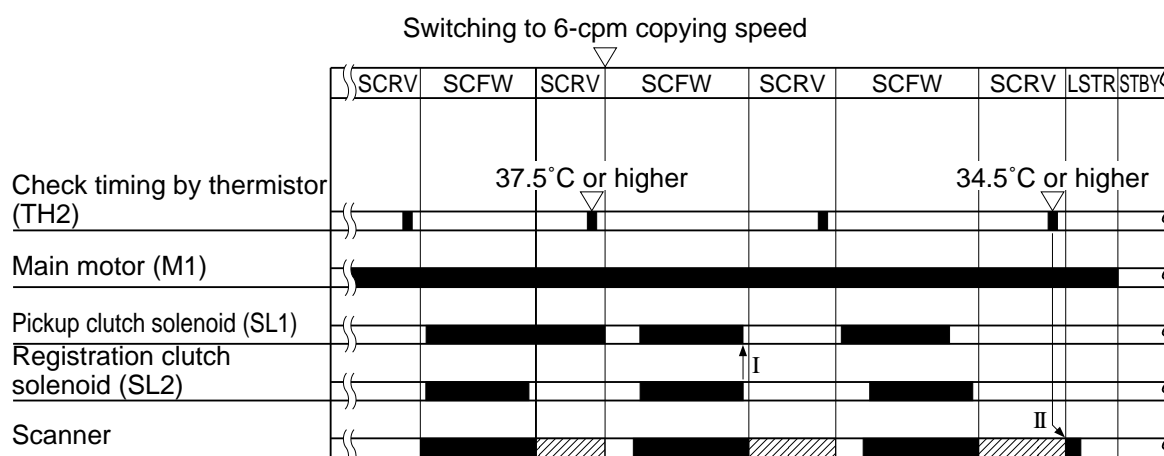
To prevent possible overheating of the copyboard glass, the temperature of the scanner is monitored by a thermistor (TH2); if its reading reaches 37.5°C or higher, the copying speed is reduced to 6 cpm.

If this mechanism turns on during continuous copying, it remains on until the end of the copying job.

At the end of copying, if the reading of the thermistor is 34.5°C or higher, the No. 1 mirror mount is moved forward 105 mm from the home position and stopped, thereby lowering the temperature of the copyboard fast.

Reference:

While the copying speed is controlled to 6 cpm, the speed of the reverse movement of the scanner is reduced to prevent overheating of the copyboard glass. (about 75 mm/sec)




- I: When the pre-registration roller paper sensor (Q751) is off, the pickup clutch solenoid is turned off to prevent overheating of the pickup clutch solenoid (SL1).
- II: By the time the Copy Start key is pressed or the power switch is turned off and then on again next time, the scanner is moved to and stopped at 105 mm forward from the home position.

Figure 3-106

5. Controlling the Scanner/Lens Drive Motor

a. Outline

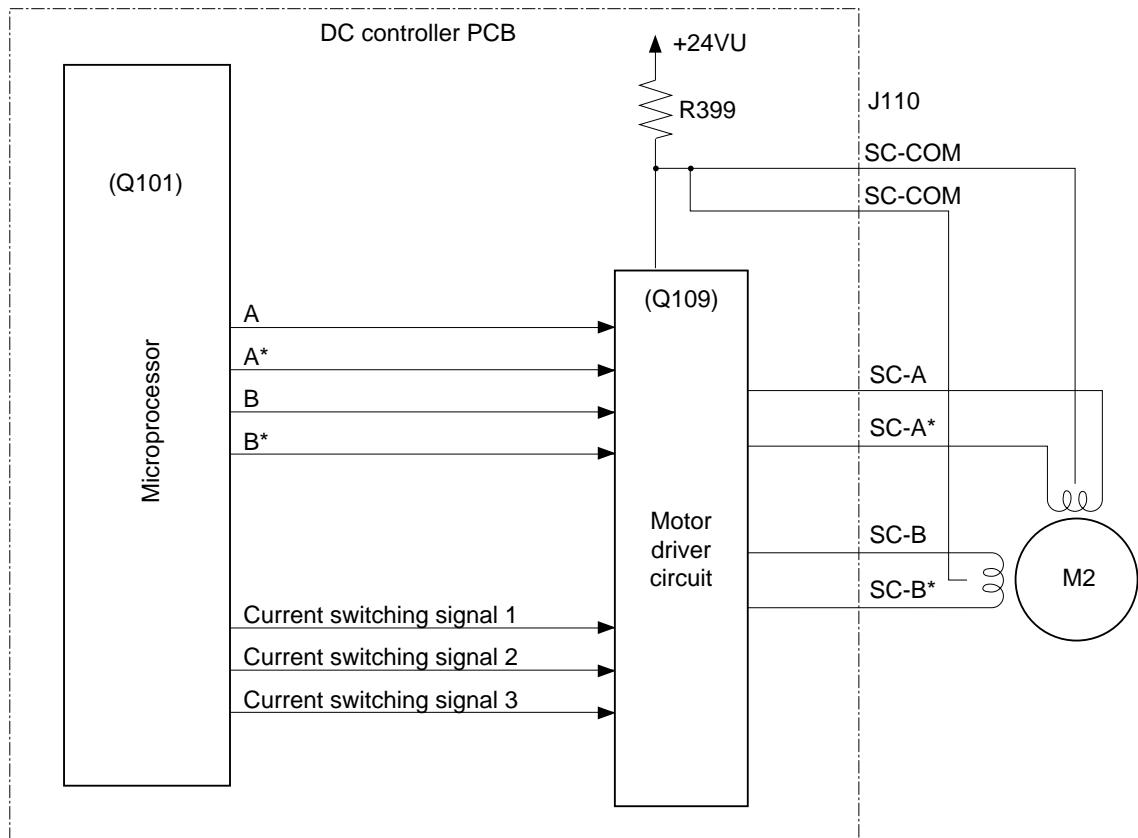The scanner/lens drive motor (M2) is a 4-phase stepping motor. The timing at which the drive power (SC-COM) and pulses (SC-A, SCA*, SC-B, SC-B*) are generated is controlled to turn on/off the scanner/lens drive motor (M2) or to switch the direction of its rotation.



b. Operations

The microprocessor (Q101) mounted on the DC controller PCB receives instructions from the control panel PCB copying mode settings (e.g., reproduction ratio). In response, it applies drive pulses to the scanner/lens drive motor (M2) through the motor driver circuit.

The scanner motor is a 4-phase stepping motor, and changes the direction and speed of its rotation according to the sequence and frequency of drive pulses (SC-A*through SC-B*).

The motor drive voltage is switched on and off by pulse signals (A through B*) generated by the microprocessor (Q101). Any of these pulse signals is generated when the motor is in operation, while no pulse signal is generated when the motor is at rest.

The current switching signals from 1 to 3 generated by the microprocessor (Q101) are used to control the current flowing to the motor so that it varies according to the state of the scanner and the lens.

	Starting the lens	Moving the lens	Reversing the scanner	Forwarding the scanner
Current switching signal 1	0	0	0	1
Current switching signal 2	0	0	1	1
Current switching signal 3	0	1	1	1

c. Detecting Overcurrent for the Scanner/Lens Drive Motor

If overcurrent flows to the scanner/lens drive motor for some reason, the fuse (R339) on the DC controller PCB will blow to cut the power to the motor.

Caution:

The fuse (R339) will not recover once it has blown.

II. EXPOSURE SYSTEM

A. Controlling the Scanning Lamp

1. Outline

Figure 3-201 shows the circuit used to control the scanning lamp, and has the following functions:

- Turning on/off the scanning lamp.
- Controlling the intensity of the scanning lamp.
- Monitoring the state (on/off) of the scanning lamp.

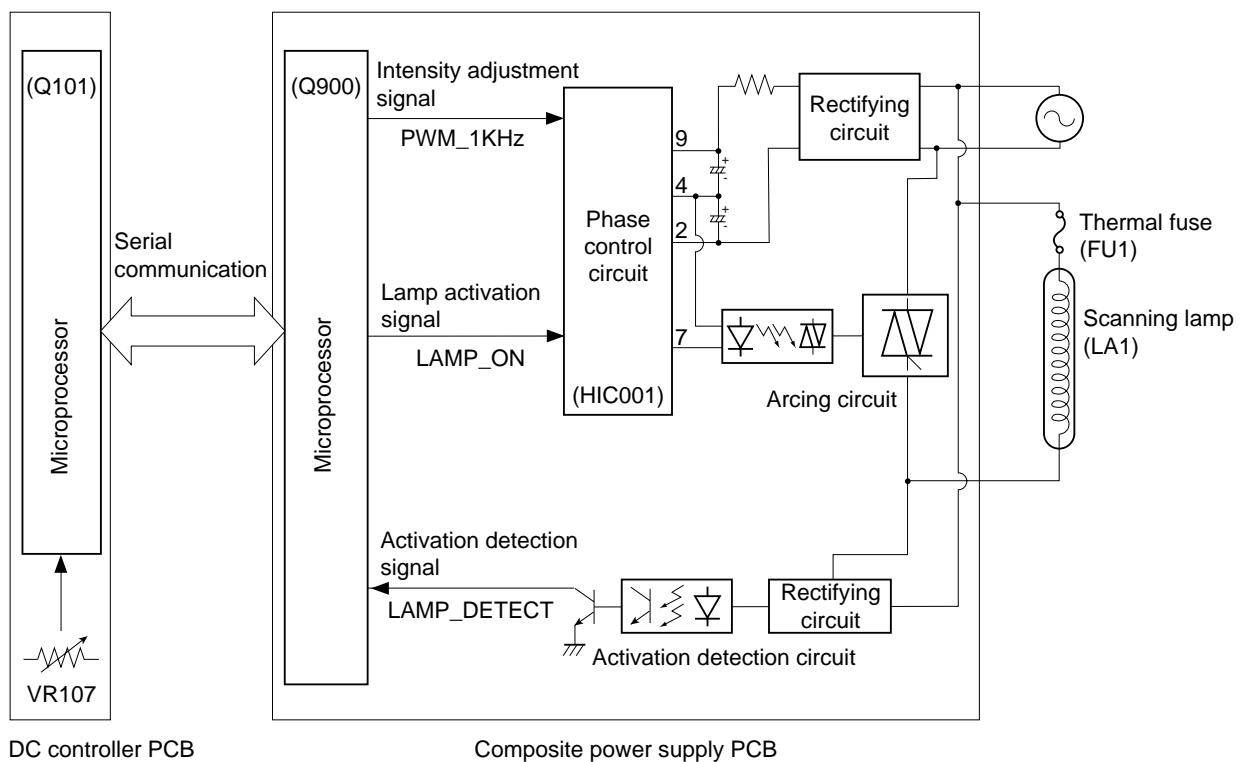


Figure 3-201

2. Operations

a. Turning On/Off the Scanning Lamp

The DC controller PCB and the composite power supply exchange signals in serial communication to control the scanning lamp. According to the scanner lamp active voltage signal, the microprocessor (Q900) on the composite power supply PCB controls the intensity adjustment signal (PWM_1KHz) and the lamp activation signal (LAMP_ON) to turn on/off the scanning lamp (LA1).

When LAMP_ON is '0',

- ↳ The phase control circuit turns on.
- ↳ The arcing circuit turns on.
- ↳ The scanning lamp turns on.

When LAMP_ON is '1',

- ↳ The phase control circuit turns off.
- ↳ The arcing circuit turns off.
- ↳ The scanning lamp turns off.

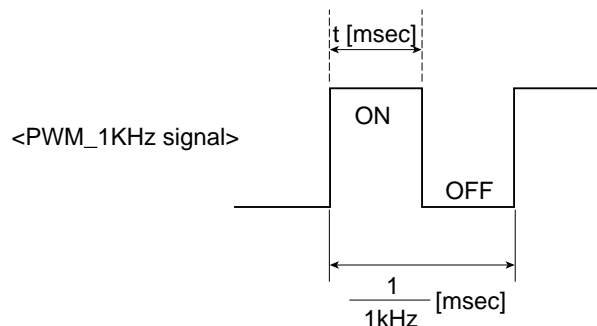
b. Controlling the Intensity of the Scanning Lamp

The intensity of the lamp is controlled by the scanning lamp active voltage signal sent by the DC controller PCB in serial.

The microprocessor (Q900) on the composite power supply PCB sends the intensity adjustment signal (PWM_1KHz) in response to the scanning lamp active voltage signal. In turn, the phase control circuit (HIC 001) controls the voltage supplied to the scanning lamp.

The PWM_1KHz signal varies according to the setting of VR107 mounted on the DC controller PCB between 10% and 90% in terms of pulse duty ratio or between 50.5 and 80 V for the 120 V model (between 85.7 and 145.8 V for the 220/240 V model) in terms of actual voltage by way of phase control.

However, the intensity remains a specific value for AE exposure so that it is 56 V for the 120 V model (108.5 V for the 220/240 V model) in terms of actual voltage.



$$\text{Pulse duty} = t / \frac{1}{1k} \times 100 [\%]$$

Figure 3-202

c. Monitoring the Activation of the Scanning Lamp

The activation detection signal (LAMP_DETECT) is sent to the microprocessor (Q900) on the composite power supply PCB as long as the scanning lamp remains on.

The composite power supply PCB sends the lamp activation signal to the DC controller PCB in serial by way of monitoring the activation of the scanning lamp (LA1).

Related Error Code

E220

- The lamp activation detection signal is not detected for 1 sec or more although the scanning lamp activation signal has been sent.
- The lamp activation detection signal has been detected for 1 sec or more although the scanning lamp activation signal is not sent.

If an error has been detected, the power switch will be turned off after indicating an error code for 2 sec.

III. DISASSEMBLY/ASSEMBLY

As needed, disassemble/assemble the machine with the following in mind:

1. **▲** Before starting the work, turn off the power switch and disconnect the power plug for safety.
2. Unless otherwise instructed, assemble the parts by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. Use the washers where necessary. (The screws used to mount the grounding wire and Varistors come with a washer to ensure electrical continuity.)
5. As necessary, cut the harness band.
6. As a rule, do not operate the machine with any of its part removed.
7. A few of the screws used are special screws (with wider thread intervals). Do not use any screws indiscriminately.

A. Scanner Drive Assembly

1. Removing the Scanner/Lens Drive Motor

- 1) Remove the front lower cover.
(See Chapter 7.III.A.2. "Removing the Front Lower Cover.")
- 2) Remove the copyboard glass.
(See Chapter 7.III.C.1. "Removing the Copyboard Glass.")
- 3) Remove the four screws [1], and detach the lens cover [2].

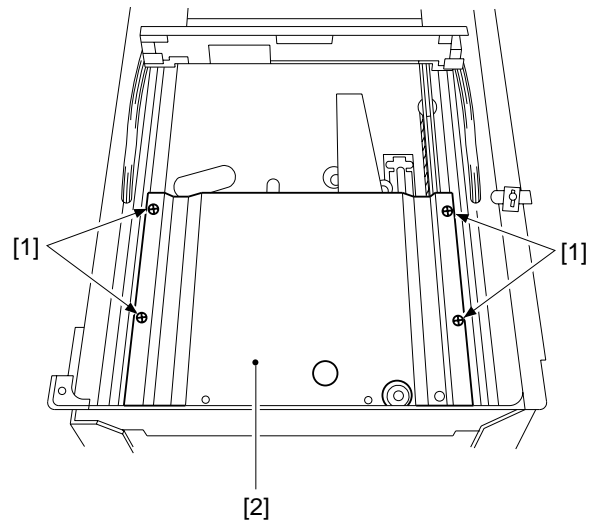


Figure 3-301

- 4) Disconnect the connector (J110) [3] from the DC controller PCB.

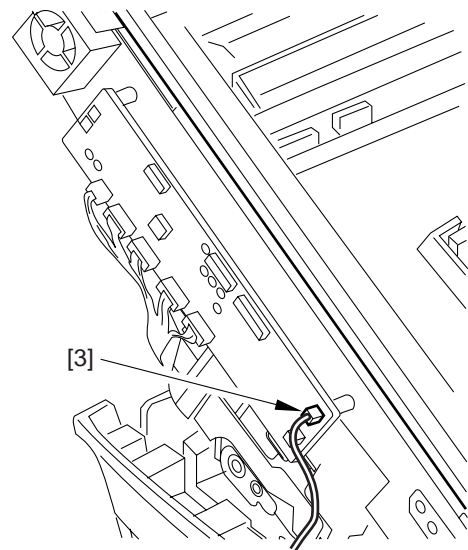


Figure 3-302

- 5) Open the machine's top unit farther, and hold it in position using the handle (about 30 mm in diameter) of a screwdriver.

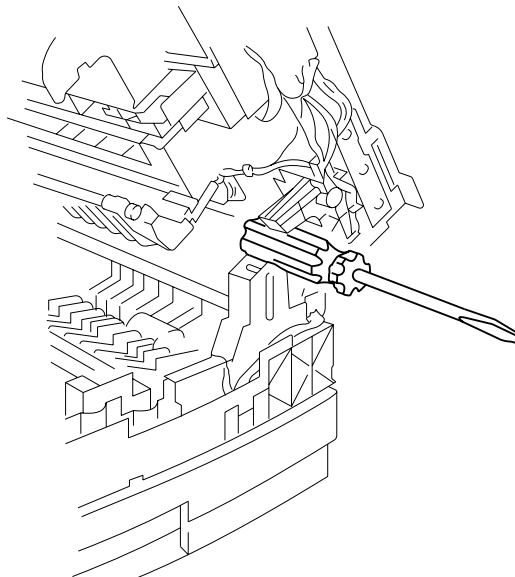


Figure 3-303

- 6) Remove the machine's two fixing screws [4] from the scanner/lens drive motor [5].

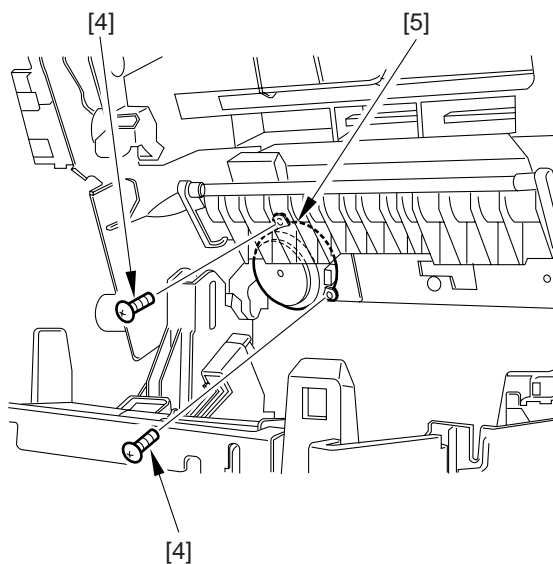
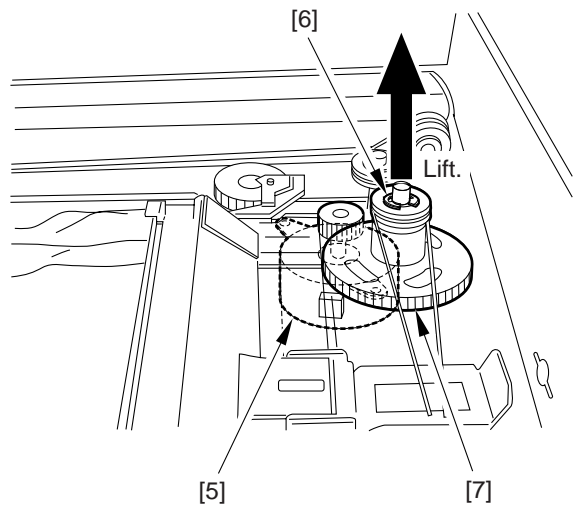


Figure 3-304

- 7) Free the top unit (by removing the screw-driver), and close the top unit.
- 8) Remove the E-ring [6]; then, lift the cable drive pulley [7] slightly, and detach the scanner/lens drive motor [5].

**Figure 3-305**

2. Outline of the Scanner Drive Cable

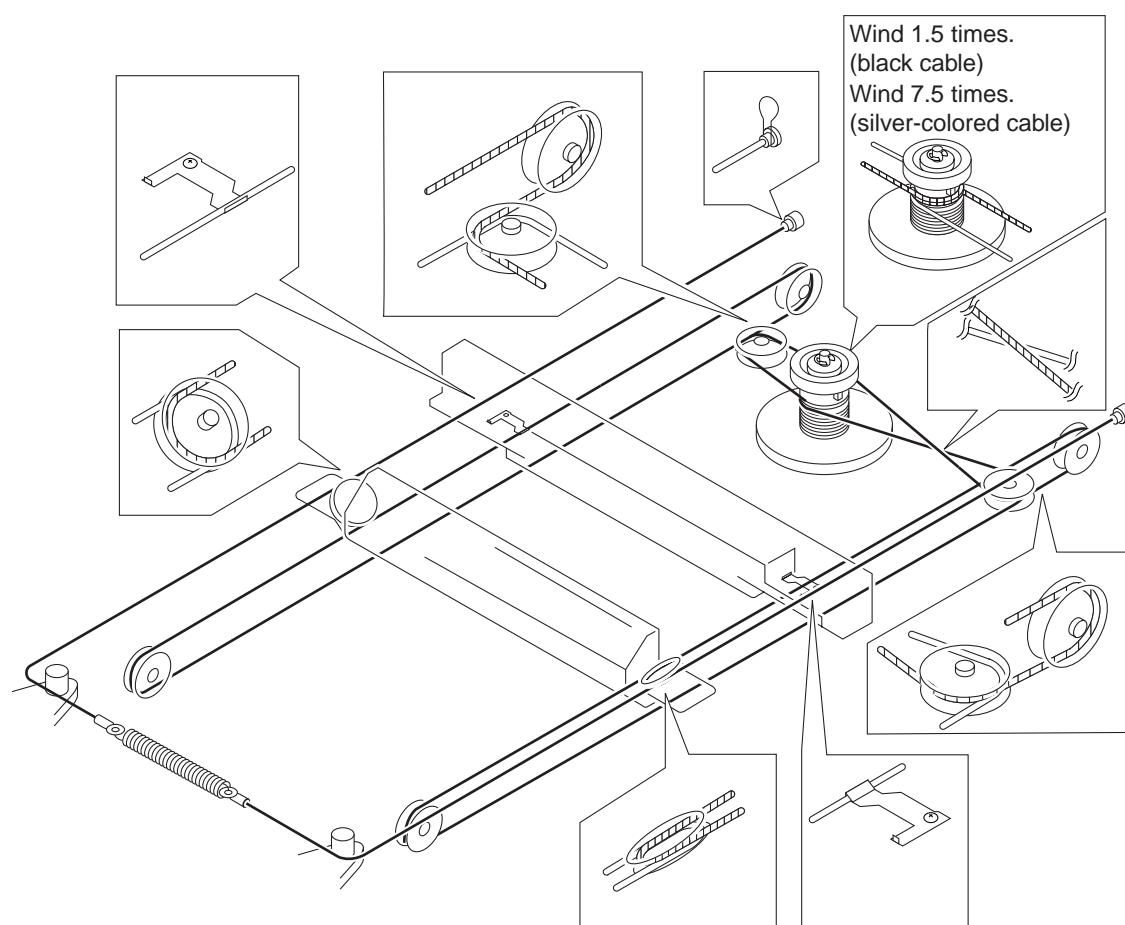


Figure 3-306

3. Routing the Scanner Drive Cable

a. Before Starting the Work

Prepare the following:

- Mirror positioning tool
- Cable clip
- Adhesive tape

- 1) Set the mirror positioning tool as shown.

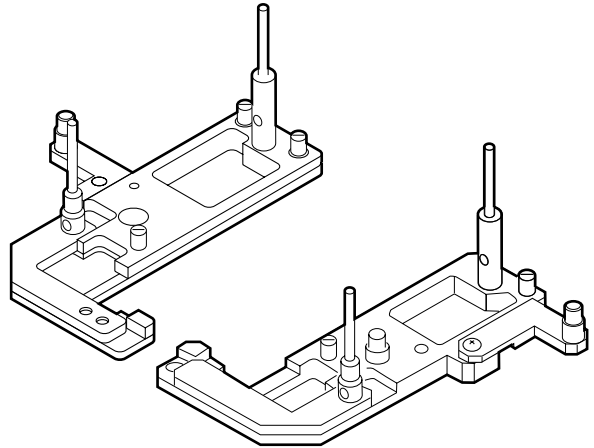


Figure 3-307

- 2) Prepare about five strips of adhesive tape (each one about 20 × 50 mm).
- 3) Remove the copyboard glass.
(See Chapter 7.III.C.1. "Removing the Copyboard Glass.")
- 4) Disconnect the connectors (J101, J131) [1] from the DC controller PCB.

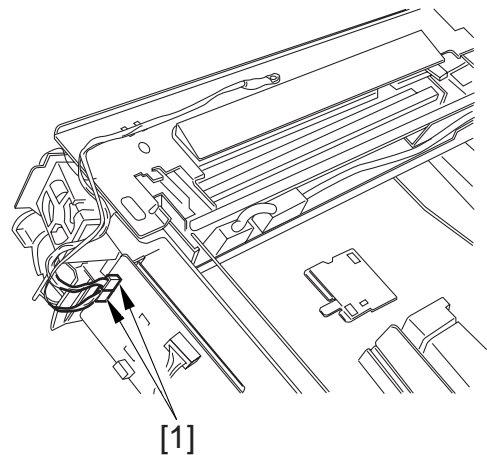


Figure 3-308

- 5) If the machine is equipped with an ADF, free the hook [2], and disconnect the two relay connectors [3] from the left upper stay [4].

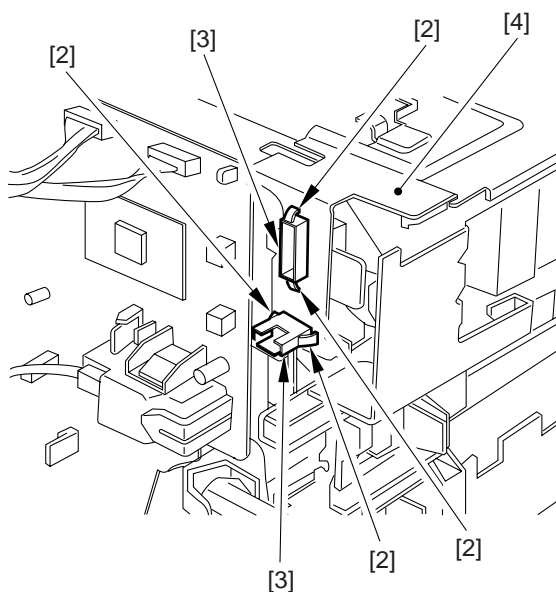


Figure 3-309

- 6) Remove the three screws [5], and detach the left upper stay [4].

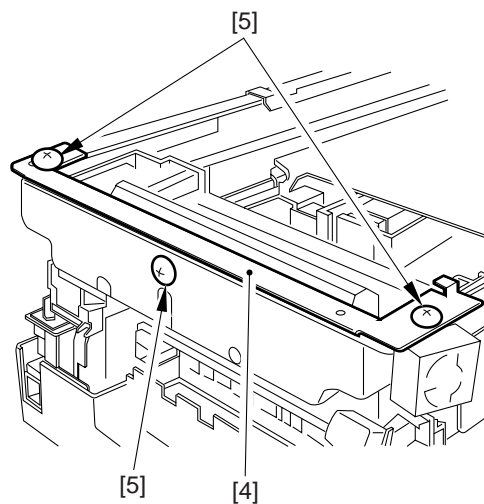


Figure 3-310

- 7) Remove the four screws [6], and detach the lens cover [7].

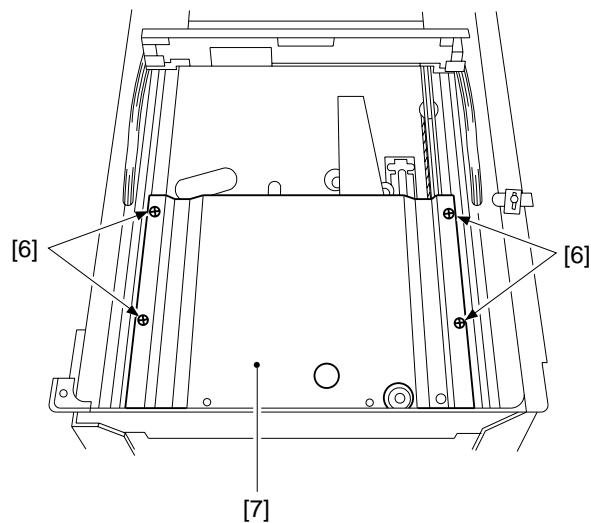


Figure 3-311

b. Routing the Reversing Cable

- 1) Wind the reversing cables (silver-colored) [2] on the cable drive pulley [1] 7.5 times with the longer end on top; then, secure it in position with a cable clip [3].

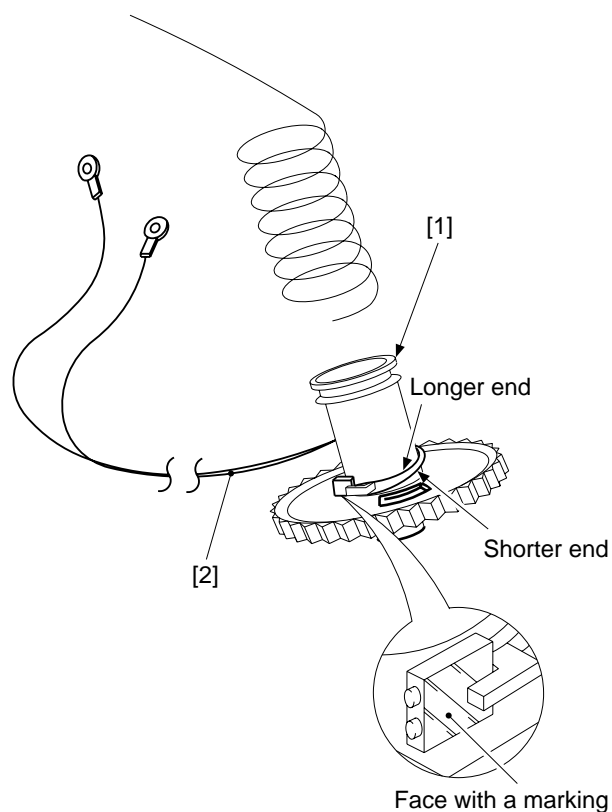


Figure 3-312

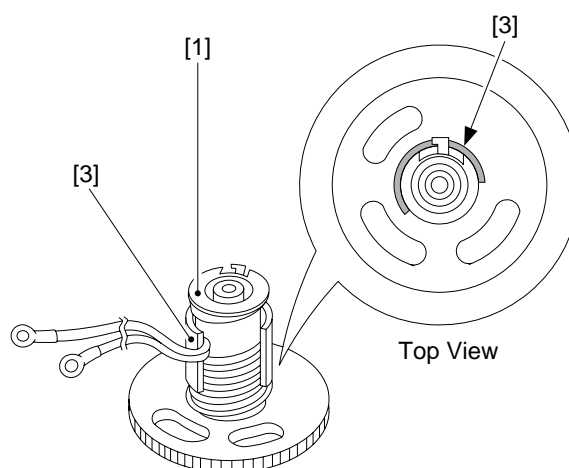


Figure 3-313

- 2) Put the cable drive pulley [1] into the shaft [4], and secure it in position with an E-ring [5].

When putting the cable drive pulley into the shaft, be sure that the hook is at the front.

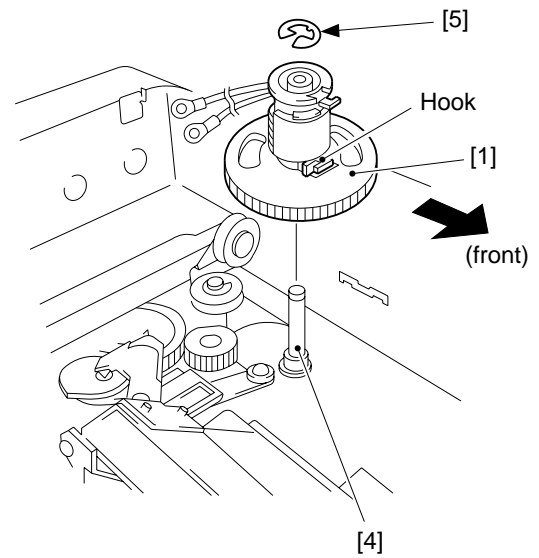


Figure 3-314

- 3) Hook the shorter end [6] on the pulley [7].

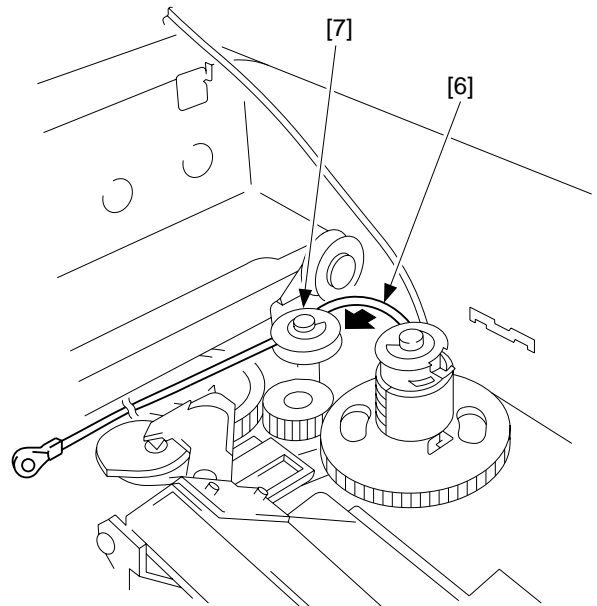


Figure 3-315

- 4) Lead the shorter end [6] under the No. 1 mirror mount [8] and the No. 2/3 mirror mount [9]; then, hook it on the left rear pulley [10] and the pulley [11] of the No. 2/3 mirror mount.

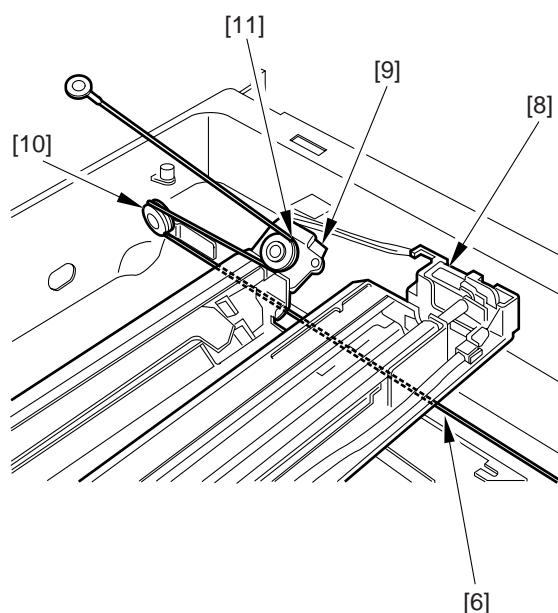


Figure 3-316

- 5) After fitting the shorter end [6] on the cable hook [12], secure its end with adhesive tape [13].
Be sure that the secured end of the cable is found where the hole in the left side plate and the tip of the cable matches.

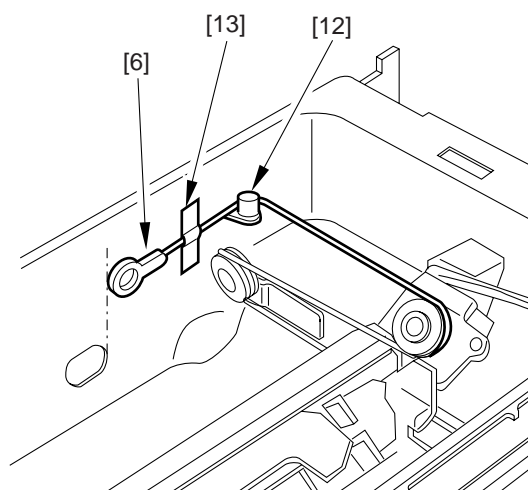


Figure 3-317

- 6) Lead the longer end [14] along the cable drive pulley, and hook it on the pulley [15] on the right front side.

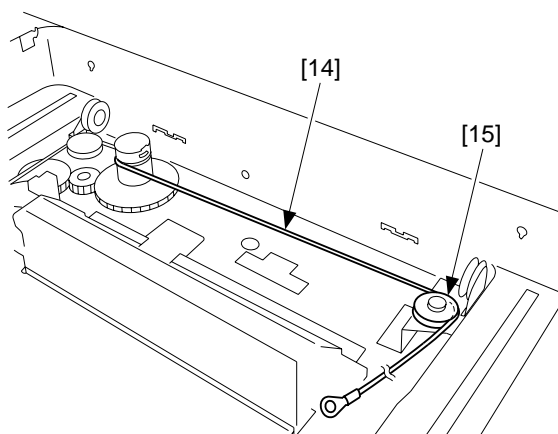


Figure 3-318

- 7) Lead the longer end [14] under the No. 1 mirror mount [8] and the No. 2/3 mirror mount [9]; then, hook it on the pulley [16] on the left front side and the pulley [17] of the No. 2/3 mirror mount.

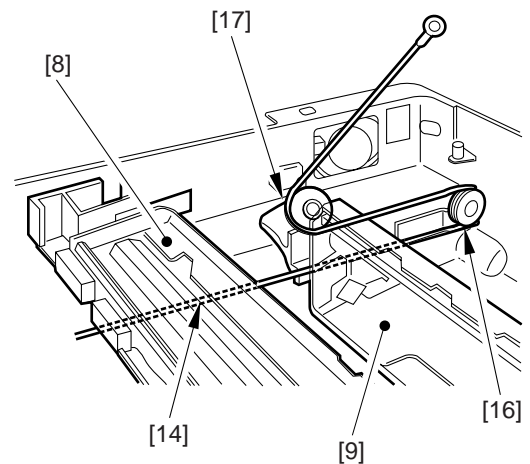


Figure 3-319

- 8) Hook the longer end [14] on the cable hook [18]; then, secure its end to the left side with adhesive tape [19].
Be sure that the secured end of the cable is found where the hole in the left side plate and the tip of the cable matches.

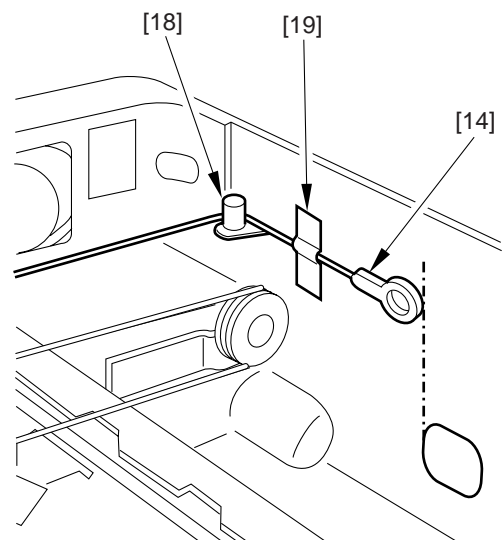


Figure 3-320

c. Routing the Forwarding Cable

- 1) Fit the longer end forwarding cable (black) [2] on the top hook of the cable drive pulley [1], and wind it 1.5 times. Then, secure the shorter end [3] as shown with adhesive tape [4].

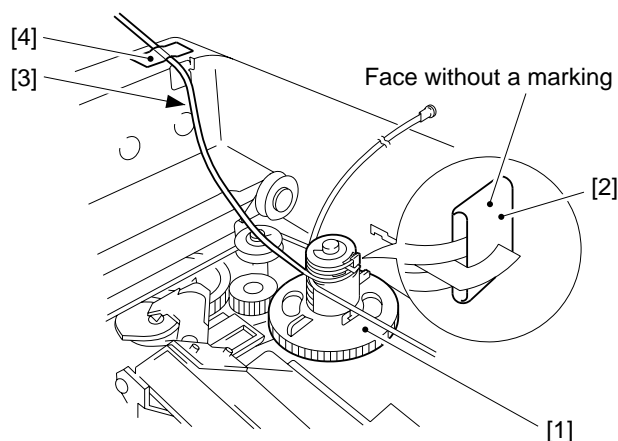


Figure 3-321

- 2) Lead the longer end [5] along the cable drive pulley [1] as shown, and hook it on the pulley [6] on the right front side.

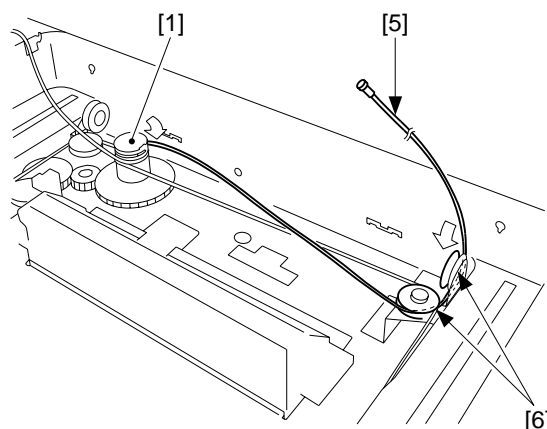


Figure 3-322

- 3) Lead the longer end [5] under the No. 1 mirror mount [7]; then, hook it on the pulley [8] of the No. 2/3 mirror mount, and lead it between the No. 1 mirror mount [7] and the scanning lamp [9].

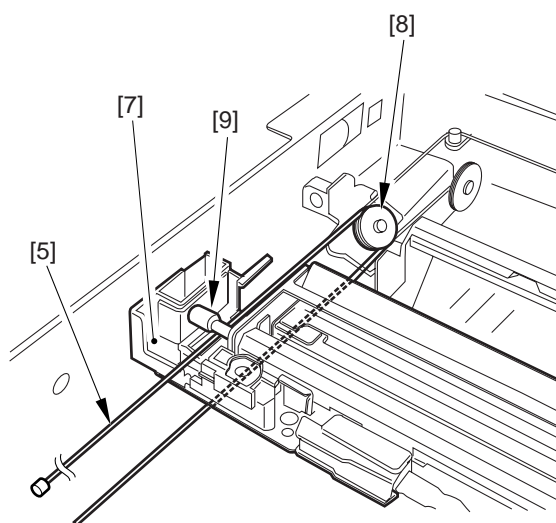


Figure 3-323

- 4) Hook the end of the longer end [5] on the hole [10] on the right side.

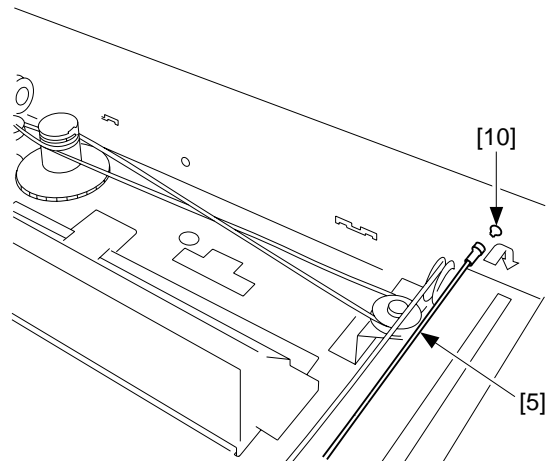


Figure 3-324

- 5) Free the shorter end [3], and hook it on the pulley [11] on the right rear side.

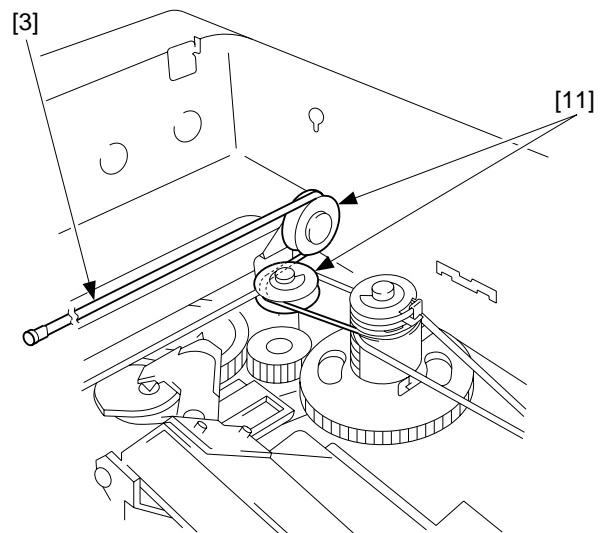


Figure 3-325

- 6) Lead the shorter end [3] under the No. 1 mirror mount [7], and hook it on the pulley [12] of the No. 2/3 mirror mount as shown; then, lead it between the No. 1 mirror mount [7] and the scanning lamp [9].

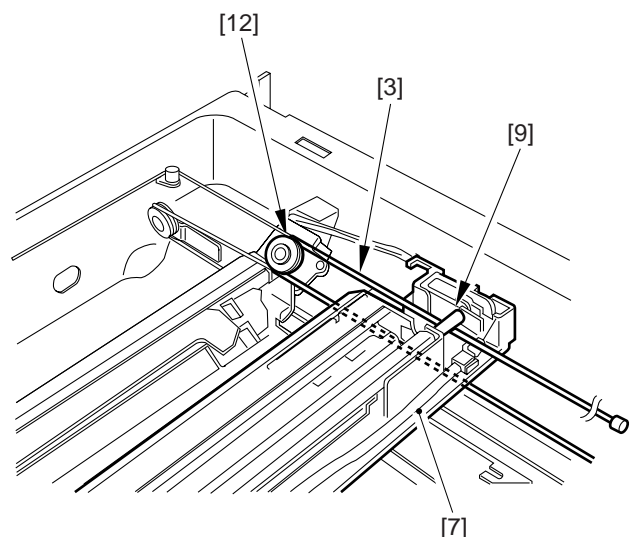


Figure 3-326

- 7) Hook the end of the shorter end [3] on the hole [13] on the right side.

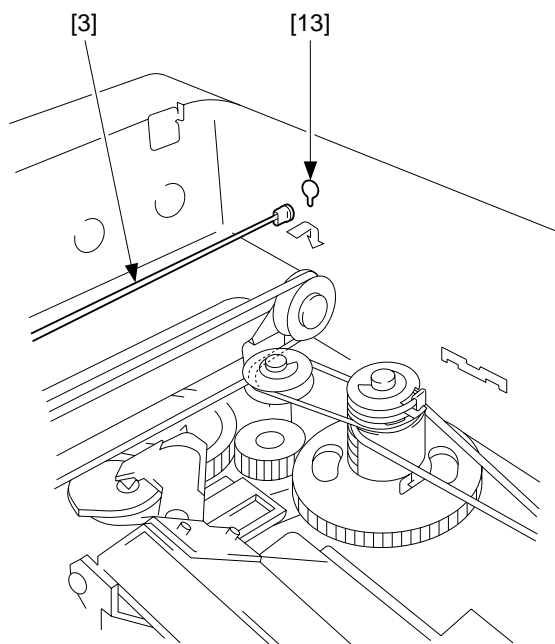


Figure 3-327

- 8) Free the shorter end [3] and the longer end [5] (reversing cable), and connect both with a spring [14]; then, fit the stopper [15].

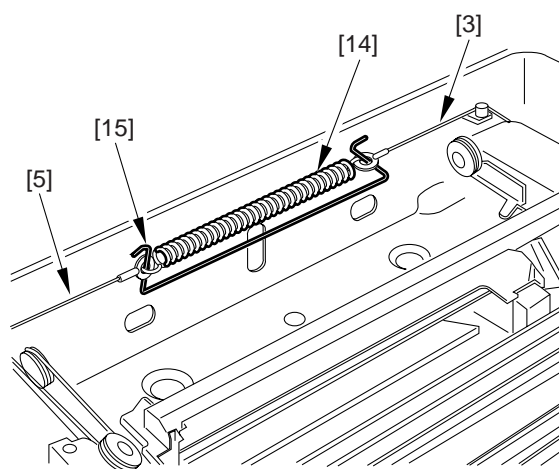


Figure 3-328

- 9) Detach the pulley clip [16] from the cable drive pulley [1].

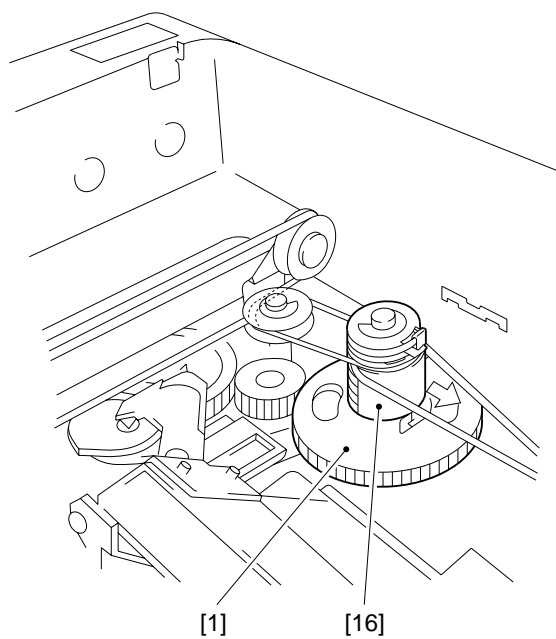


Figure 3-329

d. Positioning the No. 1 Mirror Mount

- 1) Fix the rear and the front of the No. 1 mirror mount [1] temporarily to the metal fixing [2] of the forwarding cable.

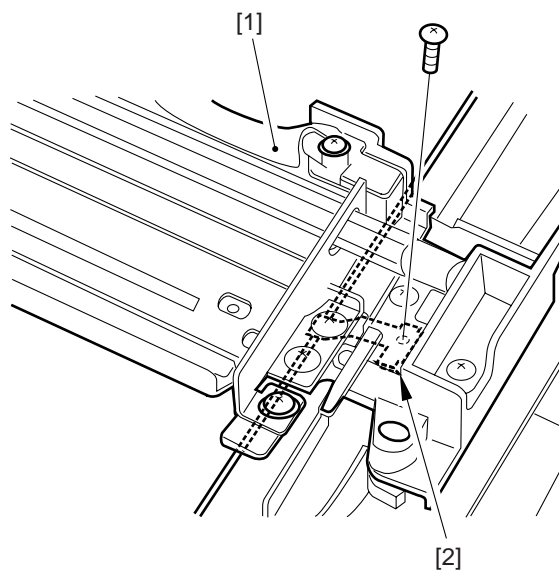


Figure 3-330 (rear)

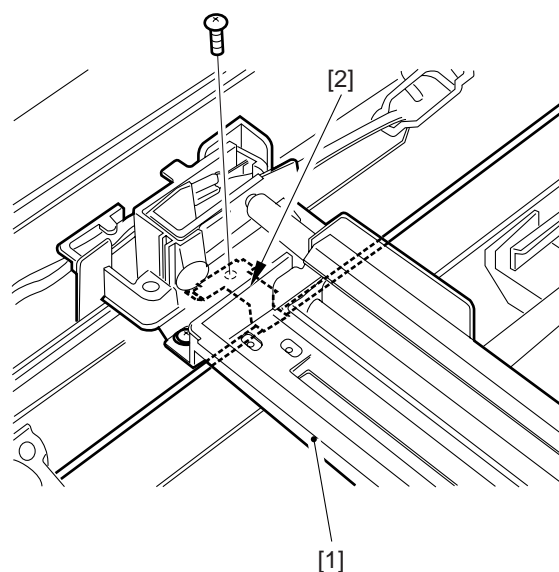


Figure 3-331 (front)

- 2) Turn the cable drive pulley [4] so that the three shafts [3] of the mirror positioning tool for rear and front is as shown.

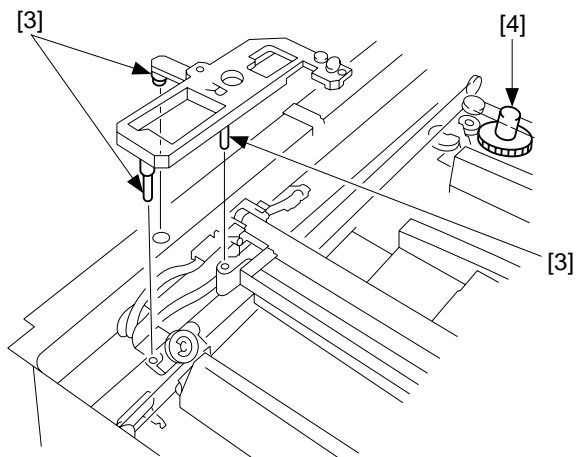


Figure 3-332 (rear)

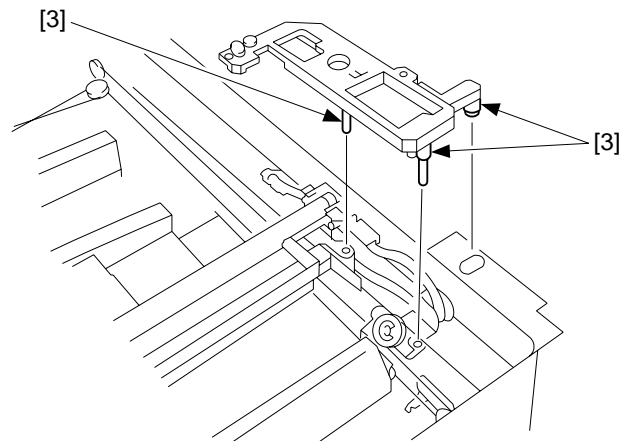


Figure 3-333 (front)

- 3) While keeping the condition of step 2), tighten the positioning screw on the rear and front of the No. 1 mirror mount [1].

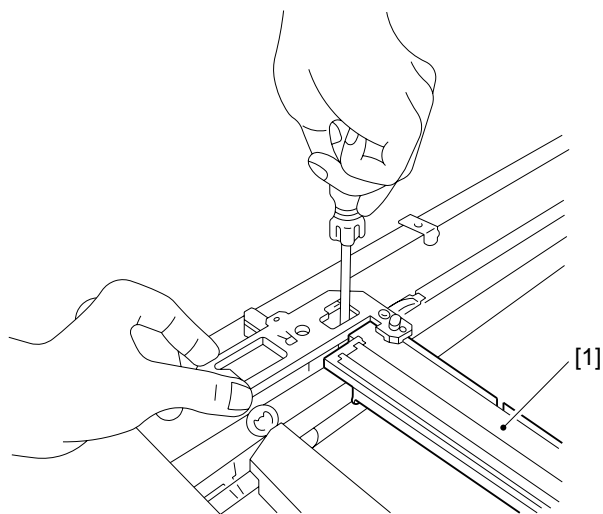


Figure 3-334 (rear)

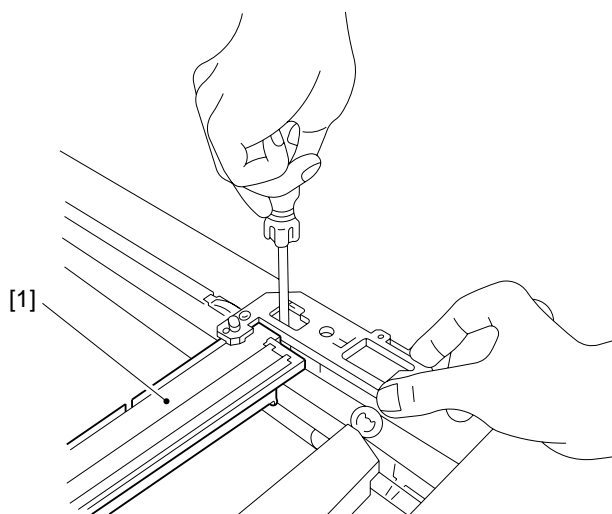


Figure 3-335 (front)

B. Lens Drive Assembly

1. Removing the Lens Cable

- 1) Turn on the power; when the lens has moved to the Direct position, disconnect the power plug.
- 2) Remove the copyboard glass.
(See Chapter 7.III.C.1. "Removing the Copyboard Glass.")
- 3) Remove the main drive assembly.
(See Chapter 7.III.D.2. "Removing the Main Drive Assembly.")
- 4) Remove the four screws [1], and detach the lens cover [2].

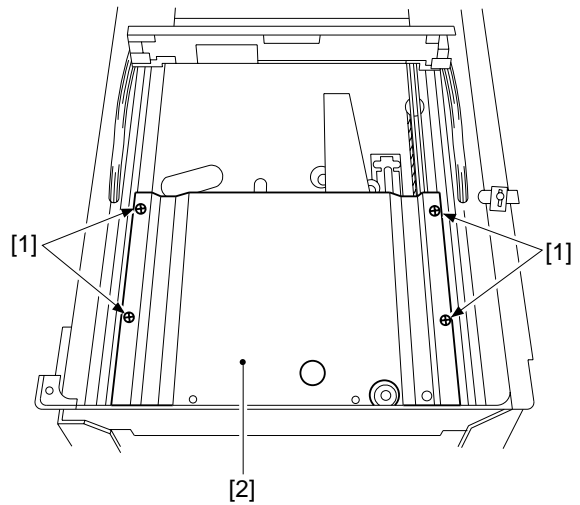


Figure 3-336

- 5) Mark the position of the lens cable fixing plate [3] and the lens mount [4] with a scribe.

Caution:

When routing the lens cable, be sure to refer to the marking made with a scribe.

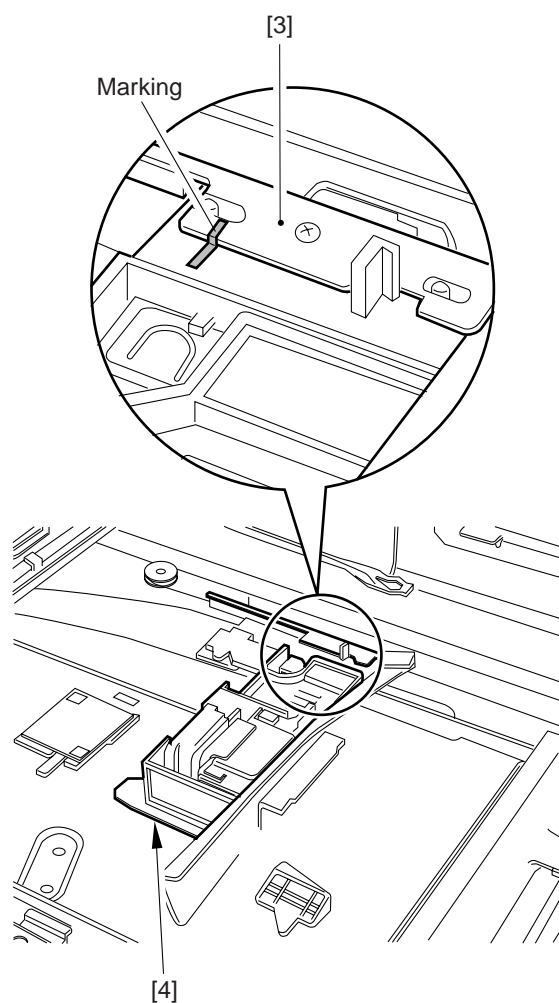


Figure 3-337

- 6) Disengage the lever [5] of the No. 4/5 mirror mount and the gear [6].

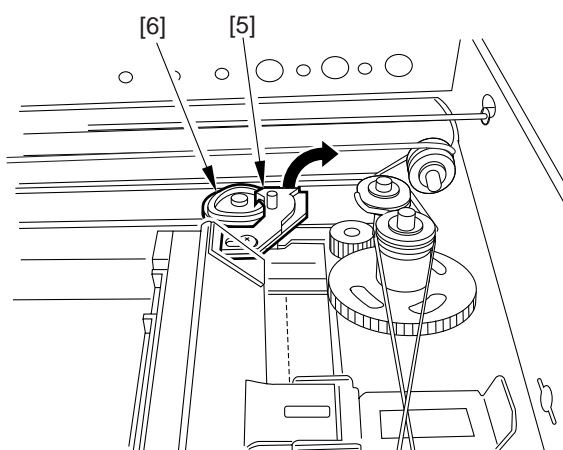


Figure 3-338

- 7) Remove the screw [7], and detach the cam gear [6] and the cable retainer [8].

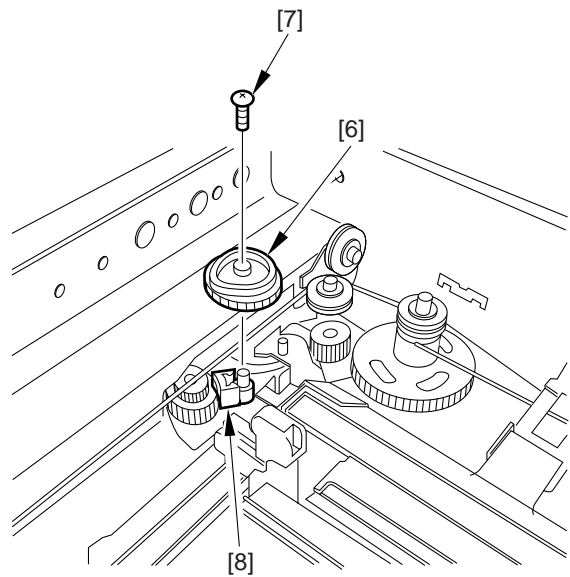


Figure 3-339

- 8) Holding the middle of the No. 1 mirror mount [9], move it to the center of the machine.

Caution:
Do not hold the reflecting plate.

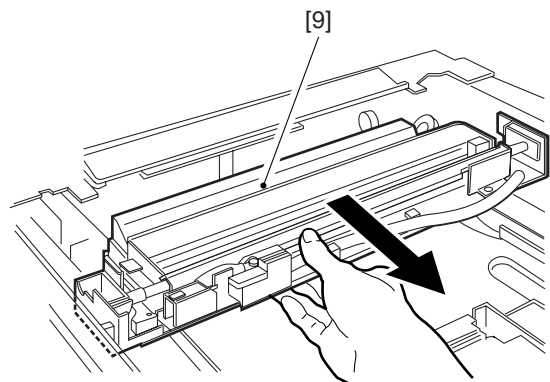


Figure 3-340

- 9) Remove the spring [10].

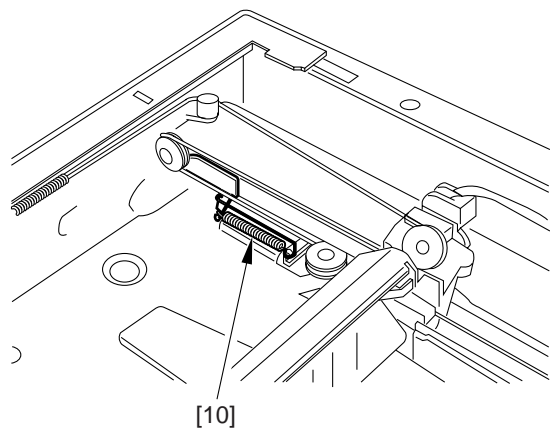


Figure 3-341

- 10) Remove the screw [11], and detach the lens cable fixing plate [12].

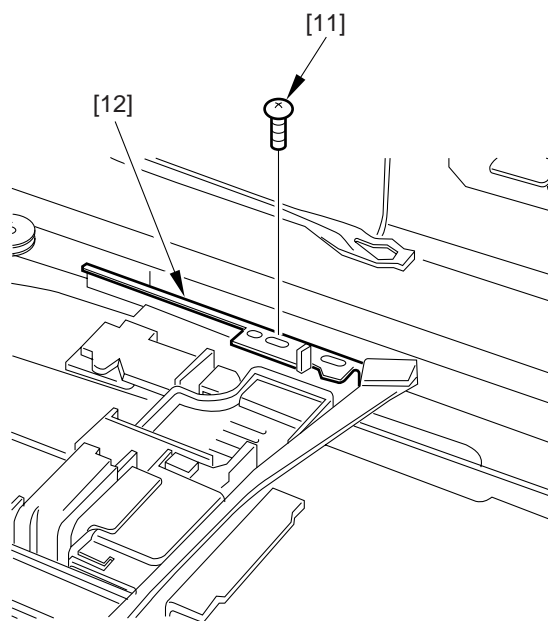


Figure 3-342

- 11) Free the lens cable [13] from the lens cable fixing plate [12]; then, detach the lens cable from the machine.

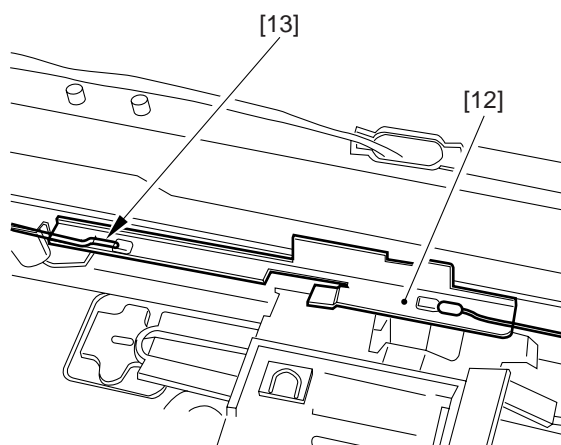


Figure 3-343

2. Routing the Lens Cable

- 1) After routing the lens cable, keep the lever [1] of the No. 4/5 mirror mount disengaged from the cam gear [2] (so that the lever will not come into contact when the cam gear rotates).

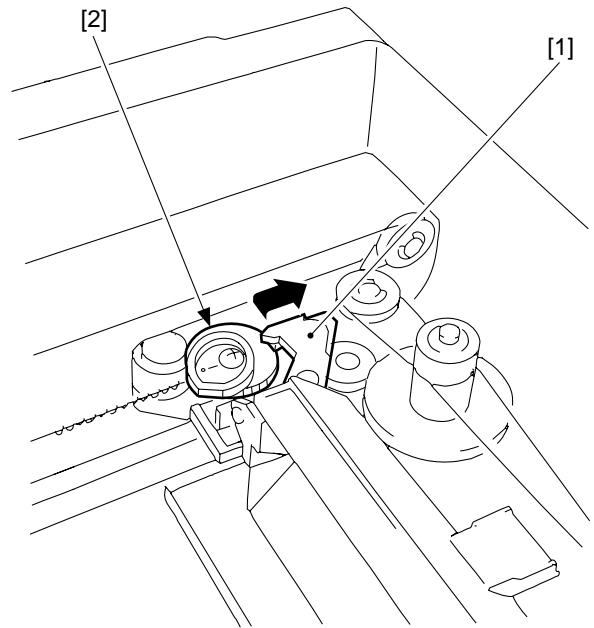


Figure 3-344

- 2) While keeping the condition in step 1), turn on the power; when the No. 1 mirror mount and the lens stopped moving, turn off the power.
 - The lens will move to the Direct position.
- 3) Check to make sure that the tip of the lever [1] of the No. 4/5 mirror mount and the marking [3] on the top face of the cam gear [2] match; then, engage the lever [1] and the cam gear [2].

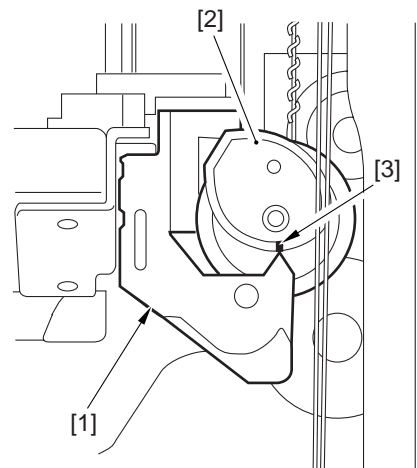


Figure 3-345

- 4) If the tip of the lever [1] and the marking on the cam gear [2] do not match, remove the fixing screw [4] of the cam gear [2] and detach the cam gear; then, mount the cam gear once again so that the marking on it and the tip of the lever match.

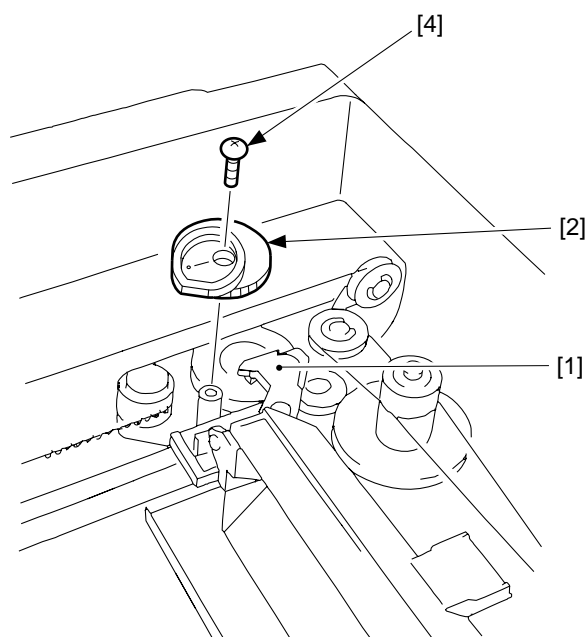


Figure 3-346

C. Exposure System

1. Removing the Scanning Lamp

- 1) Disconnect the power plug.
- 2) Remove the copyboard glass.
(See Chapter 7.III.C.1. "Removing the Copyboard Glass.")
- 3) Holding the middle of the No. 1 mirror mount [1], move the No. 1 mirror mount [1] to the right by about 5 cm.

Caution:
Do not hold the reflecting plate.

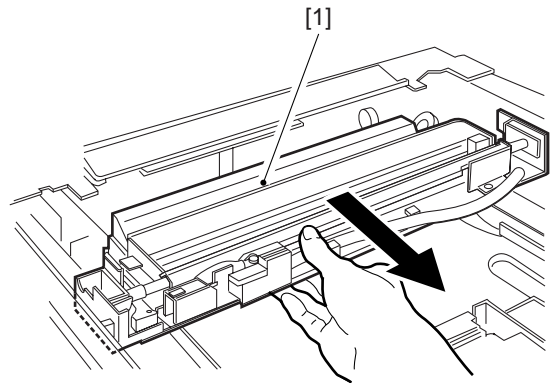


Figure 3-347

- 4) Free the harness [3] from the guide [2]; then, remove the screw [4], and detach the reflecting plate [5].

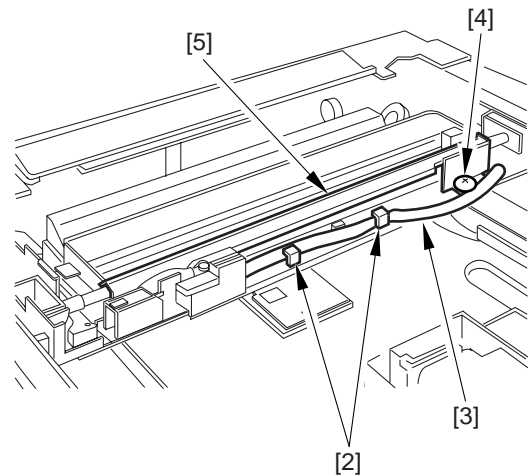


Figure 3-348

- 5) While pushing the electrode mount [6] found at the rear of the machine in the direction of the arrow, detach the scanning lamp [7].

Caution:

1. Do not start the work if the scanning lamp is hot.
2. Do not leave fingerprints on the surface of the scanning lamp.
3. If the surface of the scanning lamp is soiled, dry wipe it.

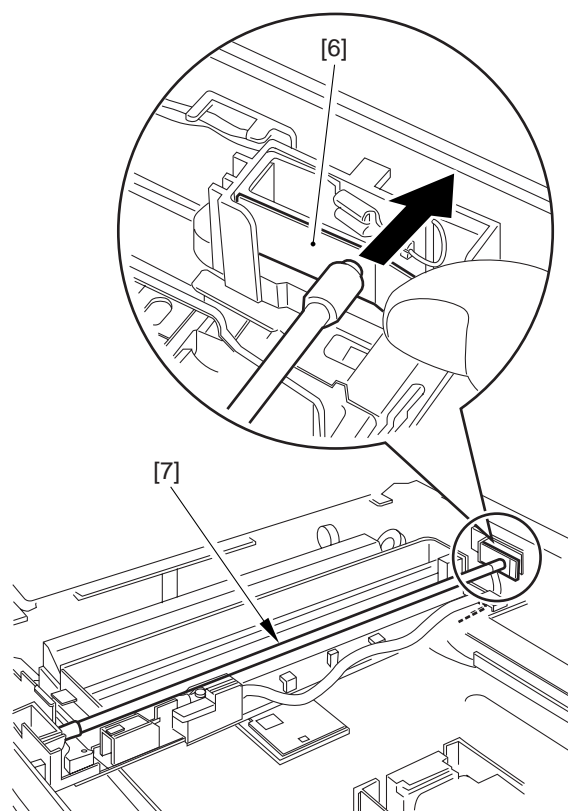


Figure 3-349

2. Points to Note When Mounting the Lamp

When mounting the scanning lamp, be sure that the logo mark (or the name of the manufacturer) is toward the front. Further, be sure that the protrusion near the middle of the lamp is as shown.

Caution:

- Do not touch the lamp portion.
- If you have replaced the scanning lamp, be sure to perform intensity adjustment (p. 11-42) and AE adjustment (p. 11-43).

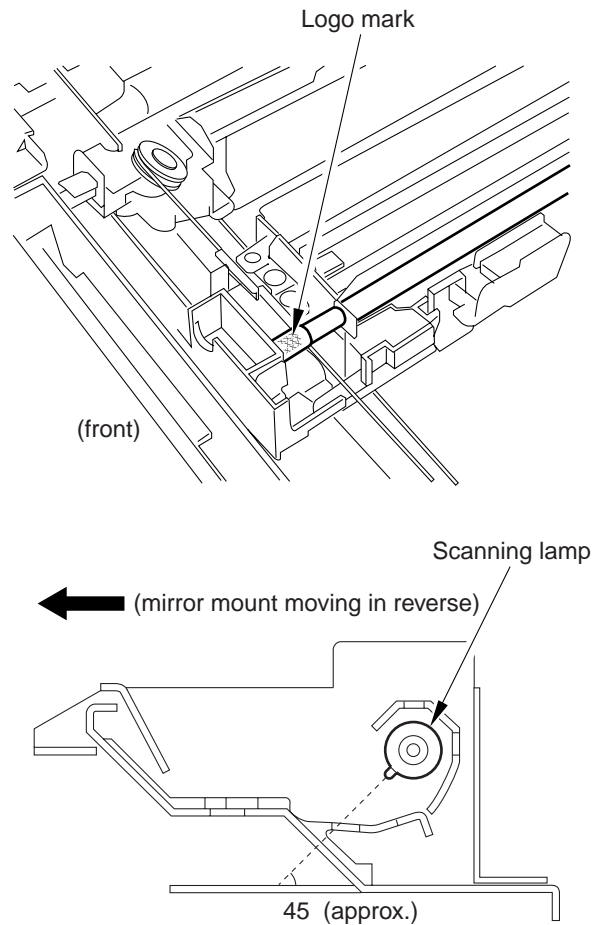


Figure 3-350

3. Removing the Thermal Fuse

- 1) Disconnect the power plug.
- 2) Remove the copyboard glass.
(See Chapter 7.III.C.1. "Removing the Copyboard Glass.")
- 3) Remove the two screws [1], and detach the thermal fuse [2].

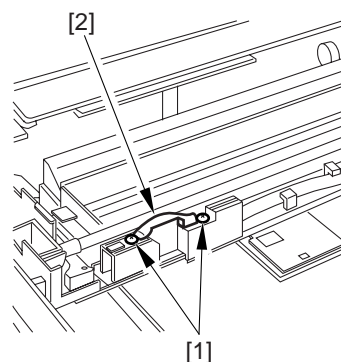


Figure 3-351

4. Points to Note When Mounting the Fuse

When mounting the thermal fuse, be sure that the thermal fuse is oriented as shown.

Make sure that the fuse is in contact with the reflecting plate.

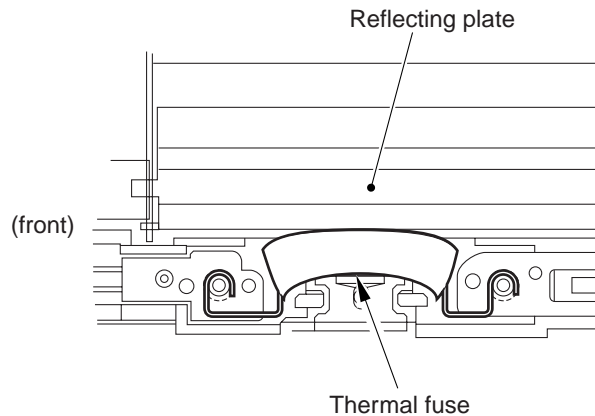


Figure 3-352

5. Removing the Thermistor Unit

- 1) Remove the top cover.
(See Chapter 7.III.A.1. “Removing the Top Cover.”)
- 2) Disconnect the connector (J131) [1] from the DC controller PCB; remove the screw [2], and detach the thermistor unit [3].

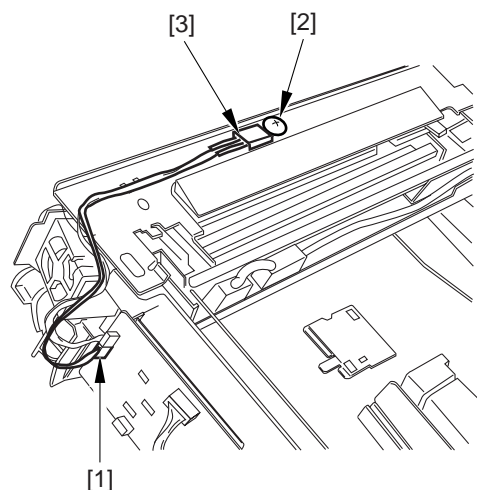


Figure 3-353

CHAPTER 4

IMAGE FORMATION SYSTEM

This chapter discusses the principles of how images are formed. It also explains the timing at which the various units involved in image formation are operated, and shows how they may be disassembled/assembled and adjusted.

I.	IMAGE FORMATION SYSTEM ...	4-1		
A.	Outline	4-1		
B.	Timing Chart for the Image Formation System	4-3		
C.	Controlling the Primary Charging Roller Bias	4-4		
D.	Controlling the Transfer Roller Bias	4-8		
E.	Controlling the Developing/ Separation Static Eliminator Bias	4-11		
F.	Measuring the Density of Originals	4-16		
G.	Controlling the Side Blanking Mechanism	4-21		
II.	DISASSEMBLY/ASSEMBLY	4-22		
A.	Cartridge	4-23		
B.	Transfer Charging Assembly	4-25		
C.	Blank Exposure	4-26		

I. IMAGE FORMATION SYSTEM

A. Outline

The major functions of the image formation system are as follows:

Item	Description
Controlling the primary charging roller bias	AC constant current control, on/off control DC constant voltage control, on/off control DC voltage level control
Transfer roller bias control	DC constant voltage control, on/off control DC constant current control (ATVC, cleaning bias) Voltage level control Polarity switching
Developing/separation static eliminator bias control	DC constant voltage control, on/off control AC constant voltage control, on/off control DC voltage level control
Density control	Developing DC bias control
Blanking control	Side blanking lamp

Table 4-101

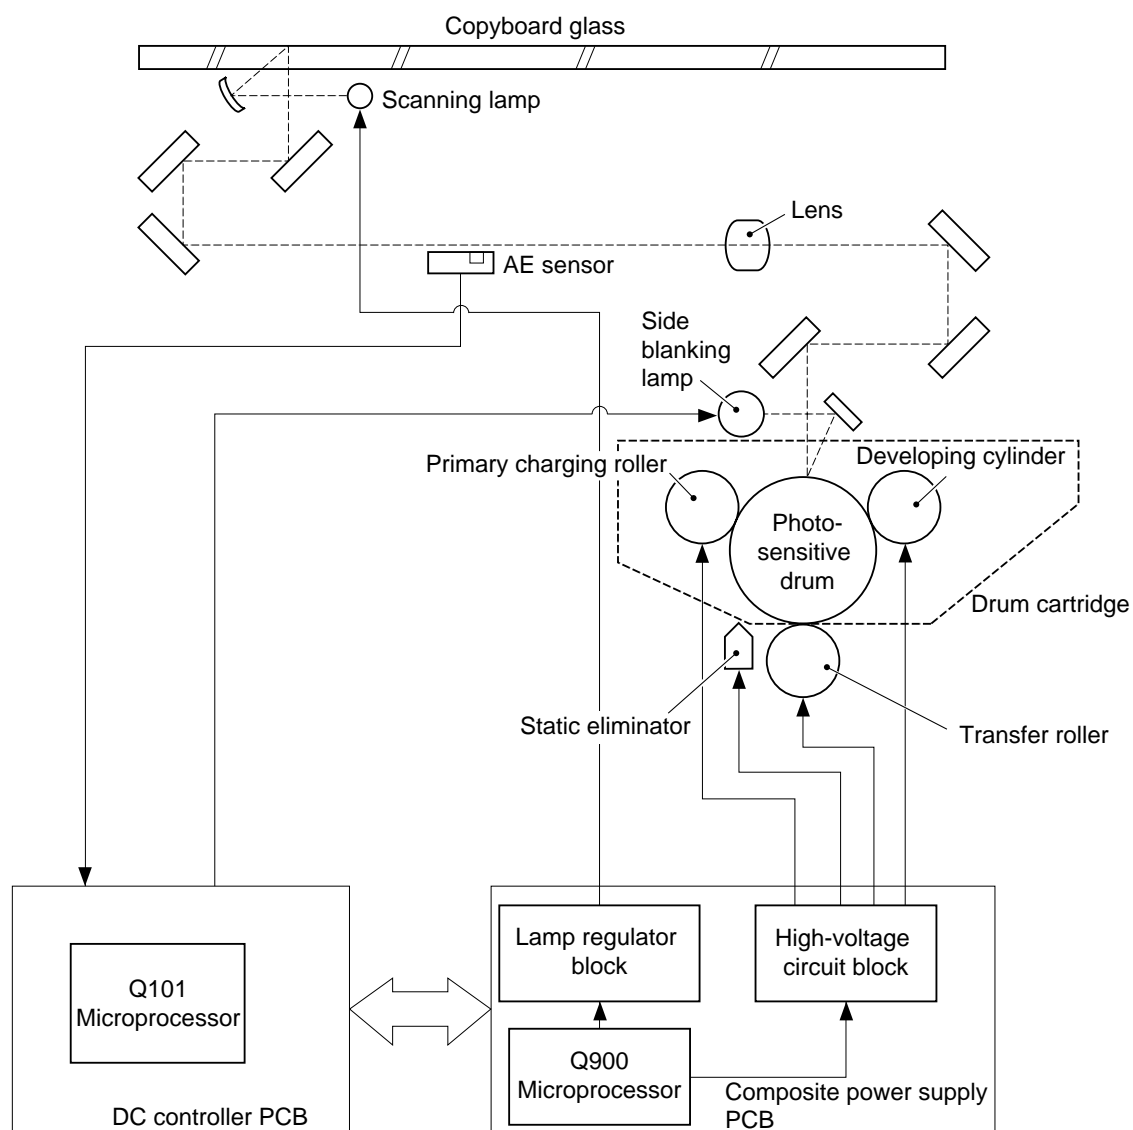


Figure 4-101

B. Timing Chart for the Image Formation System

Basic Sequence of Operations (Direct, 2 copies, continuous)

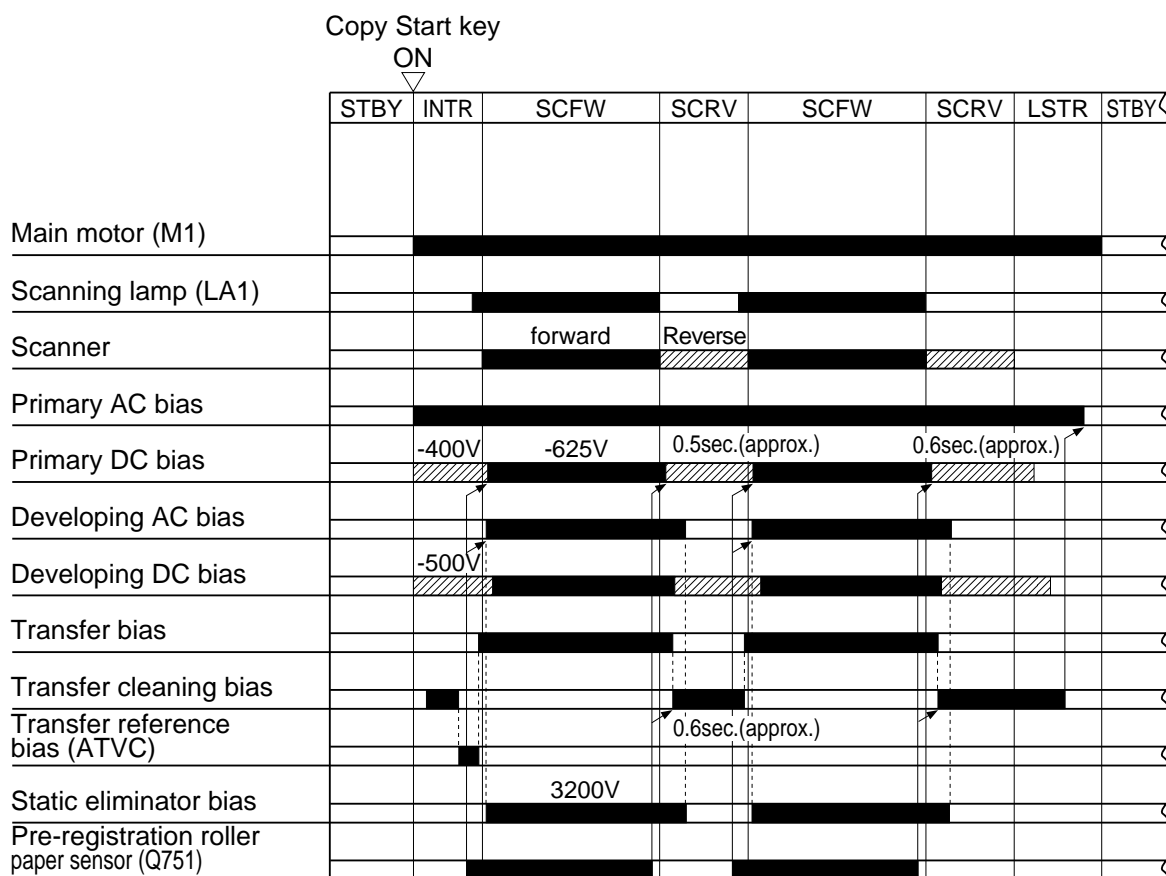


Figure 4-102

C. Controlling the Primary Charging Roller Bias

1. Outline

The circuit shown in Figure 4-103 is used to control the voltage applied to the primary charging roller, and has the following functions:

- Turning on and off the DC/AC bias
- Controlling the DC bias to a specific voltage
- Controlling the AC bias to a specific voltage
- Switching the level of the DC bias

Both DC bias and AC bias are applied to the primary charging roller so as to ensure that the surface potential of the photosensitive drum will be uniform. The level of the DC bias is switched between when forming copy images and when not forming copy images.

Reference:

DC component:	-400 V (non-image area)/-625 V (image area)
AC component:	2000 V _{pp} to 3000 V _{pp} (885μA)

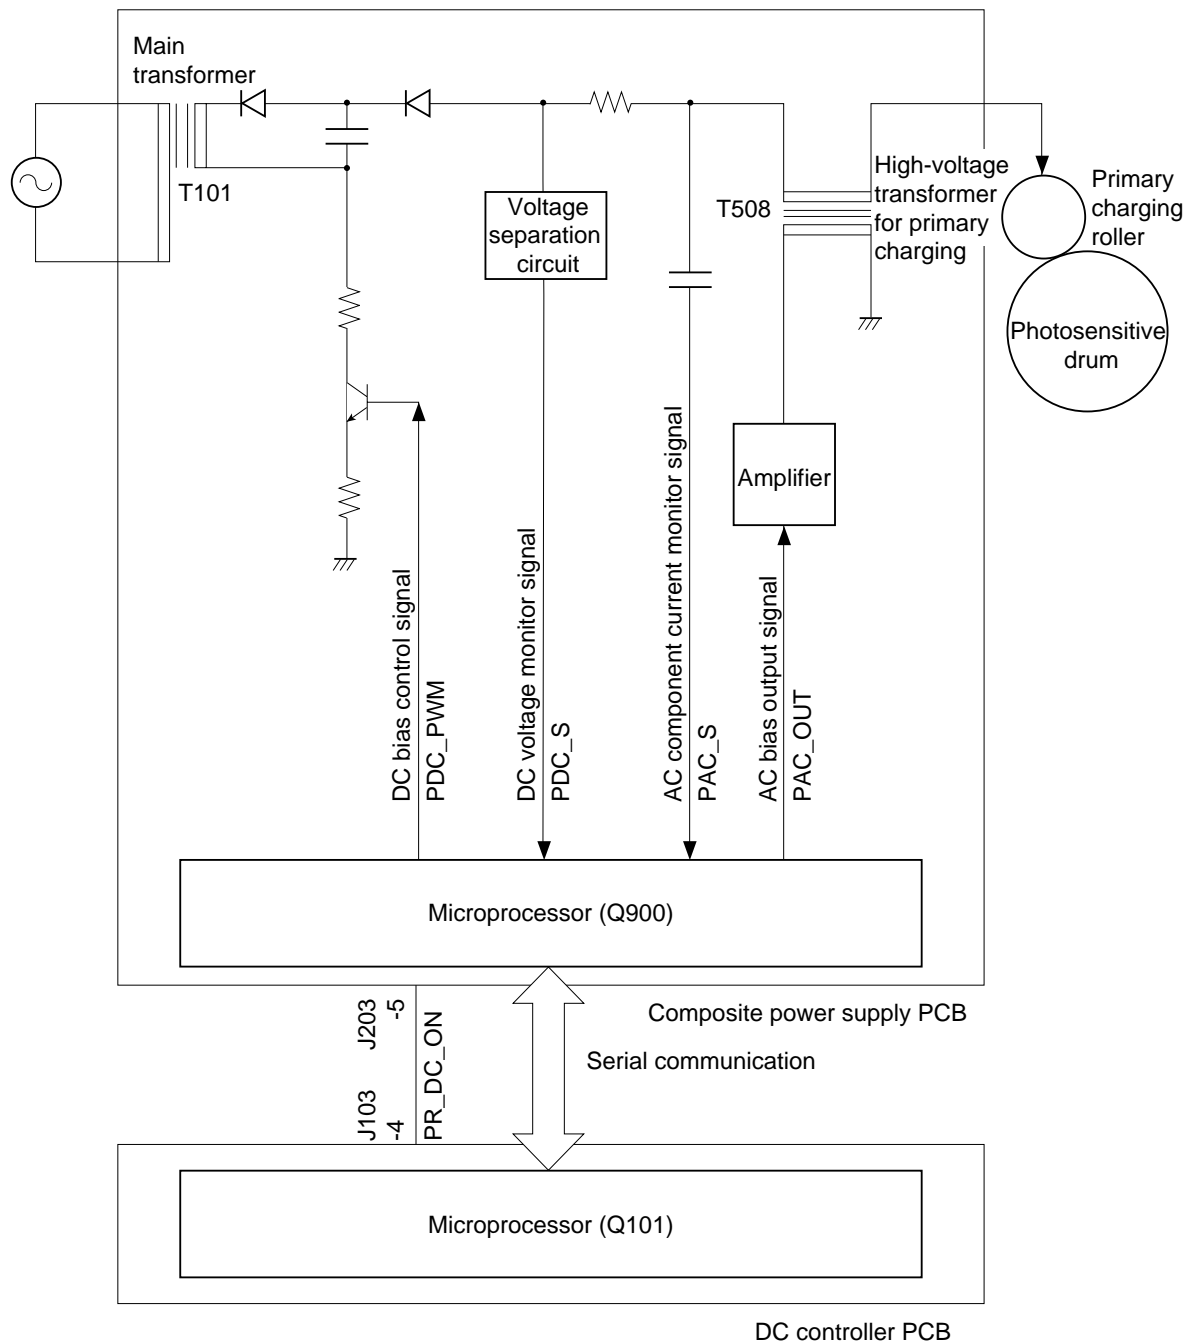


Figure 4-103

2. Operations

a. Turning On and Off the DC Bias

The DC bias applied to the primary charging roller is turned on or off by the serial communication signal and the primary charging bias ON signal (PR_DC_ON) from the DC controller PCB.

When the Copy Start key is pressed, the DC bias ON signal (serial) and the primary charging bias ON signal (PR_DC_ON) are sent. The microprocessor (Q900) on the composite power supply PCB generates the DC bias control signal (PDC_PWM) based on the combination of the serial signal and the PR_DC_ON signal, applying a DC bias to the primary charging roller.

	DC bias ON signal (8-bit signal communication)		PR_DC_ON (J103-4)
	bit0	bit1	
DC bias ON (image area)	1	–	0
DC bias ON (non-image area)	1	0	1
DC bias OFF	0	0	1

Table 4-102 Relationship between DC Bias Output and Signal

b. Turning On and Off the AC Bias

The AC bias applied to the primary charging roller is turned on and off by the serial communication signal from the DC controller PCB.

When the AC bias ON signal arrives from the DC controller PCB, the microprocessor (Q900) on the composite power supply PCB generates the AC bias output signal (PAC_OUT), thereby applying an AC bias to the primary charging roller.

c. Controlling the DC/AC Bias to a Specific Voltage/Current

The DC bias and the AC bias applied to the primary charging roller are controlled by the microprocessor (Q900) on the composite power supply PCB so that they remain a specific level.

When a DC/AC bias is generated, the microprocessor (Q900) on the composite power supply PCB detects the DC voltage monitor signal (PDC_S) and the AC component current monitor signal (PAC_S), compares their levels against the reference levels, and varies the DC bias control signal (PDC_PWM) and the AC bias output signal (PAC_OUT) according to the differences so as to ensure that they remain specific levels.

Reference:

The DC bias control signal varies its pulse duty ratio while the AC bias output signal varies its amplitude to change the level of the DC/AC bias.

d. Switching the DC Bias Level

The machine switches the DC bias level between the copy image area (-625 V) and the non-copy image area (-400 V).

The level of the DC bias is switched by the DC bias ON signal (serial signal) generated by the DC controller PCB.

The microprocessor (Q900) on the composite power supply PCB varies the DC bias control signal (PDC_PWM) to switch the level of the DC bias. (See Table 4-102.)

Reference:

The machine applies a DC bias over a non-copy image area (between sheets) so as to prevent charging the photosensitive drum to a positive potential otherwise caused by the cleaning bias from the transfer roller.

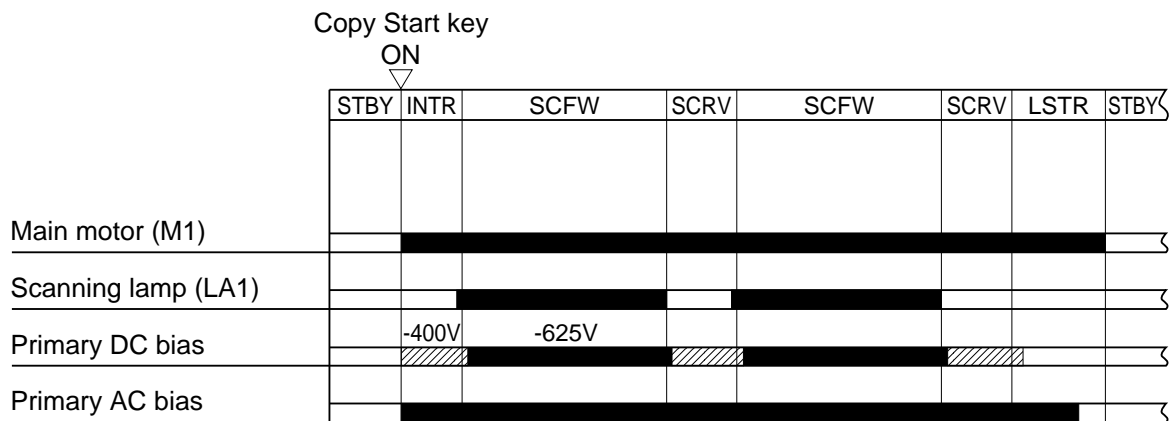


Figure 4-104

D. Controlling the Transfer Roller Bias

1. Outline

The circuit shown in Figure 4-105 is used to control the voltage applied to the transfer charging roller, and has the following functions:

- Turning on and off the transfer bias.
- Controlling the transfer bias to a constant voltage.
- Correcting the transfer bias voltage level (ATVC)
- Switching the transfer bias polarity (cleaning bias)

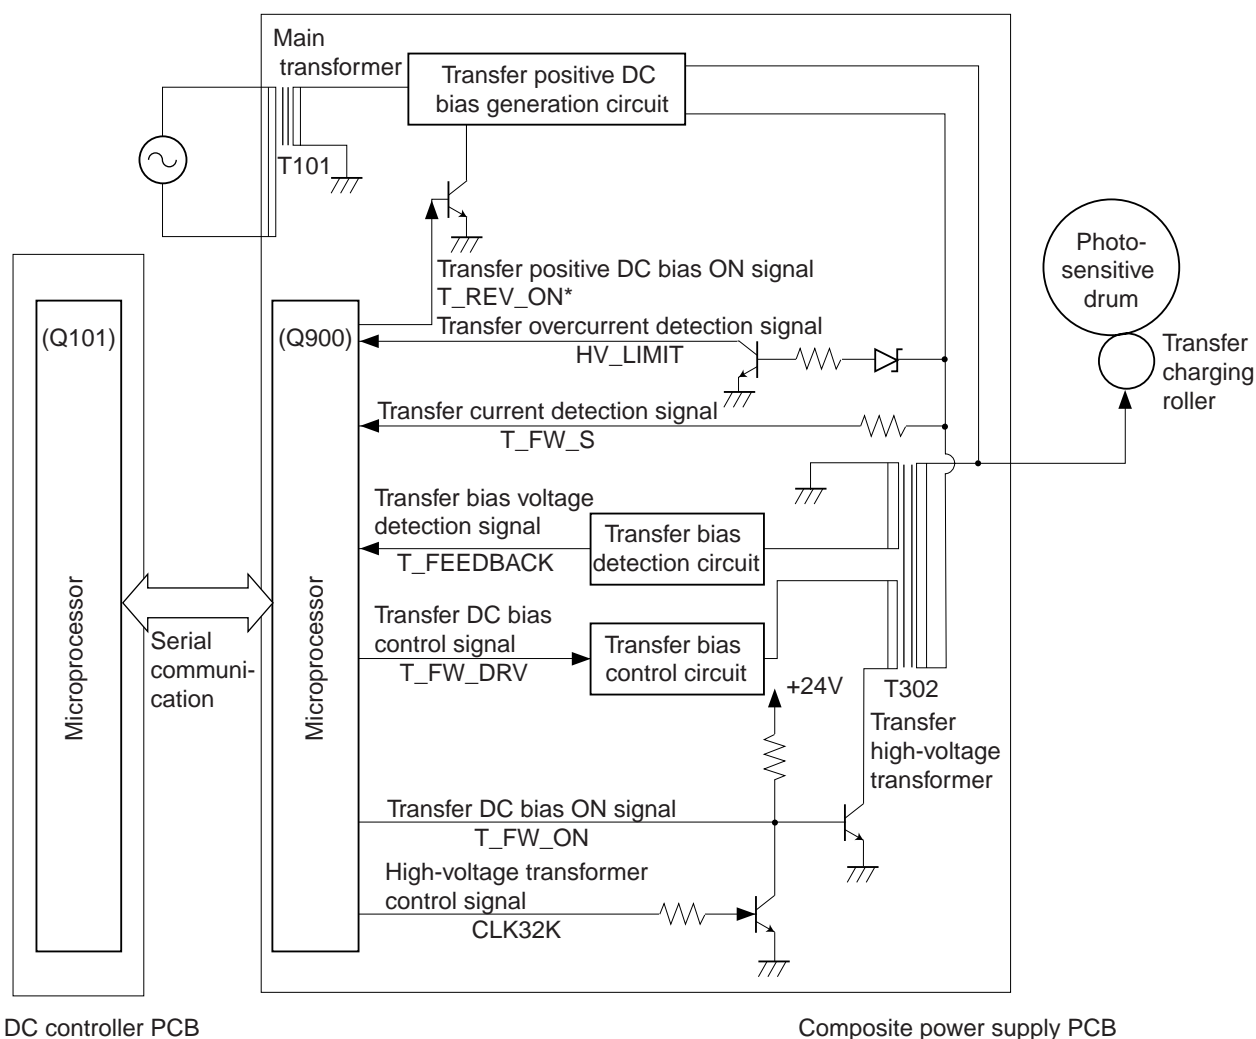


Figure 4-105

2. Operations

a. Turning On and Off the Transfer Bias

The transfer bias applied to the transfer charging roller is turned on and off by the serial communication signal from the DC controller PCB.

When the transfer bias ON signal (serial signal) is generated by the DC controller PCB, the microprocessor (Q900) on the composite power supply PCB generates the high-voltage transformer control signal (CLK32K), transfer DC bias ON signal (T_FW_ON), and transfer DC bias control signal (T_FW_DRV), thereby applying the transfer bias to the transfer charging roller.

	Transfer bias ON signal (serial communication)		T-FW_ON signal	T_REV_ON* signal
	bit2	bit3		
Negative transfer bias ON	1	0	1	1
Positive transfer bias ON (cleaning bias)	1	1	1	0
Transfer bias OFF	0	0	0	1
ATVC	0	1	1	1

Table 4-103 Relationship between Transfer Bias Output and Signals

b. Controlling the Transfer Bias to a Specific Voltage

The transfer bias applied to the transfer charging roller is controlled to a specific level by the microprocessor (Q900) on the composite power supply PCB.

When a transfer bias is generated, the microprocessor (Q900) on the composite power supply PCB checks the transfer bias voltage detection signal (T_FEEDBACK), compares it against the reference value, and varies the transfer DC bias control signal (T_FW_DRV) according to the difference to ensure that the transfer bias remains a specific level at all times.

Reference:

The level of transfer bias applied to the transfer roller during a copying run is between -7.5 and -3.0 kV.

c. Correcting the Transfer Bias Voltage Level (ATVC control)

The machine automatically corrects the application voltage level of the transfer bias to correct the changes in the transfer efficiency caused by the deterioration of the transfer roller or the changes in the environment.

A current of a specific level ($-14.6 \mu\text{A}$) is applied to the transfer charging roller during initial rotation executed each time the Copy Start key is pressed. The microprocessor (Q900) on the composite power supply PCB checks the transfer current detection signal (T_FW_S), and varies the transfer bias applied to the transfer charging roller so that it will be an appropriate level.

Reference:

While the transfer charging roller makes a single rotation, the microprocessor (Q900) checks the transfer current detection signal four times, and determines the level of the transfer bias to apply using the average of the readings.

d. Switching the Polarity of the Transfer Bias (cleaning bias)

The machine uses a direct charging method, allowing toner to move from the photosensitive drum to the transfer roller as when a jam occurs if left unattended.

To remove excess toner, a positive voltage is applied to the transfer roller as follows, thereby returning the toner from the roller to the drum:

< Timing >

- While initial rotation is executed after the Copy Start key is pressed
- Part of the period in which the scanner is moved in reverse
- Part of the period in which last rotation is executed

The polarity of the transfer bias is switched by the transfer bias ON signal (serial signal) generated by the DC controller PCB.

In response to the signal, the microprocessor (Q900) on the composite power supply PCB causes the transfer positive DC bias On signal (T_REV_ON*) to go '0', so that the positive component of the transfer bias (constant current control, $+1.56 \mu\text{A}/2.5 \text{ kV max.}$) will be applied to the transfer roller. (See Table 4-103.)

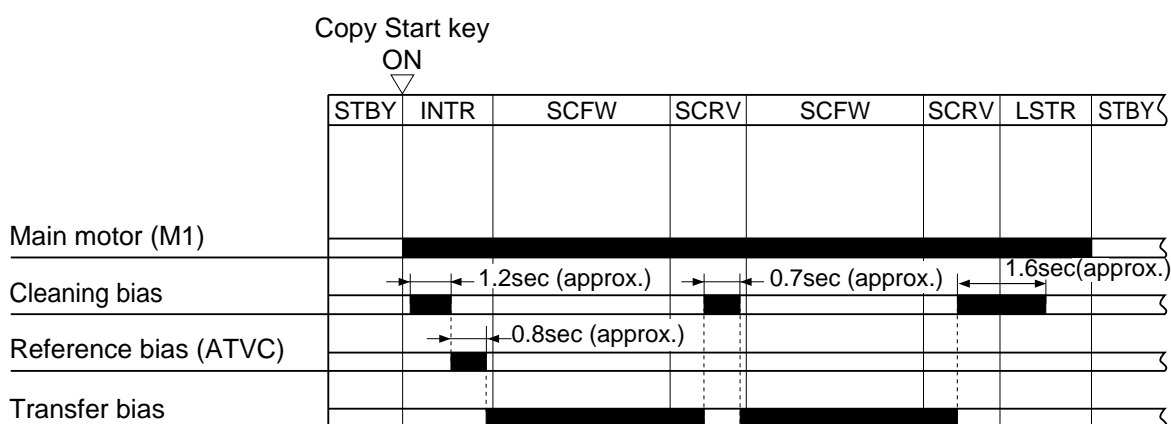


Figure 4-106

E. Controlling the Developing/Separation Static Eliminator Bias

1. Outline

The circuit shown in Figure 4-107 is used to control the voltage applied to the developing assembly and the separation static eliminator, and has the following functions:

- Turning on and off the developing DC bias
- Turning on and off the AC bias (turning on and off the static eliminator bias)
- Controlling the voltage level of the developing DC bias

Both AC bias and DC bias are applied to the developing cylinder while copies are being made. When the photosensitive drum rotates and yet developing is not under way, about -500 VDC is applied to the developing cylinder regardless of the position of the density adjusting lever, thereby preventing adhesion of excess toner on the photosensitive drum.

Reference :

Developing DC bias : -80 ~ -550V

Developing AC bias : 1200Vpp \pm 10%

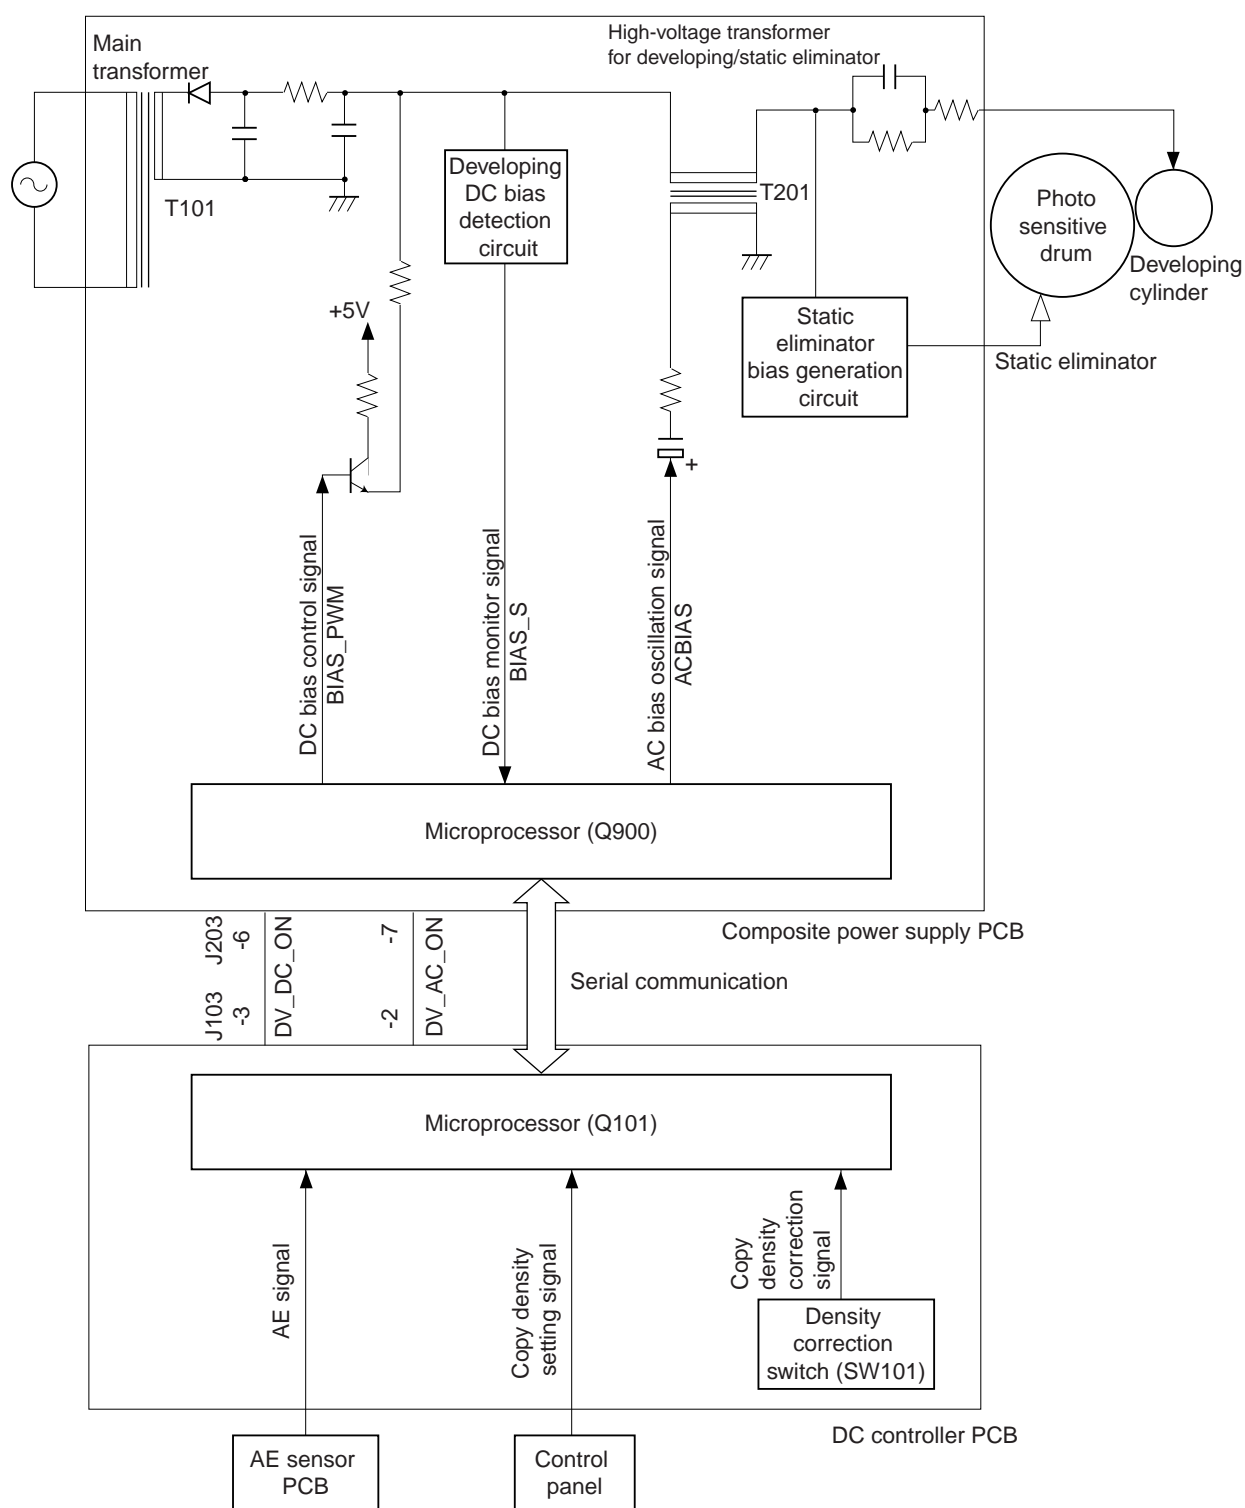


Figure 4-107

2. Turning On and Off the DC Bias

The DC bias applied to the developing cylinder is turned on and off by the signal communication signal and the developing DC bias ON signal (DV_DC_ON) generated by the DC controller PCB.

When the developing DCON signal (serial signal) and the developing DC bias ON signal (DV_DC_ON) are generated by the DC controller PCB, the microprocessor (Q900) on the composite power supply PCB sends the DC bias control signal (BIAS_PWM), thereby applying a DC bias to the developing cylinder.

	Developing DCON signal (Serial communication)		DV_DC_ON (J103-3)
	bit5	bit6	
DC bias ON	—	1	0
DC bias ON (- 500V)	0	1	1
DC bias OFF	0	0	1

Table 4-104 Relationship between Developing DC Bias and Signals

3. Turning On and Off the AC Bias

The AC bias is turned on and off by the developing AC bias ON signal (DV_AC_ON) generated by the DC controller PCB.

The DC controller PCB sends the developing AC bias ON signal (DV_AC_ON) to the composite power supply PCB a specific period of time after copy paper has moved past the registration sensor. The microprocessor (Q900) on the composite power supply PCB generates the AC bias oscillation signal (ACBIAS) so that an AC bias is applied to the developing cylinder.

The AC bias is modified/rectified and then supplied to the static eliminator (static eliminator bias, about 3.2 kV).

4. Controlling the Voltage Level of the Developing DC Bias

The DC bias control signal (BIAS_PWM) is varied according to the following settings to change the DC component of the developing bias so as to control the copy density:

- Setting of the density adjusting lever (in manual adjustment mode)
- Output of the AE sensor (in automatic control mode)
- Setting of copy mode (toner save mode, photo mode)
- Setting of the density correction switch (SW101)

The density correction switch (SW101) mounted on the DC controller PCB may be set to any of three levels, enabling correction of foggy images or light images caused as by a change in the sensitivity of the photosensitive drum.

The density correction switch (SW101) affects both manual density adjustment and auto density adjustment (AE).

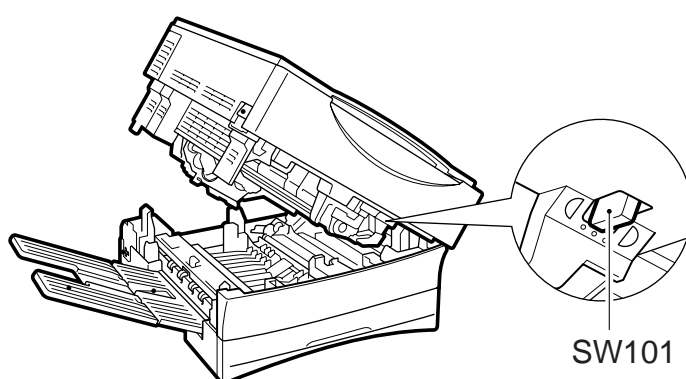


Figure 4-108

If the machine is not equipped with a density correction switch (SW101), the image density changes in AE mode according to how the density adjusting lever is set.

The machine corrects the level of the developing DC bias and the voltage supplied to the scanning lamp as follows in reference to the setting used for normal copying when toner save mode or photo mode is selected.

	Toner save mode	Photo mode
Developing DC bias	-75V	+15V
Voltage supplied to the scanning lamp	-2V*1 -3V*2	-2V*1 -3V*2

*1: 120 V model

*2: 220 / 240 V model

Table 4-105 Relationship between Copying Mode and Voltage Correction Level

Figures 4-109 through -112 show the changes in the DC bias occurring as a result of changes in the output of the AE sensor during auto density correction and how the density adjusting lever is set during manual density adjustment.

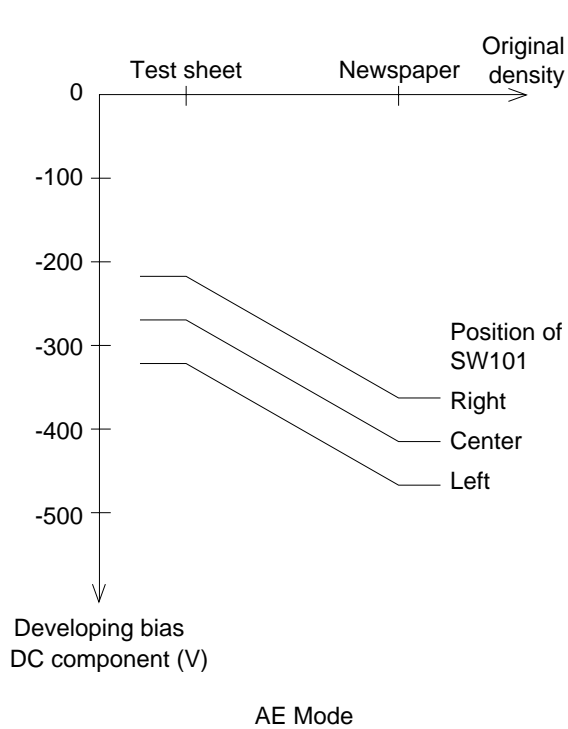


Figure 4-109 (SW101)

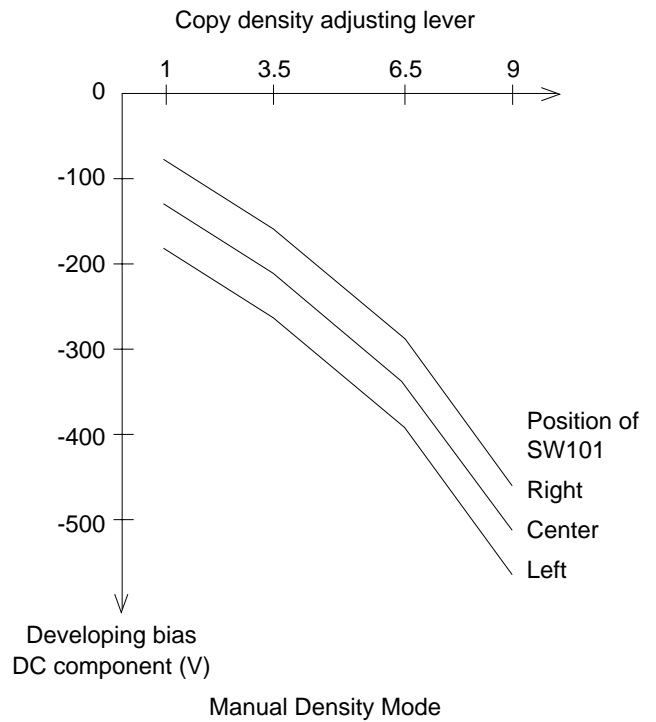


Figure 4-110 (SW101)

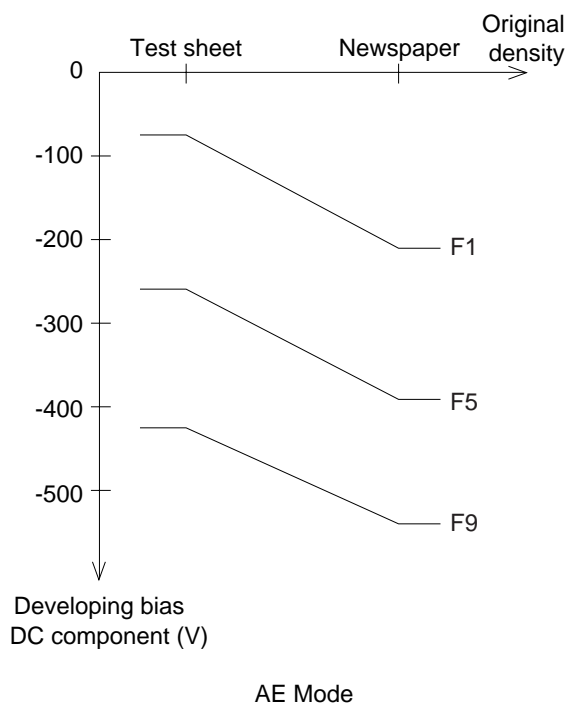


Figure 4-111 (Non-SW101)

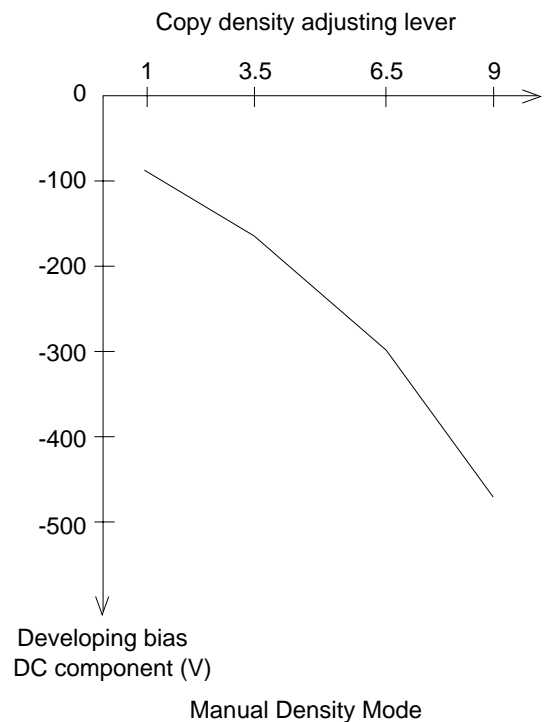


Figure 4-112 (Non-SW101)

F. Measuring the Density of Originals

1. Outline

The machine is equipped with an auto density adjustment (AE) mechanism designed to control the DC component of the developing bias.

The AE mechanism enables production of copies free of fogging as long as the original is more or less uniform in density by varying the DC component of the developing bias according to the density of the original.

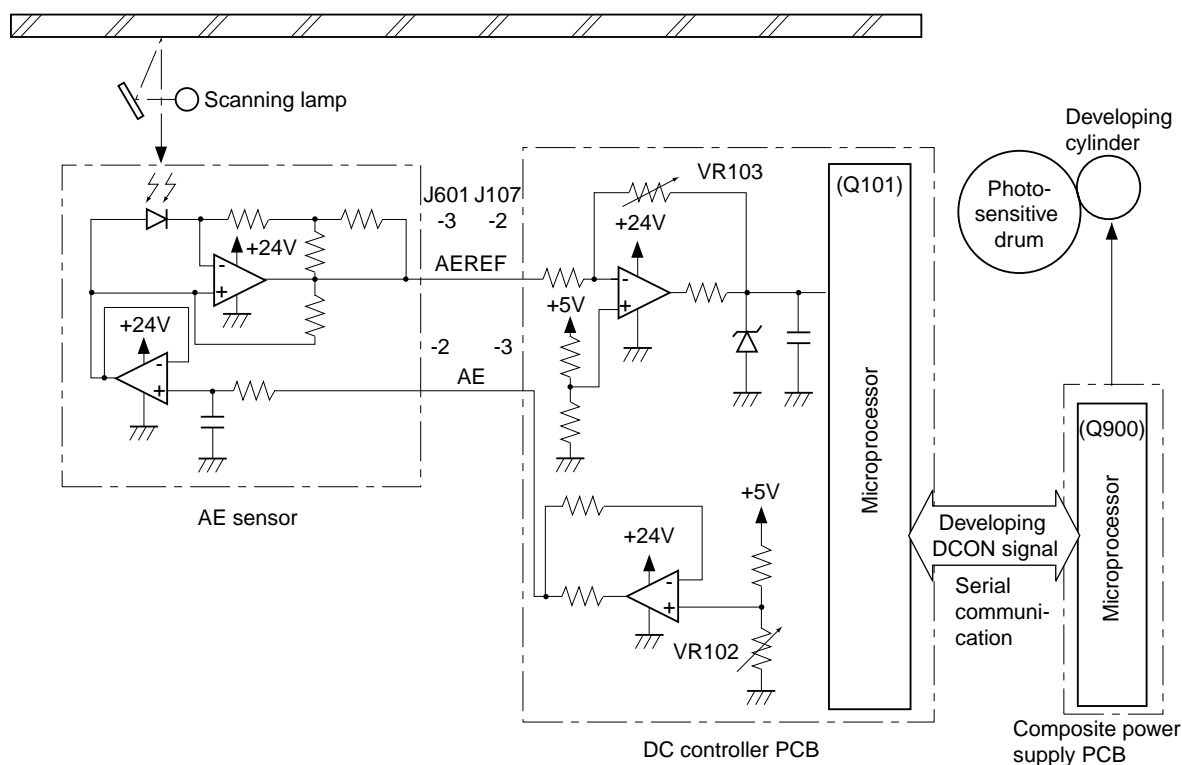


Figure 4-113

2. Operations

When measuring the density of an original, the scanner turns on the scanning lamp, and moves to a point 115 mm from the home position. At this time, the AE sensor reads the level of light reflected by the area shown in Figure 4-112, and sends the AE signal (AE) to the DC controller PCB.

In response, the DC controller PCB sends the developing DCON signal (serial communication) to the composite power supply PCB according to the level of the AE signal. The microprocessor (Q900) on the composite power supply PCB controls the level of the DC bias applied to the developing cylinder based on the level of this signal.

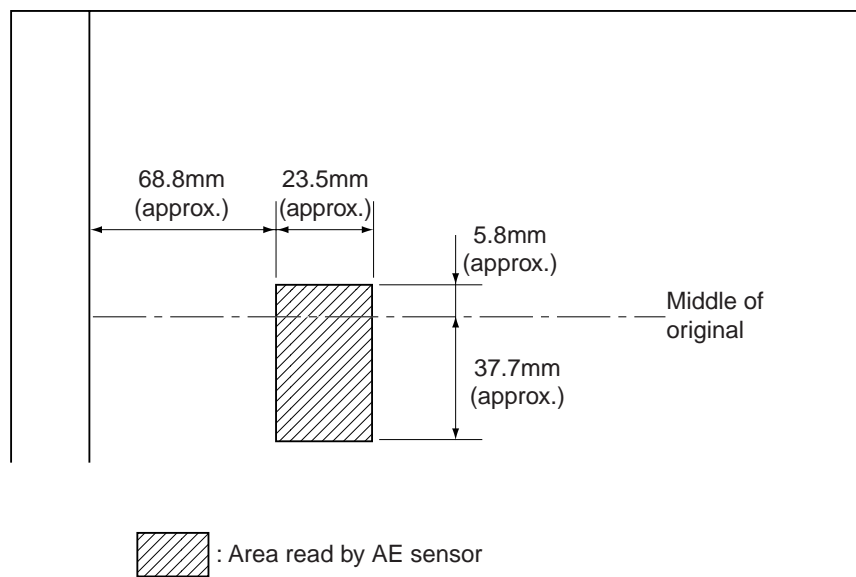


Figure 4-114

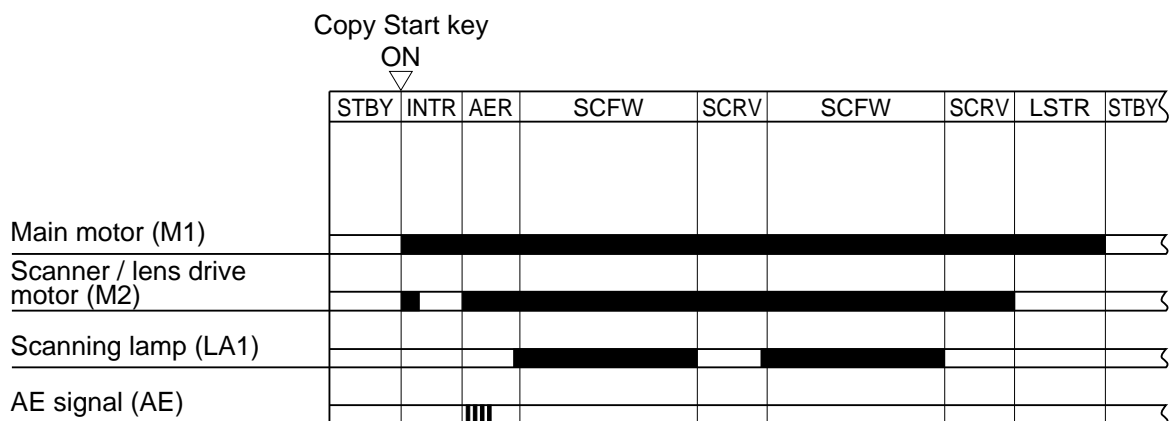


Figure 4-115

3. AE Adjustment (VR102, VR103)

If you have replaced the scanning lamp or the AE sensor PCB, make adjustments as follows:

Operating Procedure

Before Starting the Work

- Obtain a newspaper showing more or less even print. (Do not use one with many photos or large headings.)
 - Obtain five sheets of white sheets of paper.
 - Check to make sure that the intensity of the scanning lamp has been adjusted when you have replaced the scanning lamp.
 - Set the density correction switch (SW101) to the middle setting. If the machine is not equipped with a density correction switch, set the density adjusting lever to the middle setting.
- 1) Short JP103 and JP104 on the DC controller PCB with a screwdriver or the like.

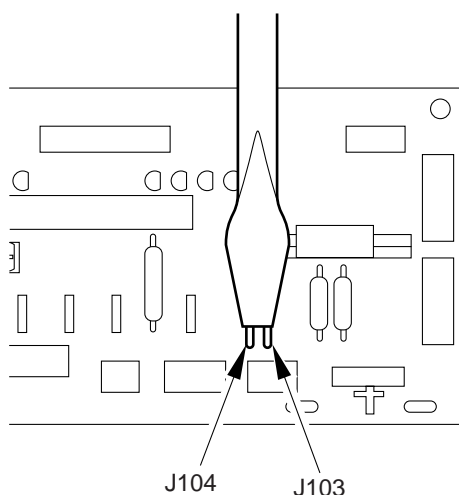


Figure 4-116

- 2) While keeping the condition in step 1), turn on the power switch.
 - The scanning lamp will turn on, and the main motor (M1) will rotate.
- 3) Stop shorting JP103 and JP104.
- 4) Turn VR103 on the DC controller PCB fully clockwise.

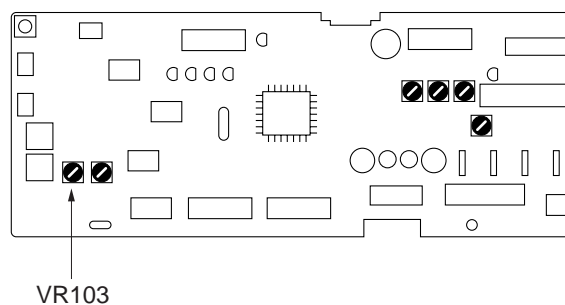


Figure 4-117

- 5) Place a newspaper on the copyboard, and close the copyboard cover.
- 6) Turn VR102 so that the reading in the indicator is from 'A3' to 'Ad'.

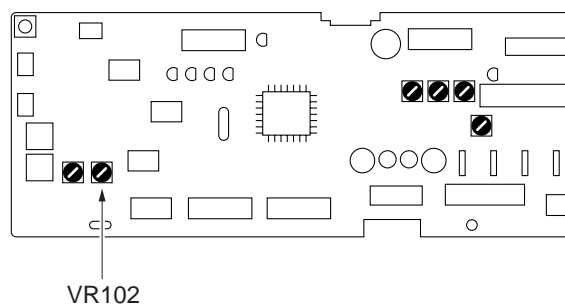


Figure 4-118

- 7) Remove the newspaper from the copyboard; in its place, place five blank sheets of copy paper, and close the copyboard cover.
- 8) Turn VR103 on the DC controller PCB so that the reading of the indicator is from '52' to '5c'.

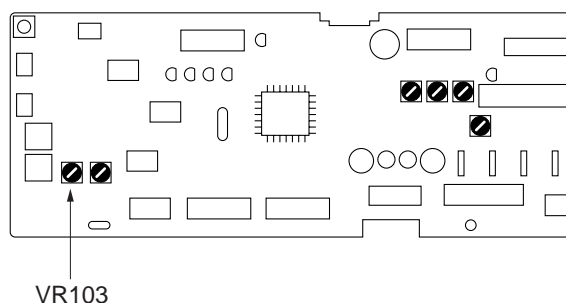


Figure 4-119

- 9) Repeat steps 5) through 8) so that the values of both VR102 and VR103 are target values.

Caution:

If you cannot set VR102 and VR103 to the target values at the same time, turn VR103 fully counterclockwise, and go back to step 5) and make adjustments once again.

- 10) Make a copy, and check to make sure that it is free of fogging and the density of its characters is good.
 - If it is foggy or the characters are too light, go back to step 1) and start over.
 - If no change is noted after re-adjustment, use the density correcting switch (SW101).

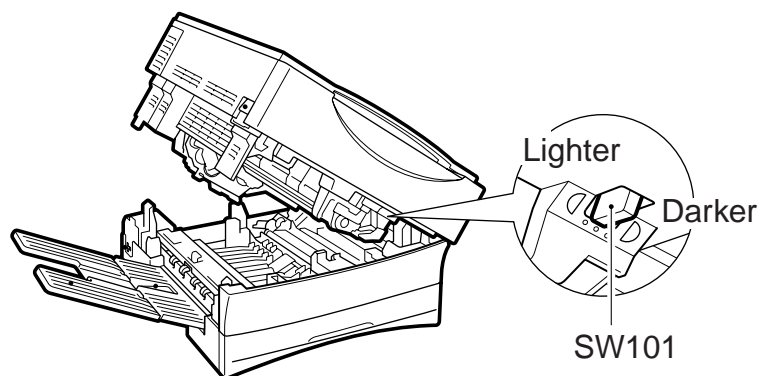


Figure 4-120

G. Controlling the Side Blanking Mechanism

1. Outline

The machine is equipped with a side blanking lamp at the front and the rear used to prevent adhesion of excess toner when making reduced copies.

2. Operations

To blank out the non-image area in reduce mode, the side blanking lamp is moved in relation to the distance over which the lens moves as detected by the lens shift detecting shaft.

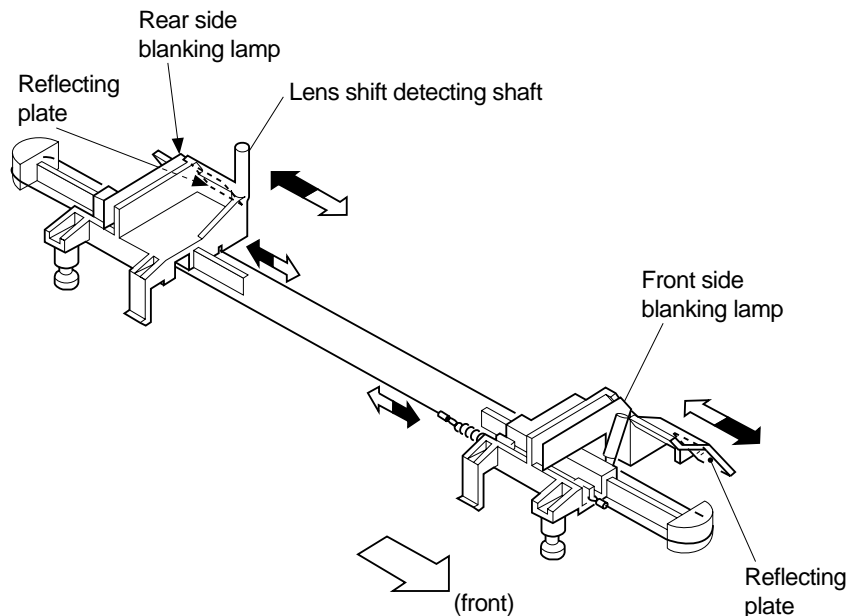


Figure 4-121

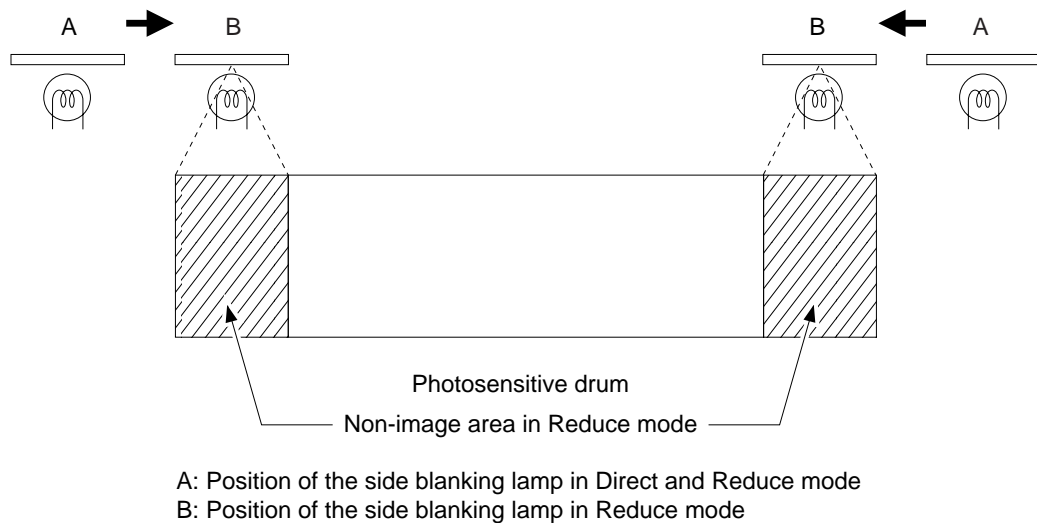


Figure 4-122

II. DISASSEMBLY/ASSEMBLY

As needed, disassemble/assemble the machine with the following in mind:

1. **▲** Before starting the work, turn off the power switch and disconnect the power plug for safety.
2. Unless otherwise instructed, assemble the parts by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. Use the washers where necessary. (The screws used to mount the grounding wire and Varistors come with a washer to ensure electrical continuity.)
5. As necessary, cut the harnessband.
6. As a rule, do not operate the machine with any of its part removed.
7. A few of the screws used are special screws (with wider thread intervals). Do not use any screws indiscriminately.

A. Cartridge

1. Outline

The machine's photosensitive drum, primary charging roller, developing assembly, and cleaner are housed in a single container referred to as a "cartridge." (You cannot disassemble the cartridge.)

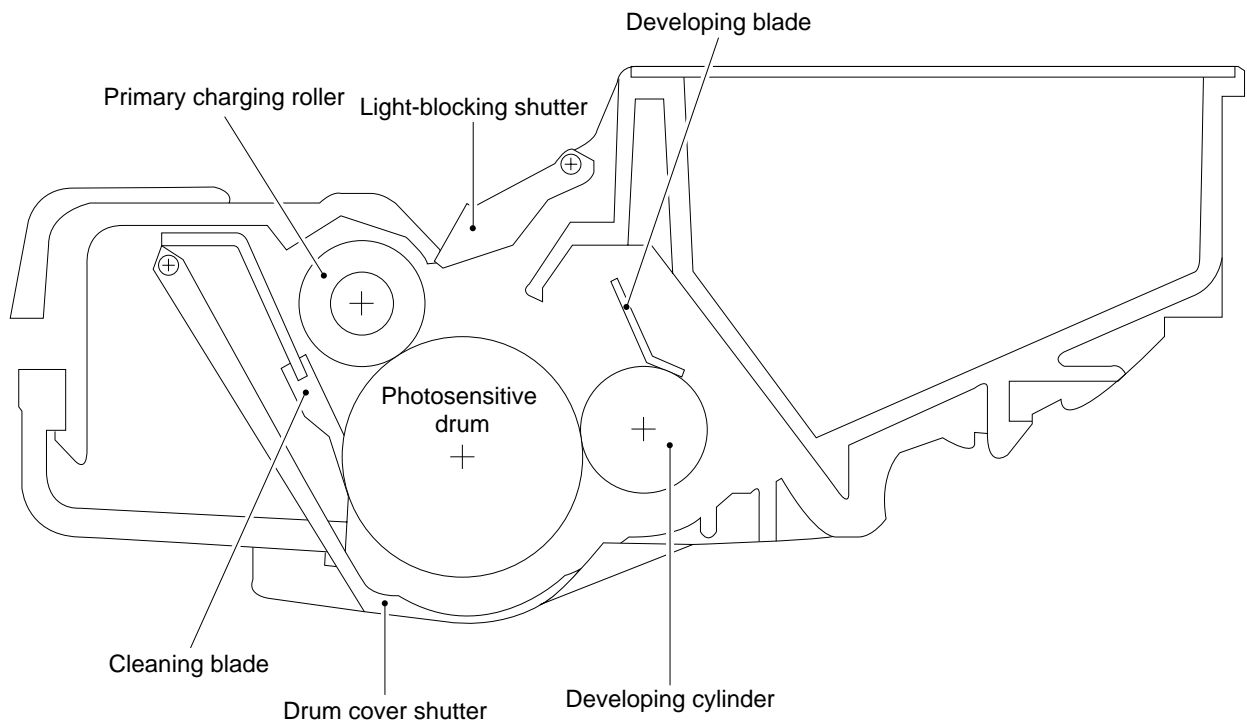


Figure 4-201

a. Drum Cover Shutter

If exposed to strong light for a long time, the photosensitive drum can develop photo memory, which can cause white spots or black bands on copies.

To prevent photo memory, the machine is equipped with a drum cover shutter. Do not open the shutter unless absolutely necessary. It is designed to open when the cartridge is fit into the machine and the machine's top unit is closed.

b. Light-Blocking Shutter

When the cartridge is removed from the machine, light makes its way through the opening used to expose images. As in the case of the drum cover shutter, the light-blocking shutter is provided to protect the photosensitive drum from light.

2. Cleaning the Drum

Caution:

As a rule, do not touch or clean the photosensitive drum.

- 1) Open the machine's top unit, and take out the cartridge.
- 2) Turn over the cartridge, and open the drum cover shutter
- 3) Clean the drum surface with a flannel cloth coated with toner.

Caution:

1. If you need to rotate the drum, be sure to rotate it in the direction in which it rotates when making copies. Otherwise, the leaf spring used to apply a developing bias to the developing cylinder will develop poor contact.
2. If you must clean it, use a flannel cloth. Do not use paper, lint-free or otherwise.
3. If exposed to light for an appreciable time, the images will be affected. Be sure to work briskly.

Reference:

If the photosensitive drum is exposed to light of 1500 lux (ordinary lighting) for 5 min and then is left alone for 5 min in a dark place, it will recover to a level at which it will cause no practical problem.

However, avoid exposing it to direct sunlight. The rays of the sun are usually about 10000 to 30000 lux.

B. Transfer Charging Assembly

1. Removing the Transfer Charging Roller

- 1) Open the machine's top unit.
- 2) Remove the screw [1].
- 3) While freeing the claw [2] of the bushing, detach the transfer charging roller [3].

Caution:

Do not touch the surface of the roller. Be sure the surface is free of dirt.

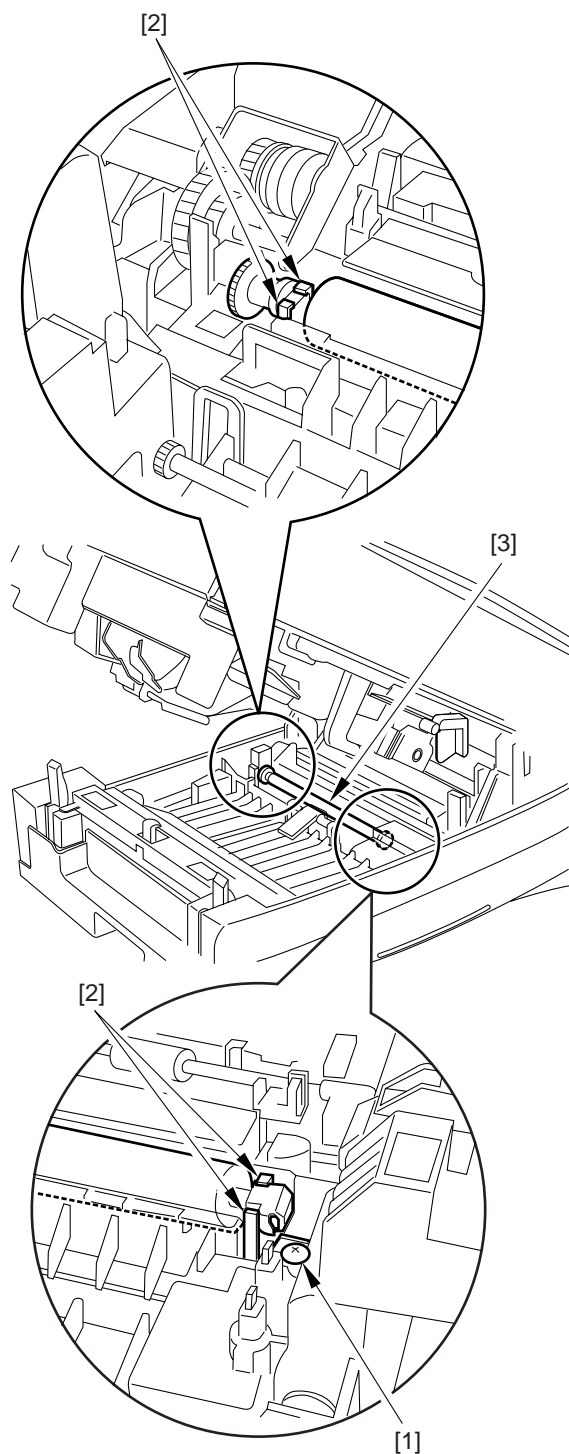


Figure 4-202

C. Blank Exposure

1. Removing the Blanking Exposure Unit

- 1) Set the machine to the maximum ratio (141%) as follows:
 - Turn on the power, and select a default ratio of 141%.
 - Press the Copy Start key.
 - When the lens has moved to the farthest left, turn off the power.
 - Disconnect the power plug.
- 2) Remove the front lower cover.
(See Chapter 7.III.A.2. "Removing the Front Lower Cover.")
- 3) Remove the cartridge.
- 4) Remove the DC controller PCB.
(See Chapter 7.III.E.1. "Removing the DC controller PCB.")
- 5) Remove the composite power supply PCB.
(See Chapter 7.III.E.2. "Removing the Composite Power Supply PCB.")
- 6) Remove the two screws [1].

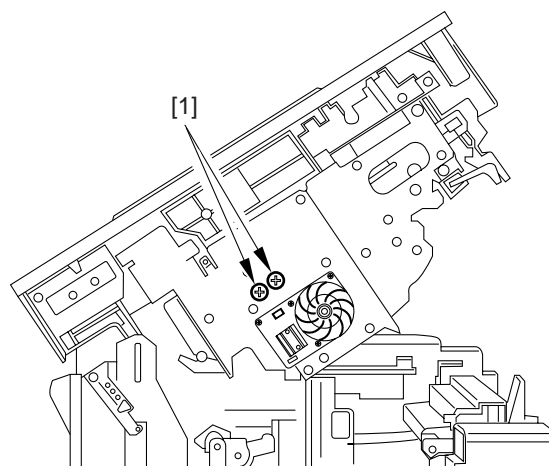


Figure 4-203

- 7) Open the machine's top unit farther, and hold it in place using the handle of a screwdriver (about 30 mm in diameter).

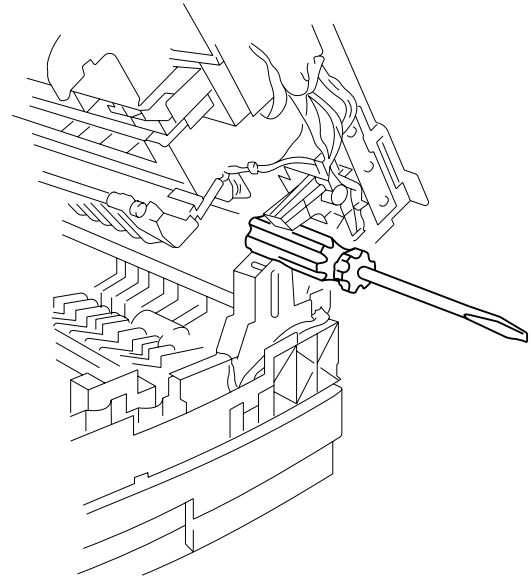


Figure 4-204

- 8) Remove the four screws [3], and disconnect the connector [4]; then, detach the blanking exposure unit. [5].

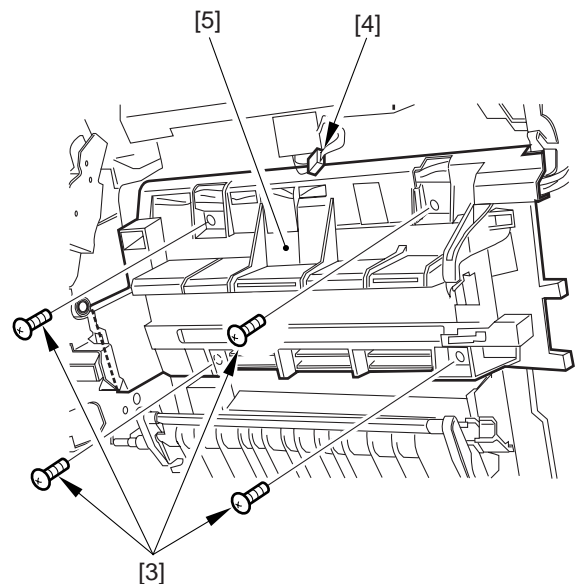


Figure 4-205

Caution:

When mounting the blanking exposure unit, check to make sure that the blanking exposure unit PCBs are at the extreme ends and that the lens is positioned at the farthest left (141% position).

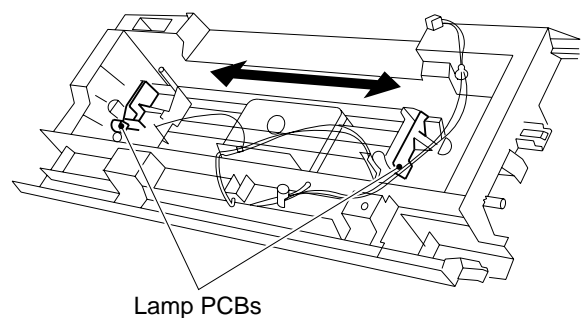


Figure 4-206

CHAPTER 5

PICK-UP/FEEDING SYSTEM

This chapter explains the principles used from when copy paper is picked up to when a copy is delivered in view of the functions of electrical and mechanical units and in relation to their timing of operation. It also shows how these units may be disassembled/assembled and adjusted.

I.	PICKUP/FEEDING SYSTEM.....	5-1	A.	Pickup Assembly	5-19	
	A.	Outline	5-1	B.	Multifeeder Assembly	5-28
	B.	Controlling the Pickup Roller	5-3	C.	Single-feeder Assembly	5-31
	C.	Controlling the Movement of Paper	5-9	D.	Feeding Assembly	5-33
	D.	Detecting Jams	5-12	E.	Registration Roller Assembly	5-34
II.	DISASSEMBLY/ASSEMBLY	5-18	F.	Delivery Assembly	5-36	

I. PICKUP/FEEDING SYSTEM

A. Outline

The machine moves paper using a center reference method, in which paper is moved in the middle of the pickup/feeding path, and is equipped with a cassette, multifeeder, and single-feeder as the source of paper.

From the cassette, multifeeder, or single-feeder, copy paper is picked up and is controlled by the registration roller so that its leading edge will match the leading edge of the image on the photosensitive drum; it is then moved through the transfer, separation, feeding, and fixing assemblies to reach the copy tray.

The machine is equipped with four sensors used to monitor the movement of copy paper.

Notation	Name	Remarks
PS3	Delivery sensor	Single-feeder model only
PS4	Vertical path roller paper sensor	
PS5	Single-feeder paper sensor	
Q751	Pre-registration roller paper sensor	

Table 5-101

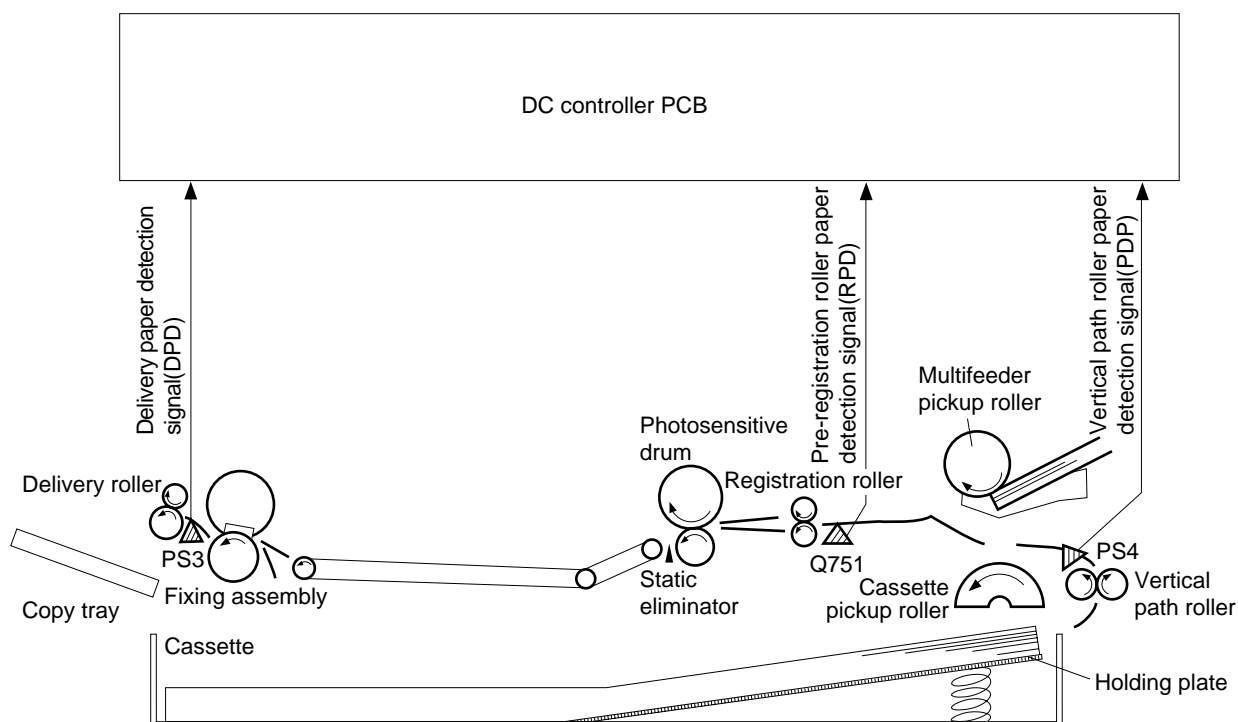


Figure 5-101 (Multifeder type)

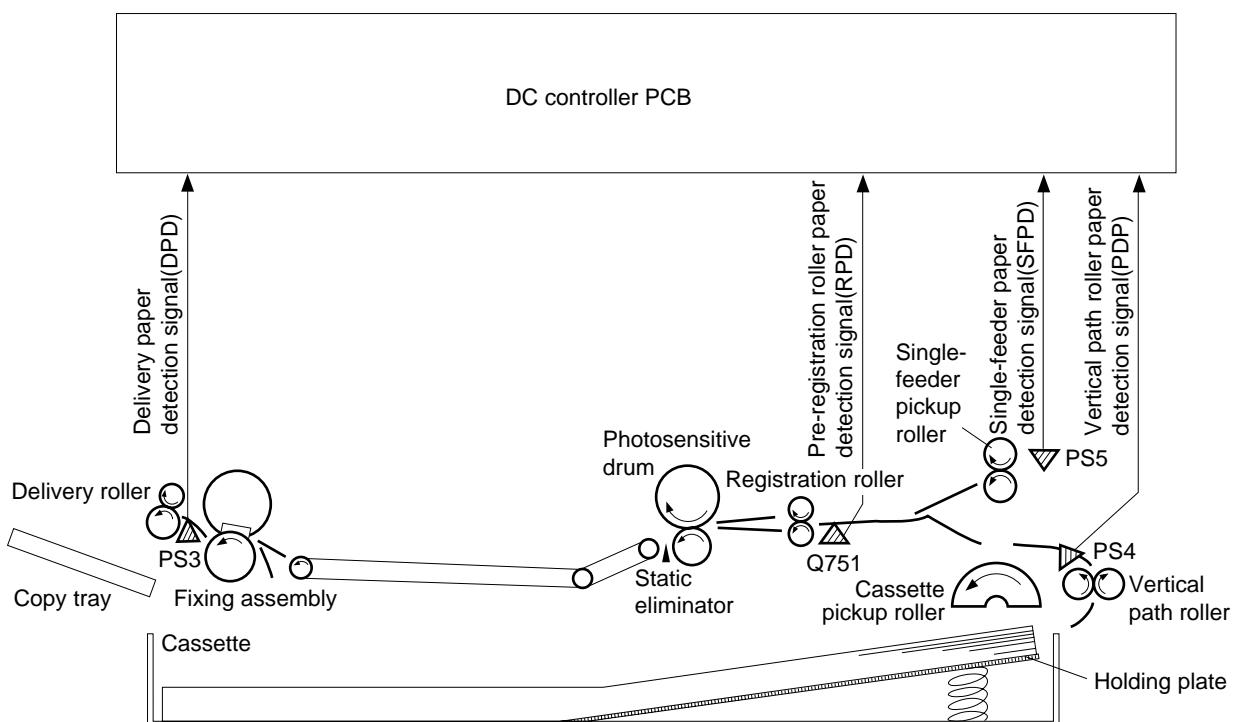


Figure 5-102 (Single-feeder type)

B. Controlling the Pickup Roller

1. Outline

The machine has three types of pickup rollers, i.e., cassette pickup roller, multifeeder pickup roller, and single-feeder pickup roller, and each of these rollers are operated by the drive of the main motor switched by means of a gear unit. (In other words, only one roller is driven at any one time.)

2. Controlling the Cassette Pickup Roller

The cassette pickup roller is controlled by a spring clutch, control ring, pickup clutch solenoid (SL1), and cassette pickup solenoid (SL5).

When the pickup clutch solenoid turns on, the claw moves away from the control ring, allowing the drive to move to the pickup gear assembly through the spring clutch. Then, when the cassette pickup solenoid turns on, the drive reaches the cassette pickup roller.

When the cassette pickup roller starts to rotate, copy paper is picked up from the cassette and is sent as far as the registration roller by way of the vertical path roller. The registration roller controls paper so that its leading edge will match the leading edge of the image on the photosensitive drum.

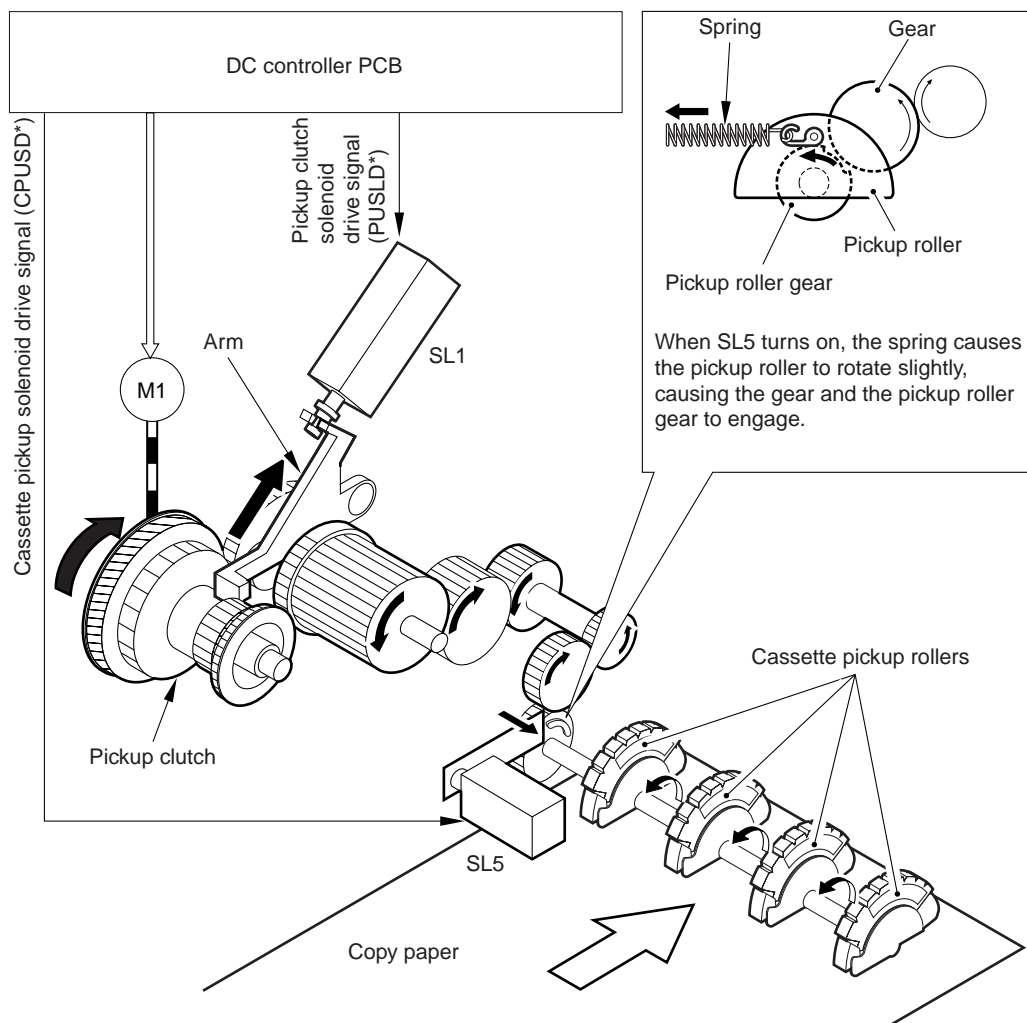


Figure 5-103 (Multifeeder type)


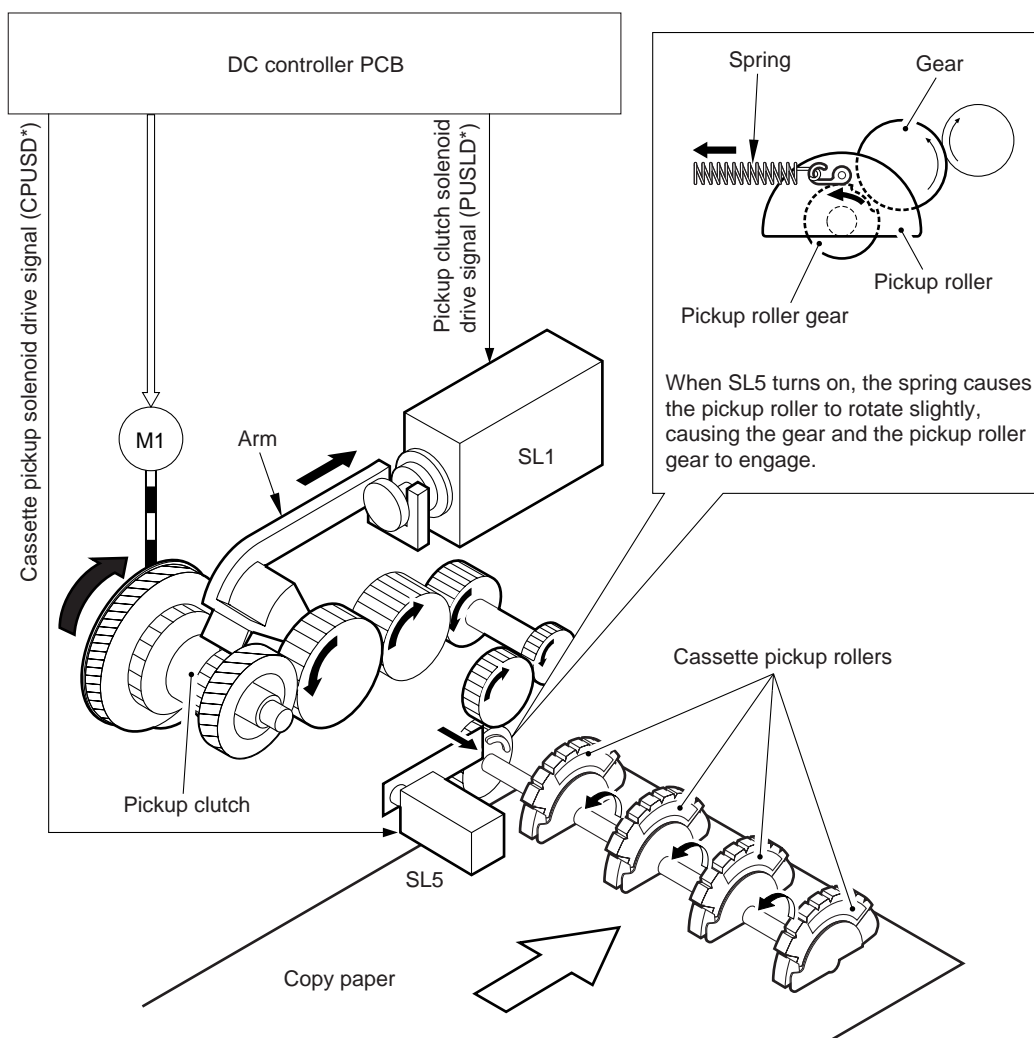


Figure 5-104 (Single-feeder type)

3. Re-Pickup (cassette pickup)

If the vertical path roller paper sensor (PS4) does not detect copy paper within a specific period of time after the cassette pickup roller has started to rotate, the pickup roller is rotated once again to execute pickup operation, thereby ensuring correct pickup (as for recycled paper).

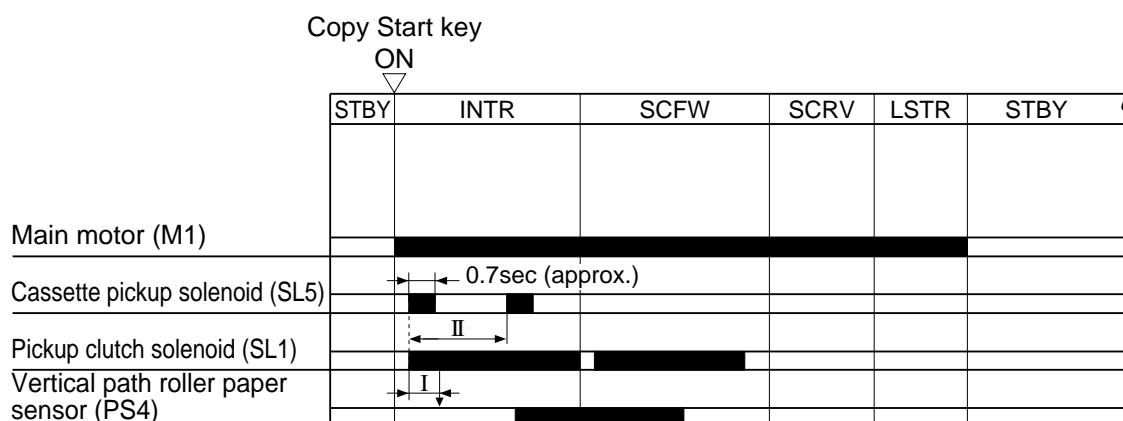If the vertical path roller paper sensor does not detect copy paper after re-pickup, the machine will assume the absence of copy paper and will indicate “P” in the count/ratio indicator in the control panel. (This mechanism substitutes a paper detecting mechanism.)



- I : Re-pickup operation is executed if the vertical path roller paper sensor (PS4) does not detect copy paper within 0.5 sec after the pickup clutch solenoid (SL1) has turned on.
- II : The cassette pickup solenoid (SL5) turns on once again about 1.3 sec after the pickup clutch solenoid (SL1) turns on.

Figure 5-105

4. Controlling the Multifeeder Pickup Roller

The multifeeder pickup roller is controlled by a spring clutch, control ring, pickup clutch solenoid (SL1), gear unit, and multifeeder pickup solenoid (SL4).

When the multifeeder pickup solenoid (SL4) turns on, the drive of the main motor (M1) reaches the cam gear. When the cam gear starts to rotate in response, the lifter, which is in contact with the cam, moves up the gear unit and, at the same time, pushes down the paper guide plate. The cam gear makes a 180° turn (approximate), and stops at the toothless section.

When the pickup solenoid turns on in this condition, the claw leaves the control ring, and the drive of the main motor (M1) reaches the multifeeder pickup roller.

When the multifeeder pickup roller rotates, paper is picked up and sent as far as the registration roller, which controls the paper so that its leading edge will match the leading edge of the image on the photosensitive drum.

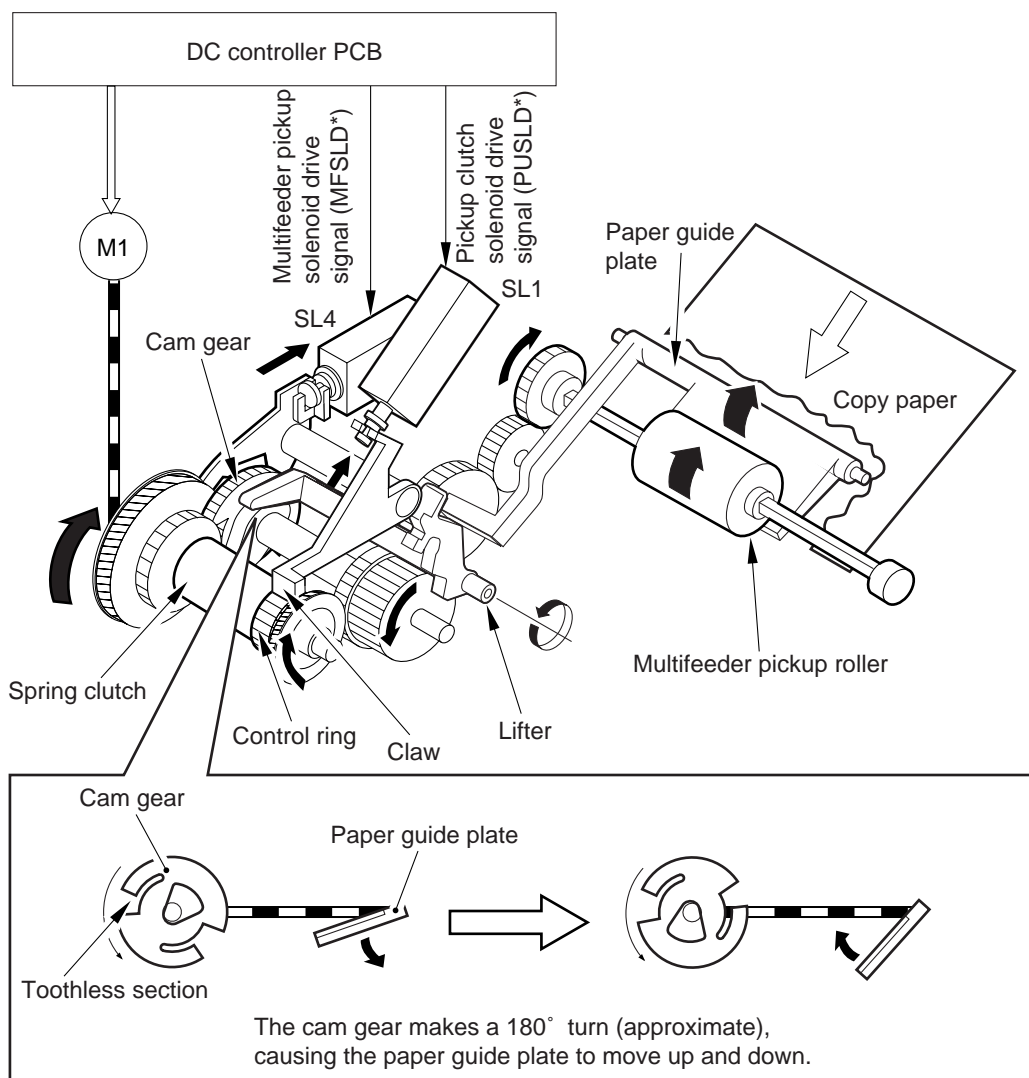


Figure 5-106

5. Controlling the Single-feeder Pickup Roller

The single-feeder pickup roller is controlled by the pickup clutch solenoid (SL1) and the single-feeder paper sensor (PS5).

When copy paper is inserted into the single-feeder, the single-feeder paper sensor turns on and the main motor starts to rotate. The drive of the main motor reaches the signal feeder pickup roller through a gear.

When the single-feeder pickup roller starts to rotate, copy paper is picked up from the signal feeder and is sent as far as the registration roller, which controls the paper so that its leading edge will match the leading edge of the image on the photosensitive drum.

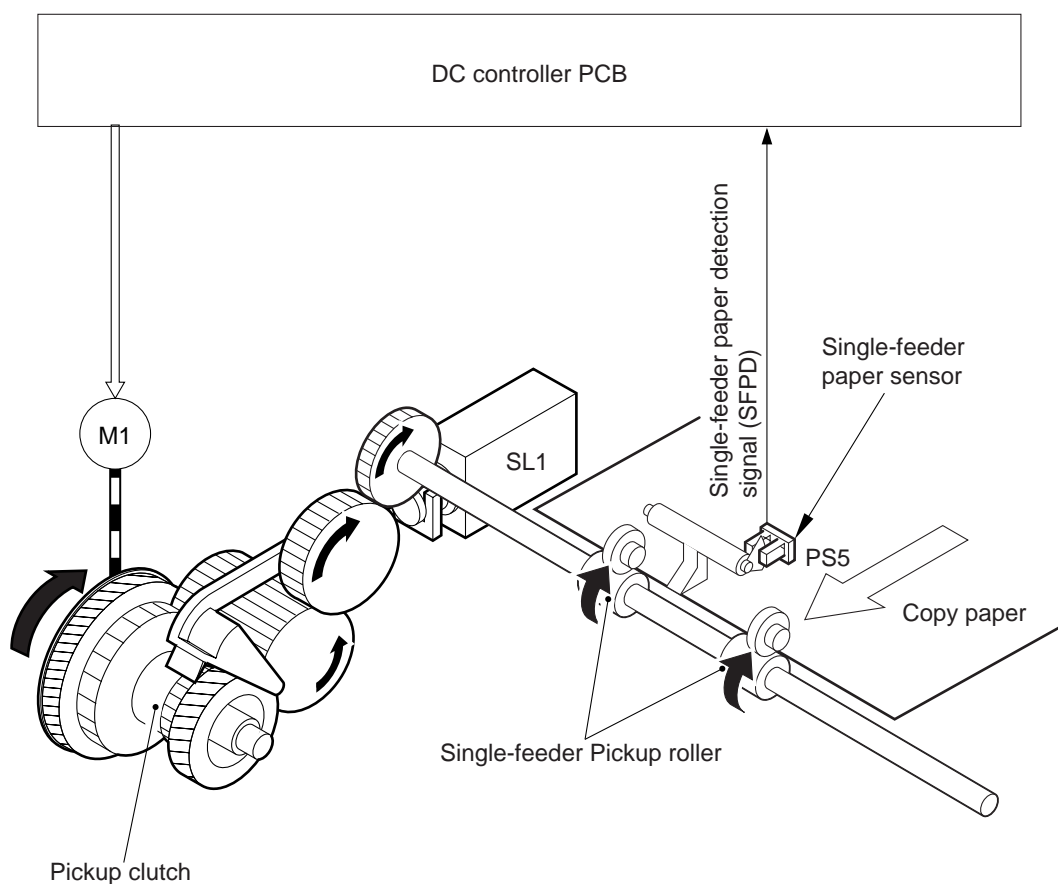



Figure 5-107

6. Controlling the Copying Speed in Multifeeder Mode

The machine does not possess a copy paper width detecting function and, therefore, the temperature of the ends of the fixing assembly increases when copies are made continuously on paper narrower than A4/LTR.

When the multifeeder is used for continuous copying, a delay is initiated after picking up the 19th sheet so as to increase the sheet-to-sheet distance for the sheets that follow, controlling the copying speed to 9 cpm.

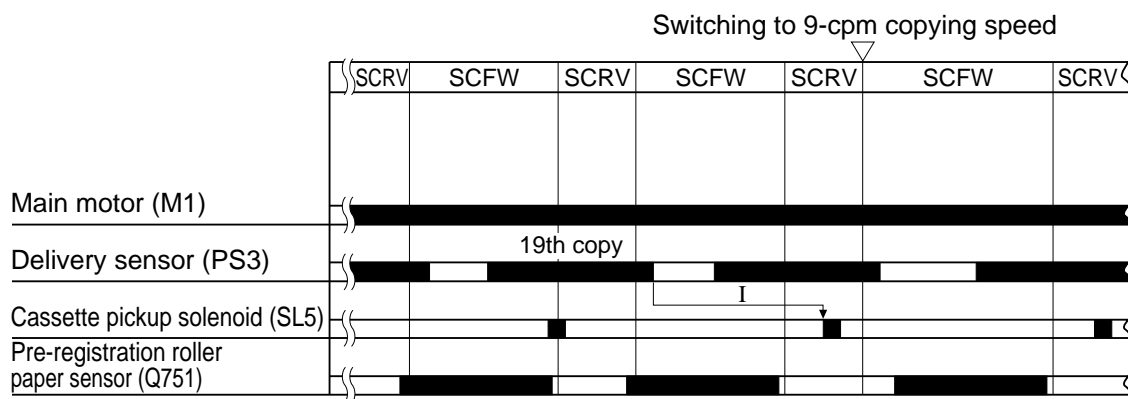If the copying speed is controlled (to 6 cpm) by a mechanism to prevent overheating of the copyboard, this control will not be executed, and moreover if the temperature of the copyboard increases during 9-cpm control, 6-cpm control will be initiated.



- I: A switch to 9-cpm copying mode is made after delivering the 19th copy in a continuous copying job.

Figure 5-108

C. Controlling the Movement of Paper

1. Controlling the Registration Roller

The registration roller is controlled by a spring clutch, control ring, pre-registration roller paper sensor (Q751), and registration clutch solenoid (SL2).

The microprocessor on the DC controller PCB turns on the registration clutch solenoid at a specific timing in response to the paper detection signal from the pre-registration roller paper sensor. When the registration clutch solenoid turns on, the claw will leave the control ring, and the drive of the main motor will reach the registration roller to move the copy paper to the photosensitive drum.

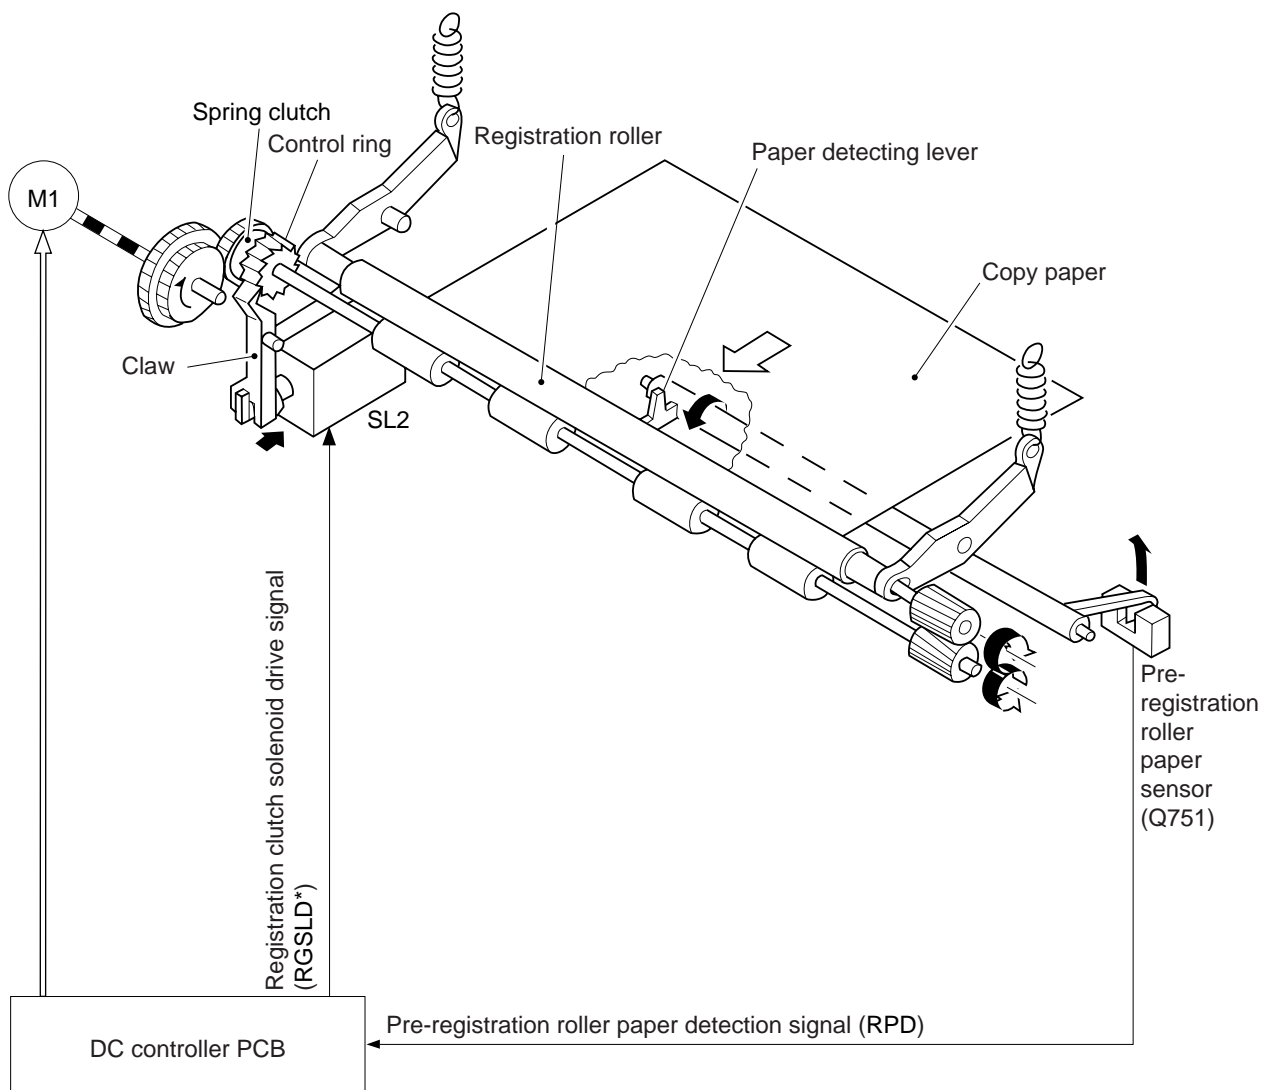


Figure 5-109

2. Pickup/Feeding Timing Chart

a. Pickup from the Cassette (A4, 2 copies)

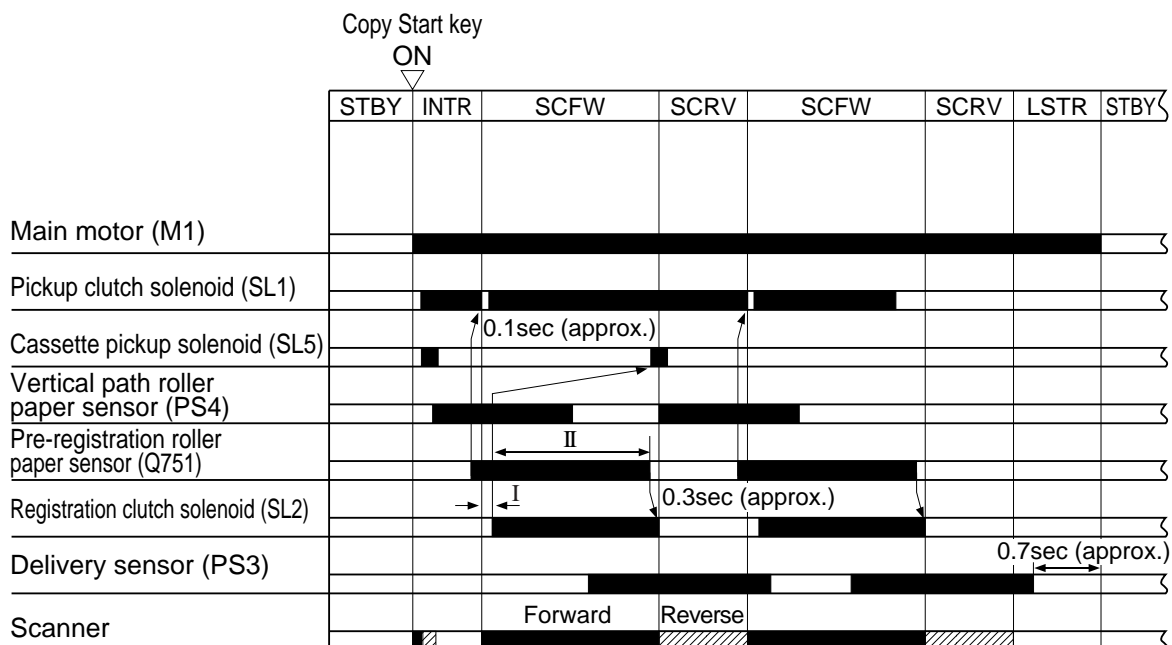


Figure 5-110

b. Pickup from the Single-feeder (A4, 1 copy)


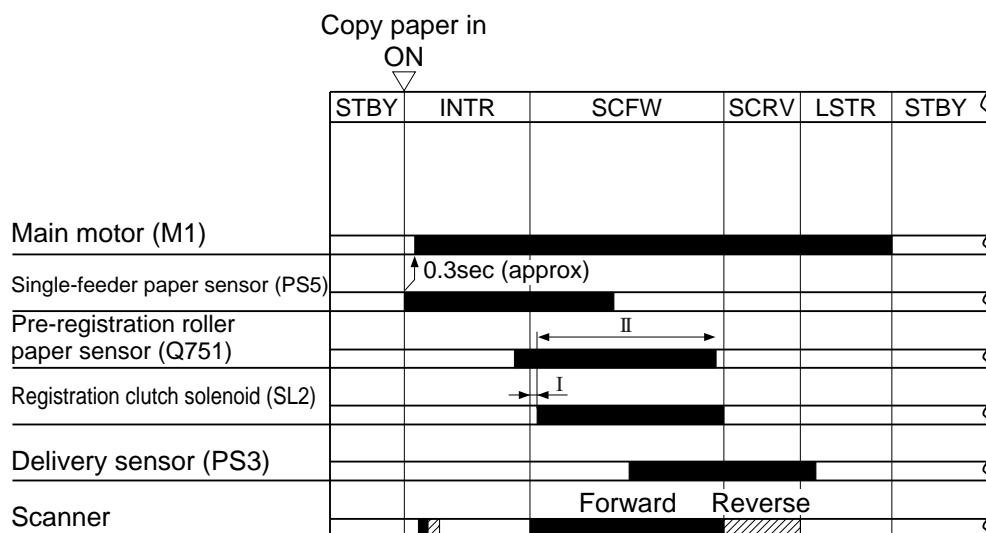


Figure 5-111

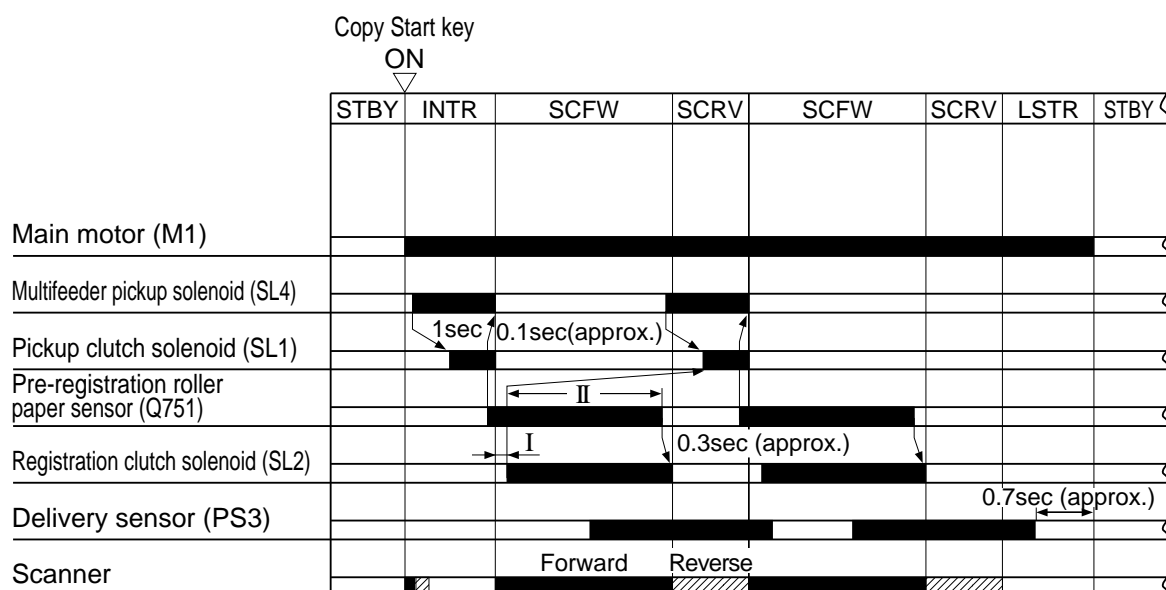c. Pickup from the Multifeeder (A4, 2 copies)



I : Varied by value under '30' of service mode (registration adjustment).

II : Used for measuring the length of copy paper.

length of copy paper (mm) = 96 (mm/s) × II (s) + 11 (mm) - 10 (mm)

96 (mm/s) : speed at which copy paper is moved.

11 (mm) : distance between pre-registration roller paper sensor and registration roller.

10 (mm) : length of actuator of the pre-registration roller paper sensor.

Figure 5-112

D. Detecting Jams

The machine is equipped with four paper sensors used to find out the presence/absence of copy paper and whether copy paper is moving properly.

- Vertical path roller paper sensor (PS4)
- Single-feeder paper sensor (PS5)
- Pre-registration roller paper sensor (Q751)
- Delivery sensor (PS3)

The presence/absence of a jam is checked with reference to the presence/absence of paper over a specific sensor at such times as programmed in the microprocessor.

The machine is not equipped with a function which remembers the remaining number of copies to make at time of a jam and the selected copying mode; in other words, it will be reset to standard mode when it is opened and closed for the removal of the jam.

The microprocessor possesses the following eight types of no paper/jam detection sequence; if any of its sensors detects copy paper at power-on, the machine will identify the condition as a jam.

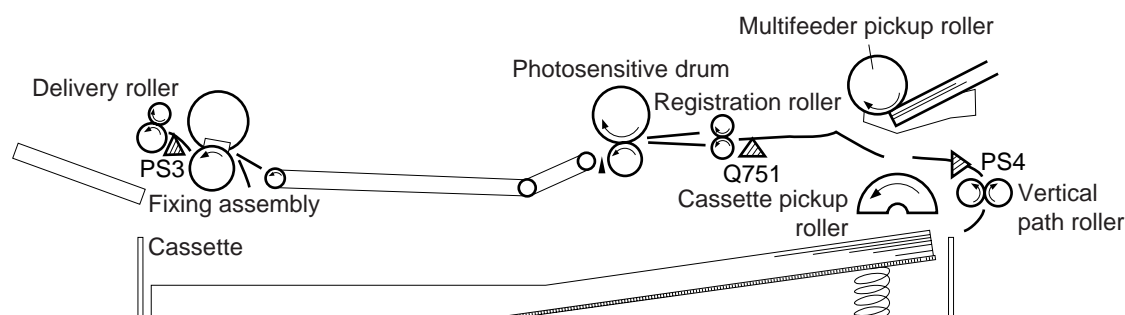


Figure 5-113 (Multifeder type)

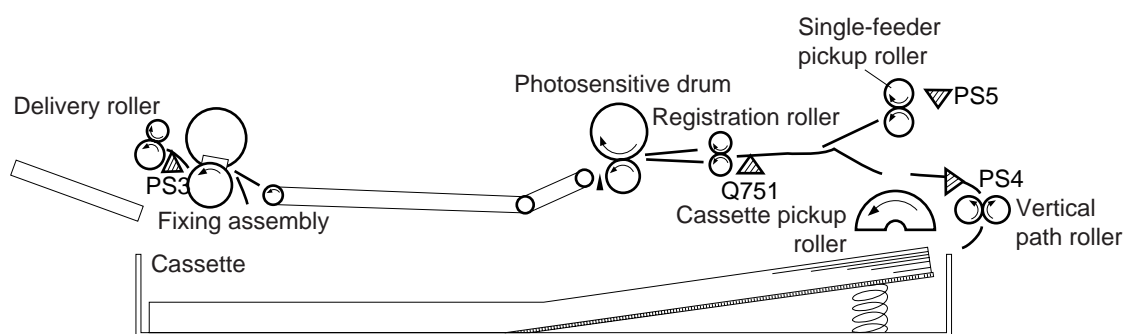


Figure 5-114 (Single-feeder type)

1. Multifeeder Pickup Assembly (no paper, pickup delay jam)

If copy paper does not reach the pre-registration roller paper sensor within a specific period of time in multifeeder mode, the condition will be identified as the absence of paper; the machine will stop the main motor in about 1.5 sec, and indicate the Add Paper message.

If the pre-registration roller paper sensor detects copy paper during this 1.5 sec period (approximate), the machine will identify the condition as a pickup delay jam, and flash the Jam indicator.

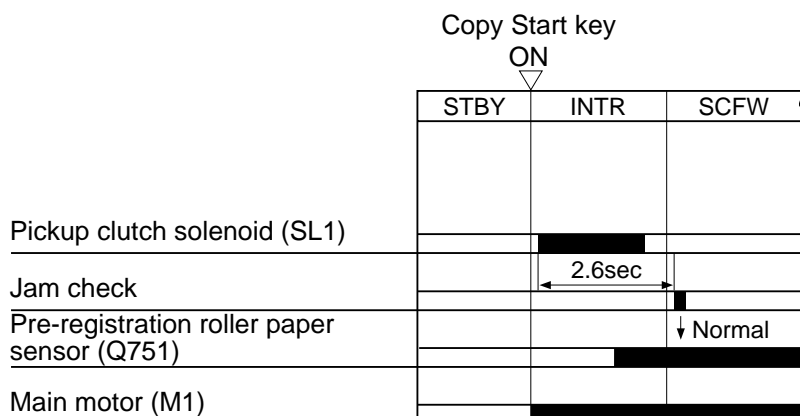


Figure 5-115 (normal)

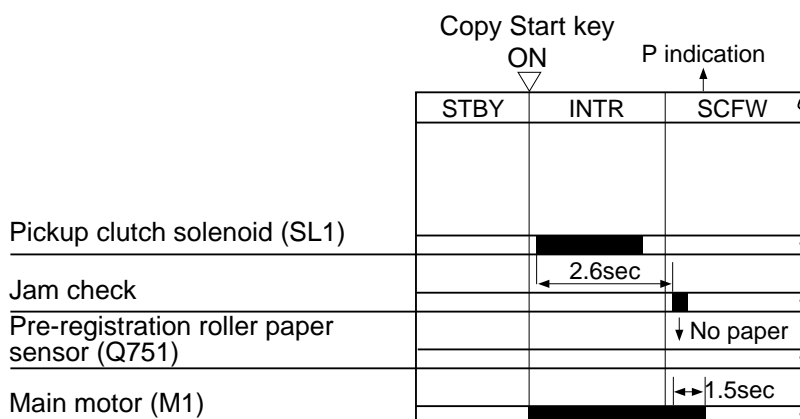


Figure 5-116 (no paper)

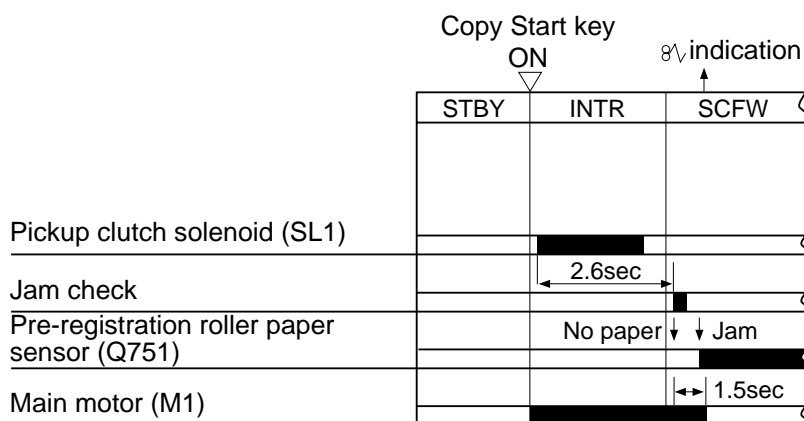


Figure 5-117 (jam)

2. Absence of Paper in the Cassette Pickup Assembly

When re-pickup operation is executed (from the cassette), the absence of paper will be identified if copy paper does not reach the vertical path roller paper sensor within a specific period of time. In response, the machine will stop the main motor in about 1.5 sec, and indicate the Add Paper message.

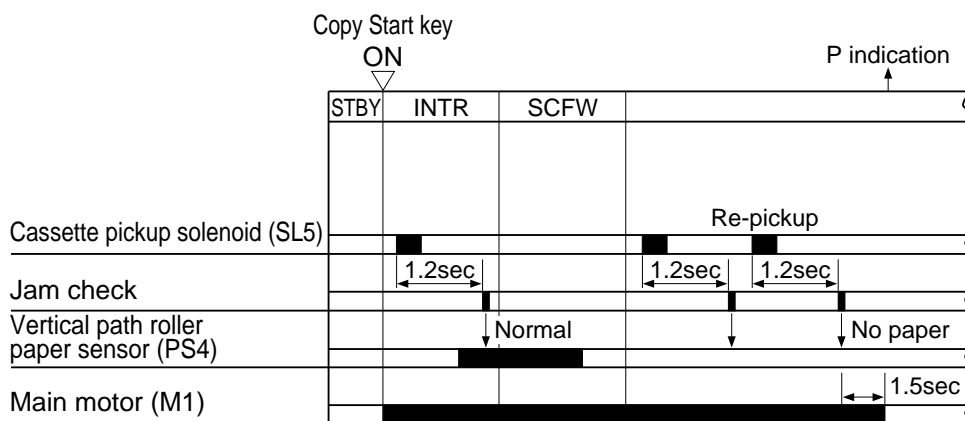


Figure 5-118

3. Single-feeder Pickup Delay Jam

After being detected by the single-feeder paper sensor, if copy paper does not reach the pre-registration roller sensor within a specific period of time, the machine will identify the condition as a single feed pickup delay jam, stop the operation immediately, and flash the Jam indicator.

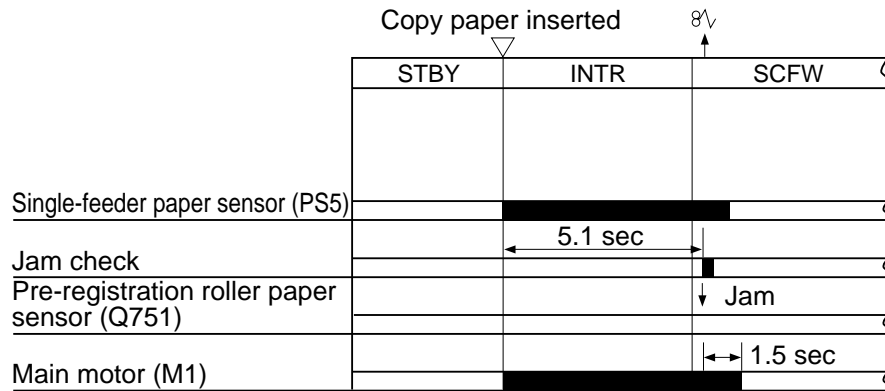


Figure 5-119

4. Vertical Path Stationary Jam

If copy paper fails to move past the vertical path roller paper sensor within a specific period of time because of faulty feeding, the machine will identify the condition as a vertical path stationary jam, stop the operation, and flash the Jam indicator.

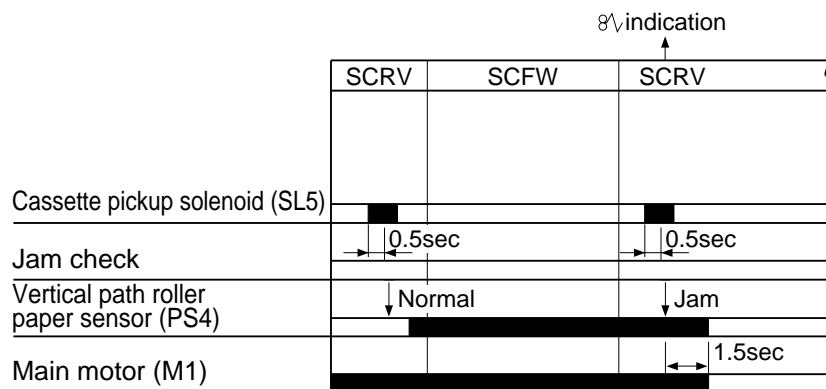


Figure 5-120

5. Registration Paper Delay Jam

After reaching the vertical path roller paper sensor, if copy paper fails to reach the pre-registration roller paper sensor within a specific period of time, the machine will identify the condition as a registration paper delay jam, stop the operation immediately, and flash the Jam indicator.

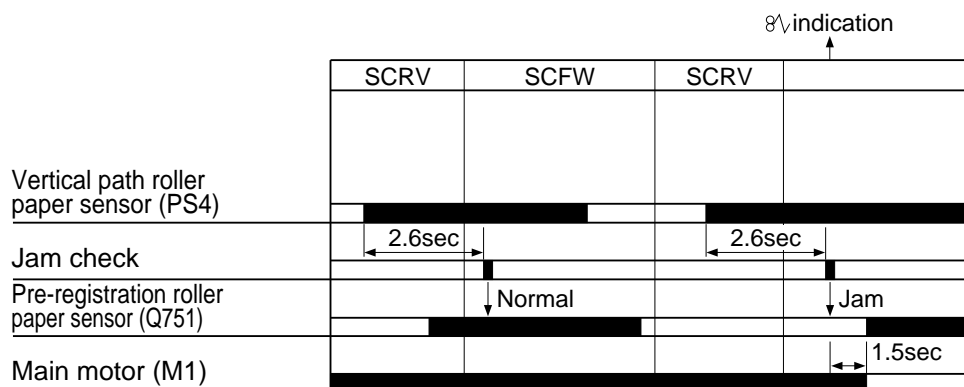


Figure 5-121

6. Registration Paper Stationary Jam

If copy paper does not move past the pre-registration roller paper sensor within a specific period of time because of feeding faults, the machine will identify the condition as a registration paper stationary jam, stop the operation immediately, and flash the Jam indicator.

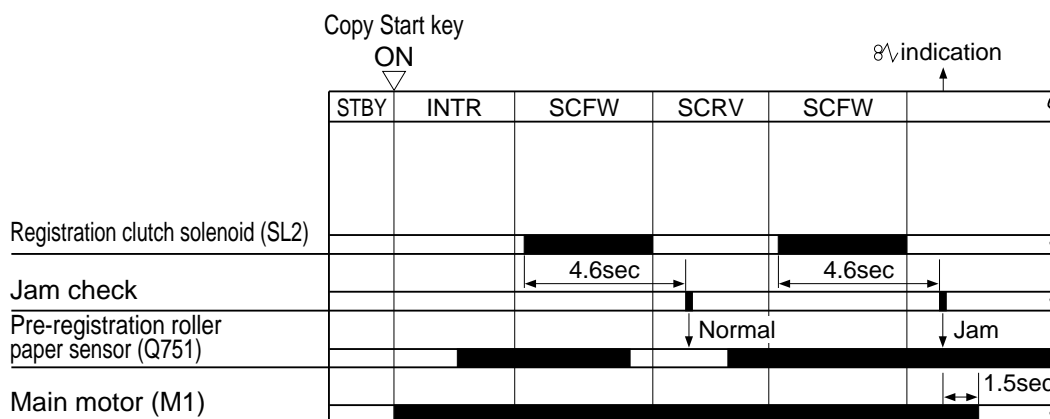


Figure 5-122

7. Delivery Delay Jam

If copy paper does not reach the delivery sensor within a specific period of time because of feeding faults, the machine will identify the condition as a delivery delay jam, stop the operation immediately, and flash the Jam indicator.

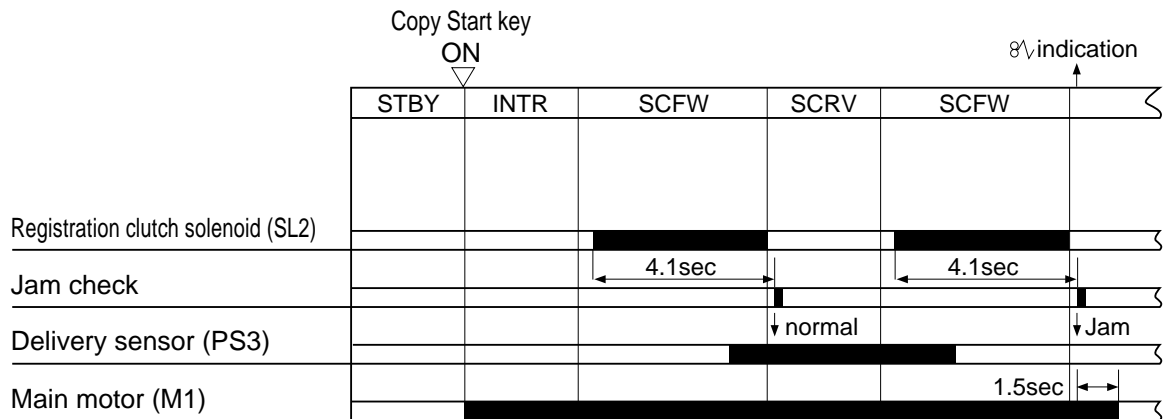


Figure 5-123

8. Delivery Stationary Jam

If copy paper does not move past the delivery sensor within a specific period of time because of feeding faults, the machine will identify the condition as a delivery stationary jam, stop the operation immediately, and flash the Jam indicator.

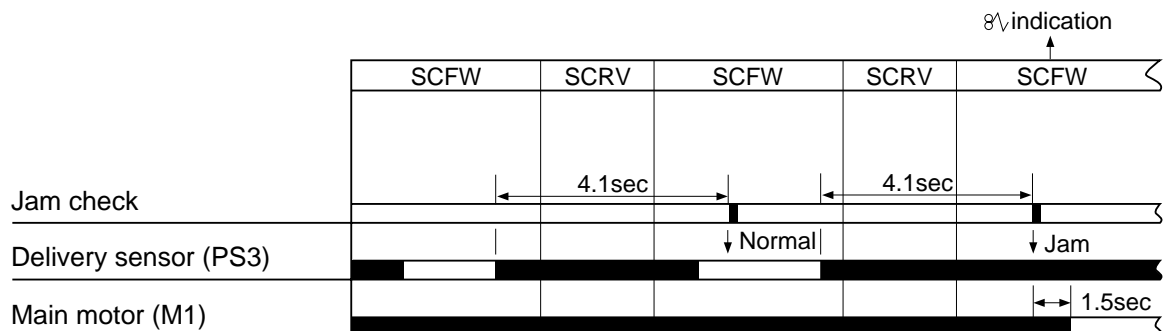


Figure 5-124

II. DISASSEMBLY/ASSEMBLY

As needed, disassemble/assemble the machine with the following in mind:

1. **▲** Before starting the work, turn off the power switch and disconnect the power plug for safety.
2. Unless otherwise instructed, assemble the parts by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. Use the washers where necessary. (The screws used to mount the grounding wire and Varistors come with a washer to ensure electrical continuity.)
5. As necessary, cut the harnessband.
6. As a rule, do not operate the machine with any of its part removed.
7. A few of the screws used are special screws (with wider thread intervals). Do not use any screws indiscriminately.

A. Pickup Assembly

1. Removing the Pickup Roller

- 1) Pull out the cassette.
- 2) Remove the front lower cover.
(See Chapter 7.III.A.2. "Removing the Front Lower Cover.")
- 3) Open the machines' top unit farther, and hold it in place with the handle of a screwdriver (about 30 mm in diameter).

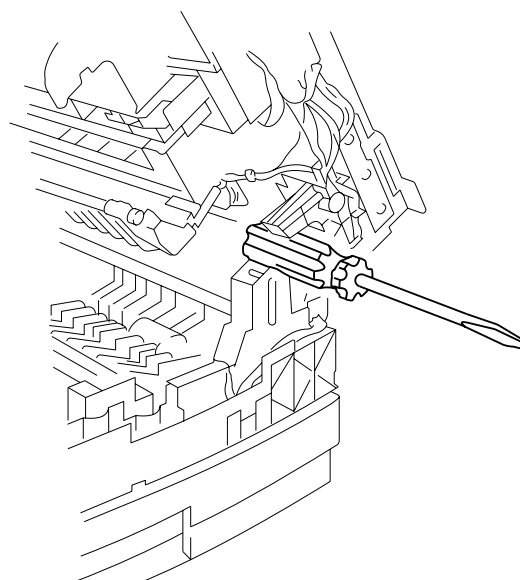


Figure 5-201

- 4) Remove the screw [1], and free the two claws [2]; then, detach the feeding assembly cover [3].

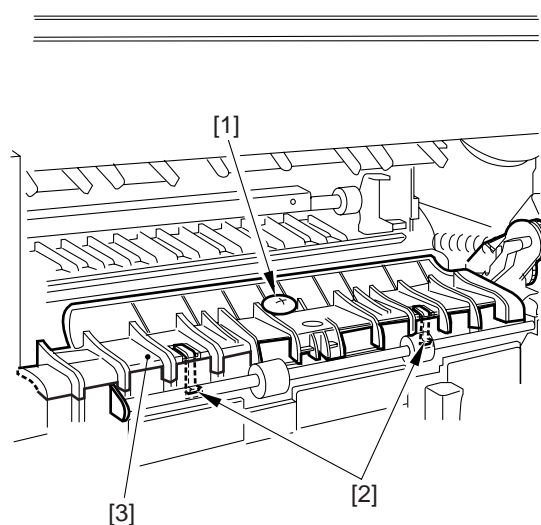


Figure 5-202

- 5) While pulling the guide plate [4] of the cassette pickup solenoid in the direction of the arrow, turn the gear [5] slightly in the direction of the arrow to disengage the guide plate [4] and the gear [6].

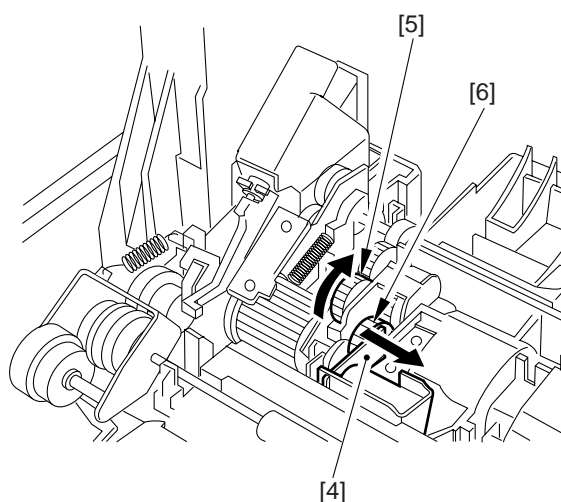


Figure 5-203

- 6) While pulling the plunger [7] of the pickup solenoid, turn the gear [8] in the direction of the arrow so that the pickup roller [9] is oriented as shown.

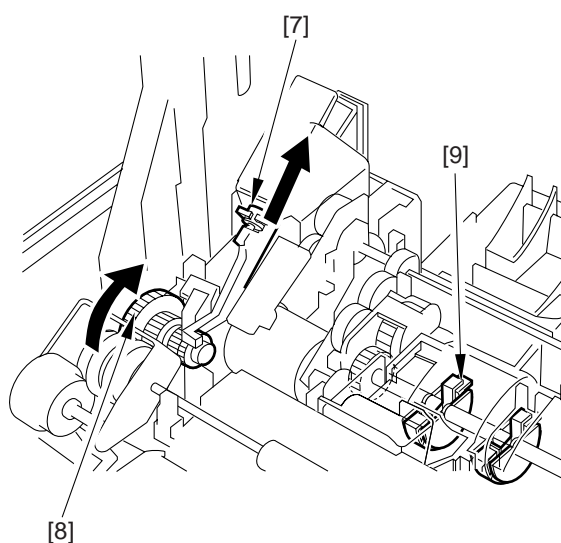


Figure 5-204

- 7) Using a hex wrench or the like, push the hook [10] of the pickup roller through the hole to remove the pickup roller [11].

Caution:

When removing the pickup roller, be sure to push the claw while holding the shaft in place so as to prevent the pickup roller shaft from freeing itself.

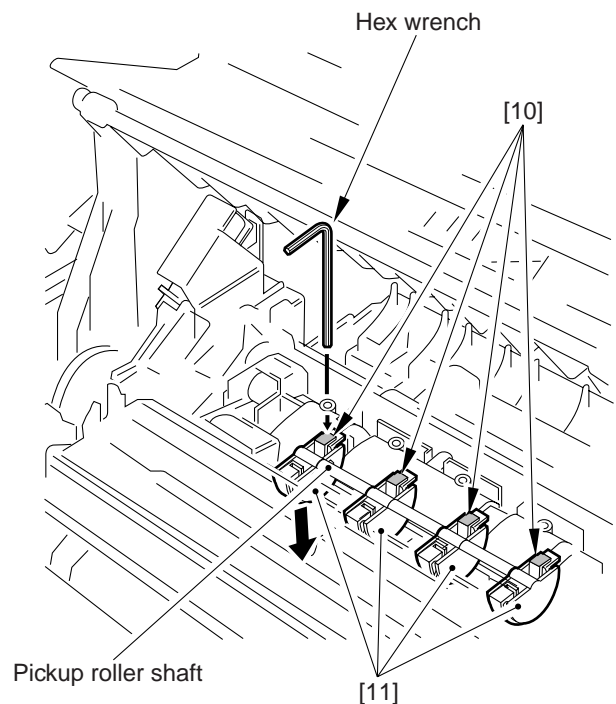


Figure 5-205

Caution:

When mounting the multifeder unit, perform the next steps first:

- 1) Turn on the power switch; then, select the multifeder, and press the Copy Start key.
- 2) When the pickup gear unit has moved up as far as it can, turn off the power switch.
- 3) Mount the multifeder; then, make a copy using the multifeder.

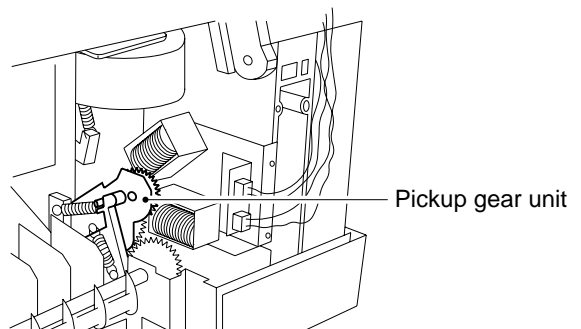


Figure 5-206

2. Removing the Pickup Clutch

2.1 Removing the Pickup Clutch (single-feeder type)

- 1) Remove the front lower cover.
(See Chapter 7.III.A.2. "Removing the Front Lower Cover.")
- 2) Remove the registration roller unit.
(See E.1. "Removing the Registration Roller Unit.")
- 3) Open the machine's top unit, and hold it in place using the handle of a screwdriver (about 30 mm in diameter).

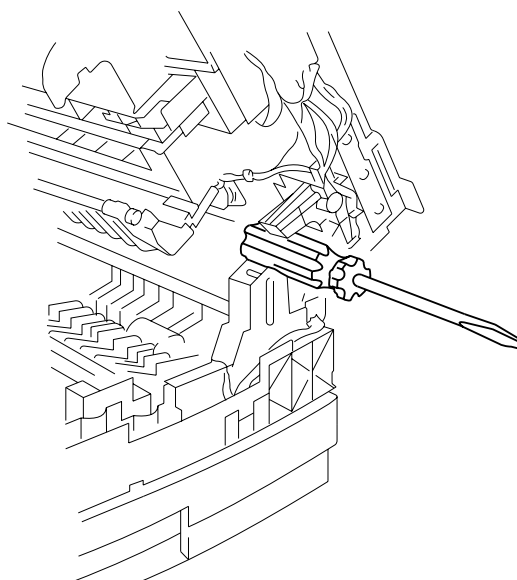


Figure 5-207

- 4) Disconnect the connector [1], and remove the screw [2]; then, detach the solenoid unit [3].

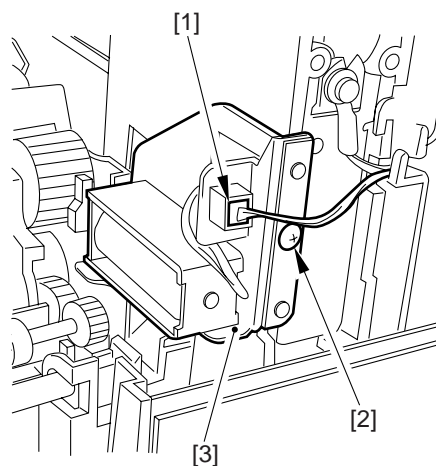


Figure 5-208

- 5) Remove the screw [4] and the two claws [5], and detach the gear unit [6].

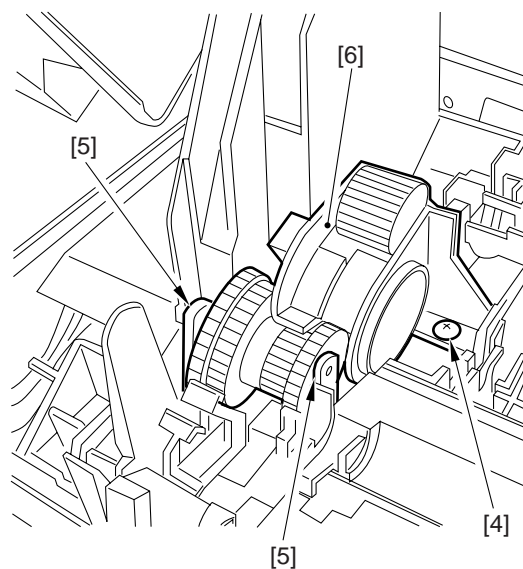


Figure 5-209

- 6) Free the claw [7] of the gear unit [6], and detach the clutch unit [8].

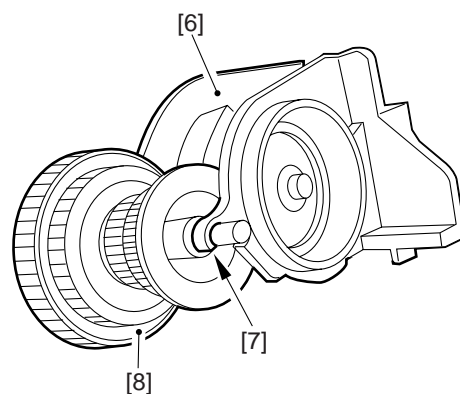


Figure 5-210

- 7) Remove the E-ring [9] and the washer [10], and detach the pickup clutch [11].

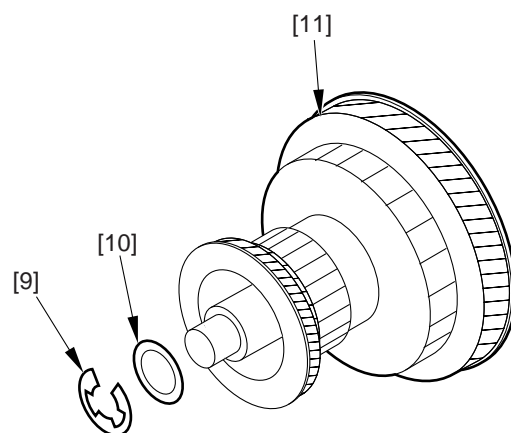


Figure 5-211

2.2 Removing the Pickup Clutch (multifeeder type)

- 1) Remove the front lower cover.
(See Chapter 7.III.A.2. "Removing the Front Lower Cover.")
- 2) Remove the registration roller unit.
(See E.1. "Removing the Registration Roller Unit.")
- 3) Open the machine's top unit farther, and hold it in place with the handle of a screwdriver (about 30 mm in diameter).

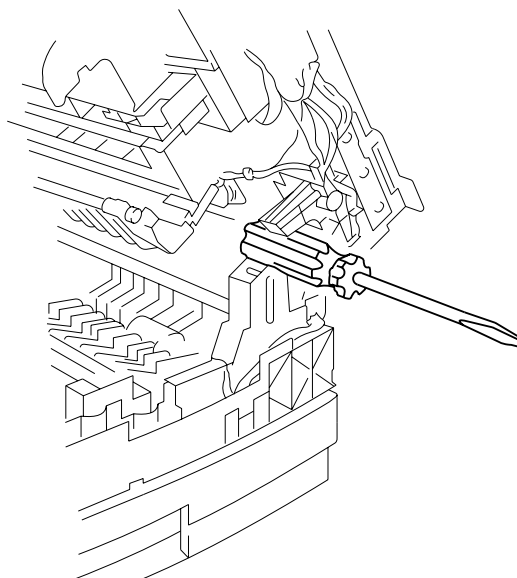


Figure 5-212

- 4) Disconnect the two connectors [1], and remove the two screws [2] then, detach the solenoid unit [3].

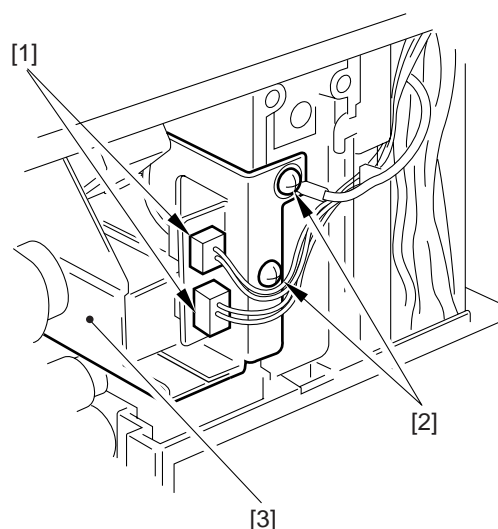


Figure 5-213

- 5) While freeing the two claws [4], remove the pickup clutch unit [5].

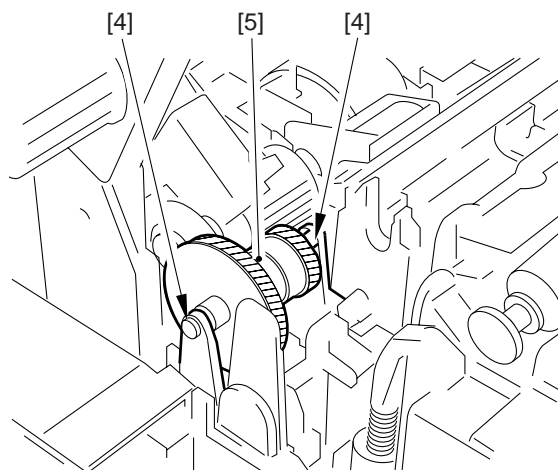


Figure 5-214

- 6) Remove the E-ring [6], and detach the pickup clutch [7].

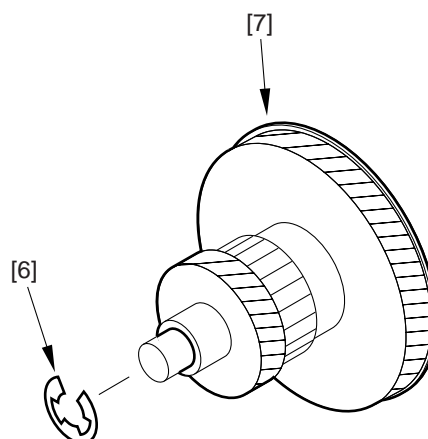


Figure 5-215

3. Removing the Vertical Path Roller

- 1) Remove the front lower cover.
(See Chapter 7.III.A.2. "Removing the Front Lower Cover.")
- 2) Open the machine's top unit farther, and hold it using the handle of a screwdriver (about 30 mm in diameter).

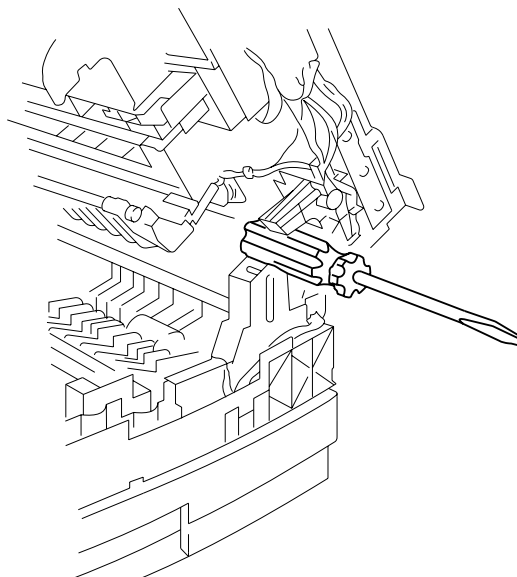


Figure 5-216

- 3) Remove the screw [1], and free the two claws [2]; then, detach the feeding assembly cover [3].

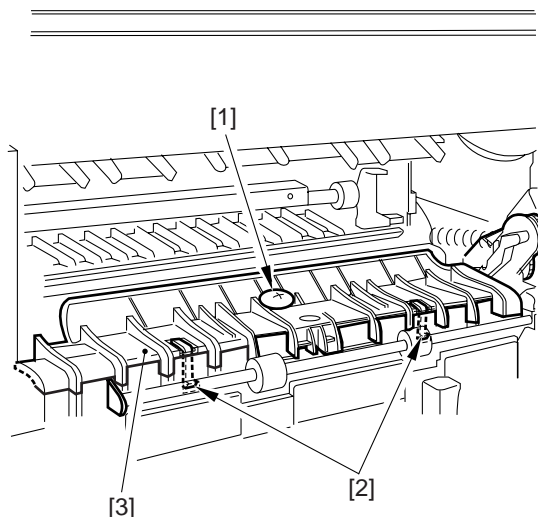


Figure 5-217

- 4) While lifting the sensor lever [4], remove the vertical path roller [5].

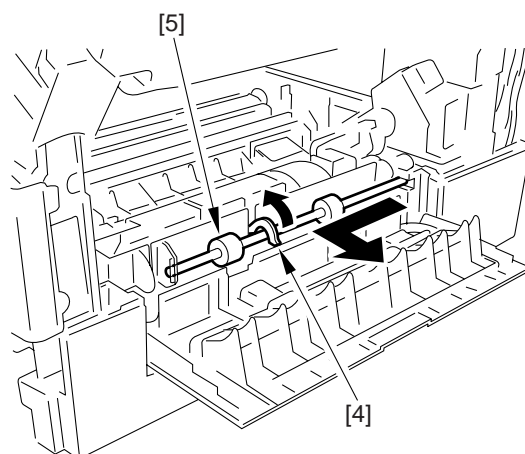


Figure 5-218

B. Multifeeder Assembly

1. Removing the Multifeeder Unit

- 1) Open the right door.
- 2) Remove the two screws [1], and detach the multifeeder unit [2].

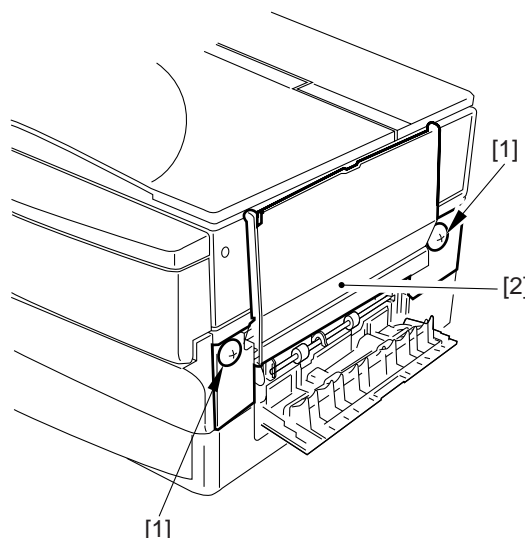


Figure 5-219

Caution:

When mounting the multifeeder unit, perform the following first:

- 1) Turn on the power switch; then, select the multifeeder, and press the Copy Start key.
- 2) When the pickup gear unit has moved as far as it can, turn off the power switch.
- 3) Mount the multifeeder unit; then, make a copy using the multifeeder.

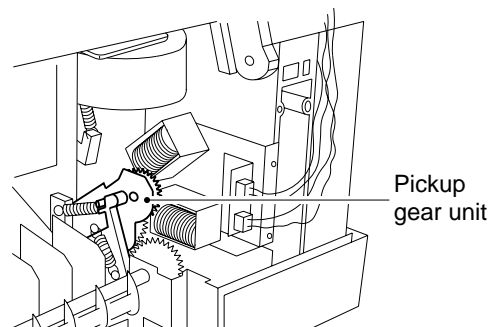


Figure 5-220

2. Removing the Multifeeder Pickup Roller

- 1) Remove the multifeeder unit.
(See 1. "Removing the Multifeeder Unit.")
- 2) Free the claw [1], and remove the gear [2] and the bushing [3].

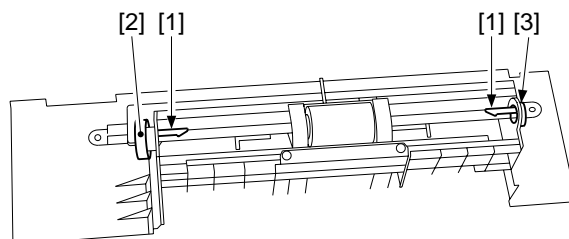


Figure 5-221

- 3) Remove the multifeeder pickup roller unit [4].

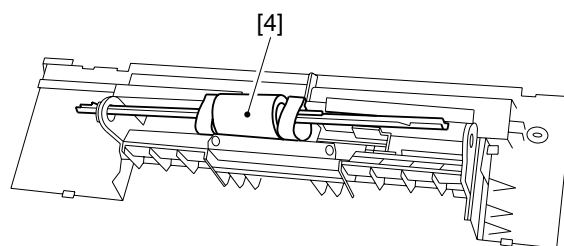


Figure 5-222

- 4) While freeing the claw [5], detach the multifeeder pickup roller [6].

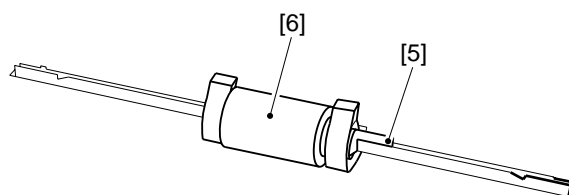


Figure 5-223

3. Removing the Separation Pad

- 1) Remove the multifeeder pickup roller together with its shaft.
(See 2. "Removing the Multifeeder Pickup Roller.")
- 2) Remove the multifeeder tray.
- 3) Slide the side guide [1] to the inside about 3 cm, and free the two claws [2]; then, detach the holding plate [3].

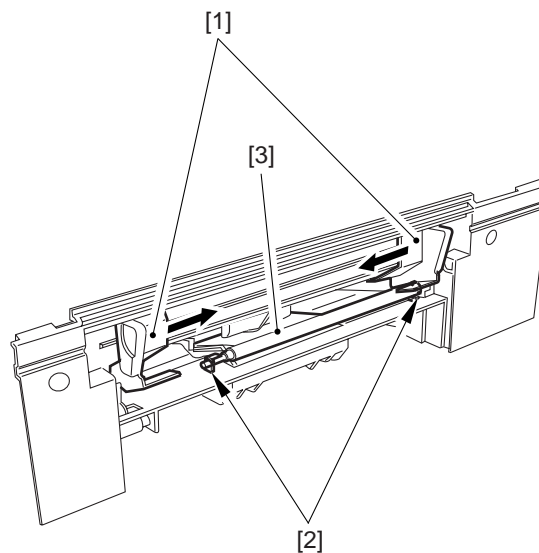


Figure 5-224

- 4) Push up the separation pad [4], and pull it out by pushing the shaft [5] toward the inside.

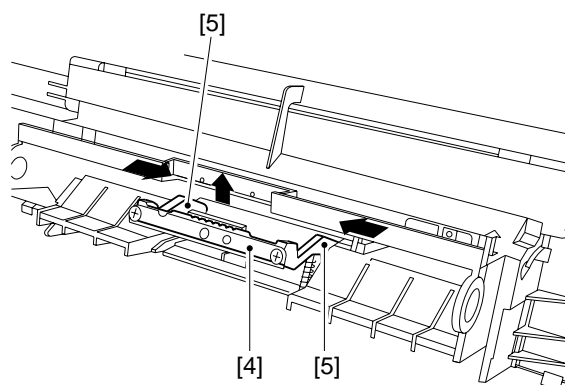


Figure 5-225

C. Single-feeder Assembly

1. Removing the Single-feeder Unit

- 1) Open the right door.
- 2) Remove the two screws [1], and remove the single-feeder unit [2].

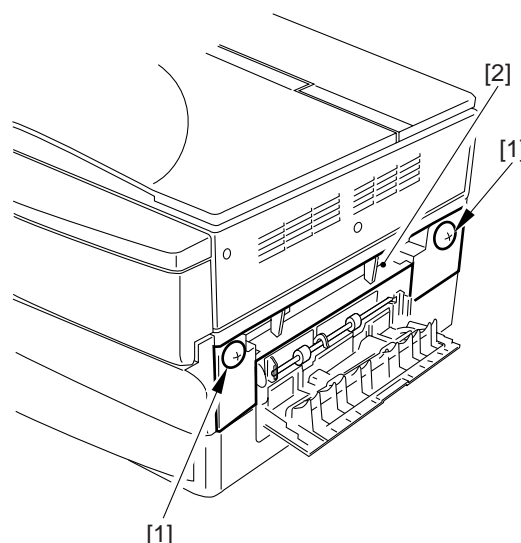


Figure 5-226

2. Removing the Single-feeder Pickup Roller

- 1) Remove the single-feeder unit.
(See 1. "Removing the Single-feeder Unit.")
- 2) Push up the stopper lever [1], and move the gear [2] of the single-feeder pickup roller assembly in the direction of the arrow.

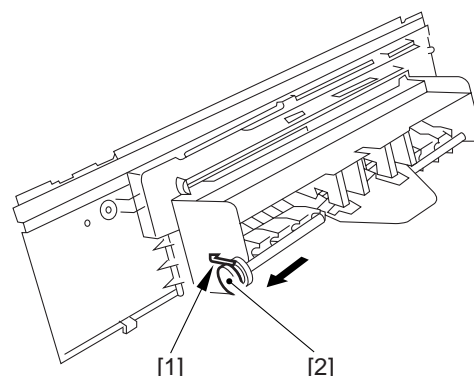


Figure 5-227

- 3) Remove the single-feeder pickup roller assembly [4] together with the paper guide plate [3].

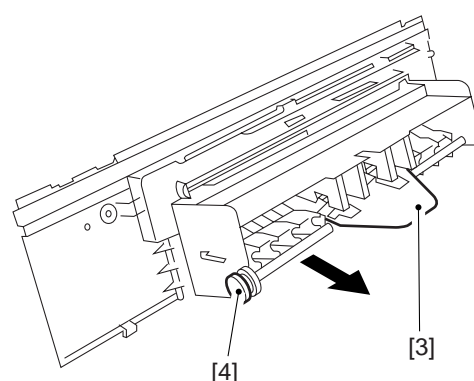


Figure 5-228

- 4) Free the claw [5] of the paper guide plate [3], and remove the single-feeder pickup roller [6].

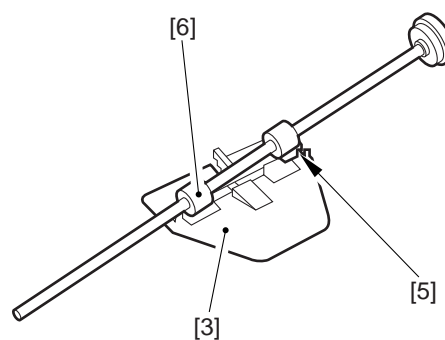


Figure 5-229

D. Feeding Assembly

1. Detaching the Feed Belt

- 1) Open the machine's top unit.
- 2) Push down the stopper [1], and remove the gear [2].

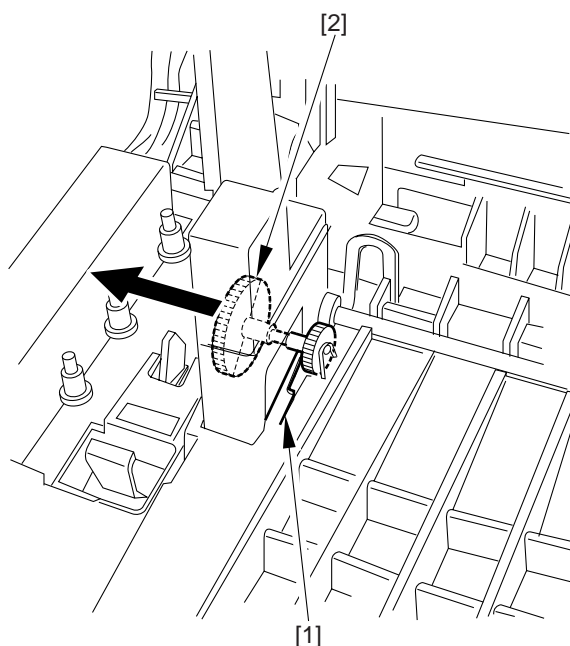


Figure 5-230

- 3) While freeing the claw [3], detach the four shafts [4]; then, detach the feed belt [5].

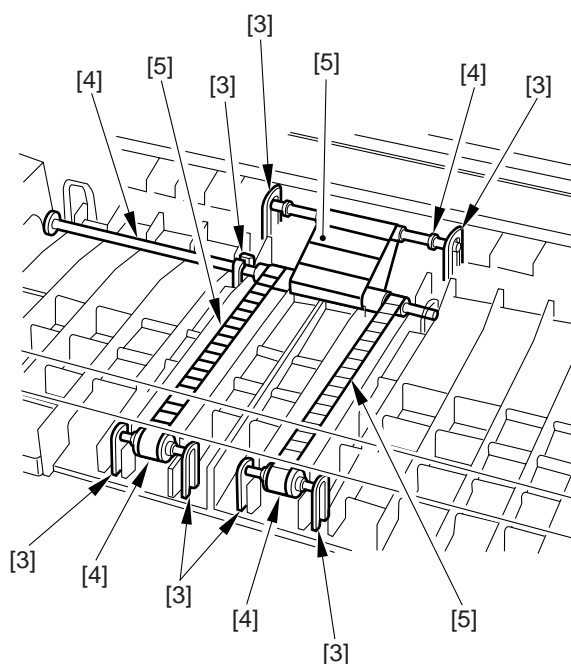


Figure 5-231

E. Registration Roller Assembly

1. Removing the Registration Roller Unit

- 1) Open the machine's top unit.
- 2) Remove the spring [1] (front, rear).

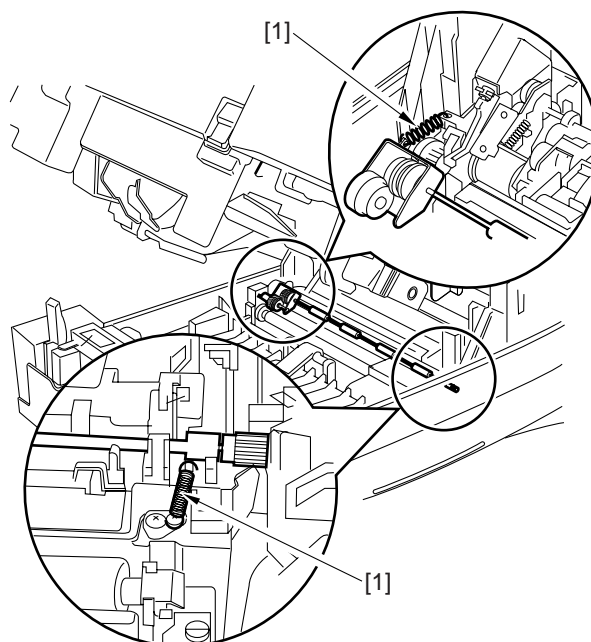


Figure 5-232

- 3) Remove the two bushings [2] and remove the registration roller lower unit [3].

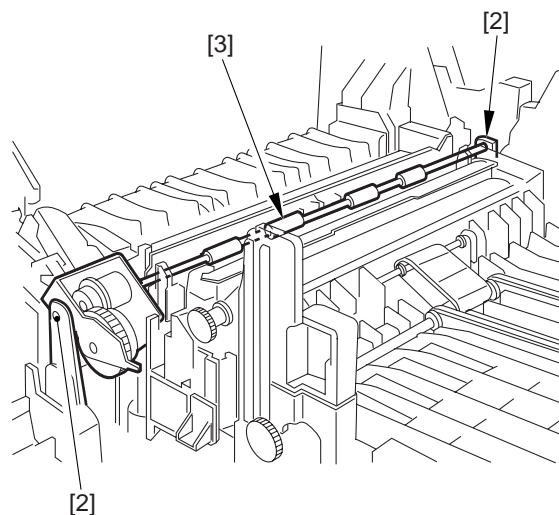


Figure 5-233

2. Removing the Registration Roller Clutch

- 1) Remove the registration roller unit.
(See 1. "Removing the Registration Roller Unit.")
- 2) Remove the bushing [1] and the E-ring [2].

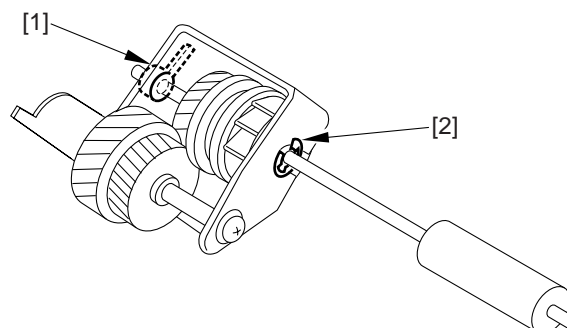


Figure 5-234

- 3) While shifting down the registration roller [3], detach it from the gear unit [4].

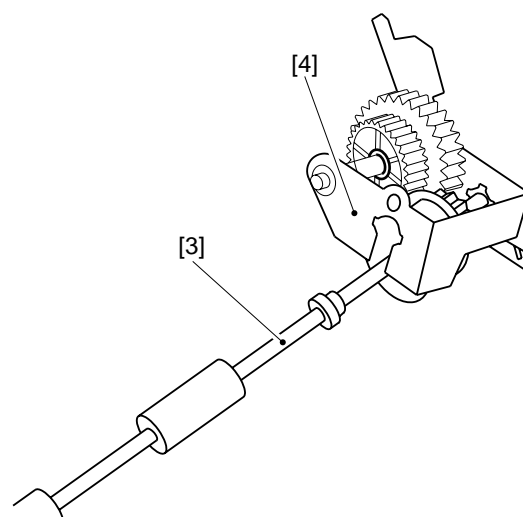


Figure 5-235

- 4) Remove the E-ring [5], and detach the registration roller clutch [6].

Caution:

The clutch has a pin. Take care not to lose it when removing the clutch.

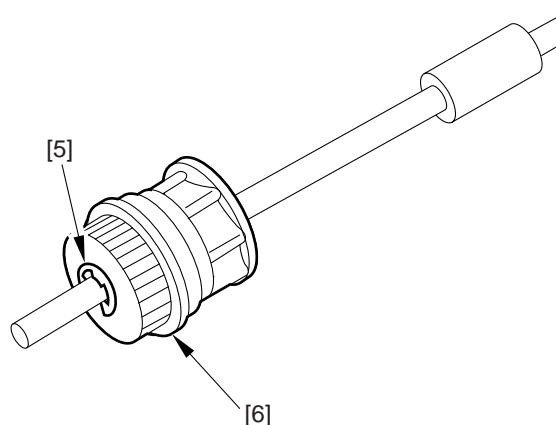


Figure 5-236

F. Delivery Assembly

1. Removing the Delivery Roller

- 1) Remove the fixing lower roller.
(See Chapter 6.II.A.3. "Removing the Fixing Lower Roller.")
- 2) Remove the two screws [1], and detach the side plate [2] and the four gears [3].

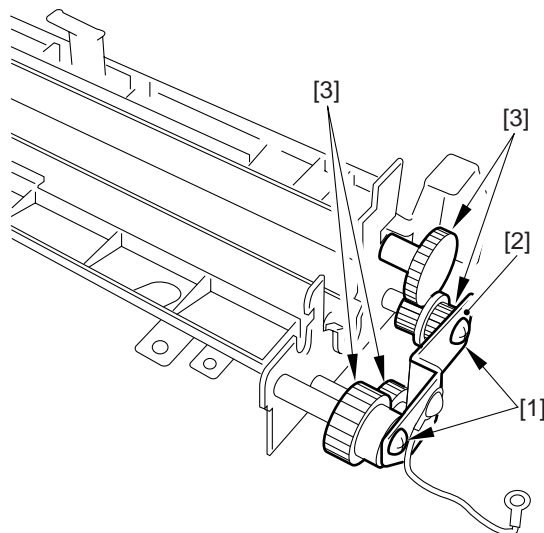


Figure 5-237

- 3) Remove the screw [4], and free the two hooks [5]; then, detach the sensor holder [6].

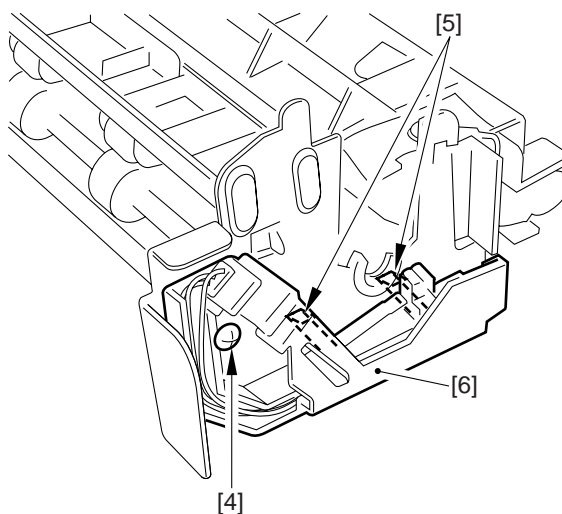


Figure 5-238

- 4) Remove the two bushings [7].

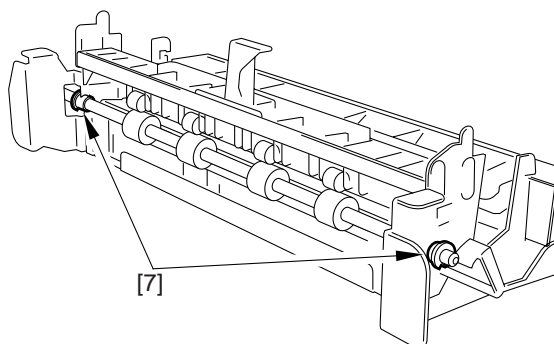


Figure 5-239

- 5) While shifting the delivery lower guide [8] toward the rear, detach the delivery roller [9].

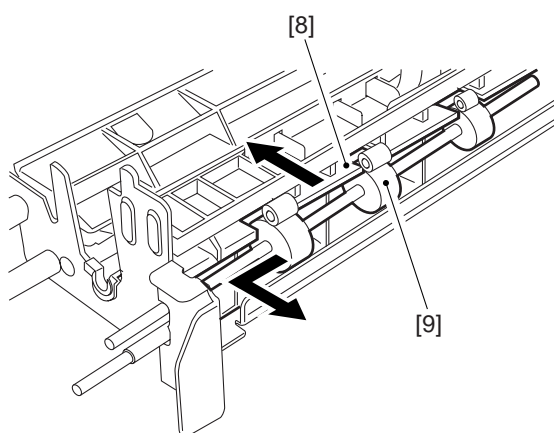


Figure 5-240

CHAPTER 6

FIXING SYSTEM

This chapter explains the principles used to fuse toner images to transfer medium in view of the functions of electrical and mechanical units and in relation to their timing of operation. It also shows how these units may be disassembled/assembled and adjusted.

I. OPERATIONS	6-1	II. DISASSEMBLY/ASSEMBLY	6-10
A. Outline	6-1	A. Fixing Assembly	6-11
B. Controlling the Fixing Temperature	6-3		

I. OPERATIONS

A. Outline

The major functions of the fixing unit are as follows:

Item	Description
Fixing method	SURF
Fixing drive	Main Motor (M1)
Fixing heater	Flat heater
Fixing temperature detection	Thermistor (TH1)
Cleaner	Cleaning roller
Protective functions	The following are used to detect and protect against an error; upon detection, power to the fixing heater will be cut: <ul style="list-style-type: none"> • Thermistor (TH1) • Thermal fuse (FU2; activating at 228°C)
Error code	E000 The fixing temperature fails to increase. E001 The thermistor has detected overheating. E002 Fault in fixing power control. E003 The fixing temperature has dropped abnormally.

Table 6-101

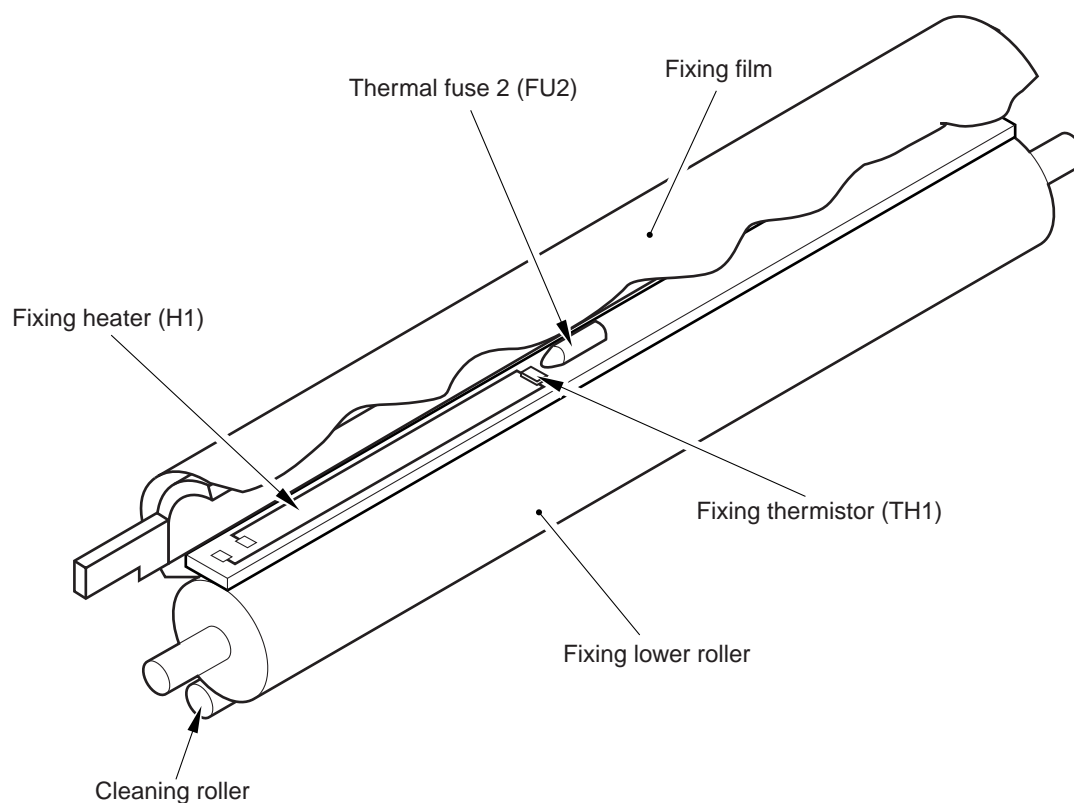


Figure 6-101

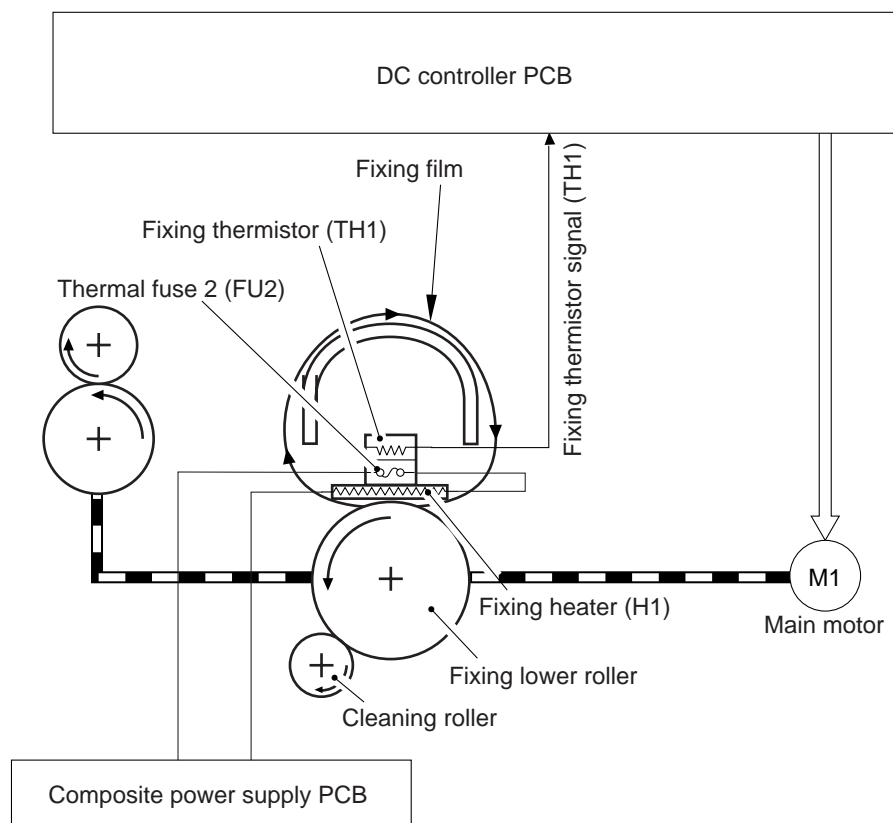


Figure 6-102

B. Controlling the Fixing Temperature

1. Outline

The fixing lower roller of the fixing assembly is driven by the main motor (M1). When the fixing lower roller rotates, the film of the fixing upper unit starts to rotate in conjunction.

The fixing film is heated by the fixing heater (H1), which is a flat heater mounted in contact with the inner side of the film. The fixing heater is equipped with a thermistor (TH1), which sends the fixing thermistor signal (TH1) to the microprocessor (Q101) on the DC controller PCB; in response, the microprocessor controls the fixing heater duty signal (HEAT_PWM) to vary the power supplied to the heater by way of controlling the temperature of the fixing heater.

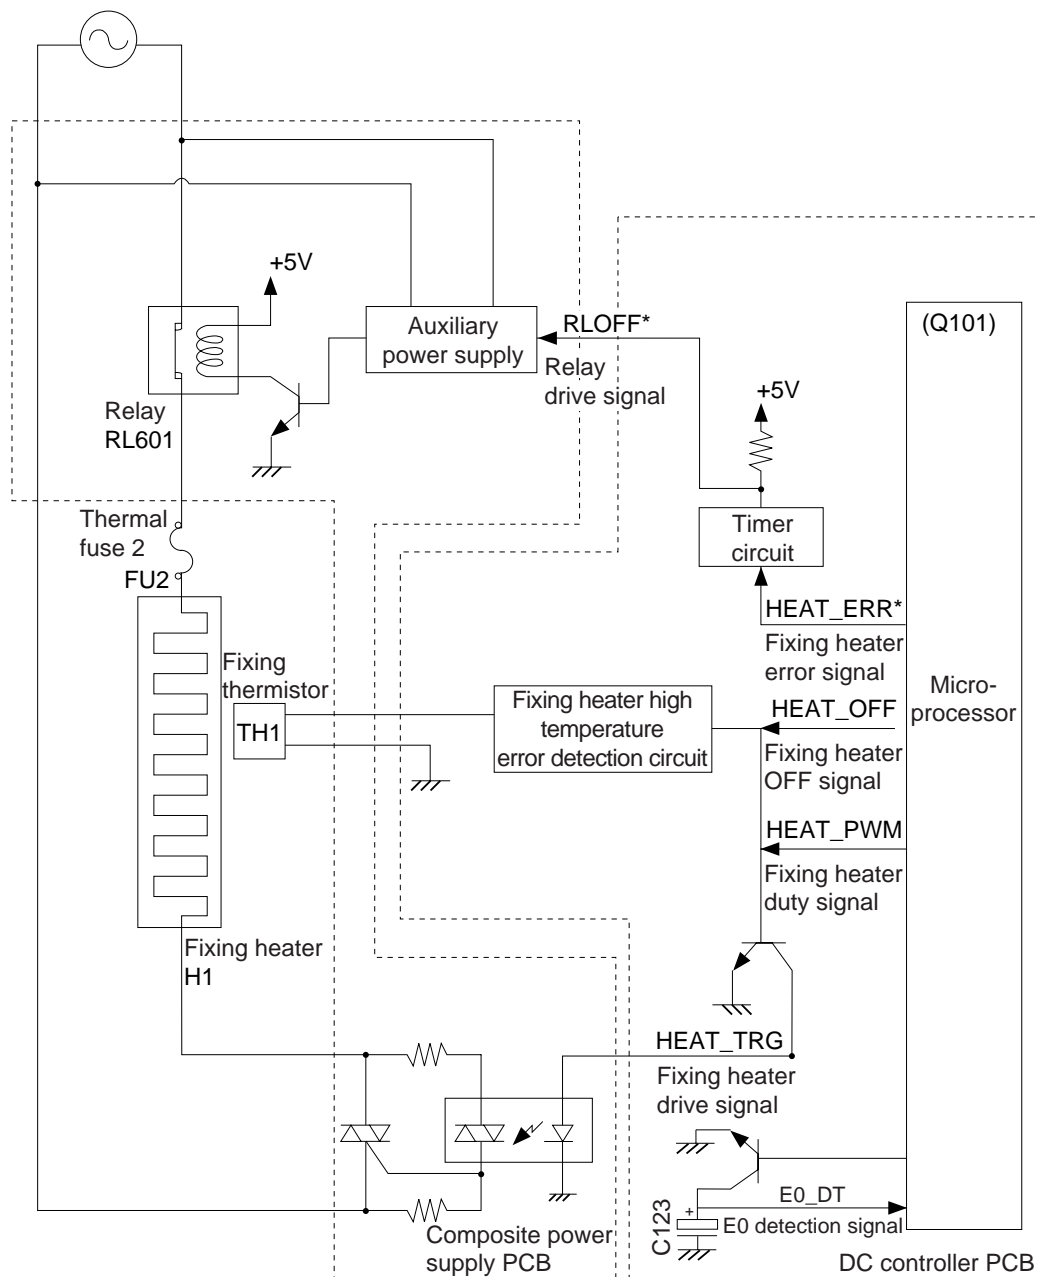


Figure 6-103

2. Controlling the Temperature of the Fixing Heater

The temperature of the fixing heater is switched according to the following two parameters:

- Temperature of the fixing heater when the Copy Start key is pressed.
- Number of copies to make in continuous copying mode

Table 6-102 shows the temperature of the fixing heater when the Copy Start key is pressed (as detected by the thermistor TH1) and the temperatures to which the fixing heater is controlled according to the number of copies made in continuous mode.

	Heater temperature when the Copy Start key is pressed	Number of copies	Control temperature (°C)
1	Less than 100°C	1	200
		2 ~ 9	195
		10 ~ 29	190
		30 ~ 39	185
		40 ~ 49	180
		50 ~ 59	175
		60 ~	170
2	100°C or more and less than 120°C	1 ~ 9	190
		10 ~ 19	186
		20 ~ 29	180
		30 ~ 39	175
		40 ~	170
3	120°C or more	1 ~ 9	180
		10 ~ 19	175
		20 ~	170

Table 6-102

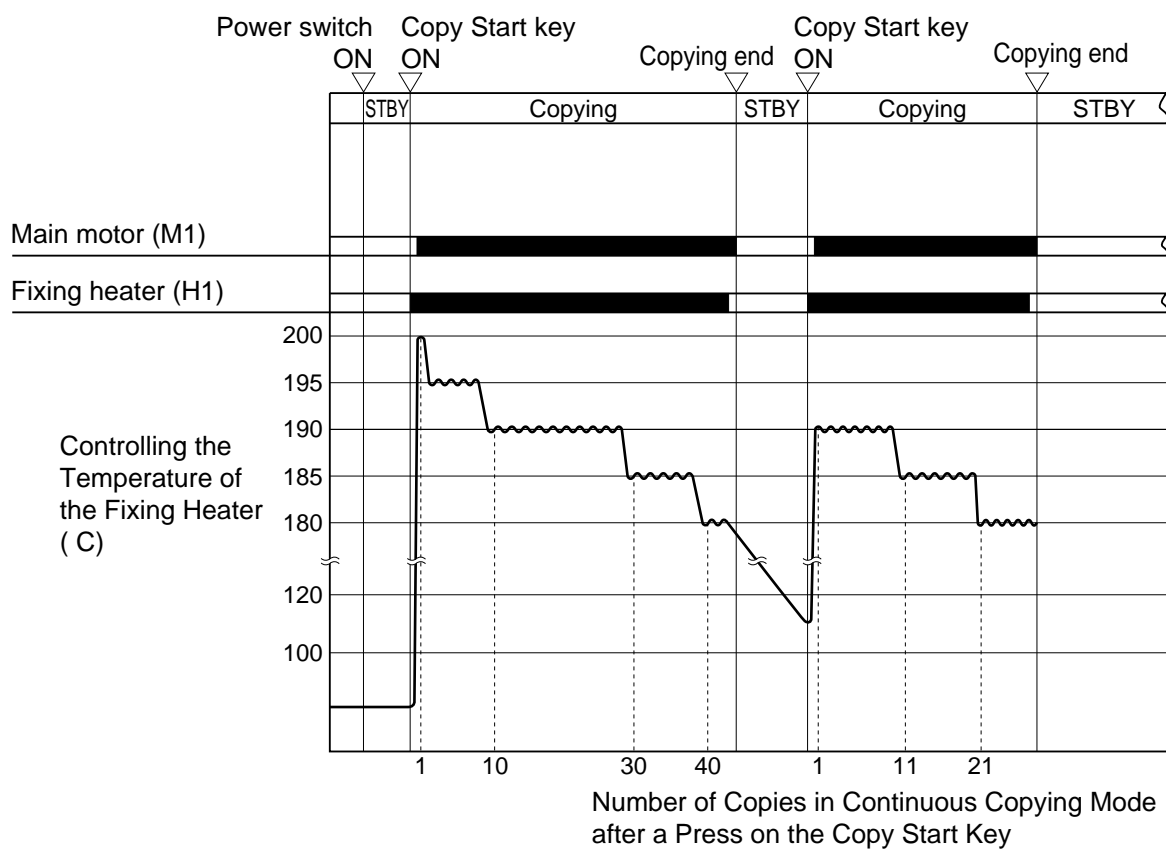


Figure 6-104

3. Controlling the Temperature Supplied to the Fixing Heater

The temperature of the fixing heater is controlled by controlling the power supplied to the fixing heater, and the power to the fixing heater is controlled using a phase control method.

The microprocessor on the DC controller PCB controls the timing at which the fixing heater duty signal (HEAT_PWM) is generated so that power suited to the target temperature of the fixing heater may be supplied (phase control).

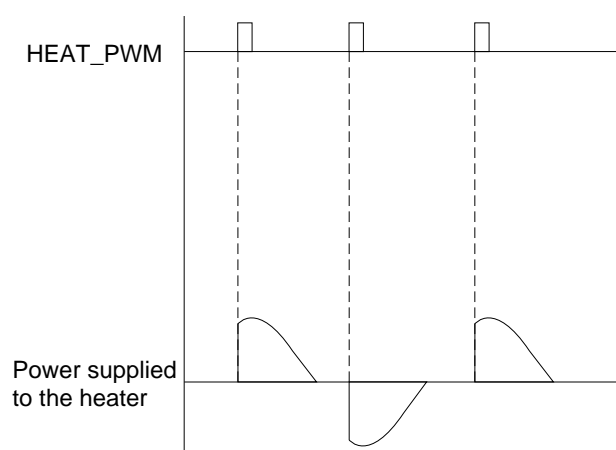


Figure 6-105

4. Correcting the Variation in the Resistance of the Fixing Heater

The characteristics of the flat heater used as the fixing heater vary from heater to heater because the production method. A discrepancy in resistance, if left alone, will not enable correct control of the fixing heater.

The machine makes correction in relation to the selected level of resistance (from three settings), and corrects it based on the readings obtained by the microprocessor.

Caution:

The level of resistance of the fixing heater is selected by an appropriate combination of the jumper wires connected to the connector of the fixing thermistor (TH1) and the delivery sensor (PS3).

The best level is selected at the factory when the fixing assembly is assembled. Do not change the combination of jumper wires.

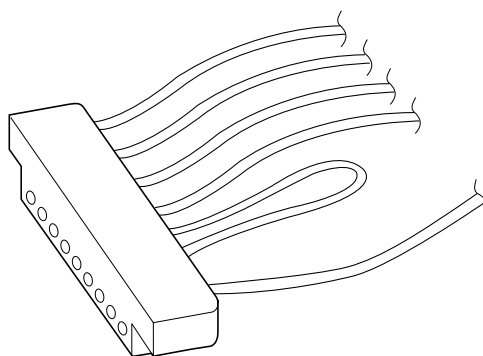


Figure 6-106

5. Controlling the Power Supplied to the Fixing Heater between Sheets

When the copying speed is controlled to 6 cpm to prevent overheating of the copyboard, the temperature of the fixing lower roller tends to increase because of the increased sheet-to-sheet distance. To prevent possible problems, power to the fixing heater is stopped between sheets when the copying speed is controlled to 6 cpm.

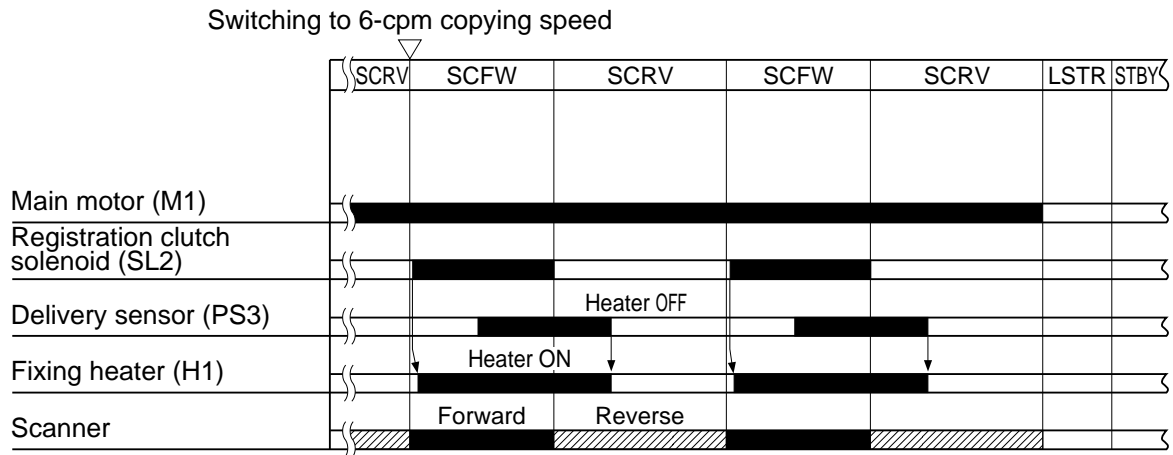


Figure 6-107

6. Protective Functions

The machine is equipped with the following protective functions to prevent malfunction of the fixing heater.

a. Thermistor (TH1)

The microprocessor on the DC controller PCB monitors the voltage of the thermistor (TH1); if an abnormally high or low temperature is detected, the microprocessor sends the fixing heater error signal (HEAT_ERR*) to the timer circuit and, at the same time, indicate an error code (E000 through E003).

In response, the timer circuit sends the relay drive signal (RLOFF*) to the auxiliary power supply in about 1.2 sec after it has received the fixing heater error signal (HEAT_ERR*).

The auxiliary power supply turns off the relay (RL601) to turn off the power. Then, the data of 'E0' (associated with the heater) is retained so as to indicate 'E0' when the power is turned on the next time.

'E0' is backed up for about 5 min. After 'E000' through 'E003' is indicated in the control panel and the power is turned off, the machine will indicate 'E0' in the control panel if the power switch is turned on within 5 min, not recognizing a press on the Copy Start key. If the Copy Start key is pressed after about 5 min, however, a press on the Copy Start key will be recognized.

If an error is detected in relation to the heater during copying operation, the machine will indicate 'E000' through 'E003' in the control panel once again and turn off the power.

Related Error Code

E000
<ul style="list-style-type: none"> The temperature detected by the thermistor (TH1) is not 65°C in 1.5 sec after the Copy Start key is pressed. The temperature detected by the thermistor (TH1) is not 150°C in 4 sec after the Copy Start key is pressed.
E001
<ul style="list-style-type: none"> The temperature detected by the thermistor (TH1) is 230°C or more. The temperature detected by the thermistor (TH1) is higher than the control temperature by 30°C or more. The thermistor (TH1) has detected an increase in temperature of 100°C or more in 1 sec. The thermistor (TH1) has detected an increase in temperature of 40°C or more after it detected 100°C in standby state. E0 detection signal (E0_DT) has been detected twice in succession.
E002
The temperature detected by the thermistor (TH1) is 150°C or higher and, thereafter, maximum power has been supplied to the fixing heater for 10 to 14 sec during copying operation.
E003
The temperature detected by the thermistor (TH1) is 160°C and then 150°C or lower during copying operation.

b. Thermal Fuse (FU2)

If the temperature around the thermal fuse exceeds 228°C and remains so for a specific period of time, the thermal fuse will blow to cut the power to the fixing heater.

II. DISASSEMBLY/ASSEMBLY

As needed, disassemble/assemble the machine with the following in mind:

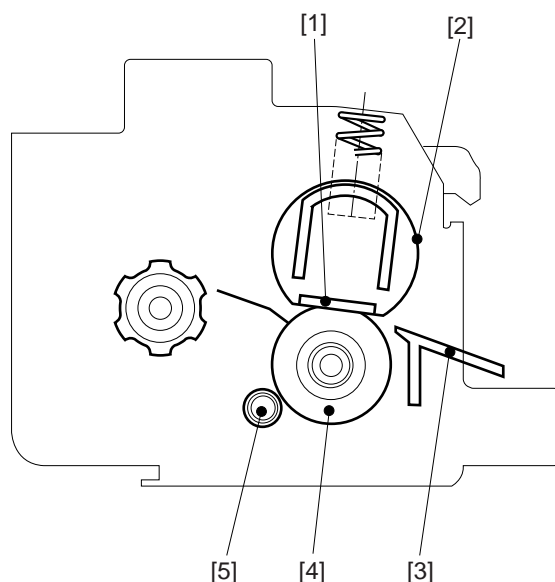
1. **▲** Before starting the work, turn off the power switch and disconnect the power plug for safety.
2. Unless otherwise instructed, assemble the parts by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. Use the washers where necessary. (The screws used to mount the grounding wire and Varistors come with a washer to ensure electrical continuity.)
5. As necessary, cut the harness band.
6. As a rule, do not operate the machine with any of its part removed.
7. A few of the screws used are special screws (with wider thread intervals). Do not use any screws indiscriminately.

A. Fixing Assembly

1. Construction

Caution:

1. The fixing film is made from a special material. Do not touch it or subject it to dust.
2. The machine does not have a mechanism used to adjust the roller pressure.



- | | |
|-------------------|-------------------------|
| [1] Fixing heater | [4] Fixing lower roller |
| [2] Fixing film | [5] Cleaning roller |
| [3] Inlet guide | |

Figure 6-201

2. Removing the Fixing Assembly

- 1) Remove the front lower cover.
(See Chapter 7.III.A.2.“Removing the Front Lower Cover.”)
- 2) Remove the screw [1], and free the two hooks [2]; then, detach the power supply cover [3].

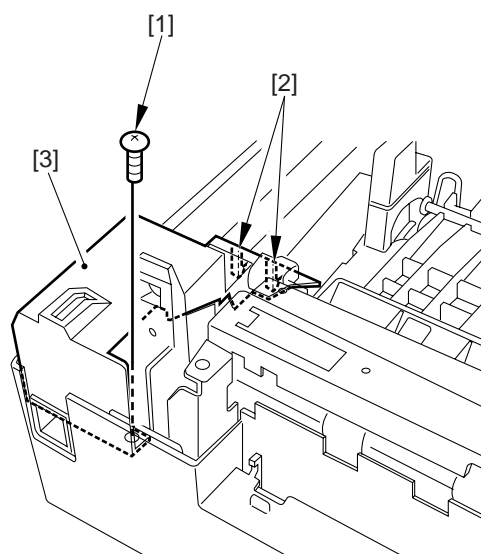


Figure 6-202

- 3) Remove the screw [4], and disconnect the connector [5].

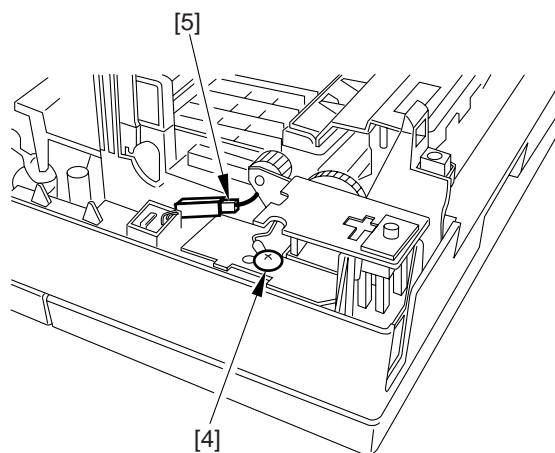


Figure 6-203

- 4) Remove the two screws [6], and disconnect the connector [7]; then, detach the fixing assembly [8] by turning it in the direction of the arrow.

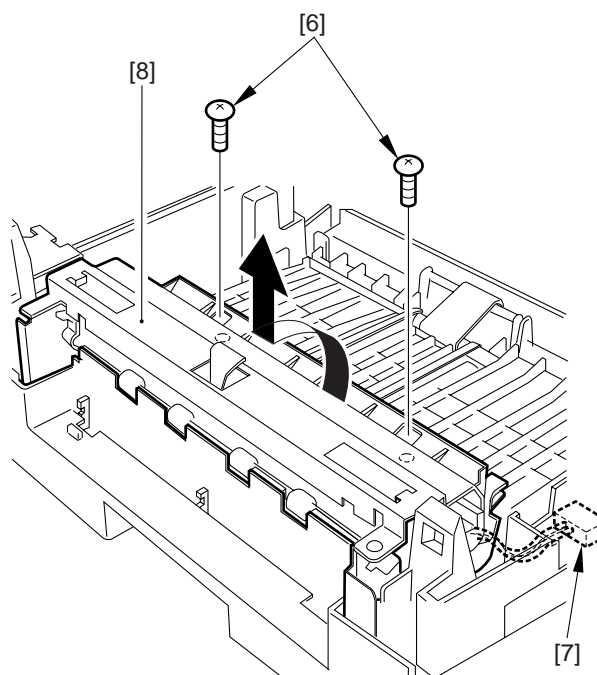


Figure 6-204

3. Removing the Fixing Lower Roller

- 1) Remove the fixing assembly.
(See 2. "Removing the Fixing Assembly.")
- 2) Remove the two screws [1], and free the two hooks [2]; then, detach the fixing upper stay [3] by turning it in the direction of the arrow.

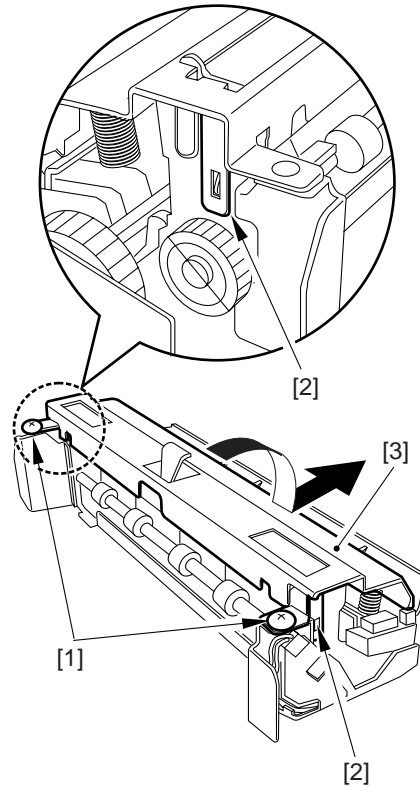


Figure 6-205

- 3) Detach the harness band [4] from the side plate, and remove the fixing upper unit [5].

Caution:

Do not disassemble the fixing film and the fixing heater. They cannot be replaced on their own.

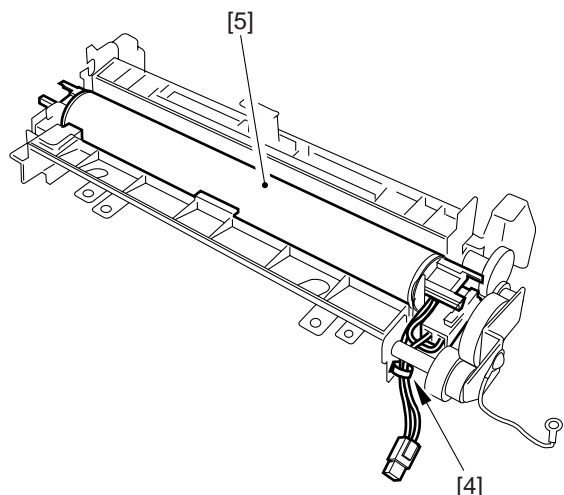


Figure 6-206

- 4) Remove the fixing lower roller [6] together with the gear.

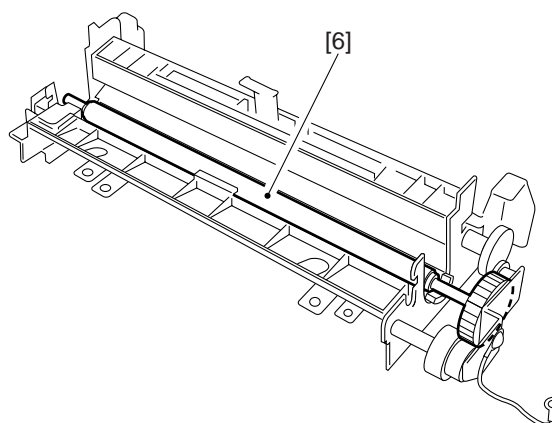


Figure 6-207

4. Removing the Cleaning Roller

- 1) Remove the fixing lower roller.
(See 3. "Removing the Fixing Lower Roller.")
- 2) Remove the cleaning roller [1] together with the bushing.

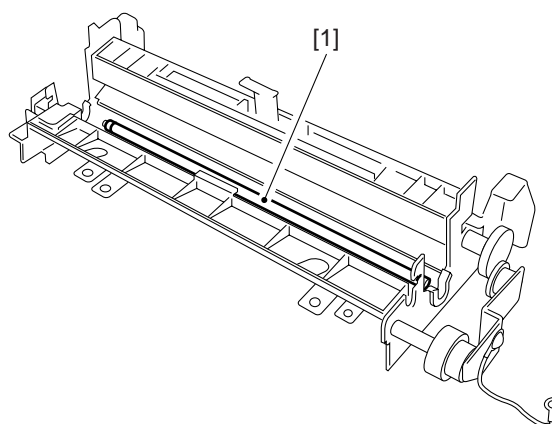


Figure 6-208

CHAPTER 7

EXTERNALS/AUXILIARY MECHANISMS

This chapter shows the machine's external parts, and explains the principles used for the machine's various control mechanisms in view of the functions of electrical and mechanical units and in relation to their timing of operation. It also shows how these units may be disassembled/assembled and adjusted.

I.	FANS	7-1	III.	DISASSEMBLY/ASSEMBLY	7-7
II.	POWER SUPPLY SYSTEM	7-3	A.	External Covers	7-8
A.	Outline of the Power Supply System	7-3	B.	Control Panel	7-15
B.	Power Supply Circuit	7-4	C.	Copyboard Glass	7-16
C.	Detecting an Error on the Composite Power Supply PCB	7-6	D.	Main Motor/Main Drive Assembly	7-17
D.	Protecting the Power Supply Circuit	7-6	E.	Electrical System	7-21

I. FANS

The machine is equipped with two fans serving to discharge ozone or cool its inside.

The heat exhaust fan is driven directly by the main motor (M1; through a belt and a gear), and is designed to rotate at all times while the main motor is rotating.


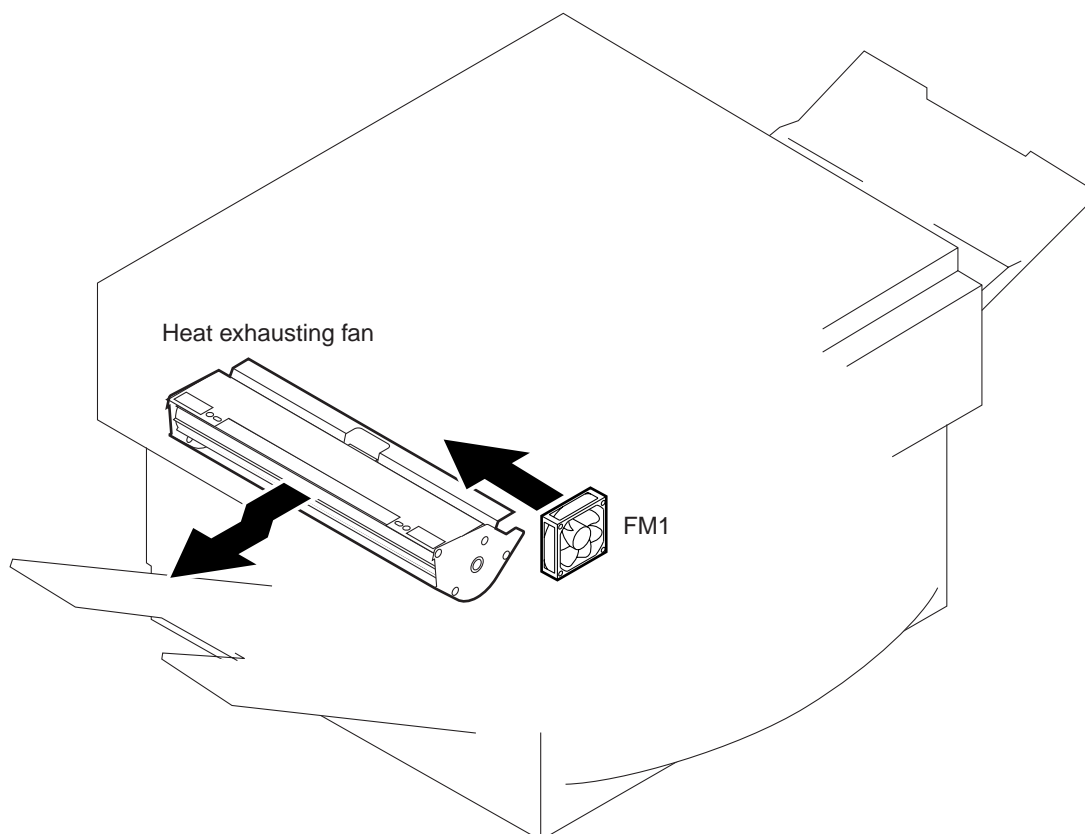


Figure 7-101

The scanner cooling fan (FM1) is turned on and off according to the temperature detected by the scanner thermistor (TH2).

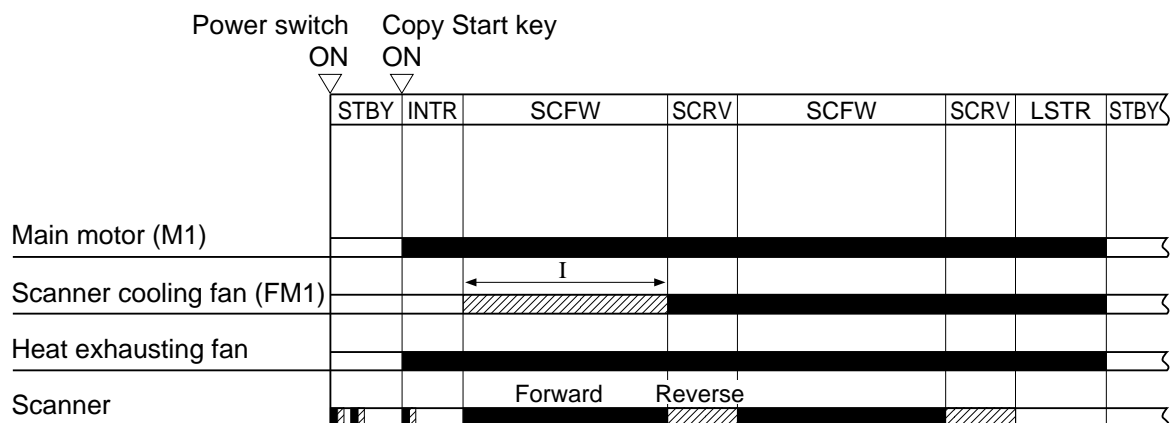If the reading by the thermistor is 37.5°C or higher and the copying speed reaches 6 cpm, the fan starts to rotate. If the reading is lower than 37.5°C, on the other hand, the fan will not rotate if no more than one copy is made or while making the first copy of a continuous copying job. (It rotates when making the second and subsequent copies of a continuous copying job.)



I: If 6-cpm copying speed control is executed starting with the first copy, the fan will rotate.

Figure 7-102

II. POWER SUPPLY SYSTEM

A. Outline of the Power Supply System

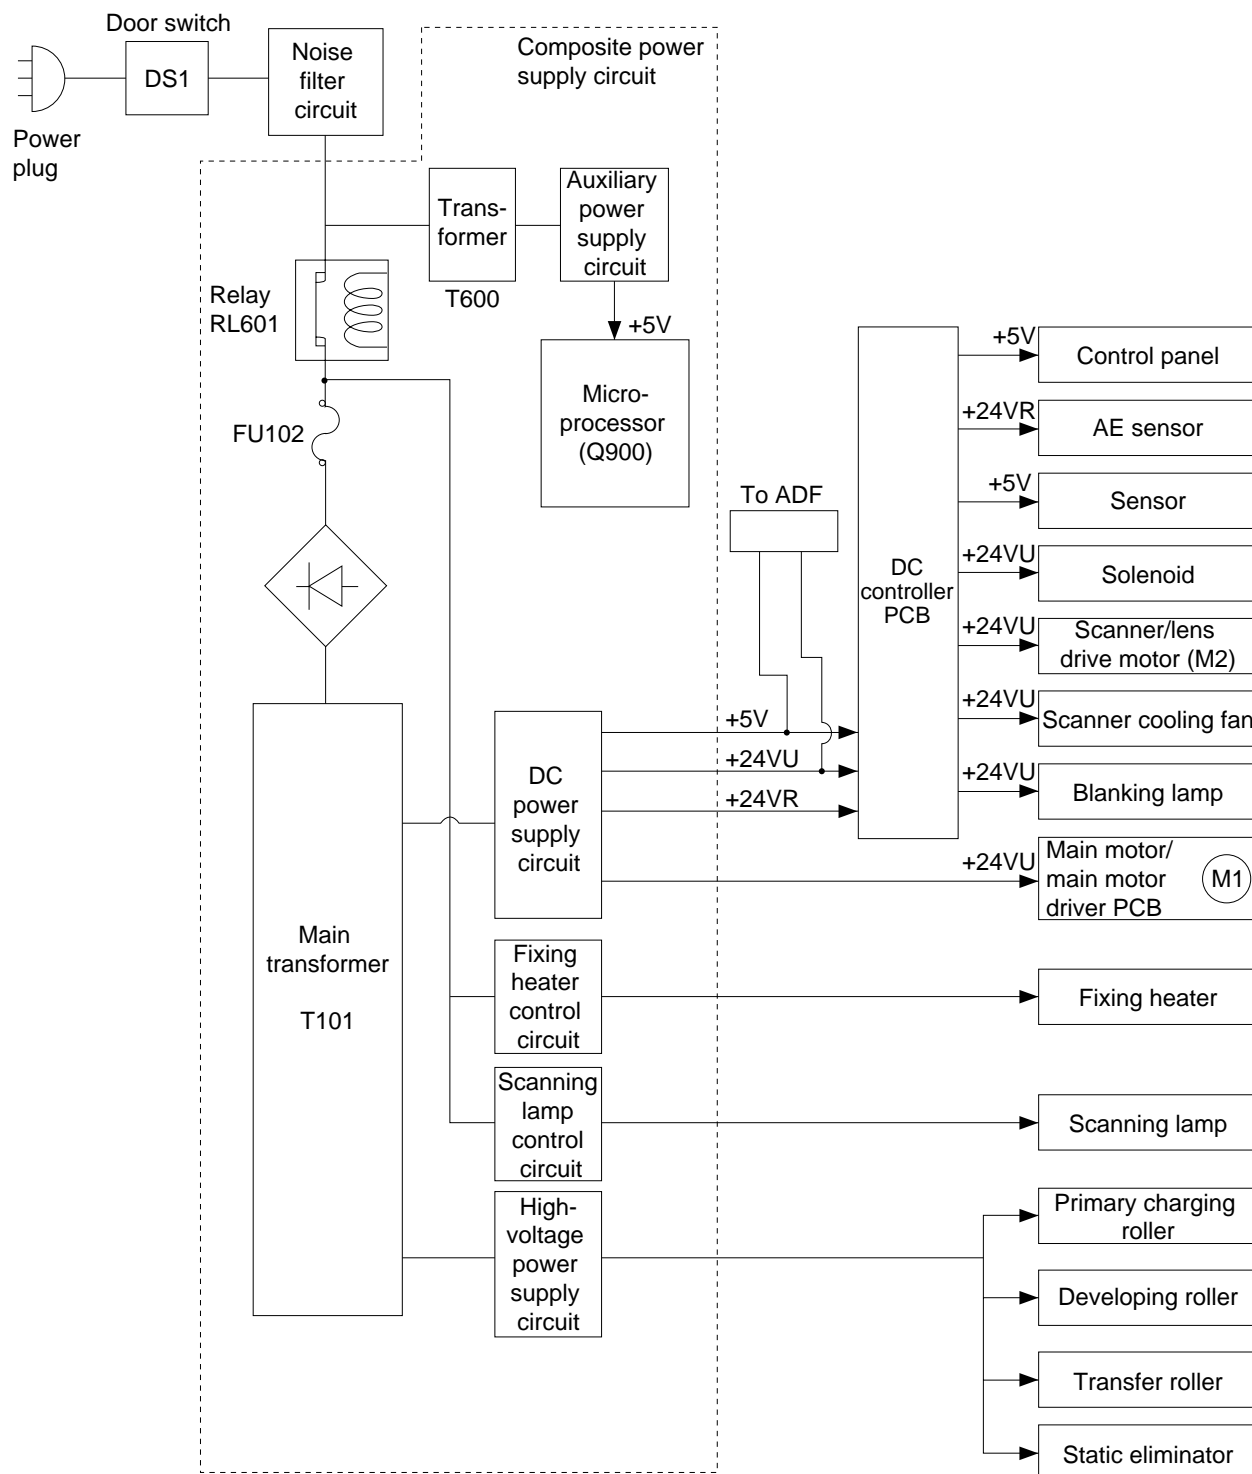


Figure 7-201

B. Power Supply Circuit

The machine's power supply consists of a composite power supply circuit in which a DC power supply, scanning lamp power supply, and high-voltage power supply are integrated on a single board. It also possesses a microprocessor for exchanges of various data with the machine's DC controller PCB.

The machine's power switch is a soft switch, and the machine is equipped with an auxiliary power supply used to operate the switch. The auxiliary power supply provides the microprocessor (Q900) with +5 V as long as the door switch (DS1) remains on.

AC power is supplied to the DC power supply when the power switch on the control panel is turned on. In response, the DC power supply provides the DC controller PCB with +5 V, +24 VR, and +24 VU.

When the power switch is turned off, the power to the DC controller PCB is cut off. To back it up against 'E000', 'E001', 'E002', and 'E003', the machine is equipped with a DC capacitor as part of the DC controller circuit.

When 'E000', 'E001', 'E002', or 'E003' occurs, the capacitor (C123) collects electric charge; if charge exists in the capacitor while the power switch is on, the machine indicates 'E0' on the control panel to indicate that an error related to the fixing heater has occurred.

Note:

The backup capacitor (C123) retains electric charge for about 5 min after the power switch is turned off.

Reference:

The tolerances in DC voltage are as follows:

- +5 V $\pm 5\%$
- +24 VR $\pm 5\%$
- +24 VU -10.0%, +12.5%

For +24 VR, two types of voltage are used:

- During copying, +24 V $\pm 5\%$
- During standby, +18 V $\pm 10\%$

However, the above assume that the deviations in AC input are -15%, +10%.

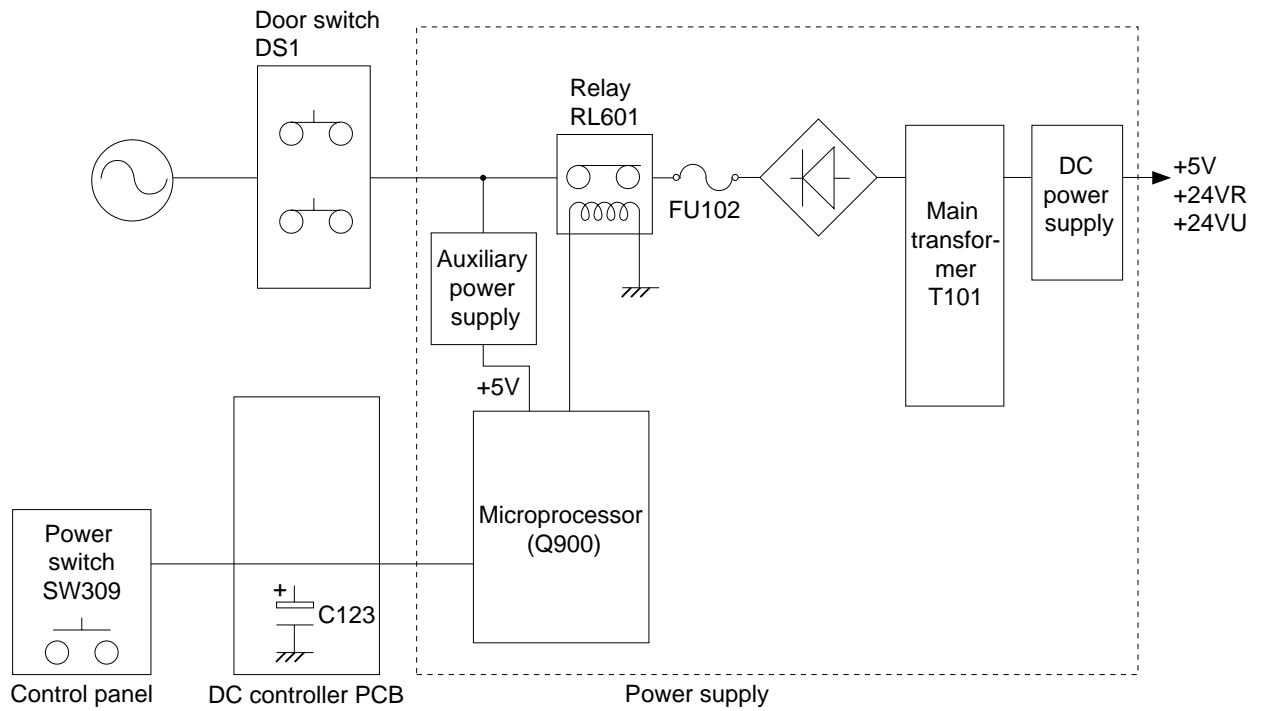


Figure 7-202

C. Detecting an Error on the Composite Power Supply PCB

The machine's composite power supply PCB is equipped with a self diagnostic function to check each power output and the communication with the DC controller PCB using the microprocessor (Q900) mounted on it.

If any of the following errors occurs, the microprocessor will exchange signals with the DC controller PCB, and will indicate the result of self diagnosis on the control panel.

1. Detecting an Over-Current in the Low-Voltage System

If an over-current is detected because of a fault in a DC load, the composite power supply PCB will turn off the relay (RL601) to cut the AC input.

2. Detecting a Fault in the High-Voltage Control Value

If a deviation is found between the setting value and the actual value is detected in any of the following voltages, the composite power supply will indicate 'E064' on the control panel.

- Primary charging DC bias
- Developing DC bias
- Transfer bias

3. Detecting a Fault in the Low-Voltage Control Value

If a deviation is detected between the setting value and the actual control value in +24 V (DC output), the composite power supply PCB will indicate 'E803' on the control panel.

4. Fault in the Communication with the DC Controller

If the DC controller PCB detects a fault in the communication with the composite power supply PCB, 'E240' will be indicated on the control panel for about 4 sec, and then the relay (RL601) will be turned off to cut the AC input.

D. Protecting the Power Supply Circuit

The composite power supply PCB is equipped with an over-current detection function which turns on a protective mechanism to stop output if a load suffers a short-circuit.

If the output has stopped, it may be reset by opening the machine's top unit, correcting the load, and then turning the power switch back on.

Keep in mind, however, that repeated short-circuiting and resetting can blow the fuse (FU102).

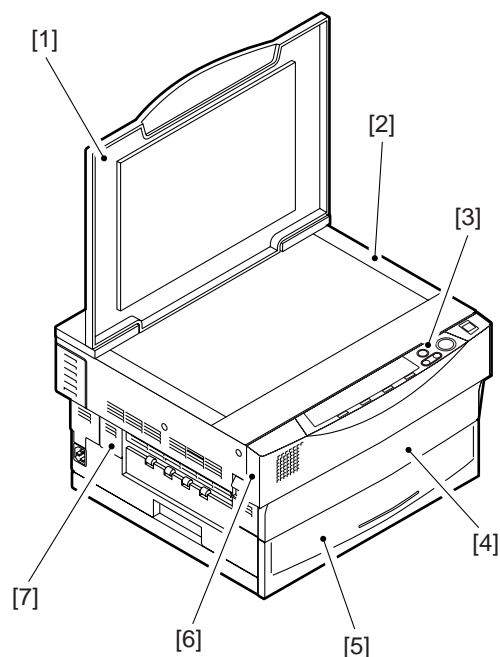
III. DISASSEMBLY/ASSEMBLY

As needed, disassemble/assemble the machine with the following in mind:

1. **▲** Before starting the work, turn off the power switch and disconnect the power plug for safety.
2. Unless otherwise instructed, assemble the parts by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. Use the washers where necessary. (The screws used to mount the grounding wire and Varistors come with a washer to ensure electrical continuity.)
5. As necessary, cut the harness band.
6. As a rule, do not operate the machine with any of its part removed.
7. A few of the screws used are special screws (with wider thread intervals). Do not use any screws indiscriminately.


A. External Covers

For instructions on how to remove the ADF, see Chapter 8.



- | | |
|-----------------------|-----------------------|
| [1] Copyboard cover | [5] Cassette |
| [2] Top cover | [6] Front upper cover |
| [3] Control panel | [7] Left cover |
| [4] Front lower cover | |

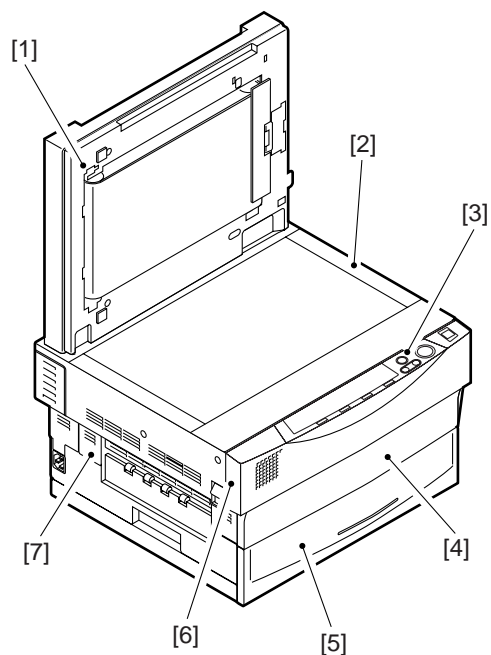Figure 7-301 (Copyboard type)




- | | |
|-----------------------|-----------------------|
| [1] ADF | [5] Cassette |
| [2] Top cover | [6] Front upper cover |
| [3] Control panel | [7] Left cover |
| [4] Front lower cover | |

Figure 7-302 (ADF type)

Note:

Remove the covers as necessary when cleaning, inspecting, or repairing the inside of the machine.

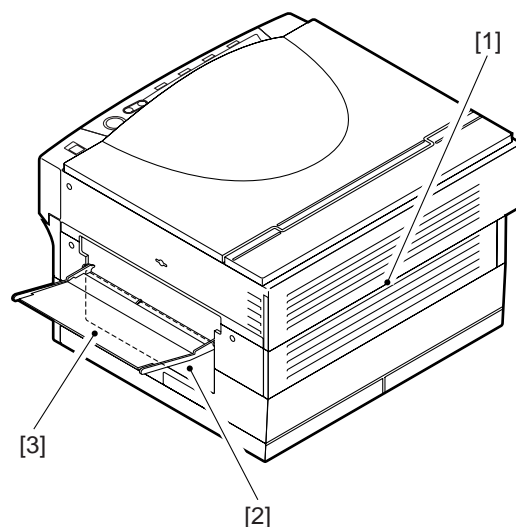Those covers that may be detached from their own by mere removal of mounting screws are omitted from the discussions.



- | |
|----------------------|
| [1] Rear cover |
| [2] Right door |
| [3] Multifeeder unit |

Figure 7-303

1. Removing the Top Cover

- 1) Remove the copyboard cover or the ADF.
- 2) Open the machine's top unit.
- 3) Remove the two screws [1], and detach the front upper cover [2].

Caution:

A flexible cable for the control panel is connected to the front upper cover. Disconnect the cable from the DC controller.

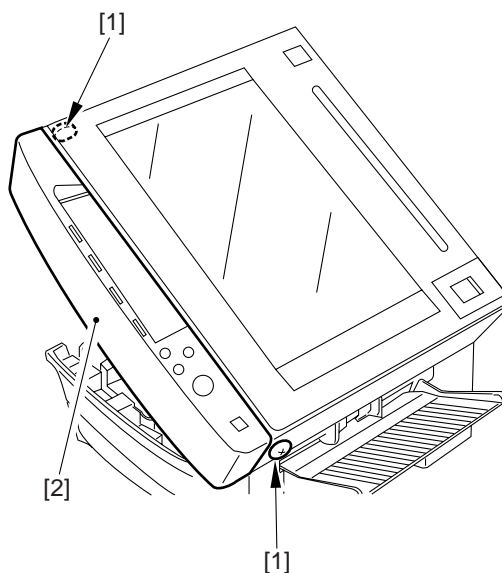


Figure 7-304

- 4) Free the two claws [3], and slide the left cover [4] to detach.

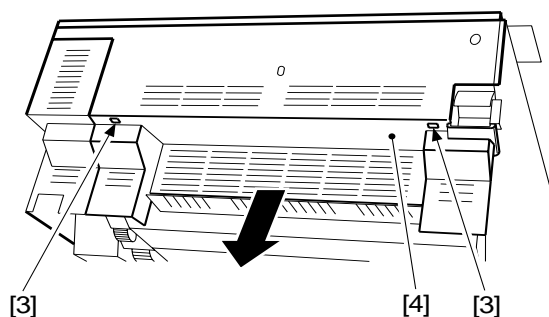


Figure 7-305

- 5) Remove the screw [5], and free the four claws [6]; then, detach the rear cover [7].

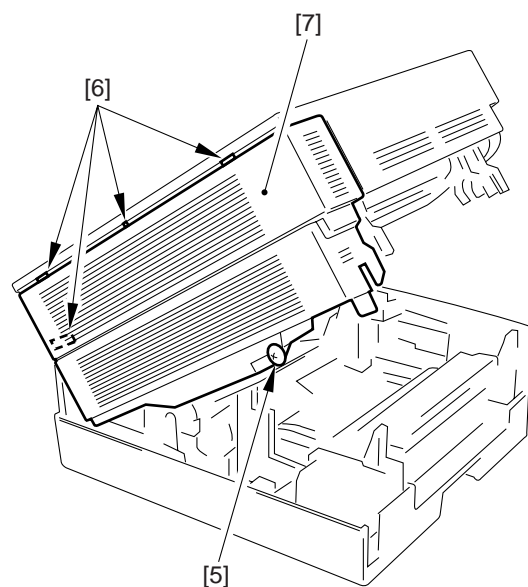


Figure 7-306

- 6) Remove the screw [8], and detach the copyboard cover foot retainer [9].

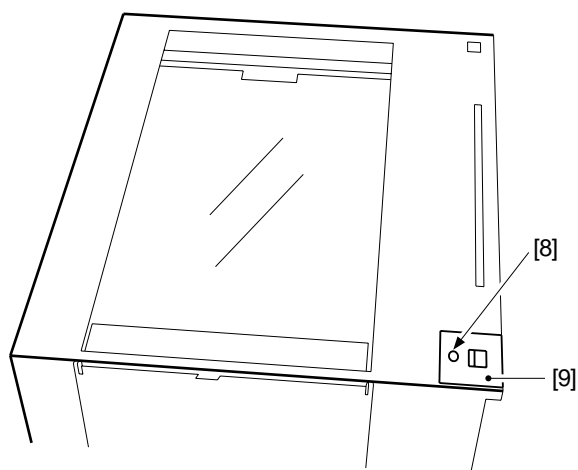


Figure 7-307

- 7) Free the two claw [10]; then lift the top cover [11] to detach.

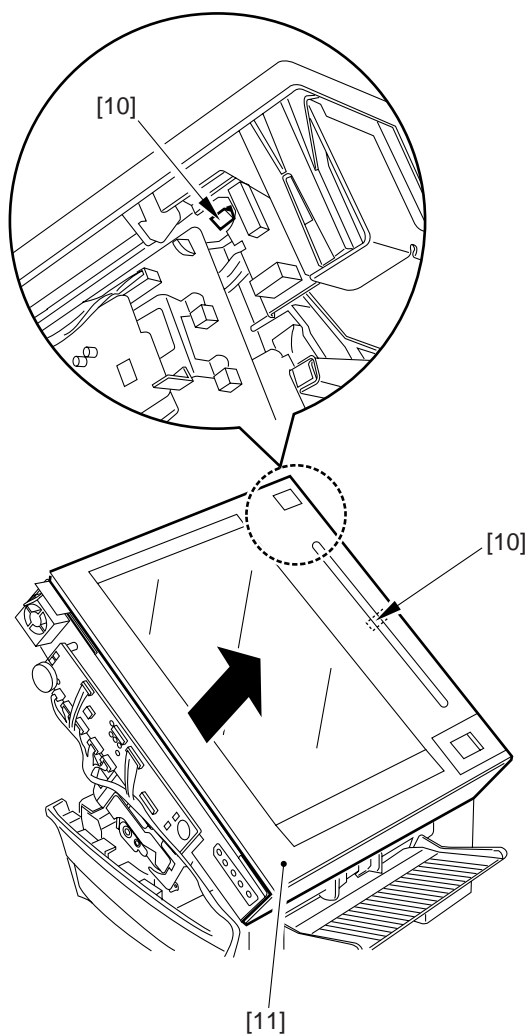


Figure 7-308

2. Removing the Front Lower Cover

- 1) Open the right door.
- 2) Remove the two screws [1], and detach the multifeeder unit [2] (or the single-feeder unit).

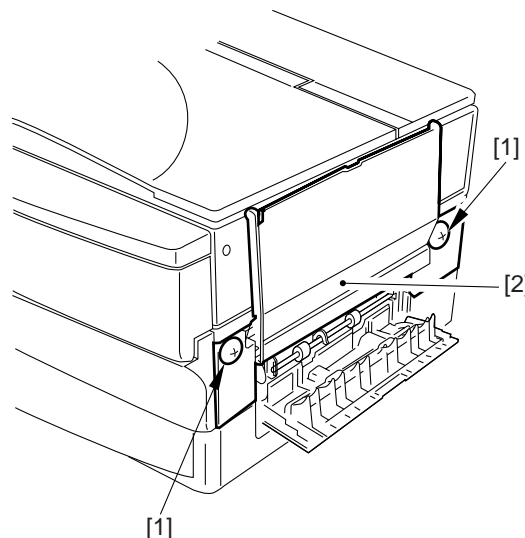


Figure 7-309

- 3) Open the machine's top unit.
- 4) Remove the two screws [3], and detach the front upper cover [4].

Caution:

A flexible cable for the control panel is connected to the front upper cover. Disconnect the cable from the DC controller.

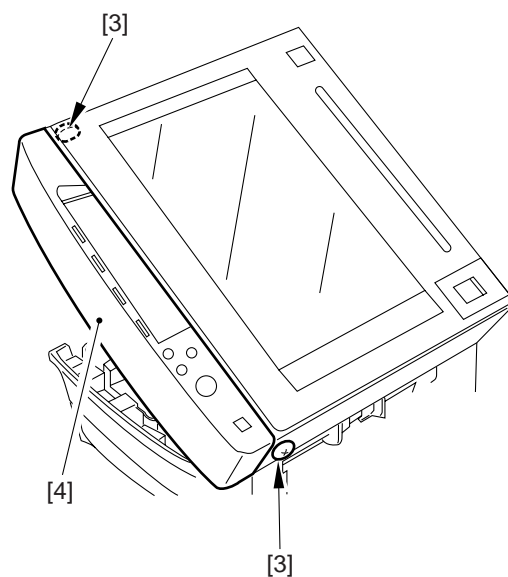


Figure 7-310

- 5) Remove the two screws [5] from the screw plate found at the bottom of the machine.

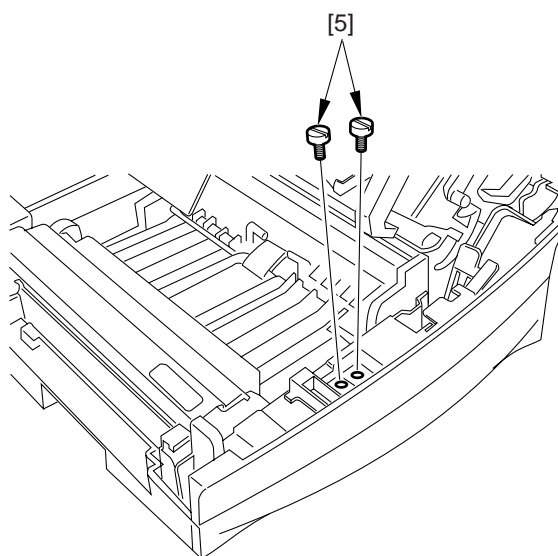


Figure 7-311

- 6) While freeing the five claws [6], detach the front lower cover [7].

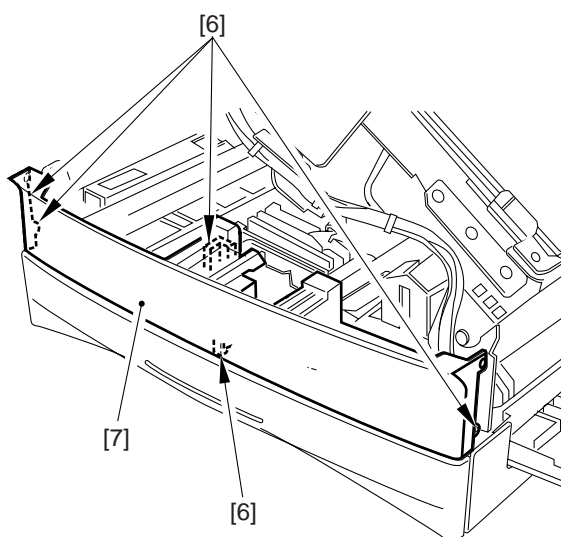


Figure 7-312

Caution:

When mounting the multifeder unit, be sure to perform the following first:

- 1) Turn on the power switch; then, select the multifeder as the source of paper, and press the Copy Start key.
- 2) When the pickup gear unit assembly has moved to its upper limit, turn off the power switch.
- 3) Mount the multifeder, and make one copy using it as the source of paper.

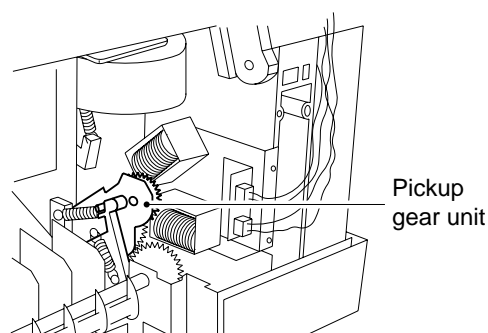


Figure 7-313

B. Control Panel

1. Removing the Control Panel

- 1) Open the machine's top unit.
- 2) Remove the two screws [1], and detach the front upper cover [2].

Caution:

A flexible cable for the control panel is connected to the front upper cover. Disconnect the cable from the DC controller.

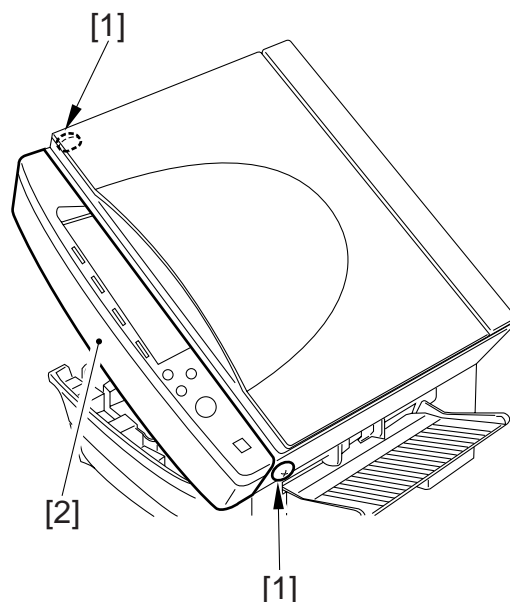


Figure 7-314

- 3) Free the claw [3], and remove the power supply switch assembly [4]. Move the copy density adjusting lever [5] to the farthest right, and free the four claws [6]; then, detach the control panel [7].

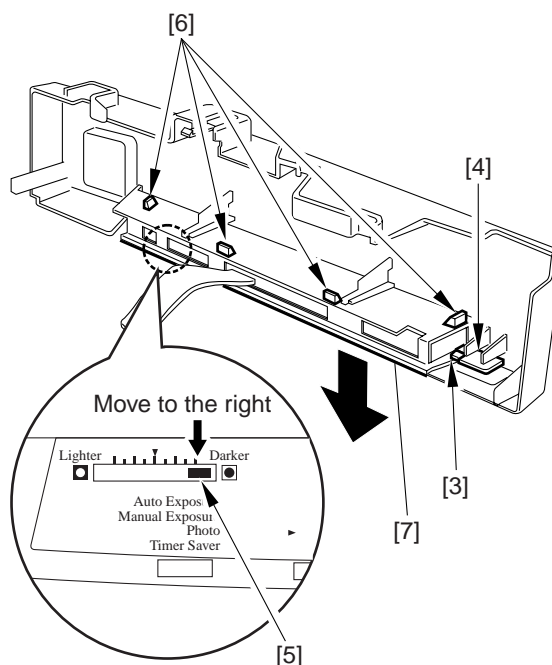


Figure 7-315

C. Copyboard Glass

1. Removing the Copyboard Glass

- 1) Remove the top cover. (See A.1. "Removing the Top Cover.")
- 2) Close the machine's top unit.
- 3) Remove the two screws [1], and detach the two support plates [2]; then, detach the copyboard glass [3].

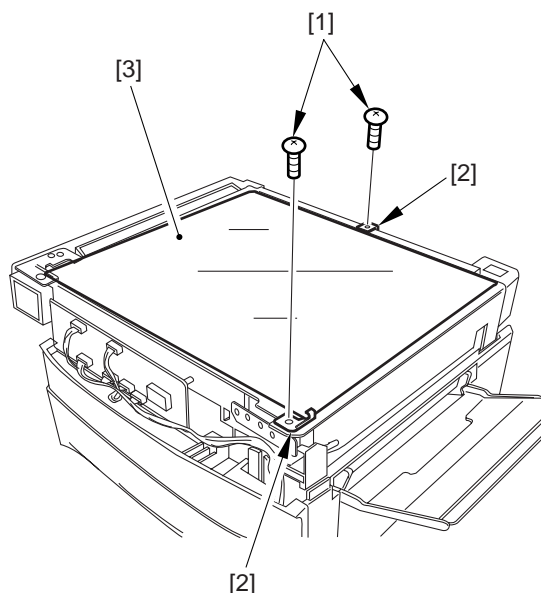


Figure 7-316

Note:

When mounting the copyboard glass, be sure that the grounding plate is on the side of its top edge. (ADF type only)

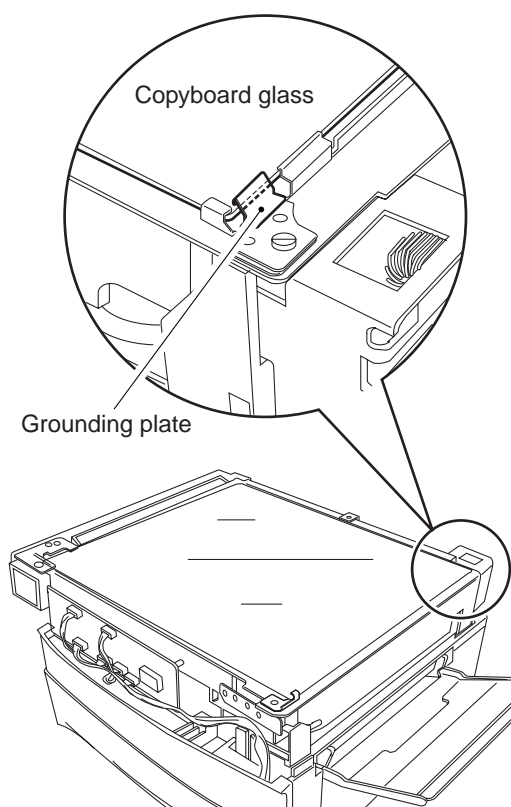


Figure 7-317

D. Main Motor/Main Drive Assembly

1. Removing the Main Motor Unit

- 1) Remove the drum cartridge.
- 2) Remove the composite power supply PCB.
(See E.2. "Removing the Composite Power Supply PCB.")
- 3) Remove the screw [1], and detach the high-voltage PCB [2].

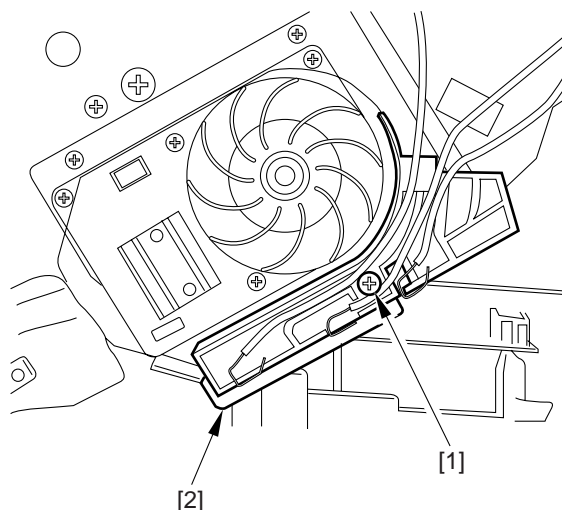


Figure 7-318

- 4) Remove the insulating sheet [3].

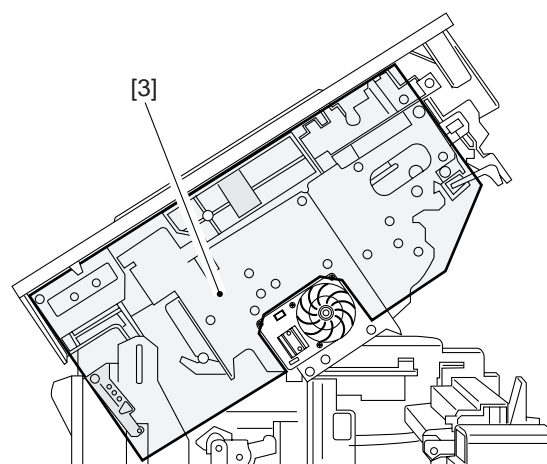


Figure 7-319

- 5) Detach the fan belt [4].

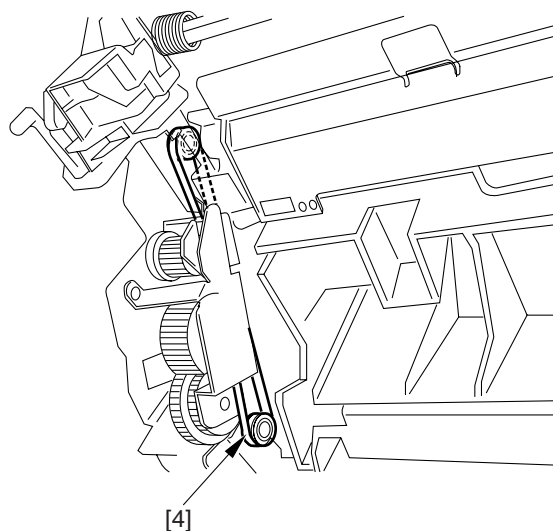


Figure 7-320

- 6) Remove the four screws [5], and detach the main motor unit [6].

Caution:

When installing the main motor unit, be sure to attach the fan belt.
After attaching the fan belt, make sure that the belt is free of twists.

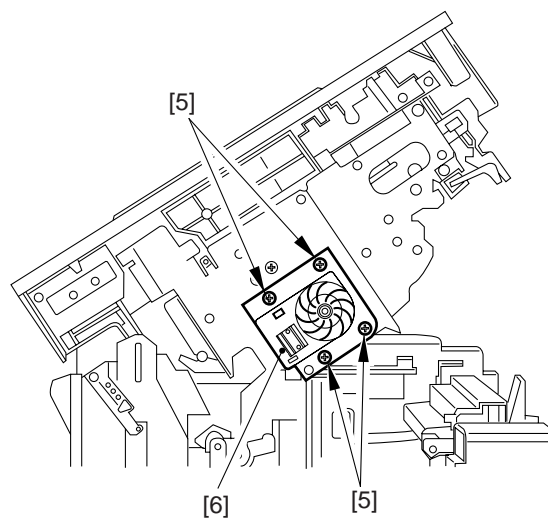


Figure 7-321

2. Removing the Main Drive Assembly

- 1) Remove the drum cartridge.
- 2) Remove the composite power supply PCB.
(See E.2. "Removing the Composite Power Supply PCB.")
- 3) Remove the screw [1], and detach the high-voltage PCB [2].

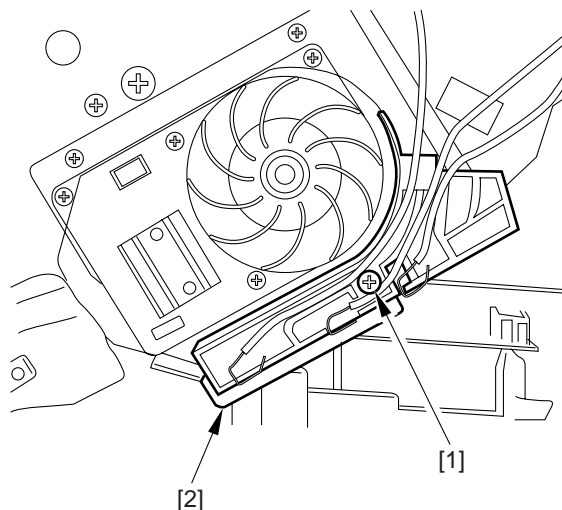


Figure 7-322

- 4) Remove the insulating sheet [3].

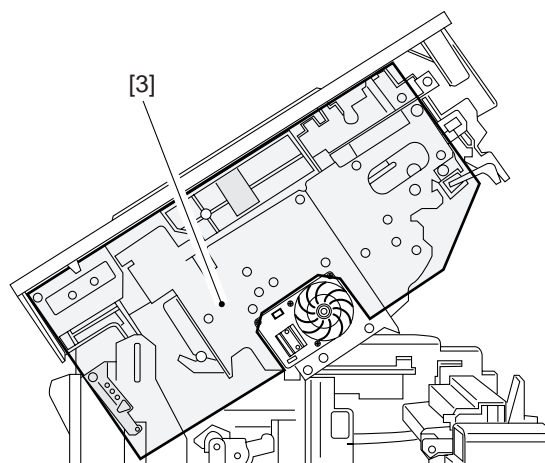


Figure 7-323

- 5) Detach the fan belt [4].

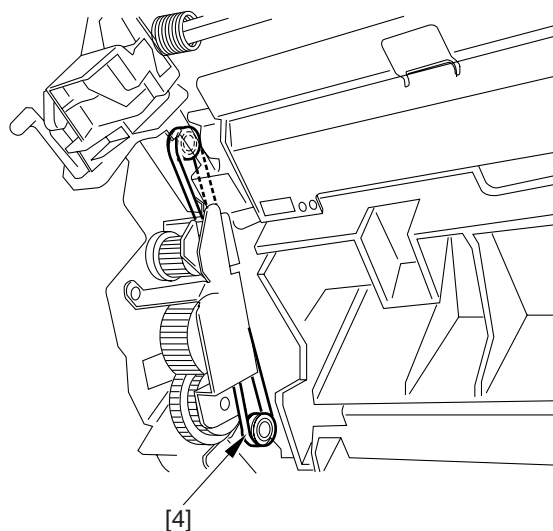


Figure 7-324

- 6) Remove the five screws [5], and detach the main drive assembly [6].

Caution:

When installing the main drive assembly, be sure to attach the fan belt. After attaching the fan belt, make sure that the belt is free of twists.

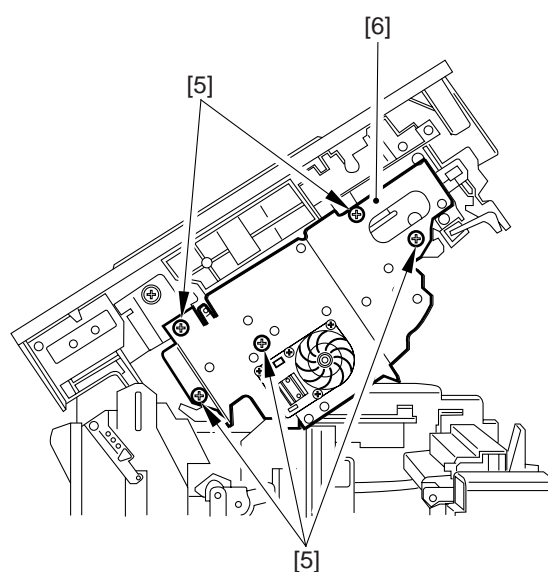


Figure 7-325

E. Electrical System

1. Removing the DC Controller PCB

- 1) Open the machine's top unit.
- 2) Remove the screw [1], and detach the front upper cover [2].

Caution:

A flexible cable for the control panel is connected to the front upper cover. Disconnect the cable from the DC controller.

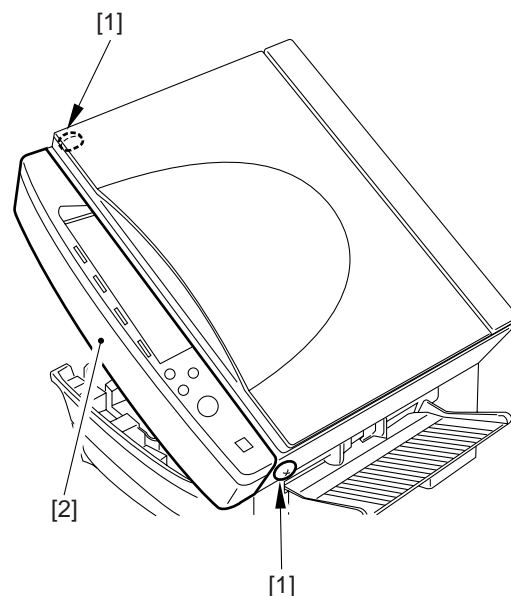


Figure 7-326

- 3) Disconnect all connectors from the DC controller PCB, remove the screw [3], and free the six claws [4]; then, detach the DC controller PCB [5].

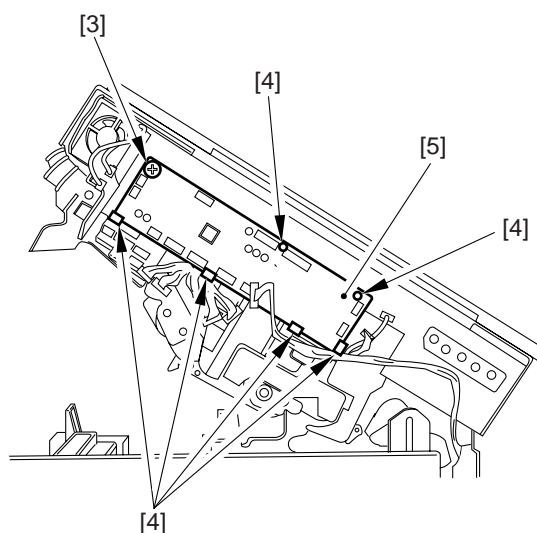


Figure 7-327

2. Removing the Composite Power Supply PCB

- 1) Remove the copyboard cover or the ADF.
- 2) Remove the left cover and the rear cover.
- 3) Remove the screw [1], and remove the copyboard cover foot retainer [2].

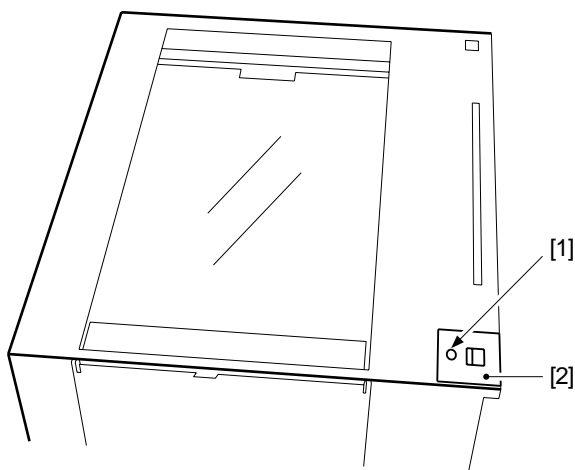


Figure 7-328

- 4) Disconnect the ten connectors [3] from the composite power supply PCB, and disconnect the connector [4] from the main motor assembly.

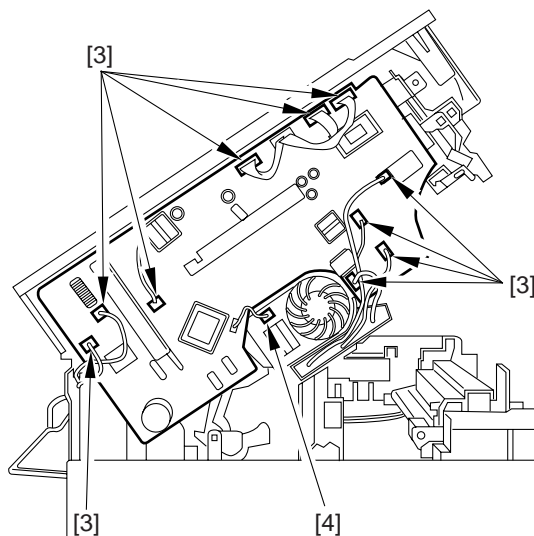


Figure 7-329

- 5) Remove the seven screws [5], and free the five claws [6]; then, detach the composite power supply PCB [7].

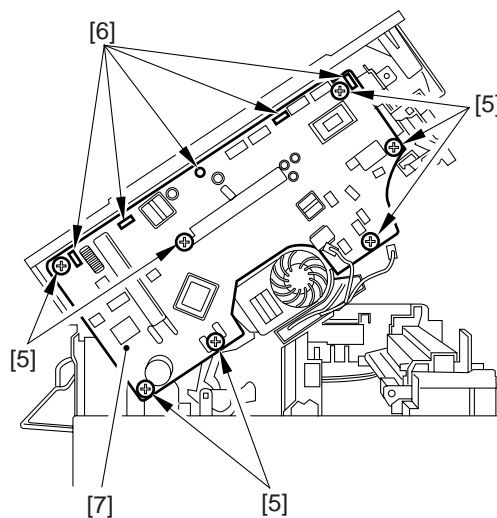


Figure 7-330

3. Points to Note When Handling the Composite Power Supply PCB

- 1) Some capacitors on the composite power supply hold charges when the machine's power supply is off.
Take extra care never to short the terminals of the capacitor whenever you have removed the composite power supply PCB.
- 2) When handling the PCB, hold its heat radiating plate (at the center) or its both edges. In particular, keep in mind that holding the area indicated by “⊘” can cause deformation or cracking of the board.

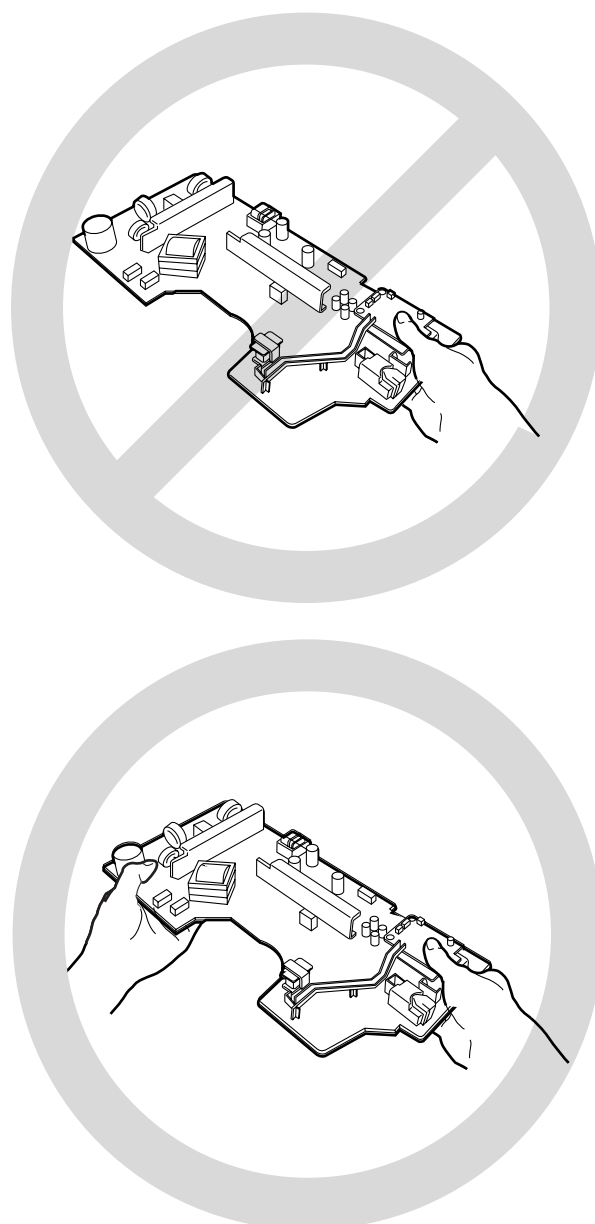


Figure 7-331

CHAPTER 8

ADF

I.	ADF	8-1	H.	Controlling the Belt Motor ..	8-15
A.	Outline	8-1	I.	Detecting Original Jams	8-16
B.	Basic Construction	8-2	J.	Power Supply	8-17
C.	Basic Operations	8-4	II.	DISASSEMBLY/ASSEMBLY	8-18
D.	Detecting an Original	8-6	A.	Removing the ADF	8-19
E.	Pickup Operation	8-8	B.	External Covers	8-21
F.	Delivery	8-12	C.	Drive System	8-23
G.	Controlling the Pickup Motor	8-14	D.	Feeding System	8-26
			E.	Electrical System	8-33

I. ADF

A. Outline

The ADF picks up the originals stacked on the original tray starting with the topmost original, moves them through the copyboard, and delivers them.

See Figure 8-101 for an outline of the feeding route.

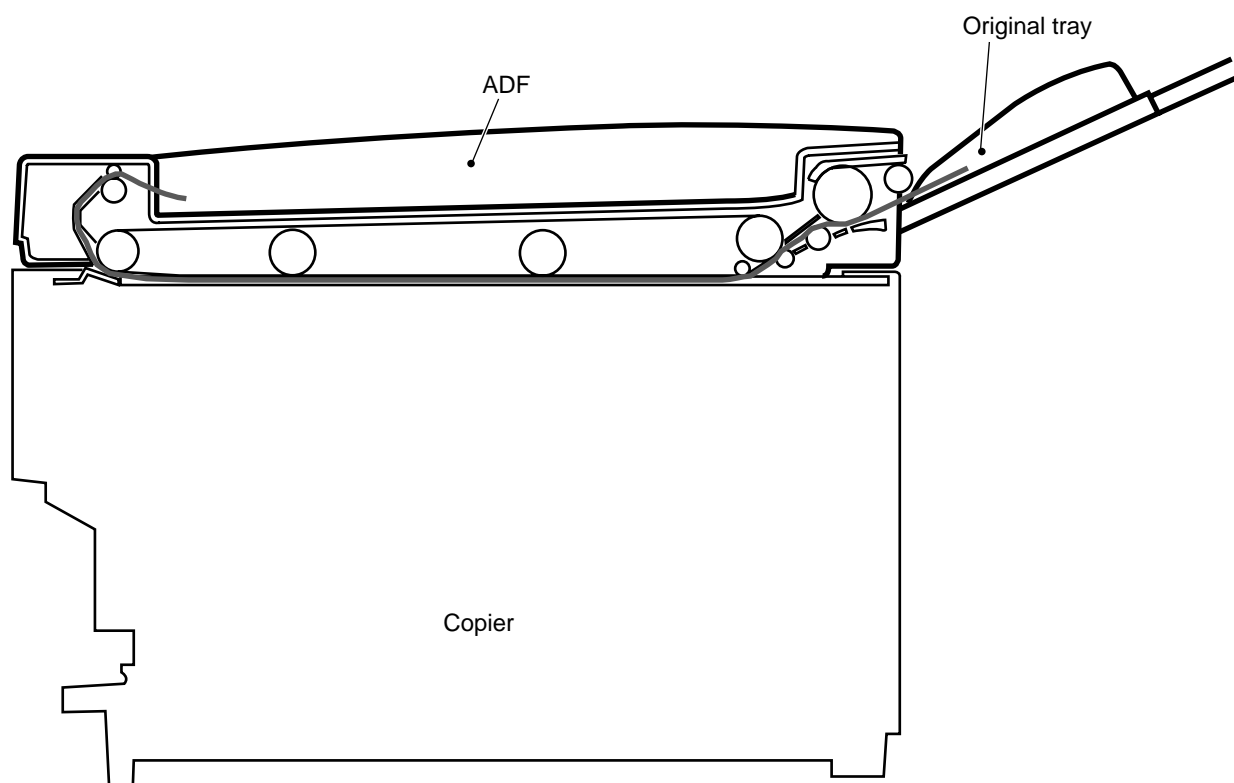


Figure 8-101

B Basic Construction

1. Outline of the Electric Circuitry

The ADF's major electrical mechanisms are controlled by the CPU on the ADF controller PCB.

The CPU on the ADF controller PCB reads the signals from the sensors and the copier and generates signals to drive the motor at such times as programmed in advance.

The copying modes selected on the copier are communicated to the ADF in serial, and the ADF communicates to the copier the state of feeding originals to the copier in serial. (It does not use an IC for communications.)

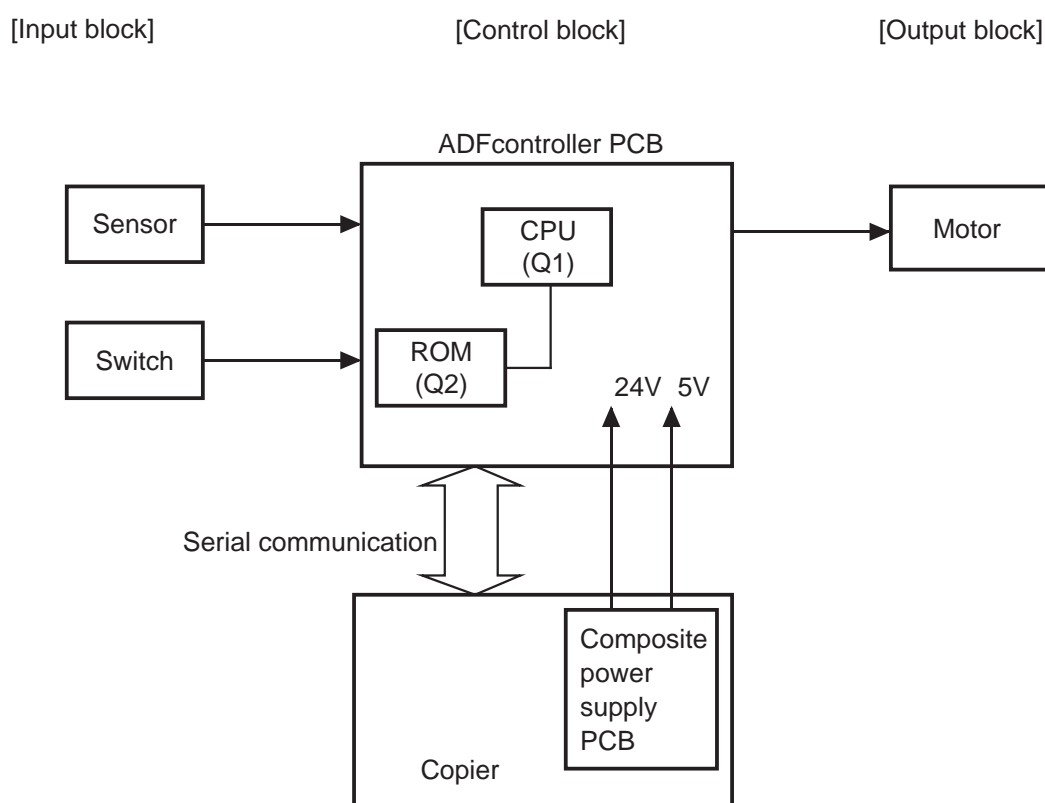


Figure 8-102

2. Inputs to and Outputs from the ADF Controller PCB

a. Inputs to and Outputs from the ADF Controller PCB (1/1)

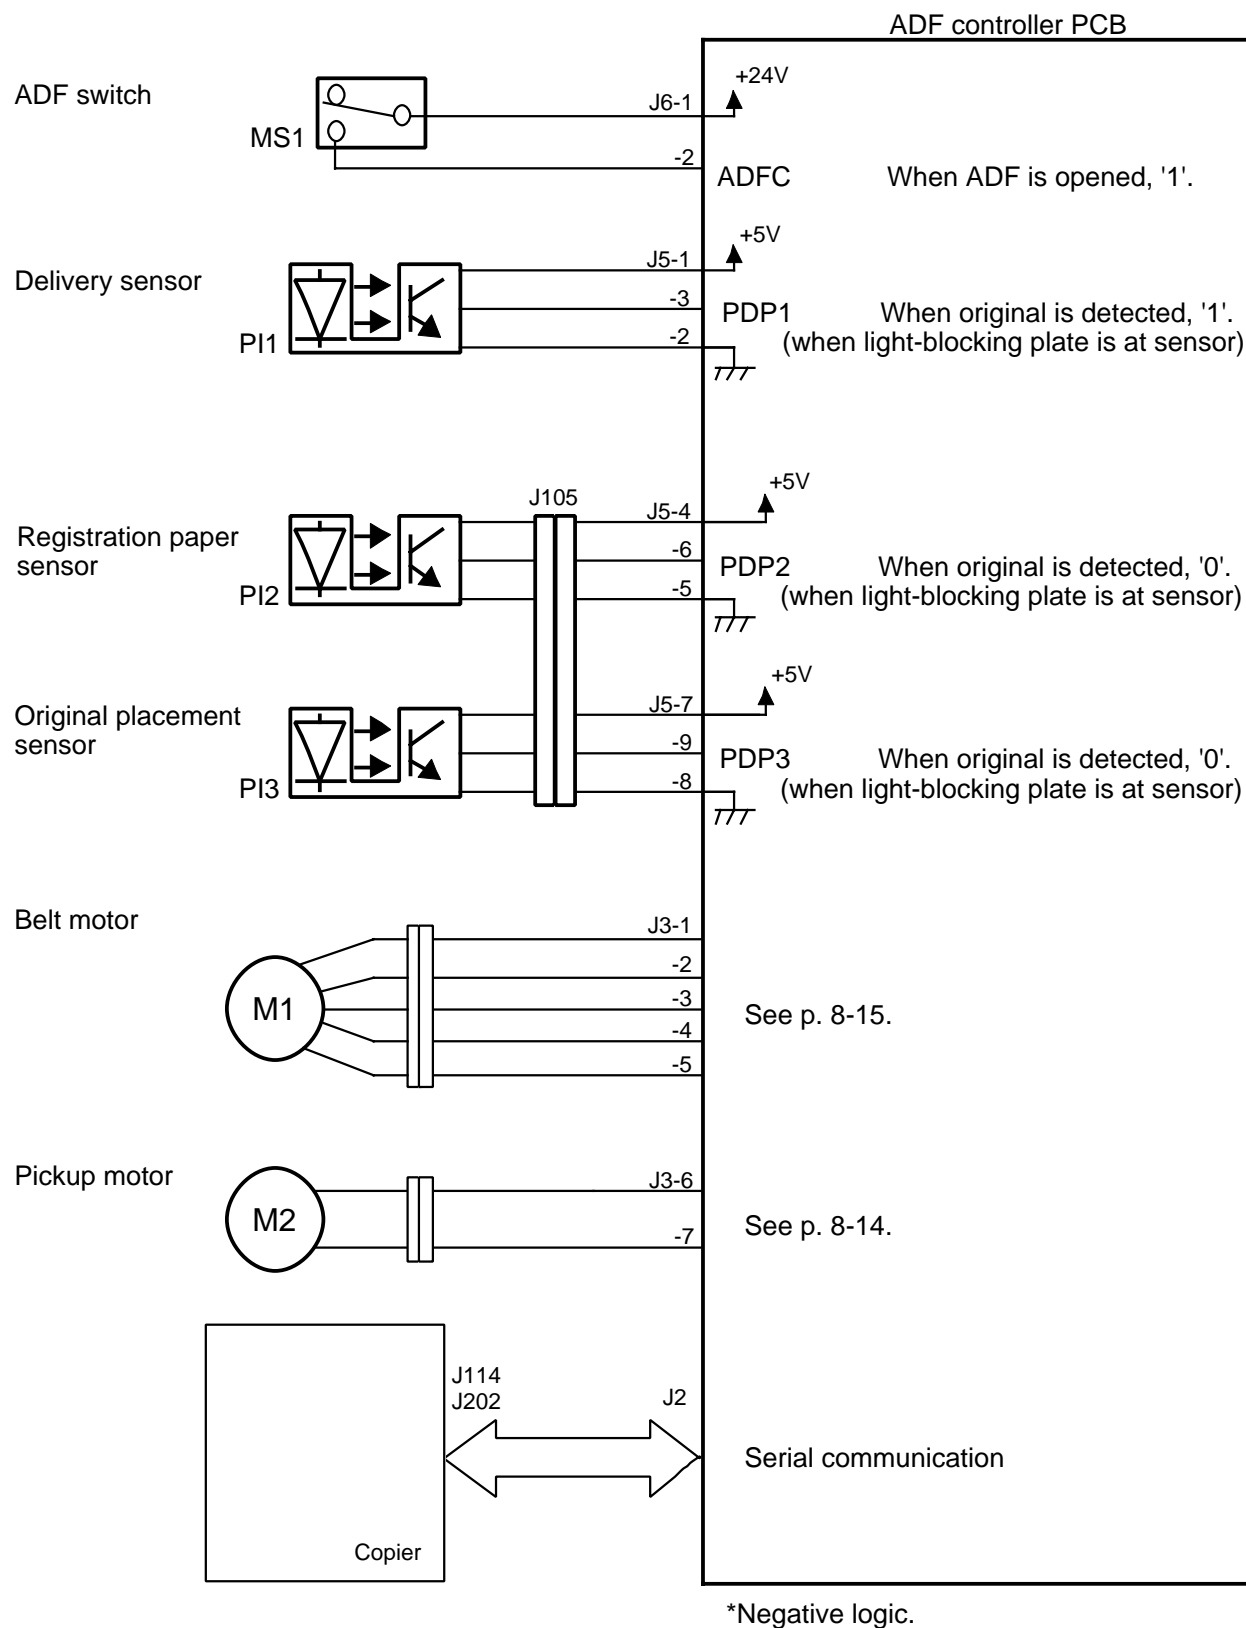


Figure 8-103

C. Basic Operations

1. Outline

The ADF uses two motors for picking up and delivering originals. The pickup motor (M2) is used to pick up originals, and the belt motor (M1) is used to move, stop, and deliver originals.

Further, the ADF is equipped with three sensors for monitoring the movement of originals.

The ADF is designed to accommodate one-sided original copying mode only.

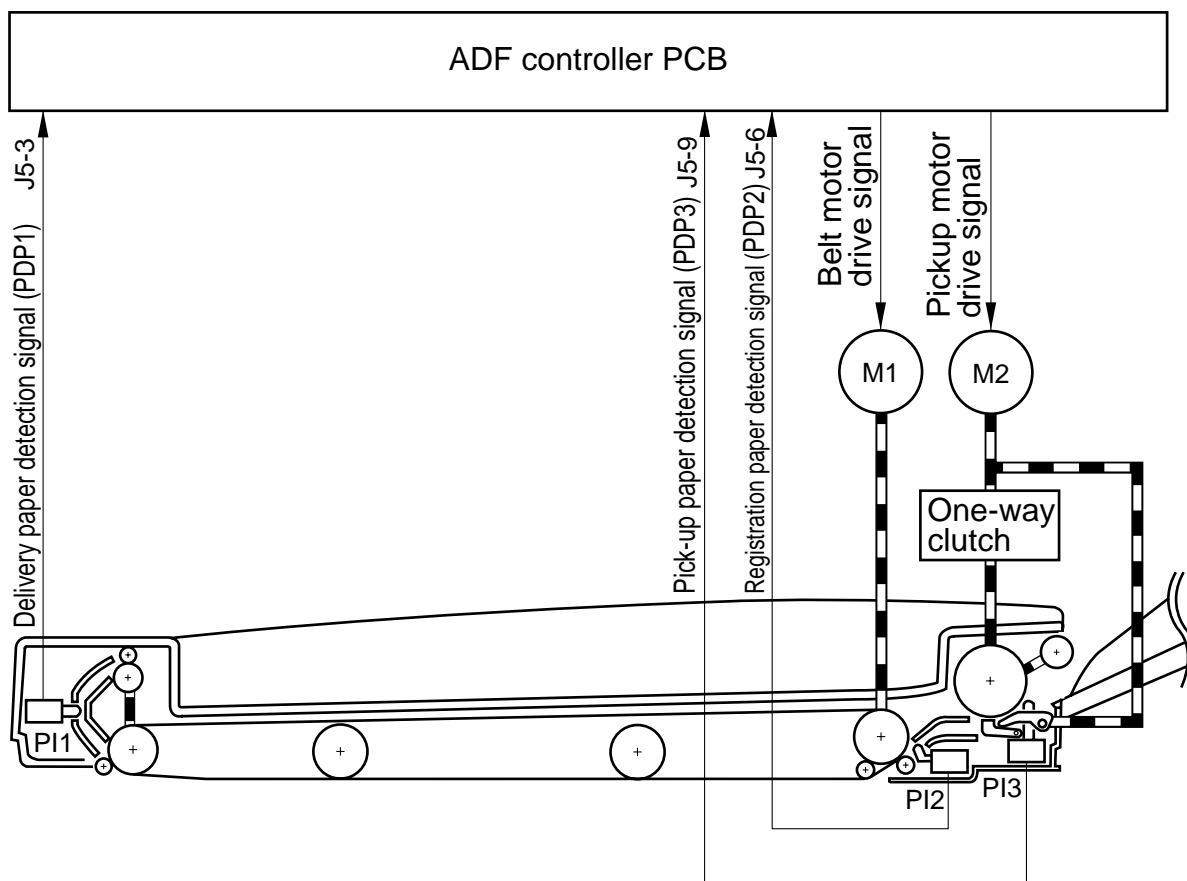


Figure 8-104

2. One-Sided Original Mode

The ADF picks up originals stacked on the original tray starting with the topmost original; after it picks up an original, it places it on the copyboard glass for copying, moves it away from the copyboard glass, and delivers it to the copyboard glass.

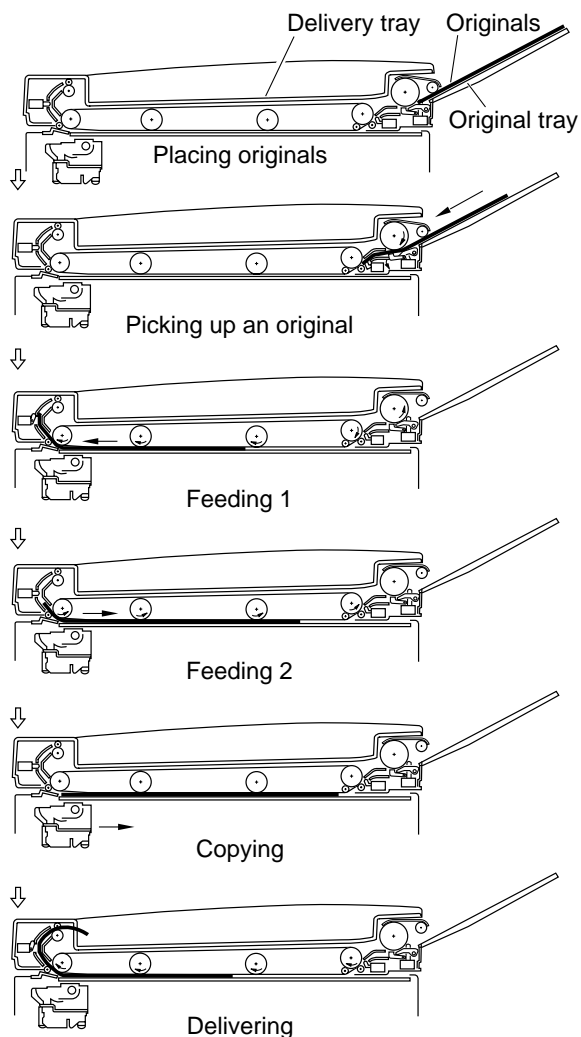


Figure 8-105

D. Detecting an Original

1. Outline

The ADF's original detection mechanism has the following two functions:

1. Detecting the Presence/Absence of an Original
Checks whether there is an original on the original tray.
2. Identifying the Length of the Original
Checks the length of the original placed on the original tray.
3. Detecting the Presence/Absence of an Original

The original placement sensor (PI3) is used to check the presence/absence of an original.

When an original is placed on the original tray, the original placement sensor (PI3) sends the original detection signal (PDP3) to the ADF controller PCB in response to the movement of the detecting lever away from the sensor.

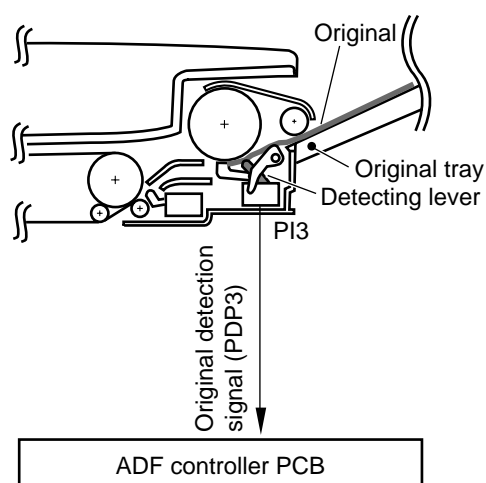


Figure 8-106

2. Identifying the Length of the Original

The registration paper sensor (PI2) is used to identify the length of the original, if any.

The ADF controller computes the length of the original based on the time it takes for the original to move past the registration paper sensor (PI2).

Using the result of the computation, the ADF controller determines whether the size of the original is A4/LTR or smaller or LGL, thereby switching to the appropriate ADF operation.

Table 8-101 shows the lengths of originals that determines ADF operation sequence.

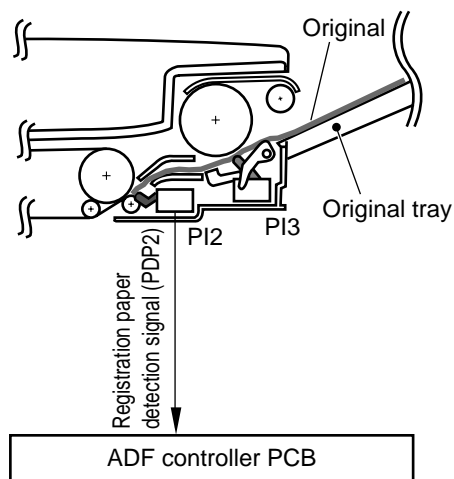


Figure 8-107

Original Lengths and Operation Sequences

Length	Sequence
~313cm	For A4/LTR originals
314cm~	For LGL originals

Table 8-101

E. Pickup Operation

1. Operation

When an original is placed on the original tray and the Copy Start key is pressed, the following sequence of operations takes place:

1 Preparing for Pickup Operation

When an original is placed on the original tray, i.e., the original placement sensor (PI3) turns ON, the pickup roller rotates counterclockwise and the paper guide holds the original in place.

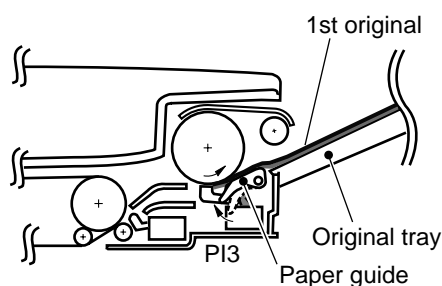


Figure 8-108

2 Pickup Separation

When the Copy Start key is pressed, the pickup roller 1 and 2 rotate clockwise, and pick up the first original (topmost) and forward it as far as the registration roller. (The separation pad ensures that only one original is picked up.)

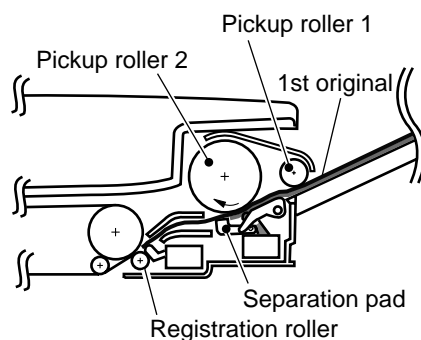


Figure 8-109

3 Arching

The first original is butted against the registration roller so that it arches.

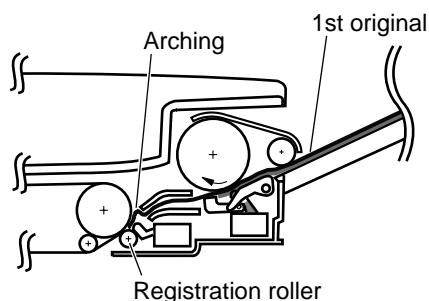


Figure 8-110

4 Feeding Operation 1

The feeding belt is moved so that the leading edge of the first original comes into contact with the delivery sensor (PI1). (In the case of a LGL original, the original is moved about 15 mm farther after it has come into contact with the delivery sensor.)

At the same time, the pickup motor (M2) is rotated counterclockwise to prepare for picking up the second original.

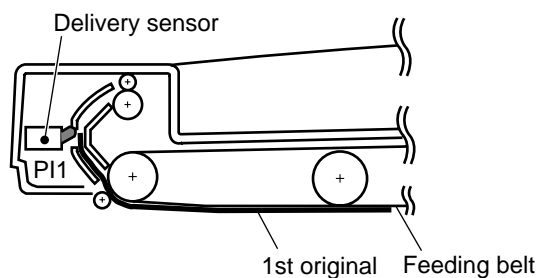


Figure 8-111

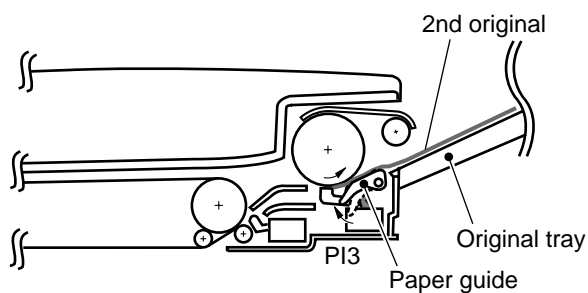


Figure 8-112

5 Feeding 2

The feeding belt is moved counterclockwise so that the first original is stopped at a specific location on the copyboard glass.

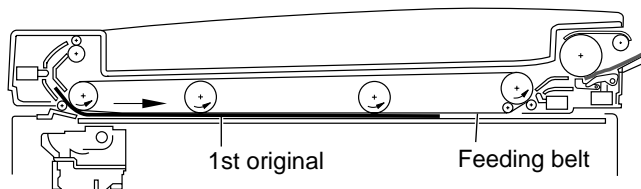


Figure 8-113

6 Moving the Scanner and Picking Up the Second Original

The scanner starts to move forward after the original has been stopped at a specific location on the copyboard glass.

If the original is A4/LTR or smaller, the pickup motor (M2) is also rotated clockwise to pickup the second original and butt it against the registration roller.

If the original is LGL, the second original is picked up after the scanner has been moved forward.

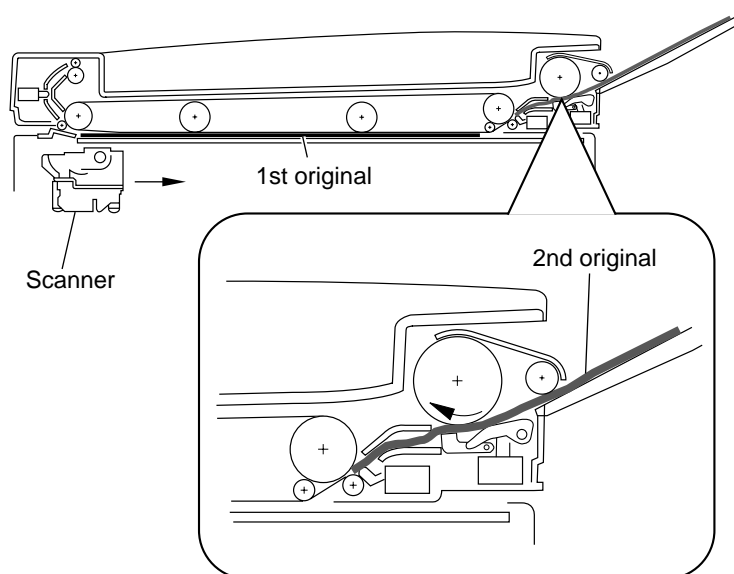


Figure 8-114

2. Sequence of Pickup Operations (A4/LTR, 2 originals)

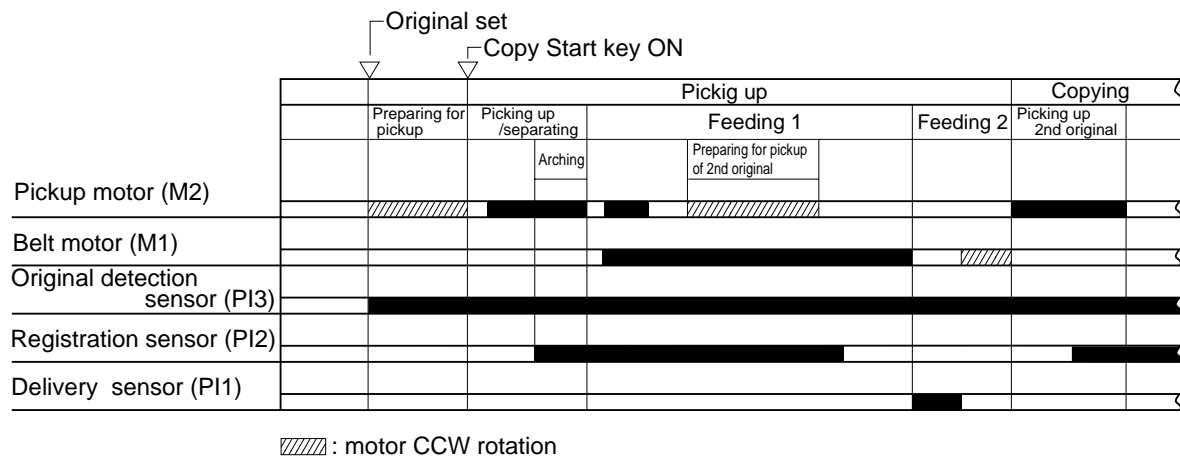


Figure 8-115

3. Sequence of Operations (LGL, 2 originals)

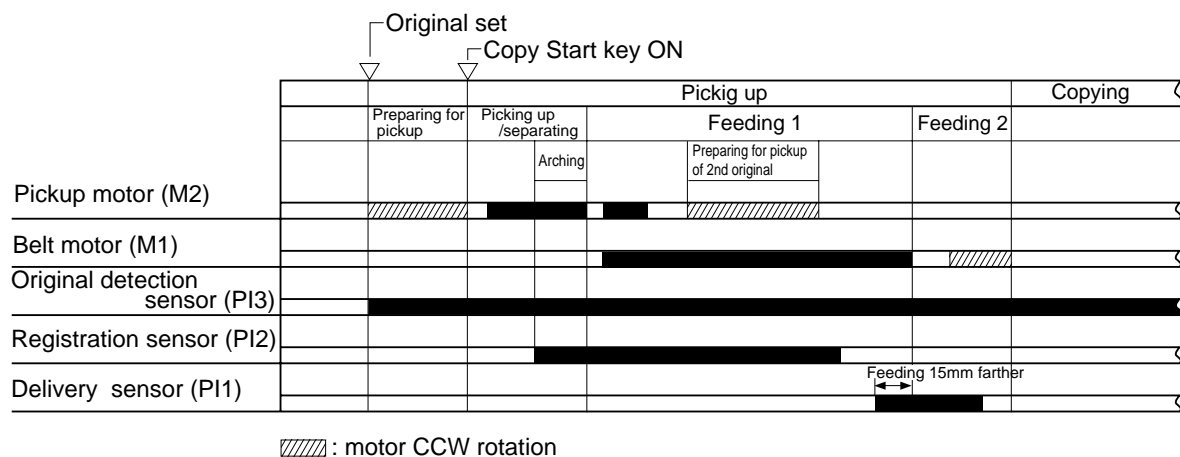


Figure 8-116

F. Delivery

1. Operations

The ADF operates as follows to deliver originals from the copyboard glass:

1 Delivery Feeding

The feeding belt is moved to feed and deliver the first original on the copyboard glass. At the same time, the pickup motor (M2) moves the second original to the copyboard glass.

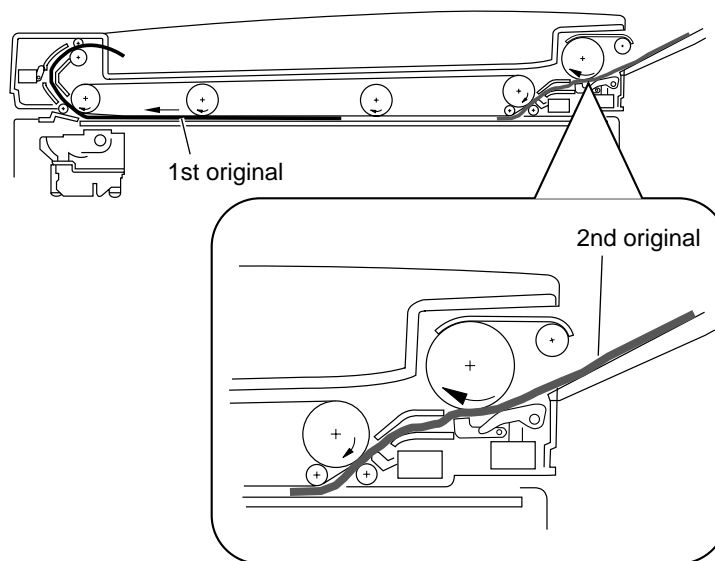


Figure 8-117

2 Delivering to the Delivery Tray

The ADF switches the belt motor to low speed as soon as the trailing edge of the original moves past the delivery sensor (PI1), thereby delivering the original slowly.

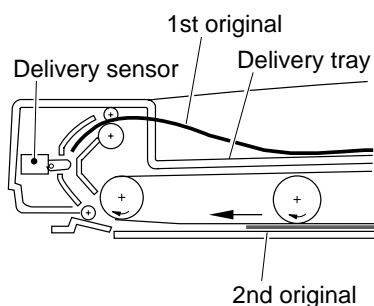


Figure 8-118

2. Sequence of Operations (A4/LTR, 2 originals)

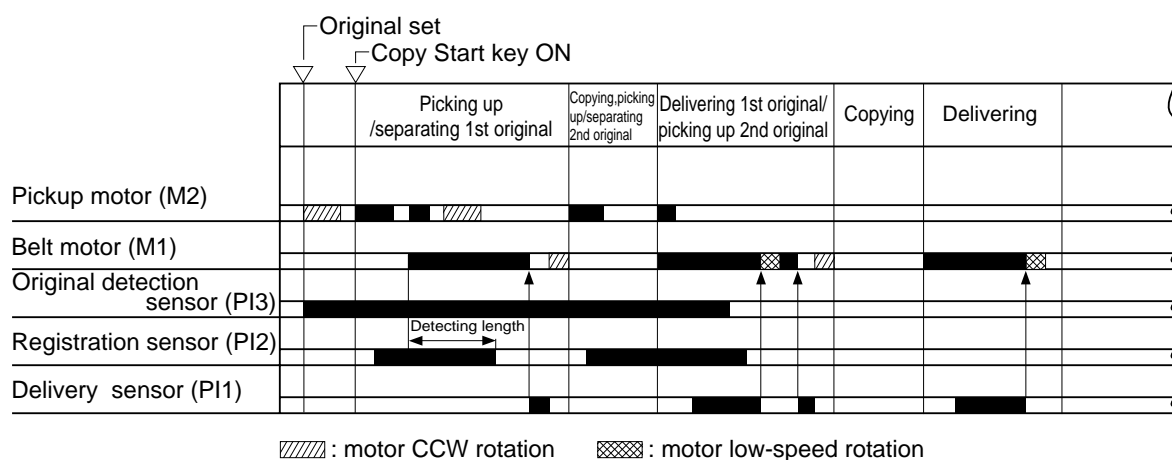


Figure 8-119

3. Sequence of Operations (LGL, 2 originals)

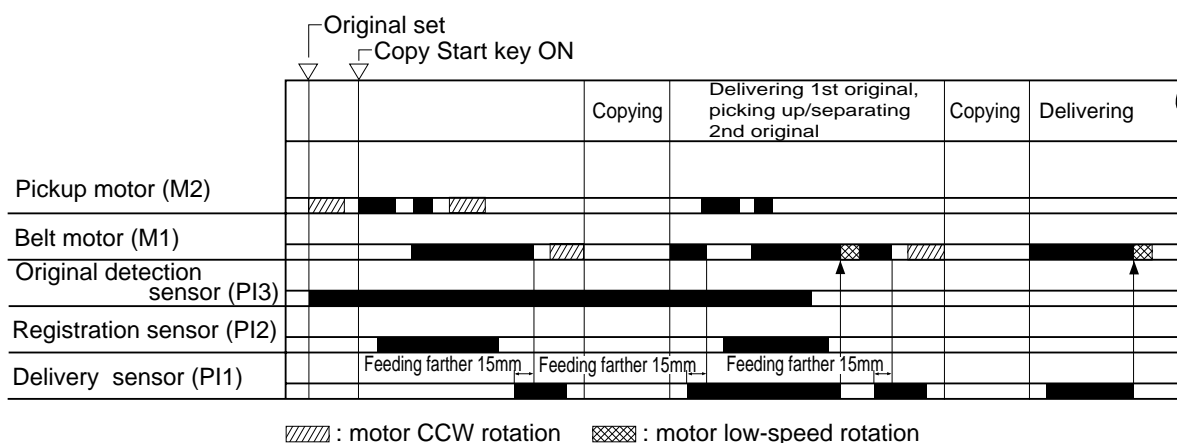


Figure 8-120

G. Controlling the Pickup Motor

1. Outline

Figure 8-121 is a diagram of the control circuit for the pickup motor (M2).

The pickup motor is a DC motor.

The CPU (Q1) on the ADF controller PCB sends the motor drive signals PM0 and PM1 to the motor driver (Q5). The pickup motor rotates clockwise or counterclockwise according to the combinations of the states of these two signals. (Table 8-102 shows how the pickup motor rotates for each combination.)

The motor driver is equipped with a limiter function, preventing overcurrent from flowing into the motor. When an overcurrent occurs, the limiter function cuts off the motor drive current, thereby preventing damage to the motor.

When the limiter function is activated, the pickup motor cannot rotate as controlled, possibly leading to pickup faults. Any pickup fault causes the ADF controller to flash the JAM indicator on the copier and stop the pickup motor at the same time.

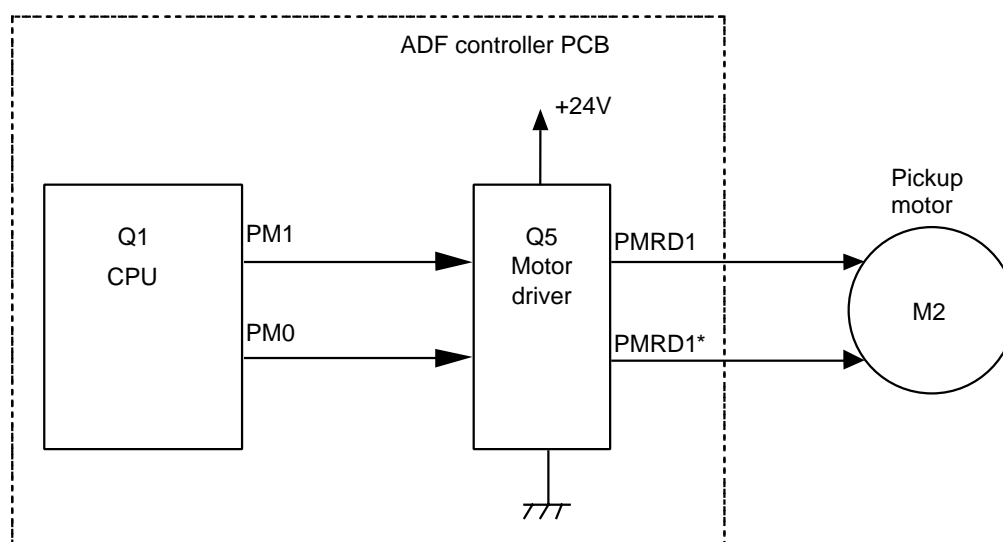


Figure 8-121

Motor drive signal (PM0)	Motor drive signal (PM1)	Pickup roller rotation
'1'	'1'	Braked
'1'	'0'	Picking up
'0'	'1'	Delivering
'0'	'0'	At reset (free)

Table 8-102

H. Controlling the Belt Motor

1. Outline

Figure 8-122 is a diagram showing the control circuit for the belt motor (M2).

The belt motor is a 4-phase control stepping motor.

The CPU (Q1) on the ADF controller PCB sends control pulse signals (A, A*, B, B*) to the motor driver (Q4).

In response, the motor driver changes the output timing of the pulse signals (MA, MA*, MB, MB*) used for driving the motor to rotate the belt motor clockwise or counterclockwise.

The motor driver is equipped with a limiter function used to keep the motor supplied with a specific current so that current greater than specified will not flow.

If loads large enough to activate the limiter function occur in succession, the belt motor cannot rotate as specified, possibly leading to feeding faults. Any feeding fault will cause the ADF controller to flash the Jam indicator on the controller and stop the belt motor at the same time.

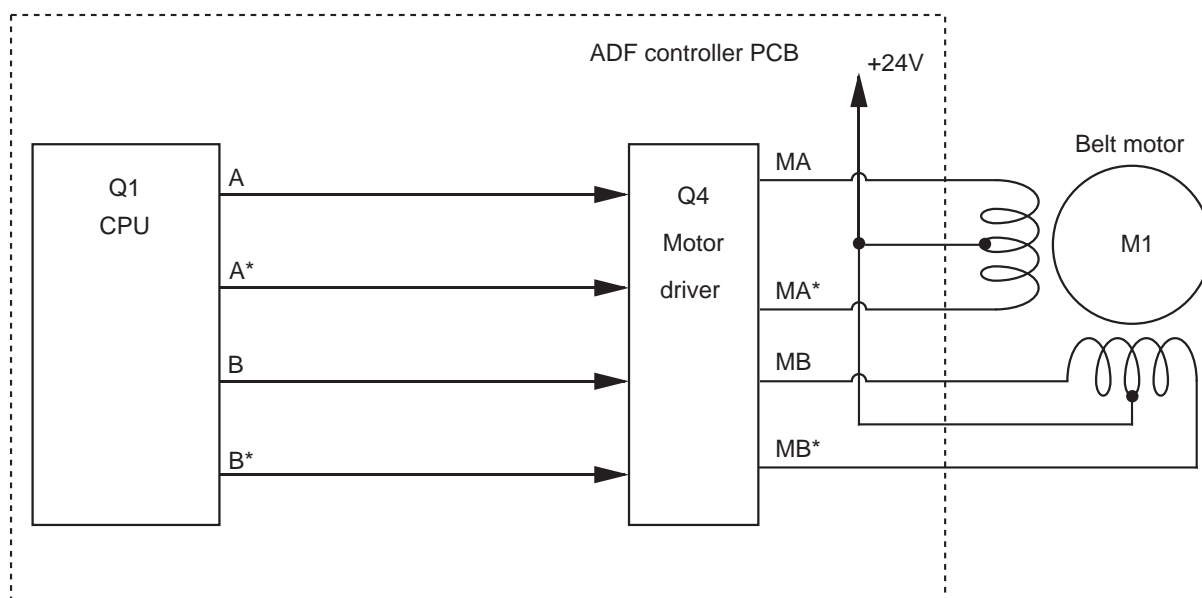


Figure 8-122

I. Detecting Original Jams

The ADF is equipped with three jam sensors (PI1 through PI3) as indicated in Figure 8-123 to monitor the movement of originals.

The movement of originals are checked at such times as programmed in the CPU on the ADF controller PCB; a jam is identified in relation to the presence of an original at each sensor.

Table 8-103 describes the type of jam, condition of detection, and sensors involved.

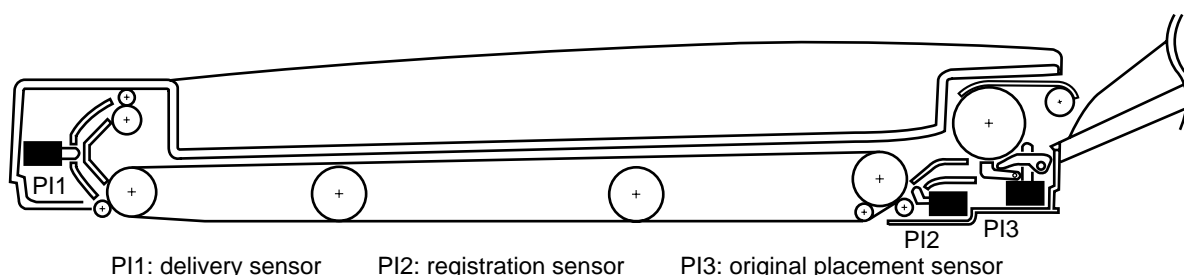


Figure 8-123

Type of Original Jam and Condition of Detection

Operation	Type of jam	Sensor	Conditions
Pickup	Residual original	PI1,PI2	When the 1st original is separated, the delivery sensor (PI1) turns on while the belt motor rotates for 300 ms or less or before the registration sensor (PI2) turns on. When the 1st original is picked up, the registration sensor (PI2) and the delivery sensor (PI1) turn on.
	Original present at start	PI1,PI2	When separation starts, the registration sensor (PI2) or the delivery sensor (PI1) are on.
	Separation delay	PI2	When separation starts, the registration sensor (PI2) does not turn on after 2 sec.
	Pick-up delay	PI2	When pickup starts, the registration sensor (PI2) does not turn off after feeding the original for about 500 mm.
Delivery	ADF open	MS1	The ADF is opened while in operation.
	Delivery delay jam	PI1,PI2	When delivery starts, the delivery sensor (PI1) does not detect an original that has been fed about 100 mm. After the registration sensor (PI2) has turned off, the delivery sensor (PI1) does not detect an original that has been fed for about 500 mm.
	Delivery stationary jam	PI1	During pickup, the delivery sensor (PI1) remains on even when the original is fed for 'length + about 60 mm'.

Table 8-103

J. Power Supply

1. Outline

Figure 8-124 shows the routes of power supply.

The ADF is supplied by the copier with 5 V and 24 V. The 24V supply is cut off when the ADF is opened, i.e., when the ADF switch (MS1) turns off. The 5V supply will continue to keep each sensor powered even when the ADF is opened.

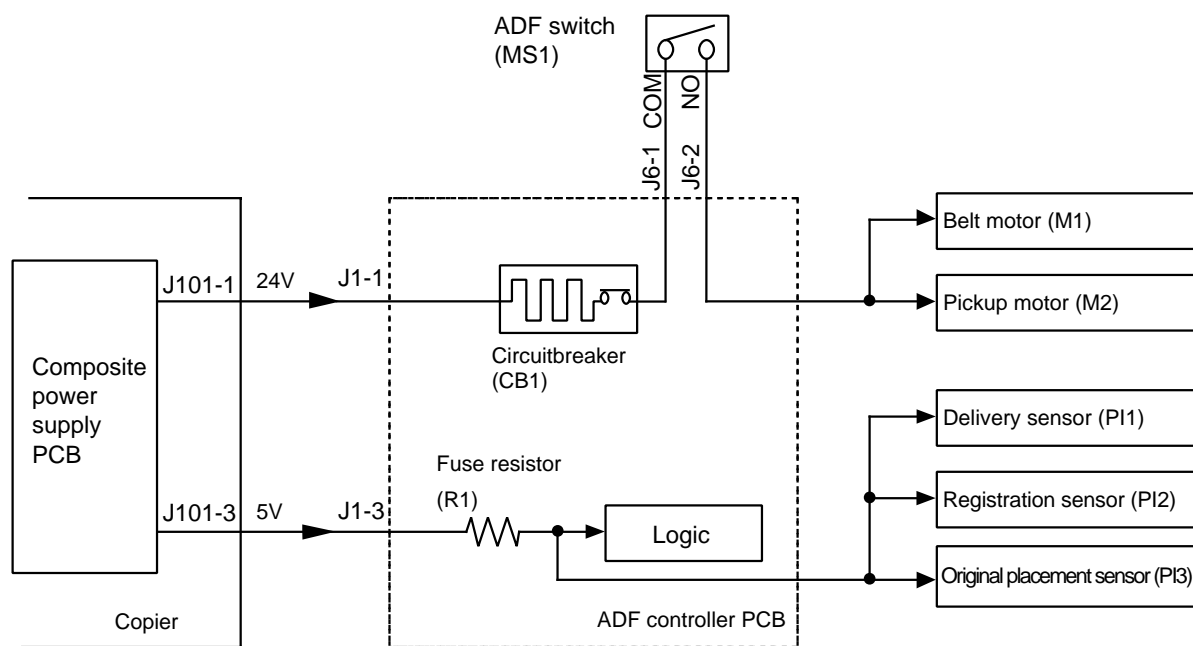


Figure 8-124

II. DISASSEMBLY/ASSEMBLY

As needed, disassemble/assemble the machine with the following in mind:

1. **▲** Before starting the work, turn off the power switch and disconnect the power plug for safety.
2. Unless otherwise instructed, assemble the parts by reversing the steps used to disassemble it.
3. Identify the screws by type (length, diameter) and location.
4. Use the washers where necessary. (The screws used to mount the grounding wire and Varistors come with a washer to ensure electrical continuity.)
5. As necessary, cut the harness band.
6. As a rule, do not operate the machine with any of its part removed.
7. A few of the screws used are special screws (with wider thread intervals). Do not use any screws indiscriminately.

A. Removing the ADF

- 1) Open the machine's top unit.
- 2) Free the two claws [1], and slide the left cover [2] to detach.

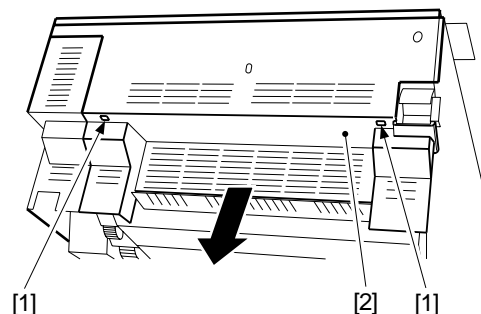


Figure 8-201

- 3) Remove the screw [3], and free the four claws [4]; then, detach the rear cover [5].

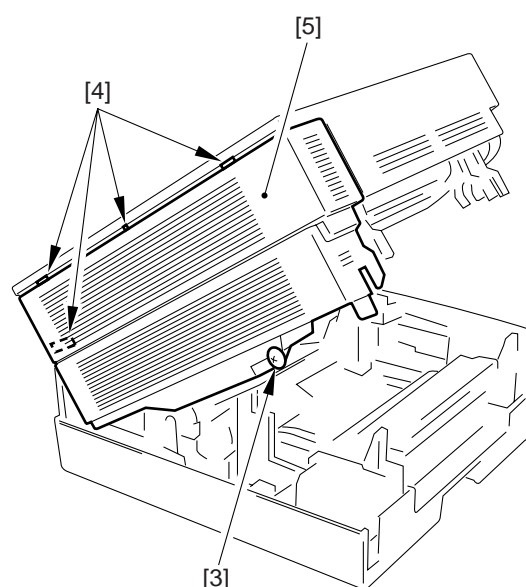


Figure 8-202

- 4) Close the machine's top unit.
- 5) Remove the two screws [6], and remove the fixing plate [7].

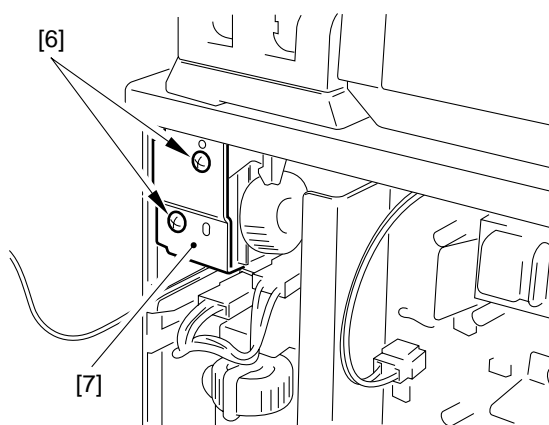


Figure 8-203

- 6) Disconnect the two connectors [8], and remove the screw [9]; then, remove the cable bush [10].

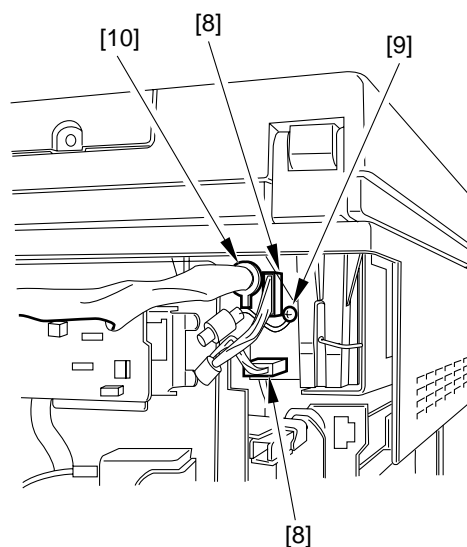


Figure 8-204

- 7) Remove the two lockpin [11], and remove the ADF from the copier.

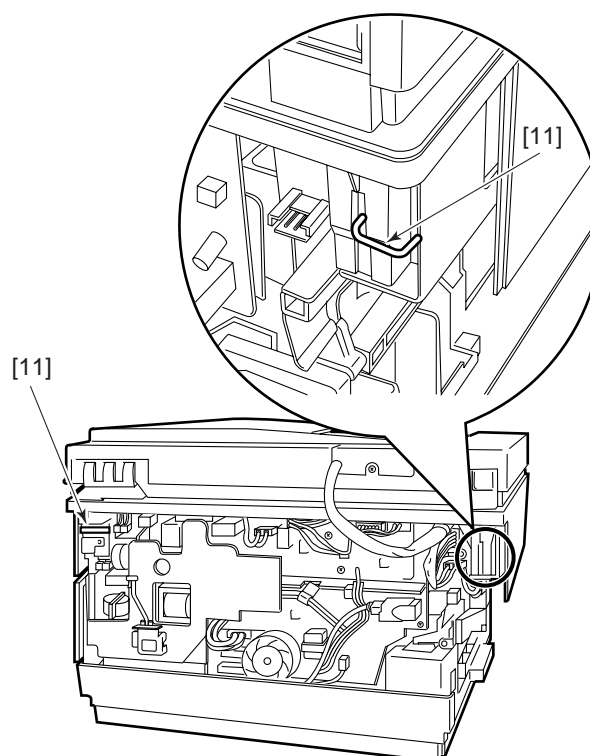


Figure 8-205

B. External Covers

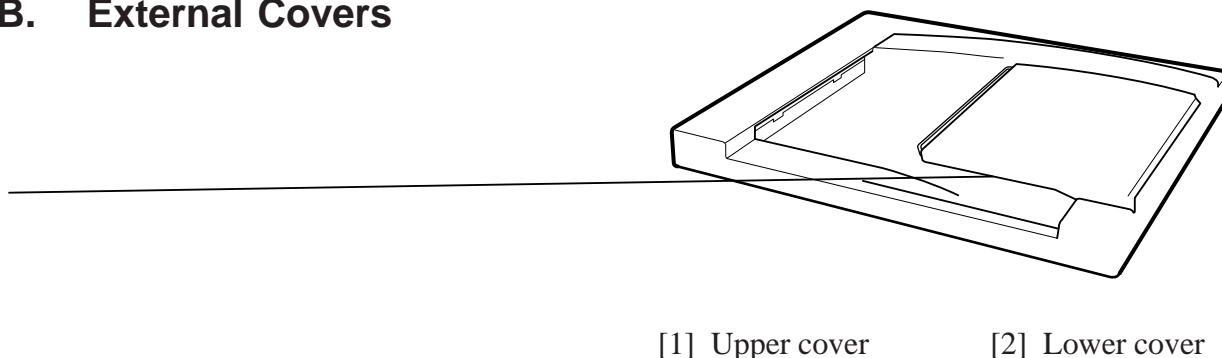


Figure 8-206

Remove the covers as follows when cleaning, checking, or repairing the inside of the machine:

- 1) Remove the ADF from the copier.
(See "A. Removing the ADF.")
- 2) Remove the feeding roller [1] from the bushing [2].

Figure 8-207

- 3) Remove the six screws [3], and separate the lower cover [4] from the upper cover [5].

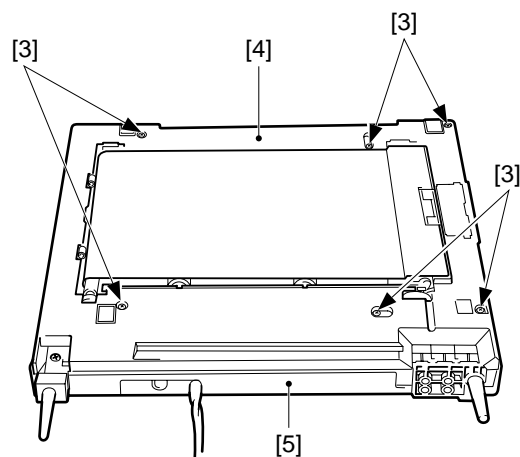


Figure 8-208

- 4) Disconnect the connector [6], and remove the lower cover [4].

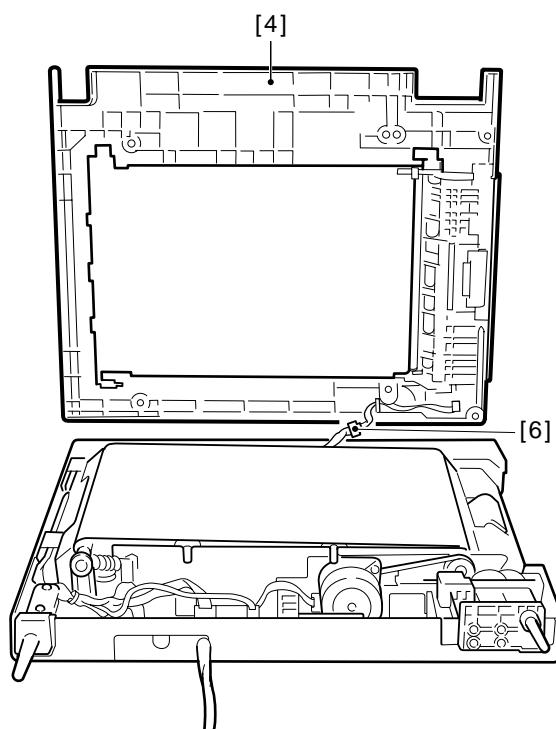


Figure 8-209

C. Drive System

1. Drive Unit

- 1) Remove the lower cover.
(See “B. External Covers.”)
- 2) Remove the screw [1] and the bushing [2];
then, remove the pickup roller cover [3].

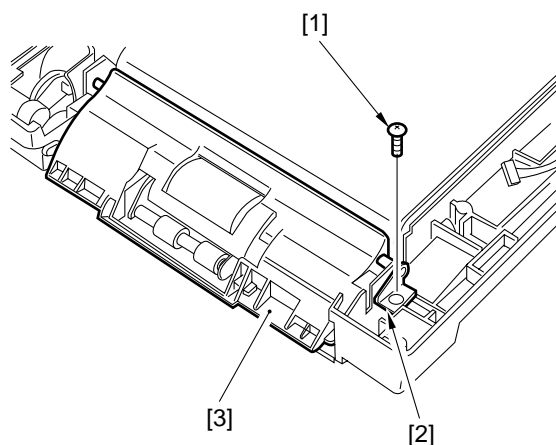


Figure 8-210

- 3) Remove the E-ring [4], and remove the
bearing [5].

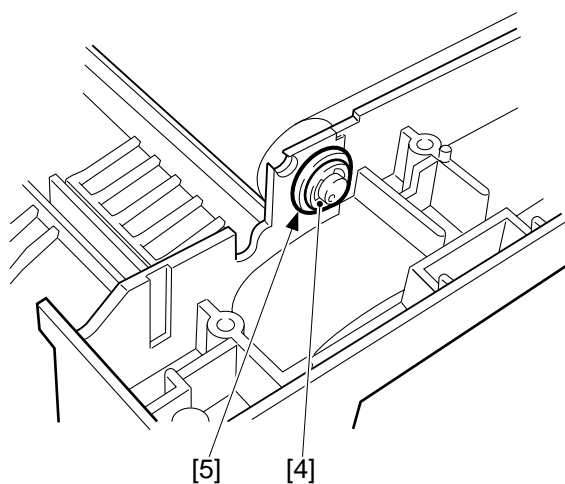


Figure 8-211

- 4) Remove the timing belt [6], and remove the feeding belt roller [7] by shifting it in the direction of the arrow.

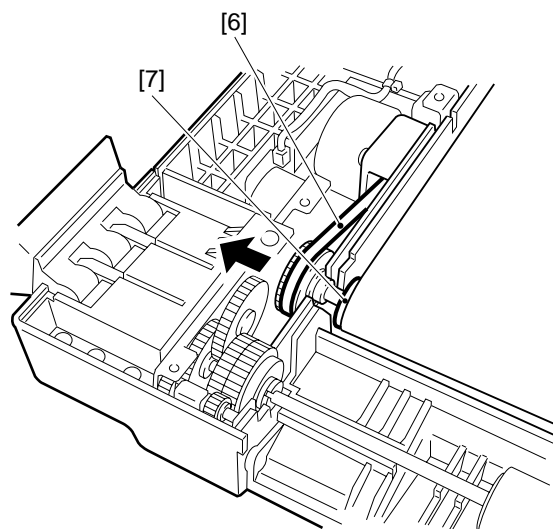


Figure 8-212

- 5) Remove the five screws [9], and remove the right hinge unit [8].

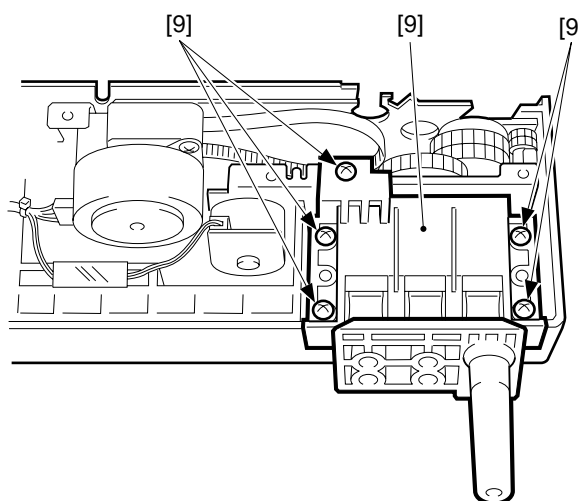


Figure 8-213

- 6) Remove the stop ring [10] (resin) and the bushing [11].

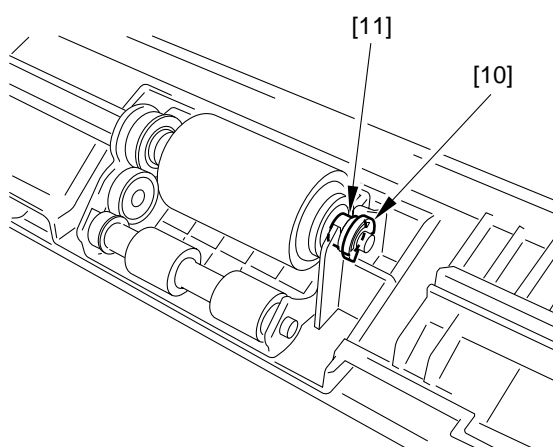


Figure 8-214

- 7) Disconnect the two connectors [12], and remove the five screws [13]; then, remove the drive unit [14].

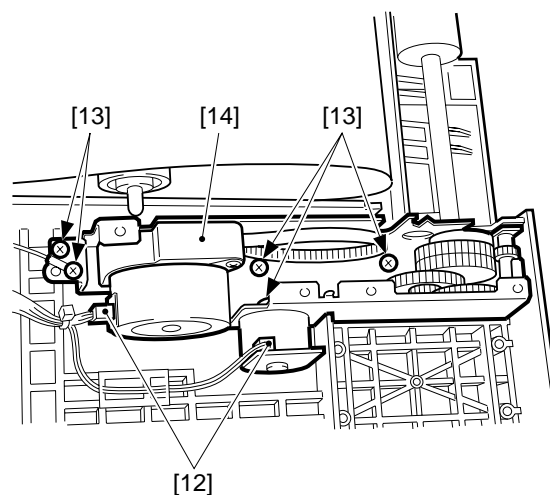


Figure 8-215

D. Feeding System

1. Pickup Roller

- 1) Remove the drive unit [1].
(See "C.1. Drive Unit.")

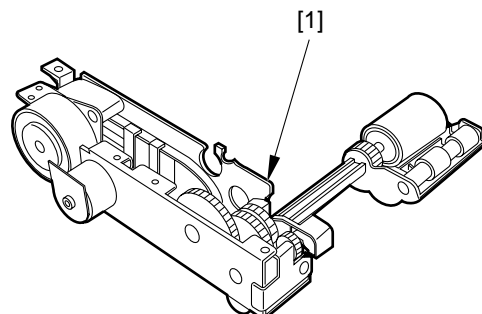


Figure 8-216

- 2) Remove the E-ring [2], and remove the shaft [3]; then, detach the pickup roller 1 [4].

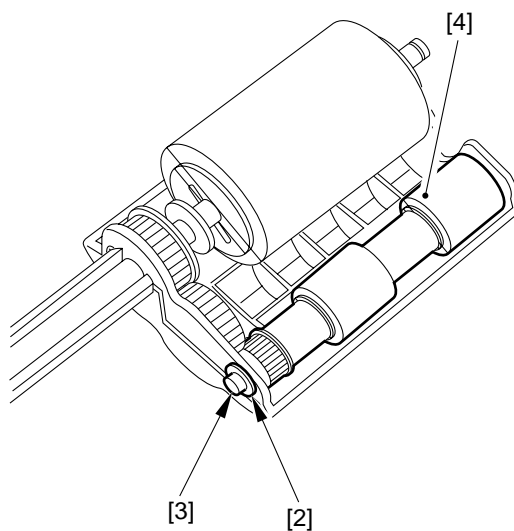


Figure 8-217

- 3) Remove the stop ring [5].

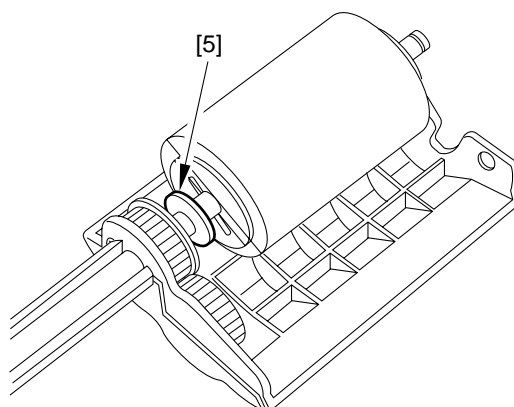


Figure 8-218

- 4) Remove the two straight pins [6], and remove the pickup roller 2 [8] while moving the cover [7] in the direction of the arrow.

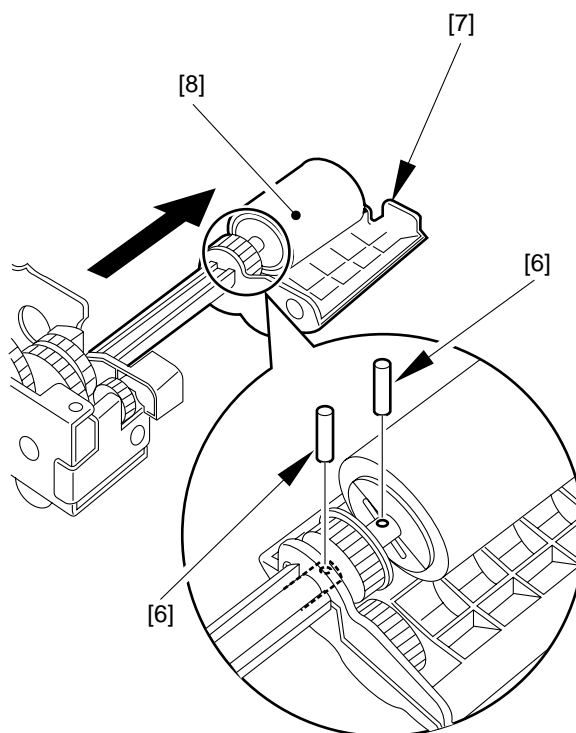


Figure 8-219

2. Registration Roller

- 1) Remove the lower cover.
(See “B. External Covers.”)
- 2) Remove the link arm [1] from the registration roller shaft [2] by turning the link arm.

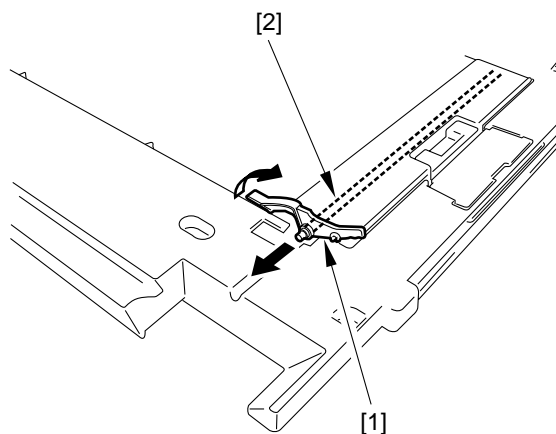


Figure 8-220

- 3) While pushing the bushing [3] in the direction of the arrow, pull out the registration roller shaft [2] slowly.

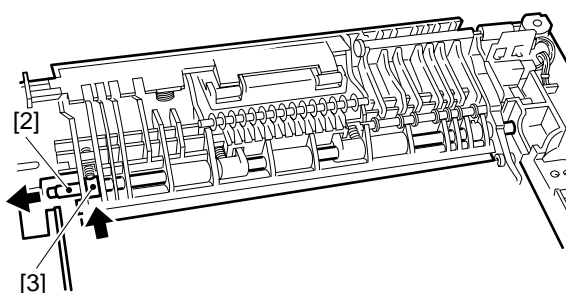


Figure 8-221

3. Feeding Belt

- 1) Remove the lower cover.
(See “B. External Covers.”)
- 2) Remove the two tension springs [1].

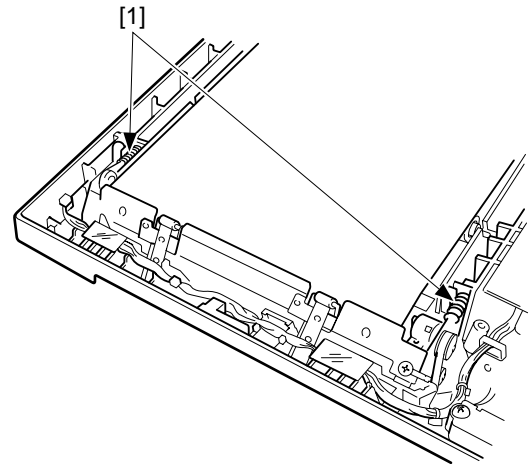


Figure 8-222

- 3) Remove the E-ring [2], and remove the bearing [3].

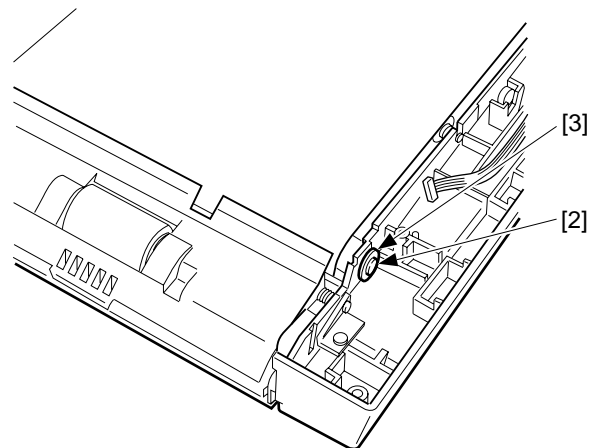


Figure 8-223

- 4) Remove the timing belt [4], and remove the feeding belt drive roller [5] by moving it in the direction of the arrow.

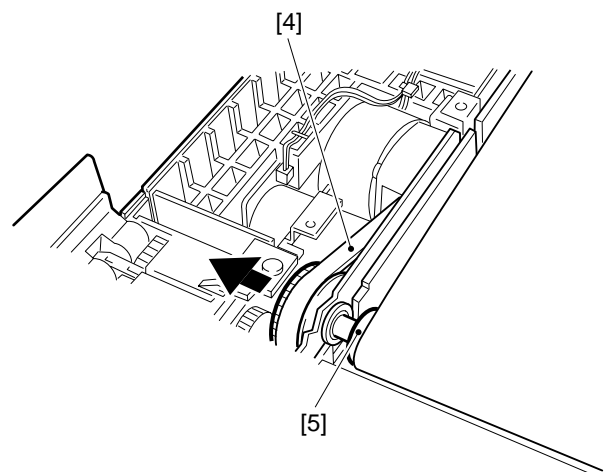


Figure 8-224

- 5) Remove the two equalizer spring [6] and the two feeding belt rolls [7].

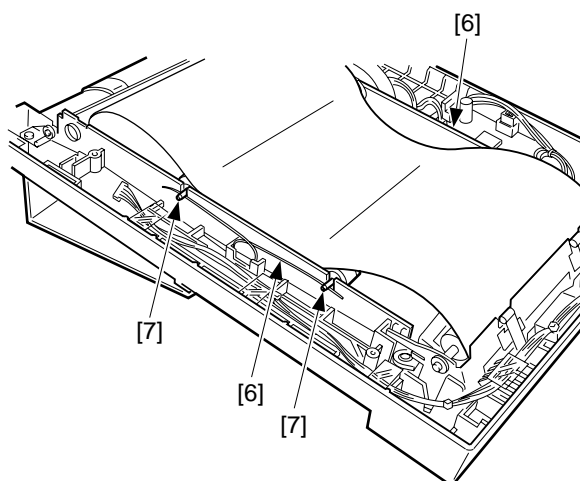


Figure 8-225

- 6) Remove the two screws [9], and remove the delivery sensor unit [8].

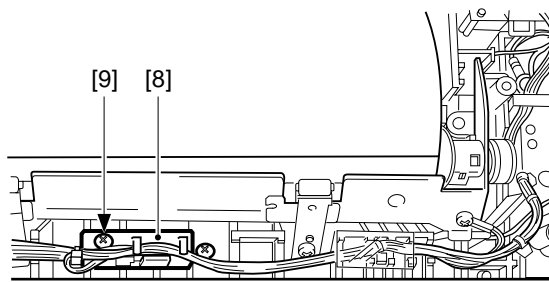


Figure 8-226

- 7) Remove the stop ring [10] (made of resin); then, remove the bushing [11].

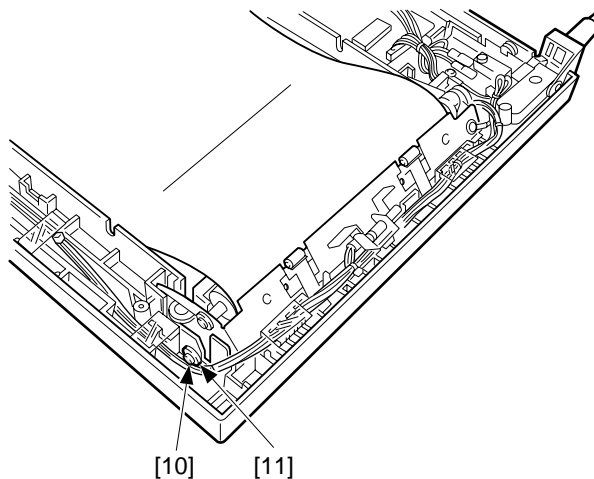


Figure 8-227

- 8) Remove the screw [12], and remove the grounding wire [13]; then, remove the delivery roller unit [14] by moving it in the direction of the arrow.

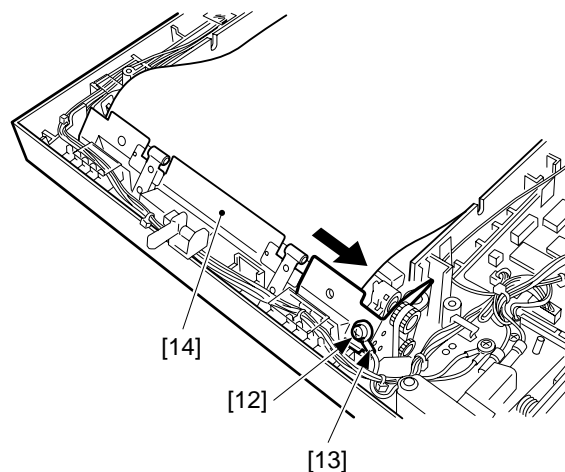


Figure 8-228

- 9) Remove the screw [15], and remove the static eliminating brush [16].

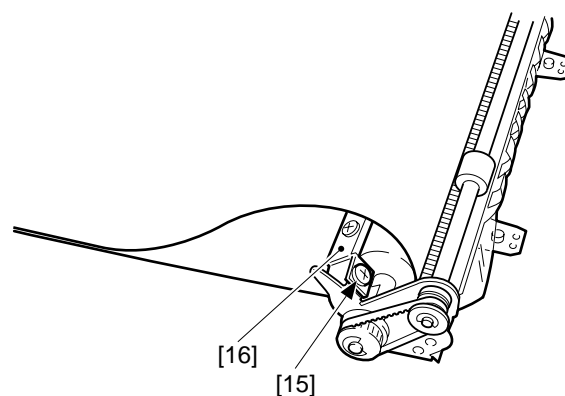


Figure 8-229

- 10) Remove the two E-rings [17]; then, remove the timing belt [18], gear [19], and two bushings [20].

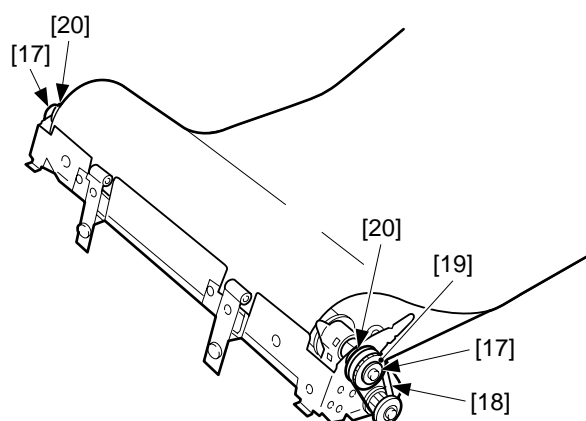


Figure 8-230

- 11) Pull out the actuator [21] in the direction of the arrow; then, remove the feeding belt link roller [22], and remove the feeding belt [23].

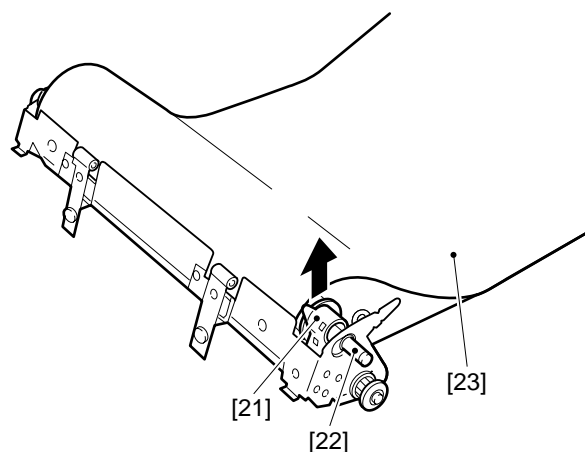


Figure 8-231

E. Electrical System

1. ADF Controller PCB

- 1) Remove the lower cover.
(See “B. External Covers.”)
- 2) Disconnect the five connectors [1], and remove the two screws [2]; then, remove the ADF controller PCB [3].

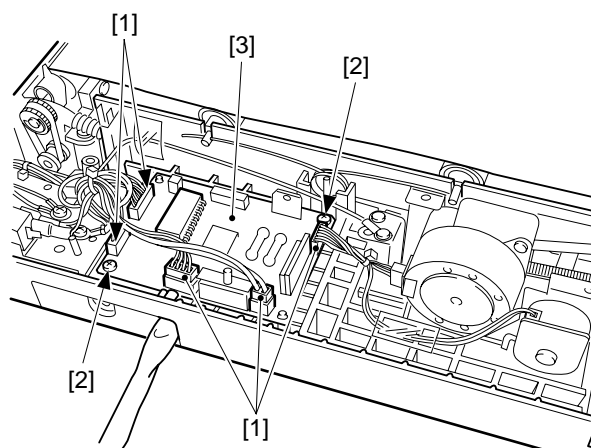


Figure 8-232

2. Original Placement Sensor and Registration Paper Sensor

Pay attention to the colors of the cables and connectors when connecting the connectors of the original placement sensor and the registration paper sensor.

Sensor	Cable color
Original placement sensor	Purple
Registration paper sensor	Yellow

Table 8-201

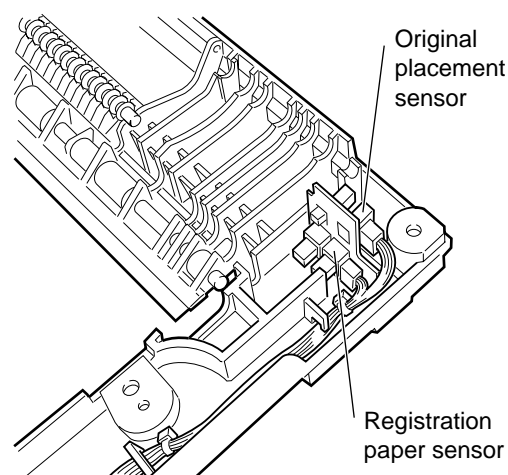


Figure 8-233

CHAPTER 9

INSTALLATION

I. SELECTING A SITE	9-1	B. Placing Copy Paper	9-9
II. UNPACKING AND INSTALLATION	9-2	III. MOVING THE MACHINE	9-12
A. Unpacking and Installation	9-2		

I. SELECTING A SITE

Keep the following in mind when selecting a site for installation; if possible, visit the user's before delivery of the machine:

- The site offers a power outlet whose rating is as specified ($\pm 10\%$) and which may be used exclusively for the machine.
- The site is between 7.5°C/45.5°F and 32.5°C/90.5°F in temperature and between 5% and 85% in humidity. Avoid an area near water faucets, water boilers, humidifiers, and refrigerators.
- Avoid areas near sources of fire. The site must not be subject to ammonium gas or direct rays of the sun. (As necessary, provide curtains.)
- The site must be well ventilated.

The level of ozone generated by the machine should not affect the health of people around it. Some, however, may find the odor to be rather unpleasant, and ventilation is a very important factor.

- The floor of the site must ensure that the machine's feet will remain in contact, and will hold the machine level.
- The machine must be at least 10 cm/3.9 in. away from any wall, and there must be adequate space for work involving the machine.

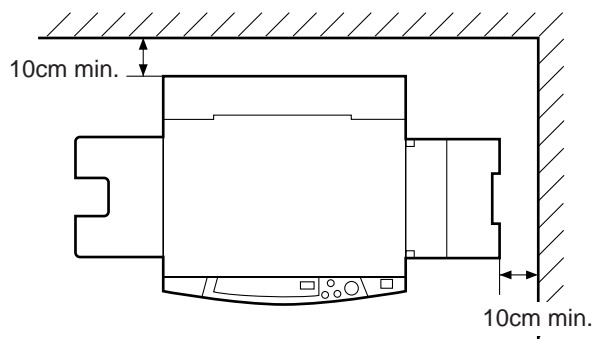




Figure 9-101




II. UNPACKING AND INSTALLATION




When a piece of metal is brought in from a cold to warm place, droplets of water tend to form on its surface. This phenomenon is known as “condensation” and, in copiers, can cause blank copies.





If the machine has been brought in from a cold place, leave it alone at least for one hour before starting to install it.




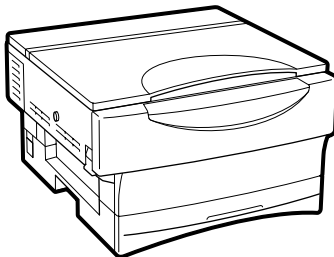
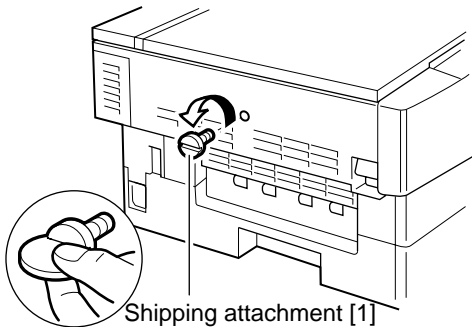
A. Unpacking and Installation




Step	Work	Checks and remarks
1	Take out the copier and the attachments from the shipping box, and check to make sure that none is missing:	<ul style="list-style-type: none"> • Cassette • Copy tray • Power cord • ADF auxiliary tray (ADF type only) • User's Manual • Manual feed tray (for some areas only) • Language label for cassette (included with universal cassette) • Language label for ADF (ADF type only)
2	Remove the packaging bag and all fixing tape.	
3	Remove the shipping attachment [1] (gold-colored screw) from the left of the machine.	 <p>Shipping attachment [1]</p> <p>You will be storing the shipping attachment [1] inside the machine in step 9.</p>

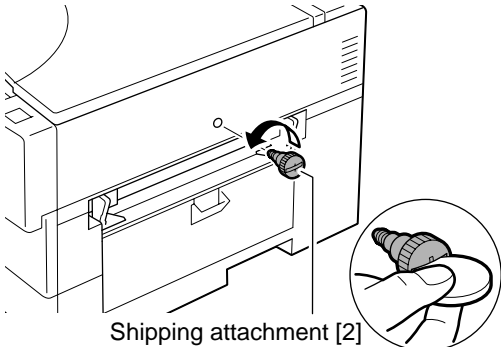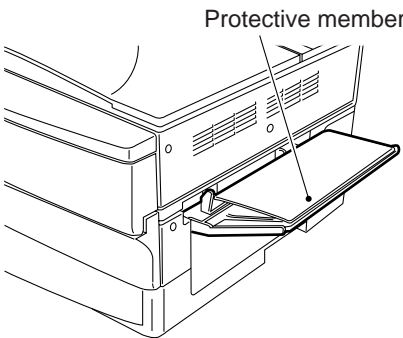
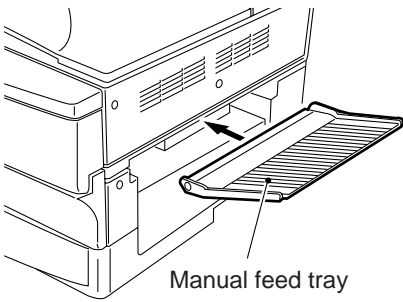
Step	Work	Checks and remarks
4	Remove the shipping attachment [2] (black screw) from the right side of the machine.	 <p>Shipping attachment [2]</p> <p>You will be storing the shipping attachment [2] inside the machine in step 9.</p>
5	<p>Take out the protective member from the manual feed tray. (Multifeeder type only)</p> <p>Caution: This step applies only if the manual feed tray is attached.</p>	 <p>Protective member</p>
	<p>Attach the manual feed tray that comes with the machine. (Multifeeder type only)</p> <p>Caution: This applies only if the manual feed tray comes packaged with the machine.</p>	 <p>Manual feed tray</p>

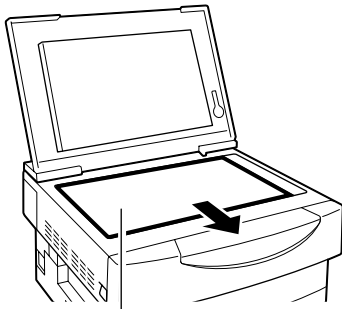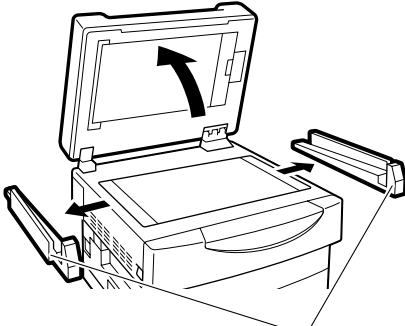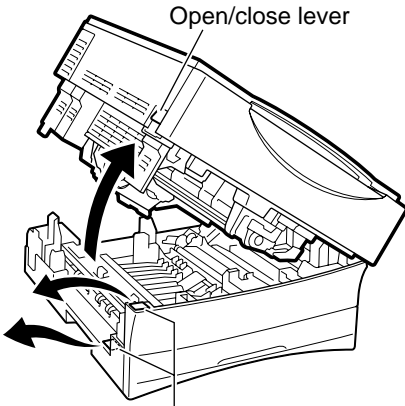Step	Work	Checks and remarks
6	<p>Open the copyboard cover, and remove the protective sheet. (Copyboard type only)</p> <p>Caution: If the protective sheet is not found on the machine, go to the next step.</p>	 <p>Protective sheet</p>
	<p>Open the ADF, and remove the protective members. (ADF type only)</p> <p>Caution: You will need this protective member when relocating the machine. Be sure to store it appropriately.</p>	 <p>Protective members</p>
7	<p>Pull the open/close lever found on the left of the machine to open the machine's top unit; then, remove the two protective members.</p> <p>Caution: If the protective member is not found on the machine, go to the next step.</p>	 <p>Open/close lever</p> <p>Protective member</p>

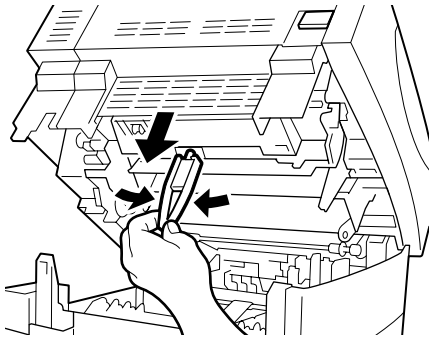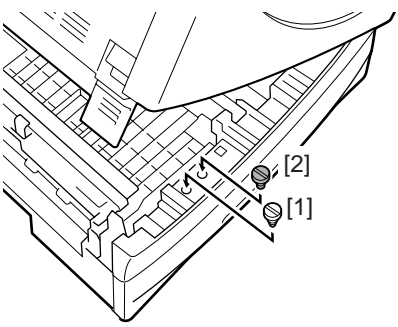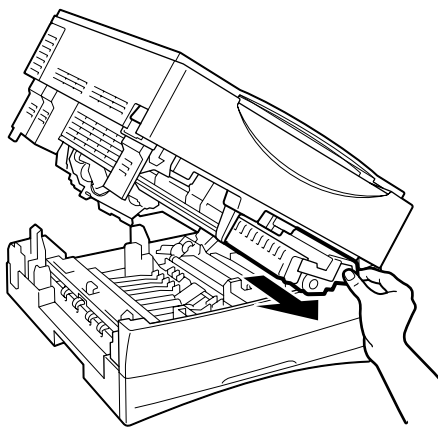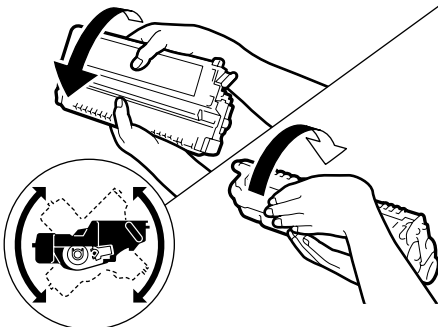Step	Work	Checks and remarks
8	Pick the fixing member from the bottom of the top unit, and detach it.	
9	Store the shipping attachments [1] and [2] removed in steps 3 and 4 in the machine's bottom unit.	
10	Hold the tab of the cartridge, and take it out of the machine.	
11	Holding the cartridge with the warning label facing up, shake it several times in both directions (90°).	

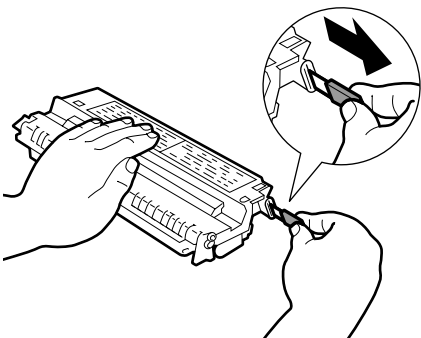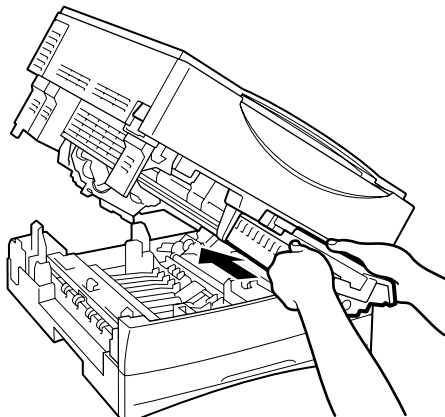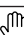
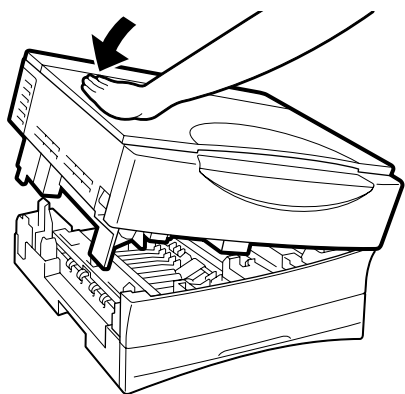
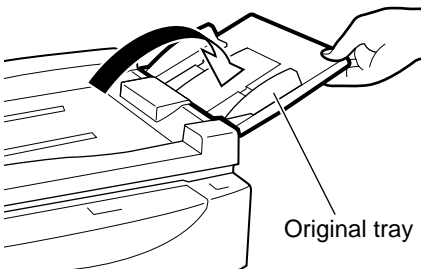
Step	Work	Checks and remarks
12	<p>Place the cartridge on a level place, and pull off the open seal.</p> <p>Holding the tab, pull it straight out in the direction of the arrow.</p> <p>Caution: The seal can tear in the middle. Do not pull it at an angle.</p>	
13	<p>Hold the cartridge with the warning label facing up, and insert it into the machine with care until it stops.</p>	
14	<p>Push on the  marking found on the top of the machine to close it fully.</p>	
15	<p>Open the original tray.</p> <p>Caution: This step applies to the ADF type only.</p>	

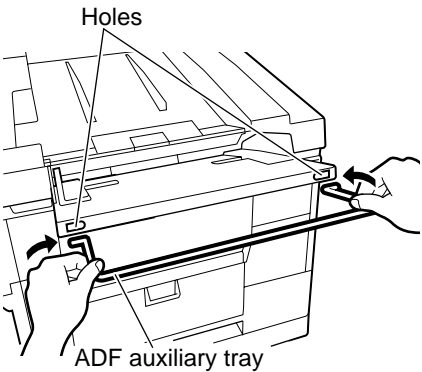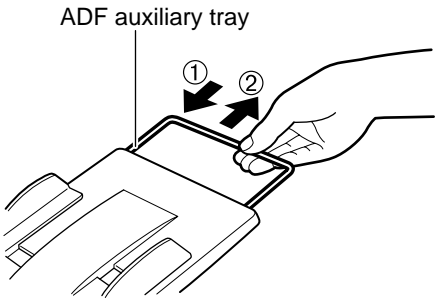
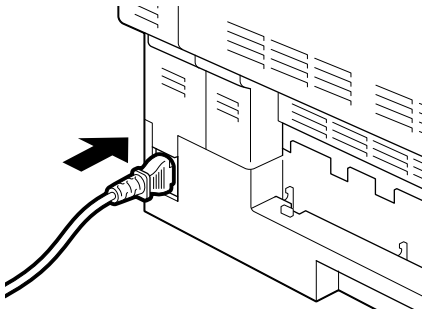
Step	Work	Checks and remarks
16	<p>While bending the ADF auxiliary tray in the direction of arrows in the figure, insert it into the holes on the edge of the original tray.</p> <p>Caution: This step applies to the ADF type only.</p>	
17	<p>Slide in and out the auxiliary tray several times to make sure that it moves smoothly.</p> <p>Caution: This step applies to the ADF type only.</p>	
18	<p>Connect the power cord to the power cord connector.</p>	
19	<p>Connect the power plug to the power outlet; then, turn on the power switch.</p>	<ul style="list-style-type: none"> • Make sure that the AE and DIRECT indicators turn on, the count/ratio indicator indicates '1'. • Press the Count/Zoom Set key and the Clear/Stop key to check that the copy count is correct. • Press the Default Ratio key to check that different ratios are indicated. • Check to make sure that a press on the Zoom Mode key turns on the '0' indication and a press on the Count/Zoom Set key will indicate the correct ratio.

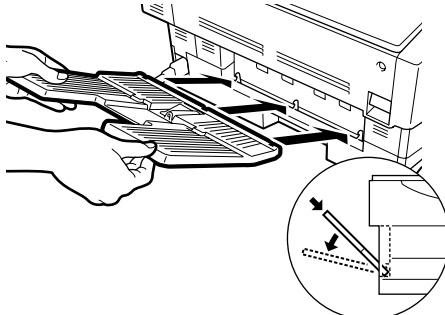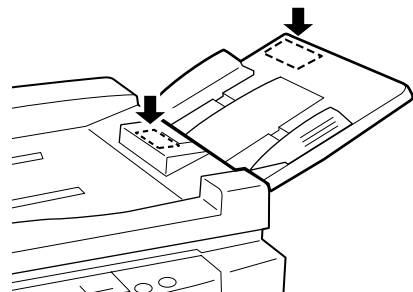Step	Work	Checks and remarks
20	Attach the copy tray.	 <p>Check to make sure that the three grooves in the copy tray are all in place.</p>
21	Place copy paper inside the cassette. (For how, see B. "Placing Copy Paper.")	
22	<p>All notations on the label attached to the ADF is in English. If a non-English language is needed, select the appropriate label from among those that come with the machine and stick it.</p> <p>Caution: This step applies to the ADF type only.</p>	
23	Place the Test Sheet on the copyboard glass, and make copies to see if the operation is correct.	<ul style="list-style-type: none"> • Check to make sure that there is no abnormal noise. • Check to make sure that as many copies as specified are made correctly.
24	Clean the externals of the machine and the area around the machine.	



B. Placing Copy Paper

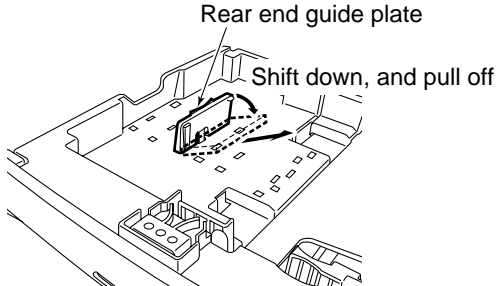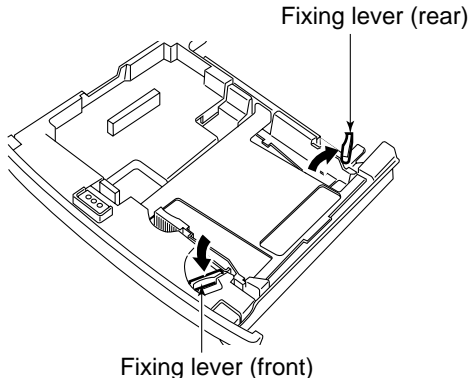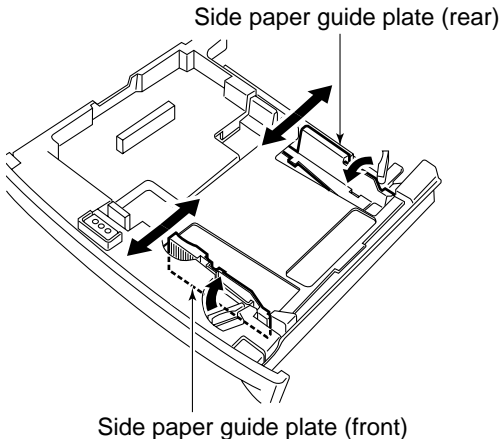1. Universal Cassette

Step	Work	Checks and remarks
1	Take out the cassette from the machine, and remove the protective members and the label. Remove the rear guide plate as shown, and mount it back to suit the size of the copy paper to be used.	 <p>Rear end guide plate</p> <p>Shift down, and pull off</p>
2	Turn the fixing lever (front, rear) of the side paper guide plate as shown, and unlock the side paper guide plate.	 <p>Fixing lever (rear)</p> <p>Fixing lever (front)</p>
3	Slide the side paper guide plate to suit the width of the copy paper to be used; then, turn the fixing lever as shown to lock the side paper guide plate in place.	 <p>Side paper guide plate (rear)</p> <p>Side paper guide plate (front)</p>

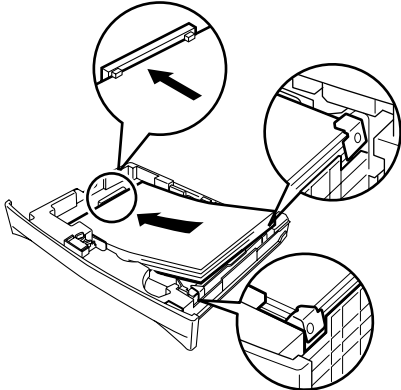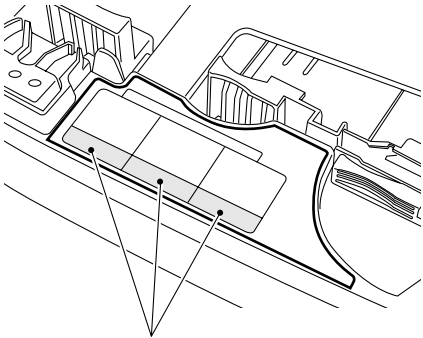Step	Work	Checks and remarks
4	Place copy paper in the cassette, and set the cassette into the machine.	
5	All text on the label attached to the cassette is English. If you need to replace it with a non-English label, select the appropriate one from among those packaged with the machine, and attach it.	 <p data-bbox="927 1108 1225 1137">Language label for cassette</p>

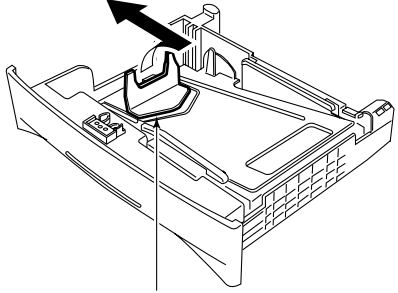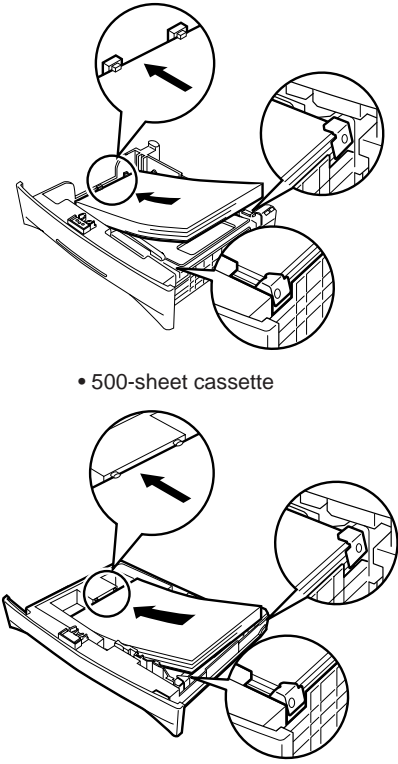2. 250-Sheet/500-Sheet Cassette



Step	Work	Checks and remarks
1	Take out the cassette from the machine, and remove the protective member.	
2	Slide the rear end paper guide plate as shown to match the size of the paper to be used. Caution: This step applies to the 500-sheet cassette (LTR/LGL) only.	 <p>Rear end guide plate</p>
3	Place copy paper in the cassette; then, set the cassette in the machine.	 <p>• 500-sheet cassette</p> <p>• 250-sheet cassette</p>





III. MOVING THE MACHINE

If you need to move the machine by truck or any other means of transportation after installation, be sure to perform the following:

Caution:

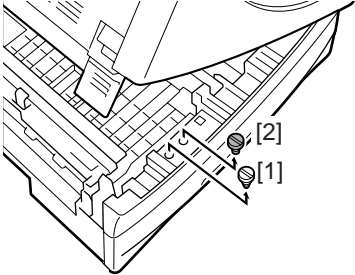Before starting the following work, check to make sure that the machine is not too hot. If it is, as immediately after continuous copying, you may not be able to carry out step 8, in which the shipping attachment is replaced.

Step	Work	Checks and remarks
1	Turn on the power, and press the Default Ratio key to select 70%.	
2	Press the Paper Select key to select the manual feed tray; then, press the Copy Start key without placing any paper on the manual feed tray.	The count/ratio indicator will indicate '70'.
3	Turn off the power switch, and disconnect the power plug from the outlet.	
4	Pull the open/close lever found on the left of the machine, and open the machine's top unit.	
5	Take out the shipping attachments [1] and [2] stored in the machine's bottom unit. 	
6	Detach the copy tray.	
7	Press down on the  marking on the machine's top unit to fully close the machine.	

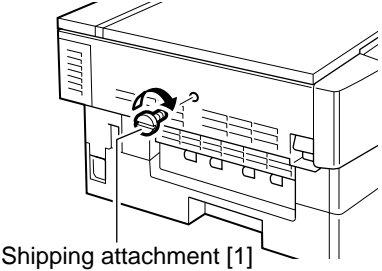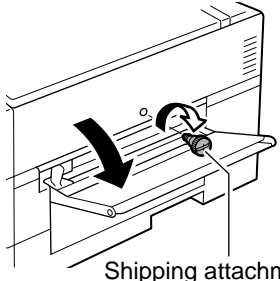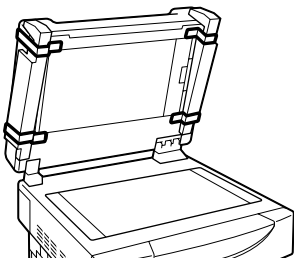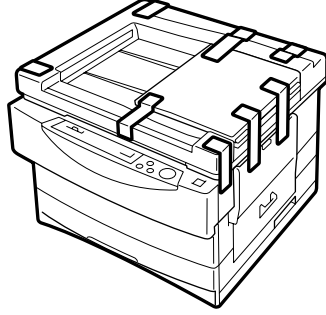Step	Work	Checks and remarks
8	<p>Fit the shipping attachments [1] and [2] detached in step 5 back to the machine.</p>  <p>Shipping attachment [1]</p>  <p>Shipping attachment [2]</p>	
9	Tape the machine's top unit in place to prevent it from opening.	
10	<p>Place A4/LGL copy paper on the copyboard glass, and close the copyboard cover; then, tape it in place. (Copyboard type only)</p> <p>Raise the ADF. Then, place two parts used as packaging so that they fit closely around both sides and the front of the ADF, as shown in the diagram, and secure them with tape. (ADF type only)</p>	
11	<p>Gently lower the ADF and secure the main unit by taping in eight places, as shown in the diagram. (ADF type only)</p> <p>Pack the machine, using the original packing material and box.</p> <p>Or tape the machine's top in place so that it will not open while in transit.</p>	

CHAPTER 10

MAINTENANCE AND SERVICING

- | | | | | | |
|------|--|------|----|--|------|
| I. | PERIODICALLY REPLACED PARTS | 10-1 | A. | Storing the Cartridge with the Packaging Seal Intact | 10-2 |
| II. | DURABLES AND CONSUMABLES | 10-1 | B. | Storing and Handling the Cartridge with the Packaging Seal Removed | 10-3 |
| III. | SCHEDULED SERVICING | 10-1 | | | |
| IV. | STORING AND HANDLING THE CARTRIDGE | 10-2 | | | |

I. PERIODICALLY REPLACED PARTS

The machine does not have parts which must be replaced on a periodical basis.

II. DURABLES AND CONSUMABLES

The machine does not have items designated as durables or consumables.

III. SCHEDULED SERVICING

The machine does not have any parts which require scheduled servicing.

IV. STORING AND HANDLING THE CARTRIDGE

The cartridge is subject to the effects of the environment whether its packing seal is intact or removed or whether it is inside the machine or otherwise, changing over time regardless of the number of copies made. The degree of change is highly dependent on the site of installation and how it is maintained, and no general rule may be drawn; however, it is important to exercise care when storing or handling it.

A. Storing the Cartridge with the Packaging Seal Intact

If you are storing the cartridge in a warehouse or workshop, be sure that the environment is as indicated in Table 10-401; in addition, keep the following in mind:

- Avoid direct rays of the sun.
- Avoid vibration.
- Do not subject it to impact (as by hitting or dropping it).

Temperature	Normal (9/10 of entire storage period)		between 0°C/32°F and 35°C/95°F
	Harsh (1/10 of entire storage period)	High temperature	between 35°C/95°F and 45°C/113°F
		Low temperature	between -20°C/-4°F and 0°C/32°F
Temperature changes (within 3-min period; approx.)			from 40°C/104°F to 15°C/59°F from -20°C/-4°F to 25°C/77°F
Humidity	Normal (9/10 of entire storage period)		between 35% and 85% RH
	Harsh (1/10 of entire storage period)	High humidity	between 85% and 95% RH
		Low humidity	between 10% and 35% RH
Atmospheric pressure			between 613.3 and 1013.3 (hPa; 0.6 to 1 atm)

Table 10-401 Temperature/Humidity Conditions for Storage

Temperature	Humidity
between -20°C/-4°F and 40°C/104°F	90% or less

Table 10-402 Conditions for Transportation

B. Storing and Handling the Cartridge with the Packaging Seal Removed

The photosensitive medium is an organic photoconducting (OPC) material, which would deteriorate if subjected to storing light.

The cartridge also holds toner, requiring the user to exercise care when storing or handling it. (Be sure that the user stores it in an appropriate storage box for storage.)

1. Storage after Removing the Packaging Seal

- a. Avoid areas subject to the direct rays of the sun, i.e., near a window. Do not keep it in a car for a long time, as it will be subjected to an extremely high temperature. (This applies even if the cartridge is inside a protective box.)
- b. Avoid areas subjected to high or low temperature/humidity or where temperature or humidity tends to change abruptly (e.g., near an air conditioner).
- c. Avoid areas subject to dust, ammonium gas, or organic solvent.
- d. Make sure that the cartridge is stored at 40°C/104°F or lower.

2. Handling the Cartridge

- a. Before setting the cartridge in the machine or if copies have white spots as when it starts to run out of toner, hold the cartridge level and shake it about 90° several times as shown in Figure 10-401 to even out the toner inside.

If you shake it in a different way, the toner can spill out of the developing assembly or the cleaning assembly.

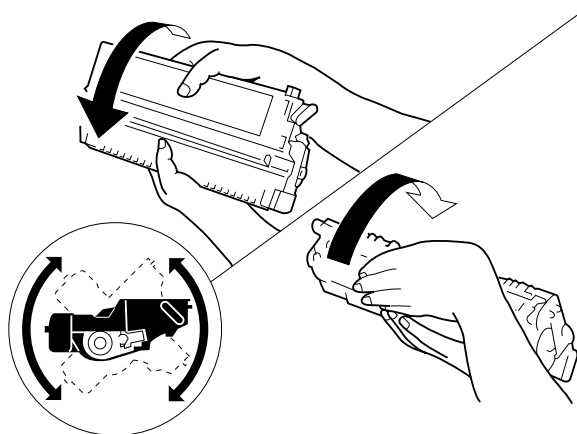


Figure 10-401

- b. Do not place the cartridge on its end or turn it over as shown in Figure 10-402.

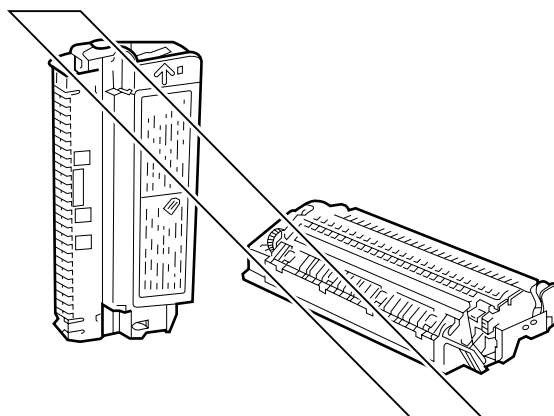


Figure 10-402

- c. Do not touch the surface of the photosensitive drum as by opening the shutter for the photosensitive drum cover found at the bottom of the cartridge.
(If you have soiled the surface of the photosensitive drum, wipe it with a flannel cloth coated with toner. Do not clean it using solvents.)
- d. Do not disassemble the cartridge.
- e. Do not subject the cartridge to excess vibration or impact. In particular, do not impose force on the shutter for the photosensitive drum shutter.
- f. Make sure that it is out of reach of children.
- g. The photosensitive drum is susceptible to strong light, and the light-blocking shutter is provided as a means of protection.
If the drum is exposed to strong light for a long time, however, copies can start to show white spots or vertical bands. Try leaving the machine alone as long as possible if such a problem is noted; the memory (i.e., cause of white spots or vertical bands), however, may not disappear. Keep the following in mind:

Caution:

1. Try to work briskly when removing a jam or replacing the cartridge.
2. If the cartridge must be taken out of the machine for storage, be sure to put it in a protective box or put a cover over it. Do not leave it outside the machine unprotected.

Reference:

If the photosensitive drum is exposed to light of 1500 lux (general lighting) for 5 min and then left alone in a dark place for 5 min, it should recover so that it will not cause practical problems. Nevertheless, avoid direct sunshine. (The rays of the sun is as strong as 10000 and 30000 lux.)

CHAPTER 11

TROUBLESHOOTING

I.	MAINTENANCE AND INSPECTION	11-3	A.	Troubleshooting Malfunctions	11-61
	A.	Image Adjustment Basic Procedure	V.	TROUBLESHOOTING FEEDING PROBLEMS	
		11-3		11-75	
	B.	Points to Note for Servicing	A.	Copy Paper Jam	
		11-4	B.	Faulty Feeding	
II.	STANDARDS AND ADJUSTMENTS		11-78		
	11-5		VI.	ARRANGEMENT AND FUNCTIONS OF ELECTRICAL PARTS	
	A.	Mechanical		11-79	
	B.	ADF	A.	Sensors and Solenoids	
	C.	Electrical	B.	Switches	
		11-41	C.	Lamp, Heater, Motor, Etc.	
III.	TROUBLESHOOTING IMAGE FAULTS		D.	PCBs	
	11-48		E.	ADF	
	A.	Making Initial Checks	F.	Variable Resistors (VR) and Check Pins by PCB	
	B.	Sample Image Faults		11-84	
	C.	Troubleshooting Image Faults	VII.	SELF DIAGNOSIS	
		11-53		11-86	
IV.	TROUBLESHOOTING MALFUNCTIONS				
	11-61				

Guide to the Troubleshooting Procedure


This chapter provides troubleshooting instructions in the form of tables prepared based on generally found flow charts. Study the following for an idea of how to use them:

AC power is absent.

Cause	Step	Checks	YES/NO	Action
Power plug	1	Is the power plug connected to the power outlet?	NO	Connect the plug.
Covers	2	Are the front door and delivery cover closed fully?	NO	Close the door or the cover.
Power source	3	Is the rated voltage found at the power outlet?	NO	Inform the user that
-----	4	Is the rated voltage present between J1-1 and -2? (J1 is found near the power cord mount.)	YES	Go to step 6.

(Rest omitted.)

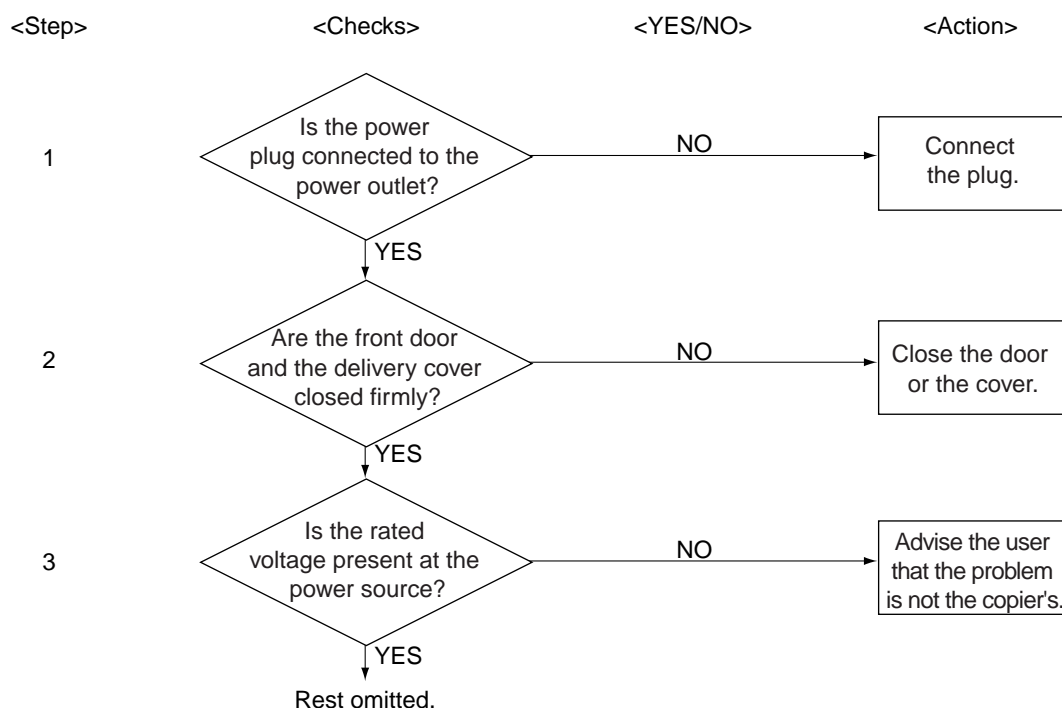- To find out the cause (possible fault) of a specific problem, see the "Cause" column. If the problem is "AC power is absent," you may suspect that the power plug is disconnected, covers are not closed fully, or power is absent at the main source.
- If you want to find out the checks to make or action to take, go through the steps: answer the questions under "Checks"; if yes, take the action shown. Otherwise, go to the next step and make the indicated checks.



- Often, you will find the following instructions when checking the voltage using a meter: “measure the voltage between J109-1 (+) and -2 (-) on the DC controller PCB.” The symbol “+” indicates the terminal to which you are expected to connect the positive probe of the meter and “-,” the negative probe.

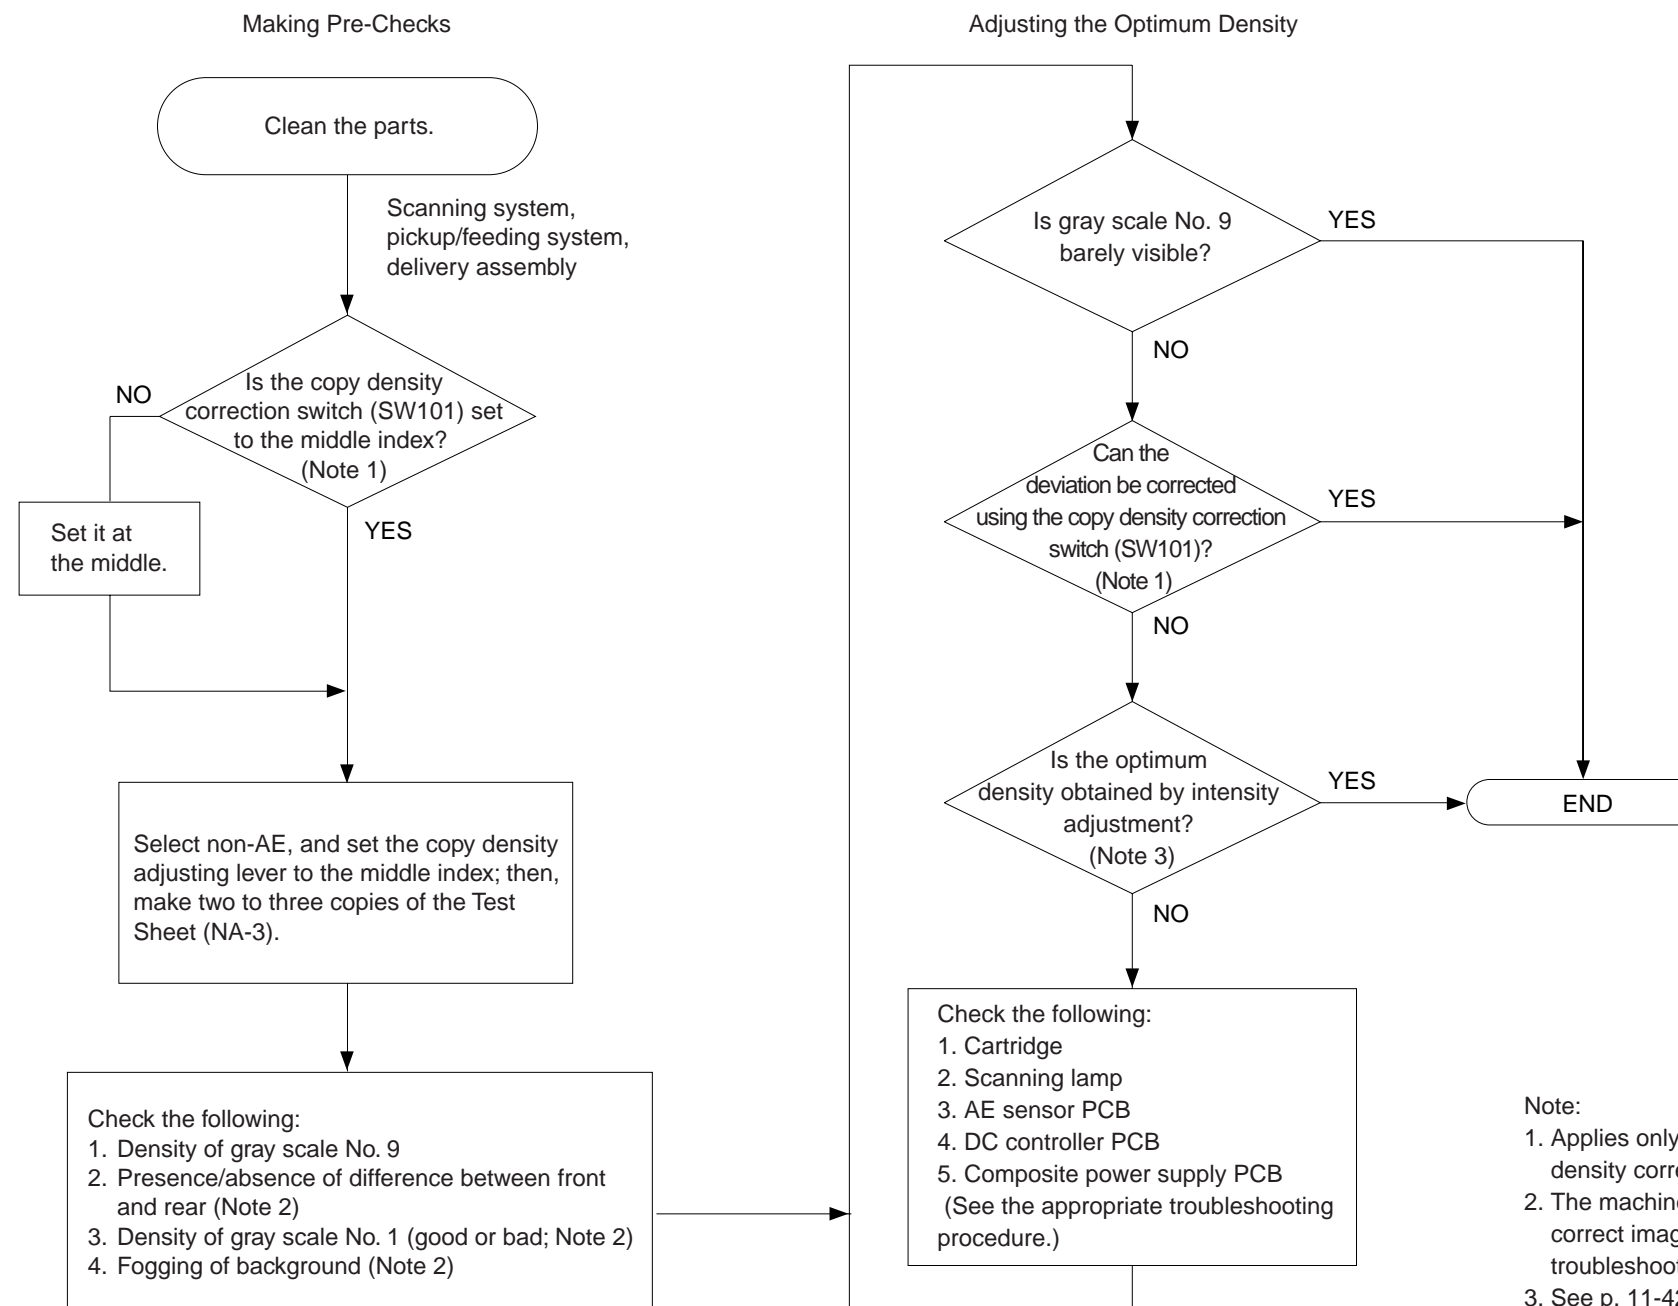
example:

J109-1 (+) Connect the positive probe.

J109-2 (-) Connect the negative probe.

I. MAINTENANCE AND INSPECTION

A. Image Adjustment Basic Procedure



B. Points to Note for Servicing

Copyboard, Scanner

Item	Tools/solvent	Work/remarks
Copyboard cover	Alcohol	Cleaning.
Copyboard glass	Alcohol	Cleaning.
Lens	Blower brush	Cleaning.
Scanning lamp	Lint-free paper	Dry wiping.
Reflecting plate No. 1 through No. 6 mirror	Blower brush	If dirt cannot be removed, dry-wiping with lint-free paper.

Cartridge

Item	Tools/solvents	Work/remarks
Drum cover shutter	Moist cloth	Cleaning; be sure to remove all toner to prevent toner soiling images.

Fixing Assembly, Delivery Assembly

Item	Tools/solvent	Work/remarks
Inlet guide	Solvent	Cleaning.


Pickup, Feeding, and Transfer Assemblies and Static Eliminator

Item	Tools/solvents	Work/remarks
Single-feeder pickup roller	Moist cloth or alcohol	Cleaning.
Multifeeder, Pickup roller	Moist cloth or alcohol	Cleaning.
Cassette pickup roller	Moist cloth or alcohol	Cleaning.
Registration roller	Moist cloth	Cleaning.
Transfer guide	Moist cloth	Cleaning.
Transfer charging roller	Lint-free paper	Cleaning. Do not use water or solvent. Take care not to touch it or leave solvent or oil.
Static eliminator	Special brush	Cleaning.
Feed belt	Moist cloth	Cleaning.

ADF

Item	Tool/solvent	Work/remarks
Feeding belt	Cloth moistened with water*	Dry-wiping.
Separation pad	Cloth	Cleaning.
Pickup roller	Cloth moistened with water* or alcohol	Cleaning.

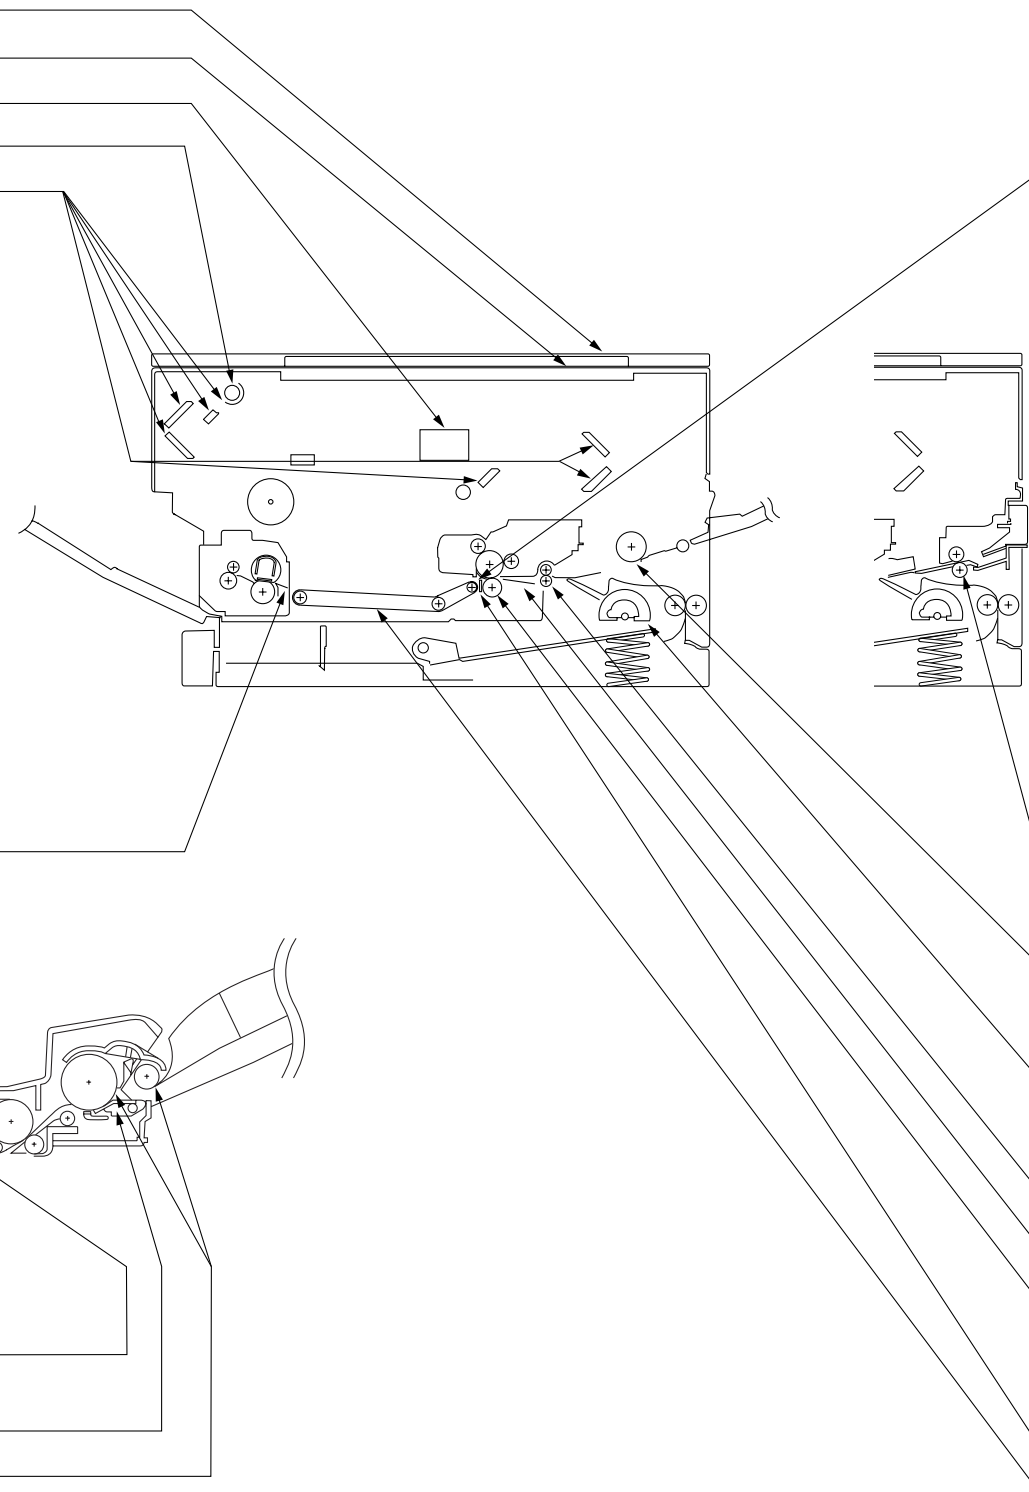*Be sure to wring it well.



II. STANDARDS AND ADJUSTMENTS

A. Mechanical

1. Copier

a. Leading Edge Non-Image Width

Make adjustments so that the leading edge non-image width is 2.0 ± 1.5 mm when the Test Sheet is copied in Direct.

Caution:

If you have performed this adjustment, be sure to adjust the image leading edge margin.

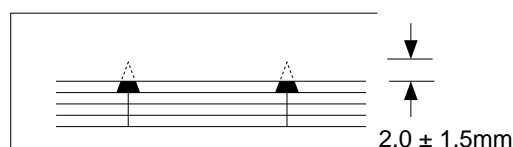


Figure 11-201

- 1) Turn VR105 on the DC controller PCB so that the width is as indicated.

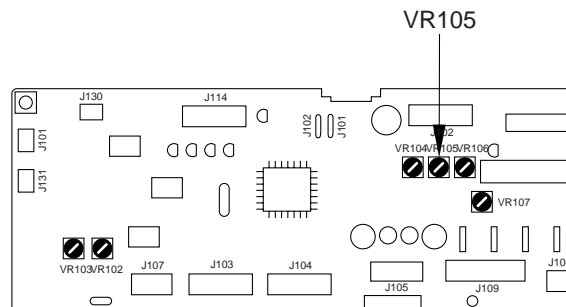


Figure 11-202

Tuning VR105 and Leading Edge Non-Image Width

Direction of VR105	Leading edge non-image width
Clockwise	Decreases
Counterclockwise	Increases

Table 11-201

b. Image Leading Edge Margin (registration activation timing)

Make adjustments so that the leading edge margin is 2.5 ± 1.5 mm when the Test Sheet is copied.

Caution:

Be sure to check that the leading edge non-image width is as indicated before performing this adjustment.

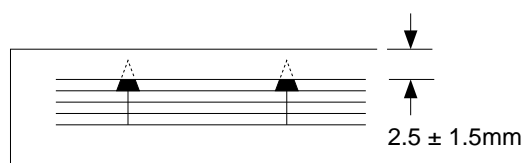


Figure 11-203

1) Turn VR104 on the DC controller PCB so that the margin is as indicated.

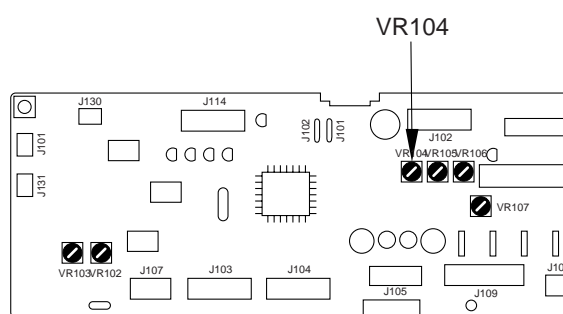


Figure 11-204

Tuning VR104 and Image Leading Edge Margin

Direction of VR104	Image leading edge margin
Clockwise	Increases
Counterclockwise	Decreases

Table 11-202

- c. Adjusting the Mirror Position (optical length between No. 1 mirror and No. 2 mirror)
 If you have replaced the scanner drive cable, you must adjust the mirror position, by changing the position of the cable retainer of the No. 1 mirror mount.

Reference:

1. As more and more copies are made, the cable tends to become slack, requiring adjustment.
2. If the optical length between the No. 1 mirror and the No. 2 mirror is not correct, the horizontal reproduction ratio will be wrong, causing poor sharpness or blurred images.

- 1) Fit the mirror positioning tool (FY9-3009) as shown.

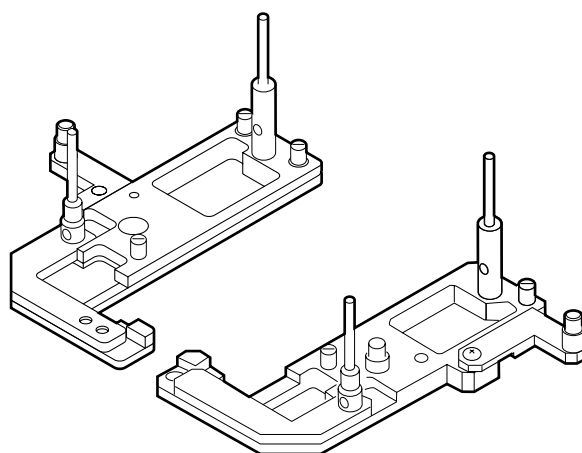


Figure 11-205

- 2) Remove the copyboard glass. (See Chapter 7.III.C.1. “Removing the Copyboard Glass”.)
- 3) Loosen the screws used to secure the cable retainer at the rear and the front of the No. 1 mirror mount [1].

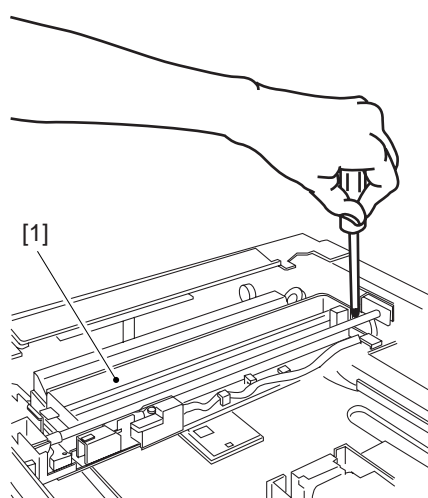


Figure 11-206

- 4) Turn the cable drive pulley [3] so that the three shafts [2] of the mirror positioning tool for the front and the rear may be arranged as shown.

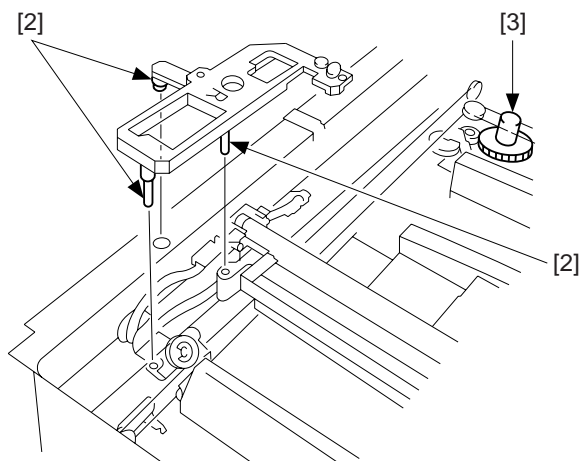


Figure 11-207 (rear)

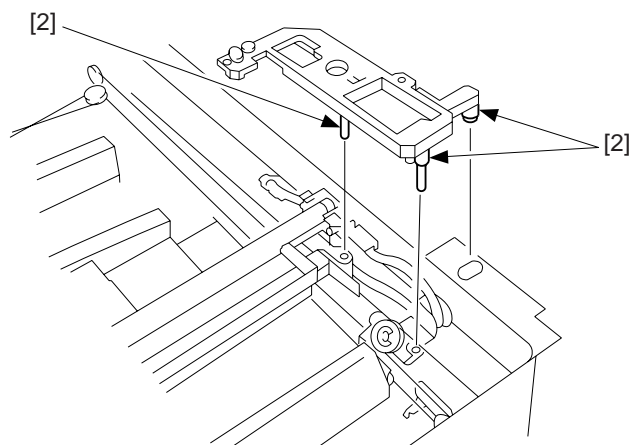


Figure 11-208 (front)

- 5) While keeping the condition of 4), tighten the positioning screw at the rear and the front of the No. 1 mirror mount [1].

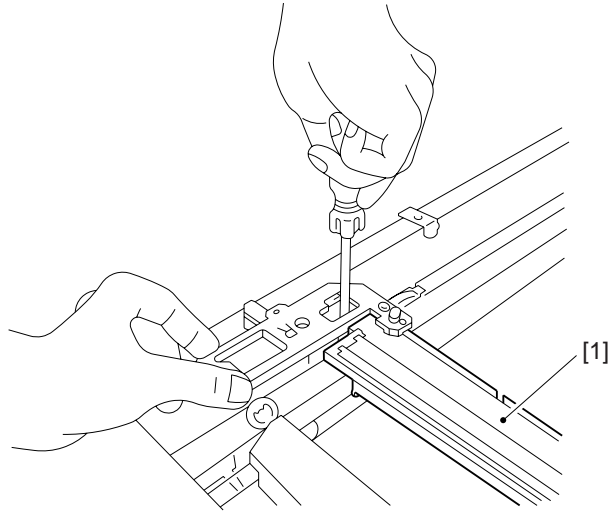


Figure 11-209 (rear)

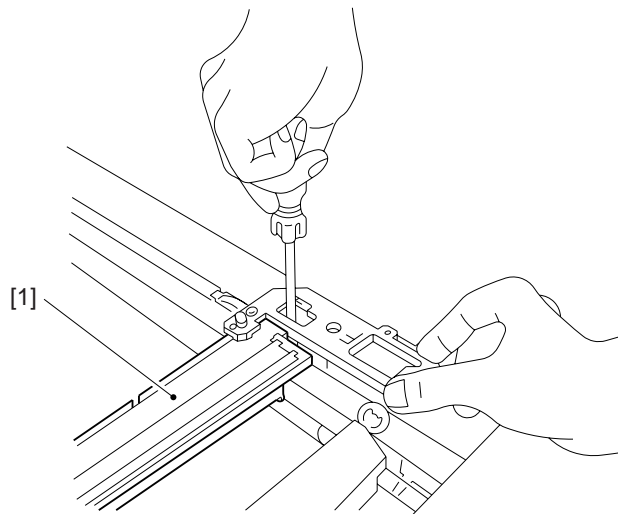


Figure 11-210 (front)

d. Checking the Force of the Cassette Spring

If the force of the spring used to hold up the holding plate of the cassette is not correct, pickup faults or the like can occur.

If a fault is suspected, check the force of the spring using a spring gauge (CK-0054), and replace the spring if it is not as indicated:

Standard: 970 ± 150 g

Making Measurements

Push the spring gauge against the middle of the spring as shown, and check to make sure that the reading of the spring gauge is 970 ± 150 g when the holding plate is 18 mm away from the bottom of the cassette.

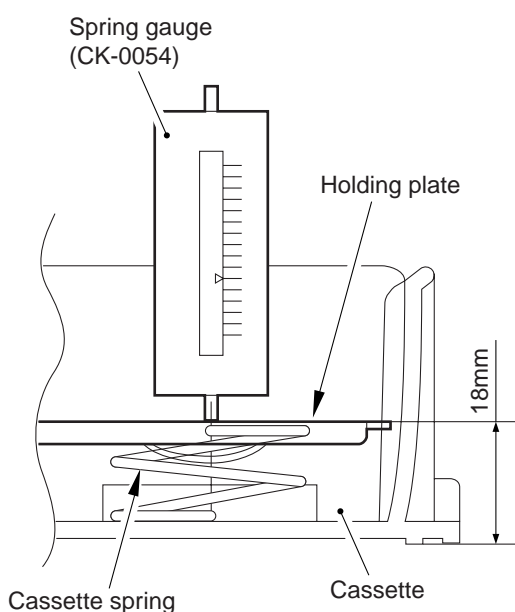


Figure 11-211

e-1. Routing the Scanner Drive Cable

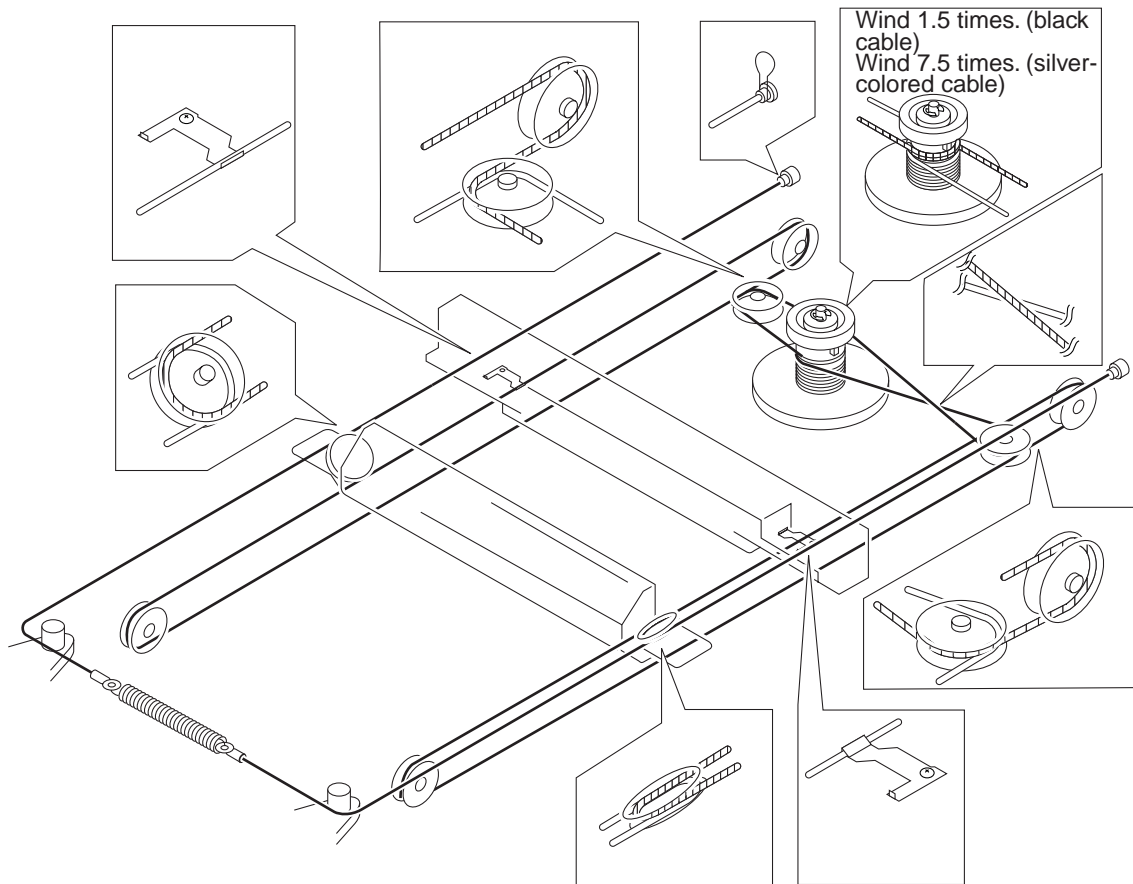


Figure 11-212

e-2. Routing the Scanner Drive Cable

1. Before Starting the Work

Prepare the following:

- Mirror positioning tool (FY9-3009)
- Cable clip (FY9-3017)
- Adhesive tape

- 1) Set the mirror positioning tool as shown.

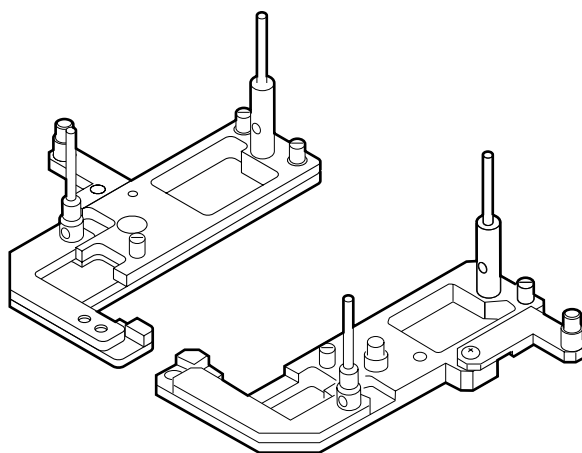


Figure 11-213

- 2) Prepare about five strips of adhesive tape (each one about 20 × 50 mm).
- 3) Remove the copyboard glass. (See Chapter 7.III.C.1. “Removing the Copyboard Glass.”)
- 4) Disconnect the connectors (J101, J131) [1] from the DC controller PCB.

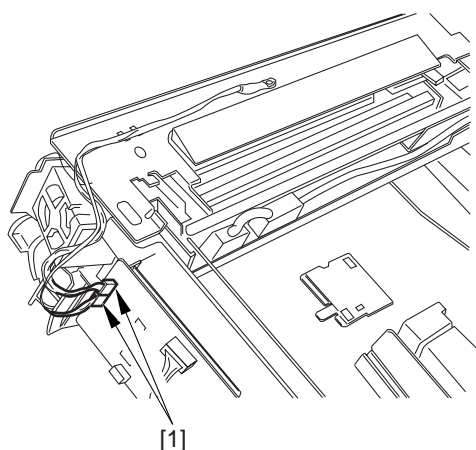


Figure 11-214

- 5) If the machine is equipped with an ADF, free the hook [2], and disconnect the two relay connectors [3] from the left upper stay [4].

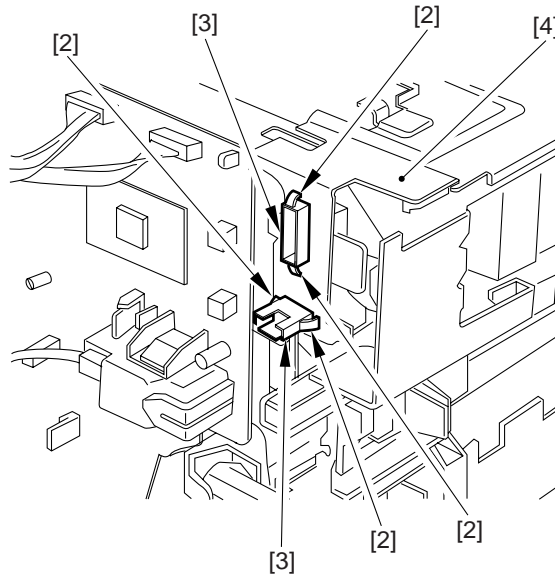


Figure 11-215

- 6) Remove the three screws [5], and detach the left upper stay [4].

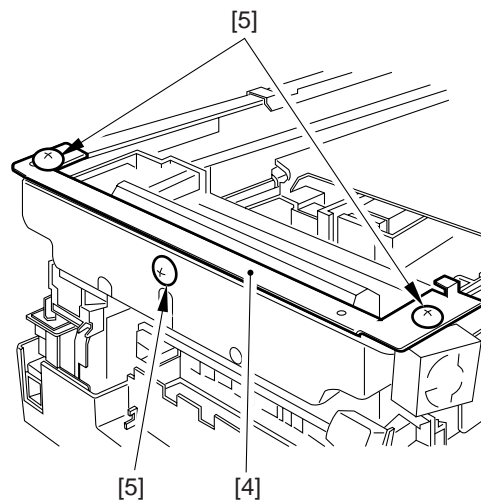


Figure 11-216

- 7) Remove the four screws [7], and detach the lens cover [8].

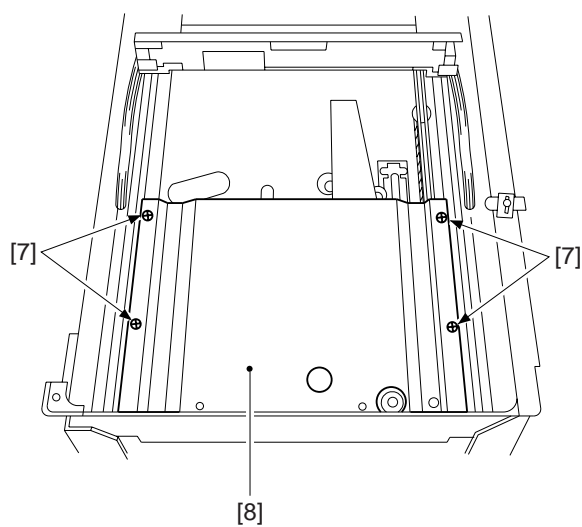


Figure 11-217

2. Routing the Reversing Cable

- 1) Wind the reversing cables (silver-colored) [2] on the cable drive pulley [1] 7.5 times with the longer of the two on top; then, secure it in position with a cable clip [3].

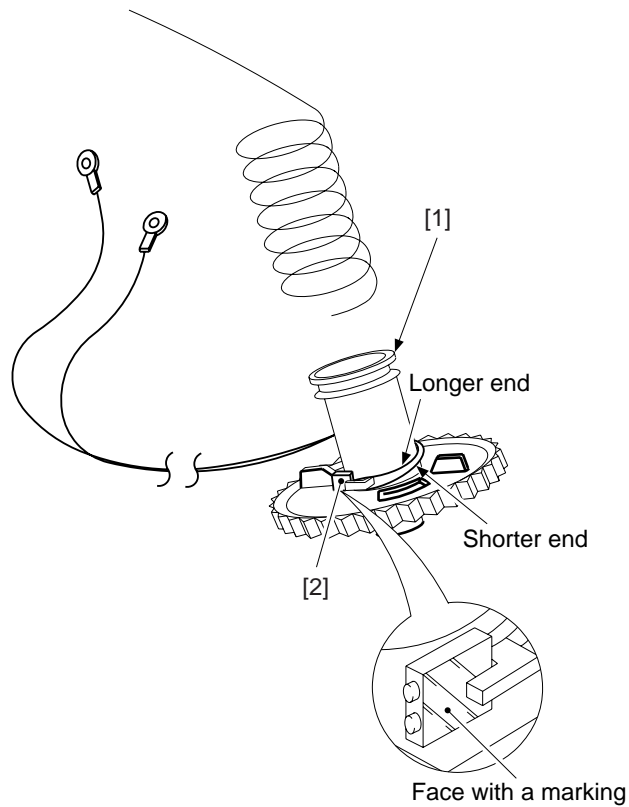


Figure 11-218

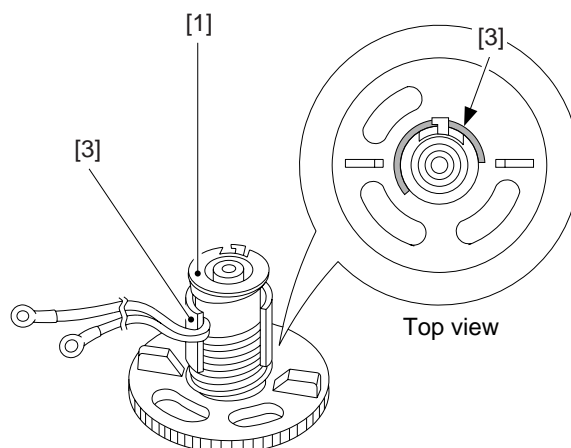


Figure 11-219

- 2) Put the cable drive pulley [1] into the shaft [4], and secure it in position with an E-ring [5].
When putting the cable drive pulley into the shaft, be sure that the hook is at the front.

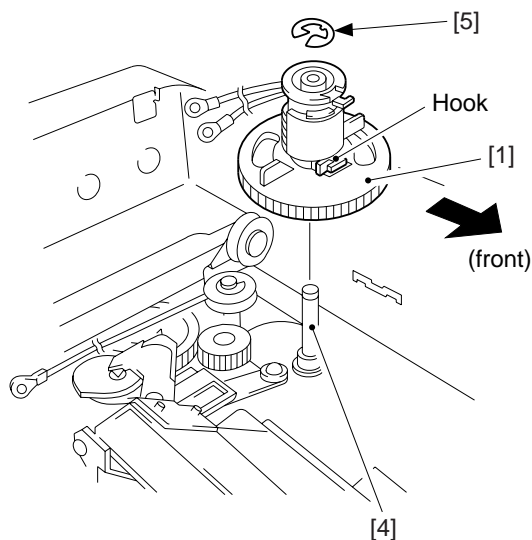


Figure 11-220

- 3) Hook the shorter end [6] on the pulley [7].

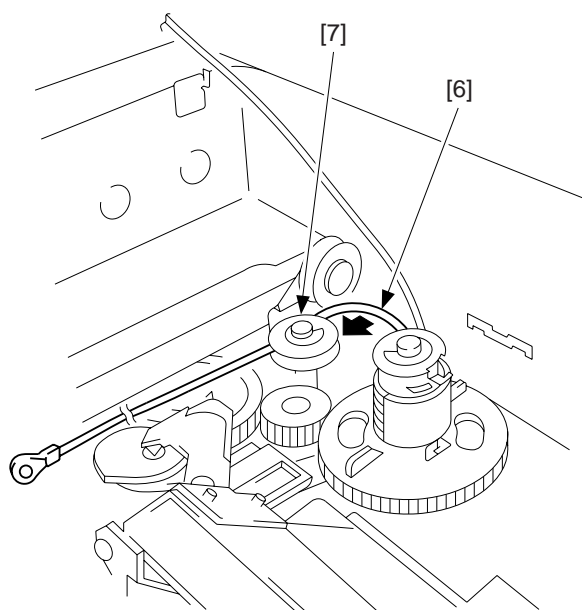


Figure 11-221

- 4) Lead the shorter end [6] under the No. 1 mirror mount [8] and the No. 2/3 mirror mount [9]; then, hook it on the left rear pulley [10] and the pulley [11] of the No. 2/3 mirror mount.

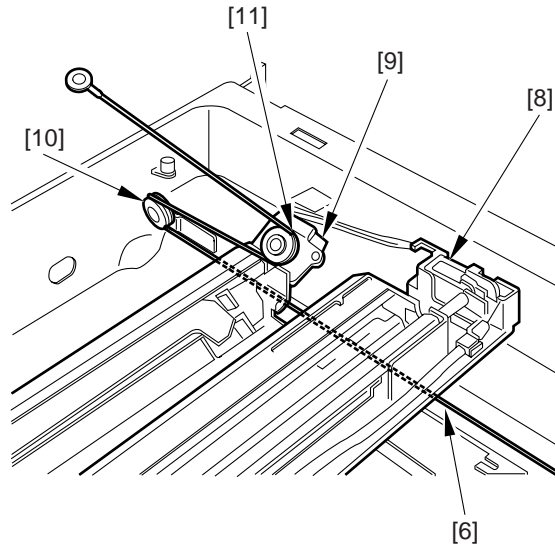


Figure 11-222

- 5) After fitting the shorter end [6] on the cable hook [12], secure its end with adhesive tape [13]. Be sure that the secured end of the cable is found where the hole in the left side plate and the tip of the cable matches.

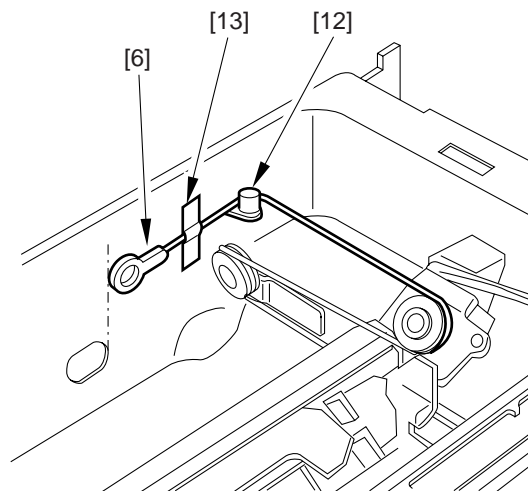


Figure 11-223

- 6) Lead the longer end [14] along the cable drive pulley, and hook it on the pulley [15] on the right front side.

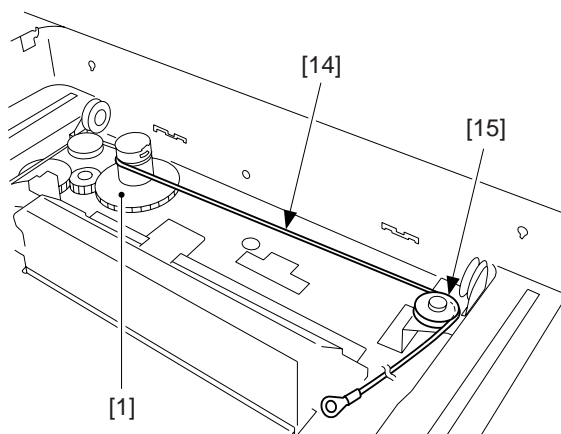


Figure 11-224

- 7) Lead the longer end [14] under the No. 1 mirror mount [8] and the No. 2/3 mirror mount [9]; then, hook it on the pulley [16] on the left front side and the pulley [17] of the No. 2/3 mirror mount.

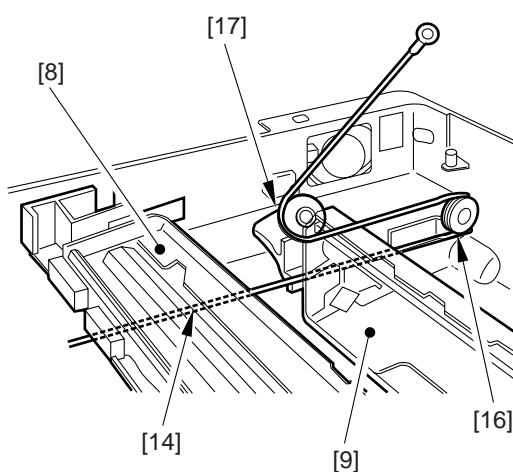


Figure 11-225

- 8) Hook the longer cable [14] on the cable hook [18]; then, secure its end to the left side with adhesive tape [19].

Be sure that the secured end of the cable is found where the hole in the left side plate and the tip of the cable matches.

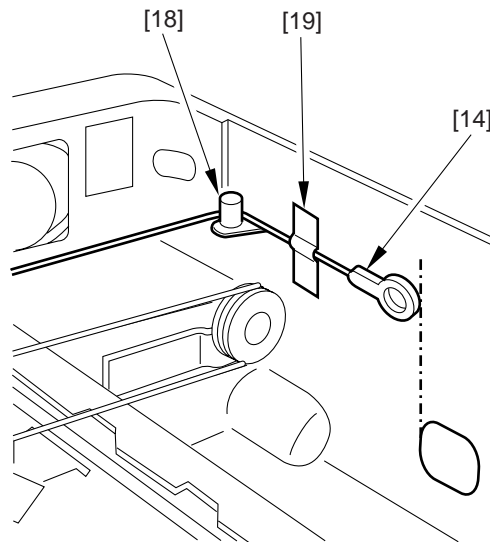


Figure 11-226

3. Routing the Forwarding Cable

- 1) Fit the longer end forwarding cable (black) [2] on the top hook of the cable drive pulley [1], and wind it 1.5 times. Then, secure the shorter end [3] as shown with adhesive tape [4].

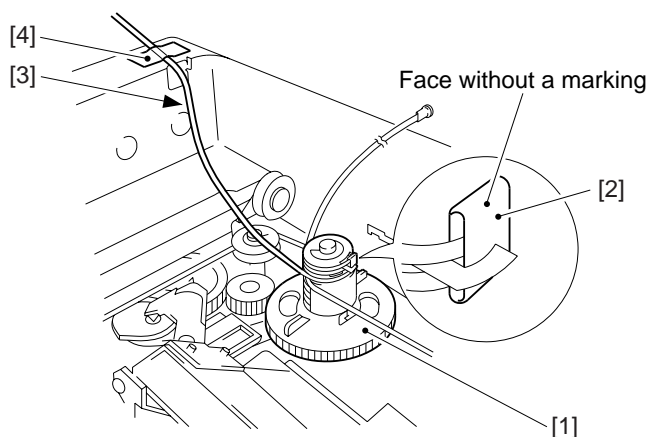


Figure 11-227

- 2) Lead the longer end [5] along the cable drive pulley [1] as shown, and hook it on the pulley [6] on the right front side.

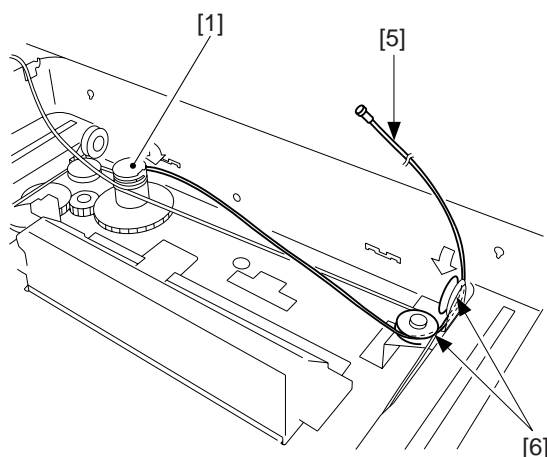


Figure 11-228

- 3) Lead the longer end [5] under the No. 1 mirror mount [7]; then, hook it on the pulley [8] of the No. 2/3 mirror mount, and lead it between the No. 1 mirror mount [7] and the scanning lamp [9].

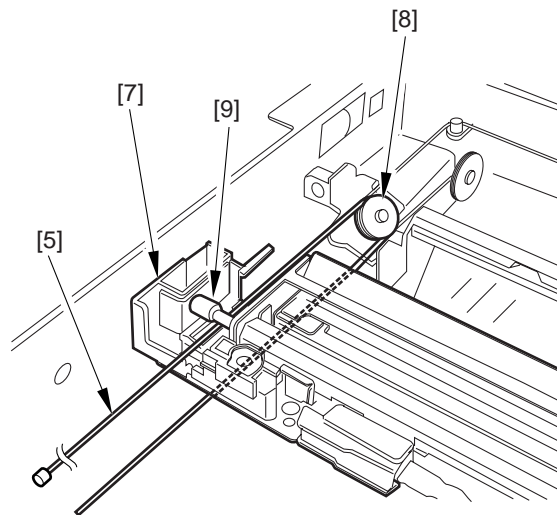


Figure 11-229

- 4) Hook the end of the longer end [5] on the hole [10] on the right side.

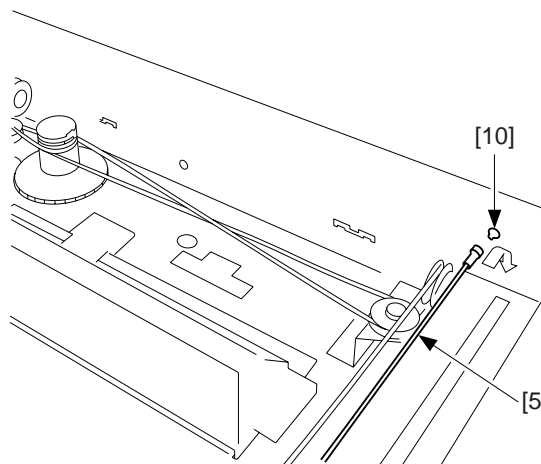


Figure 11-230

- 5) Free the shorter end [3], and hook it on the pulley [11] on the right rear side.

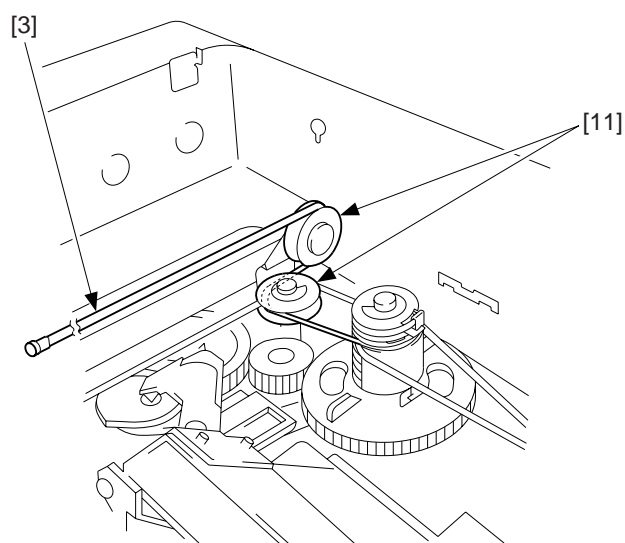


Figure 11-231

- 6) Lead the shorter end [3] under the No. 1 mirror mount [7], and hook it on the pulley [12] of the No. 2/3 mirror mount as shown; then, lead it between the No. 1 mirror mount [7] and the scanning lamp [9].

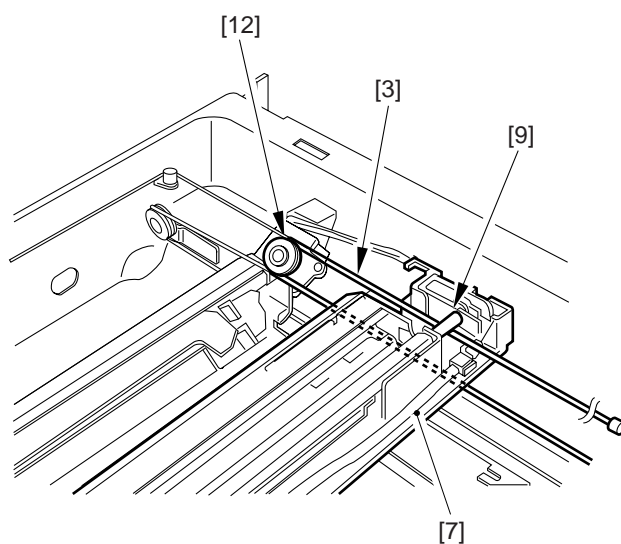


Figure 11-232

- 7) Hook the end of the shorter end [3] on the hole [13] on the right side.

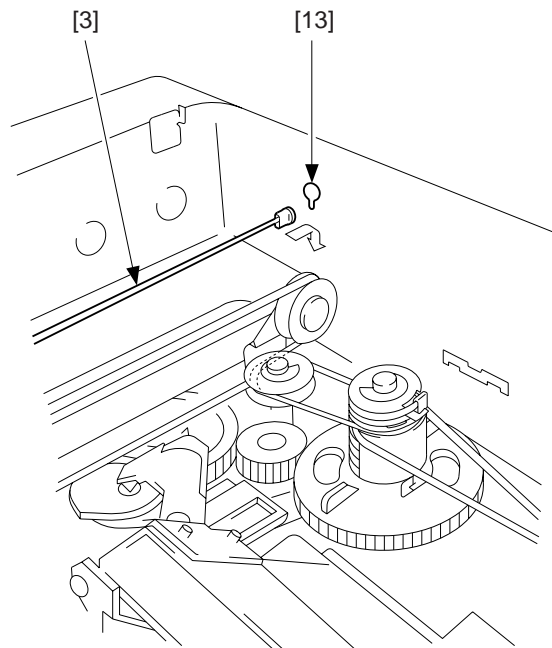


Figure 11-233

- 8) Free the shorter end [3] and the longer end [5] (reversing cable), and connect both with a spring [14]; then, fit the stopper [15].

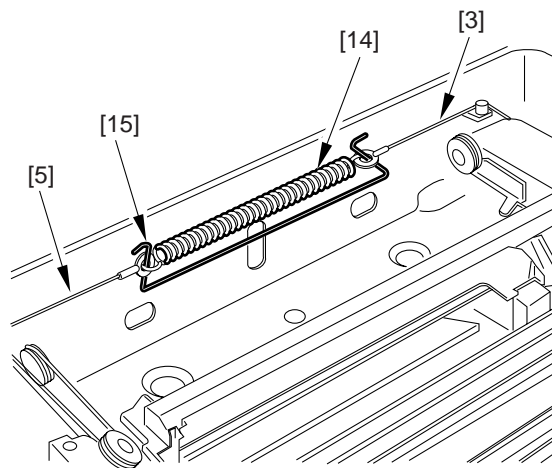


Figure 11-234

- 9) Detach the pulley clip [16] from the cable drive pulley [1].

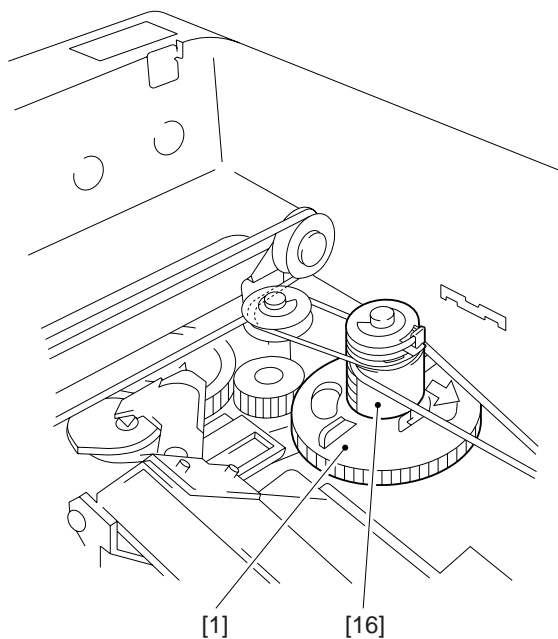


Figure 11-235

4. Positioning the No. 1 Mirror Mount

- 1) Fix the rear and the front of the No. 1 mirror mount [1] temporarily to the metal fixing [2] of the forwarding cable.

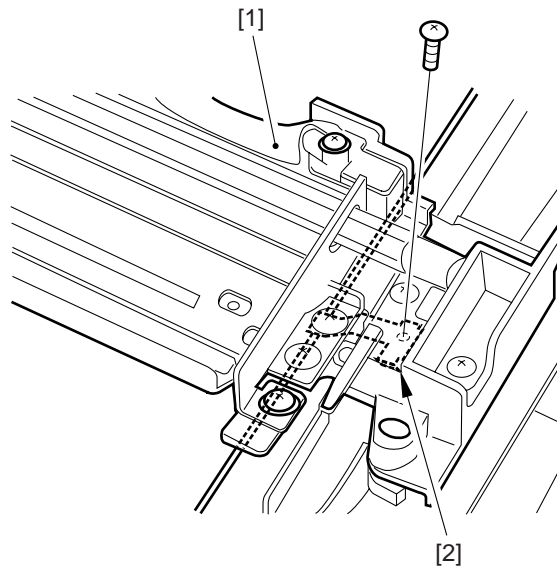


Figure 11-236 (rear)

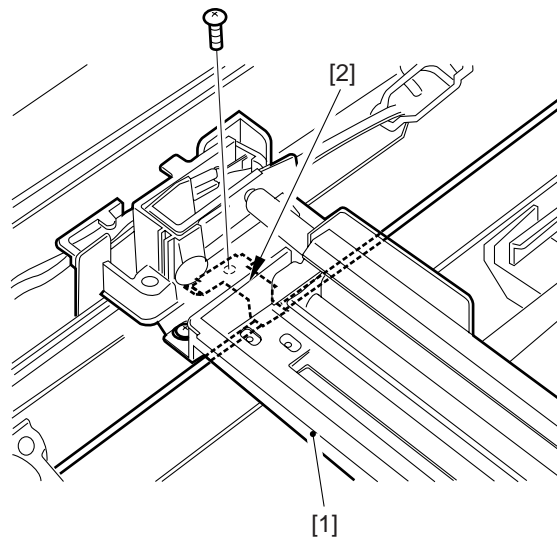


Figure 11-237 (front)

- 2) Turn the cable drive pulley [4] so that the three shafts [3] of the mirror positioning tool for rear and front is as shown.

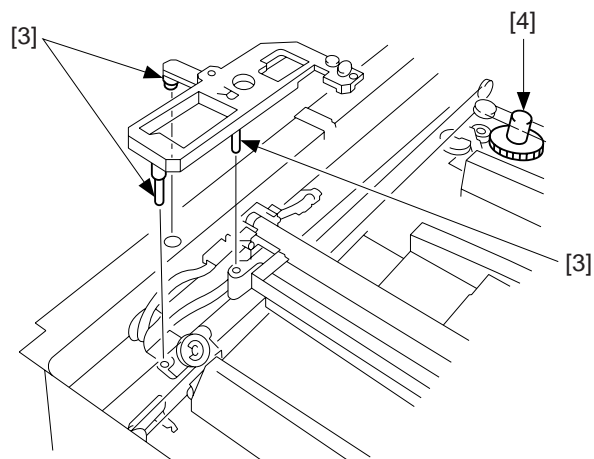


Figure 11-238 (rear)

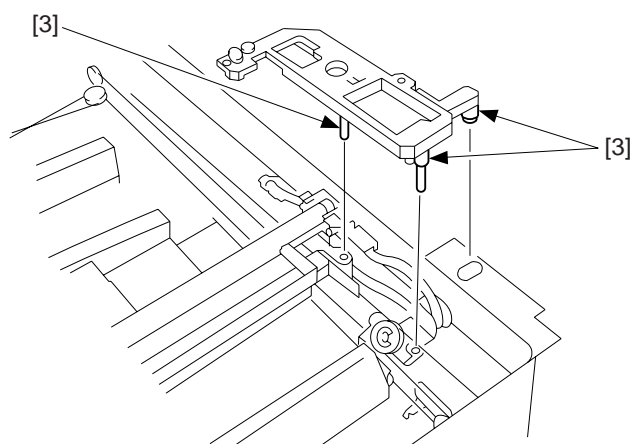


Figure 11-239 (front)

- 3) While keeping the condition of step 2), tighten the positioning screw on the rear and front of the No. 1 mirror mount [1].

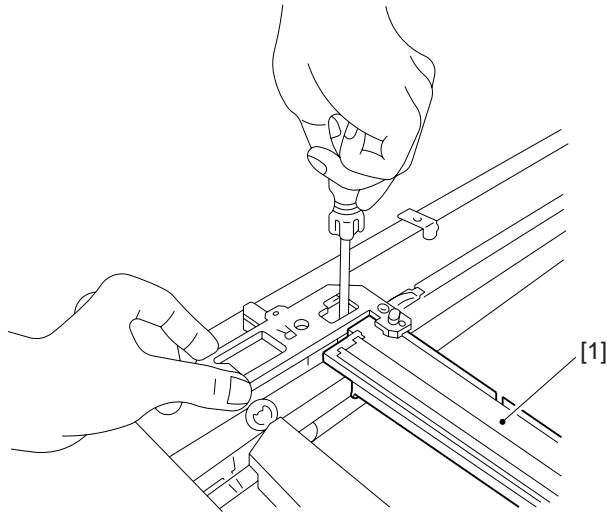


Figure 11-240 (rear)

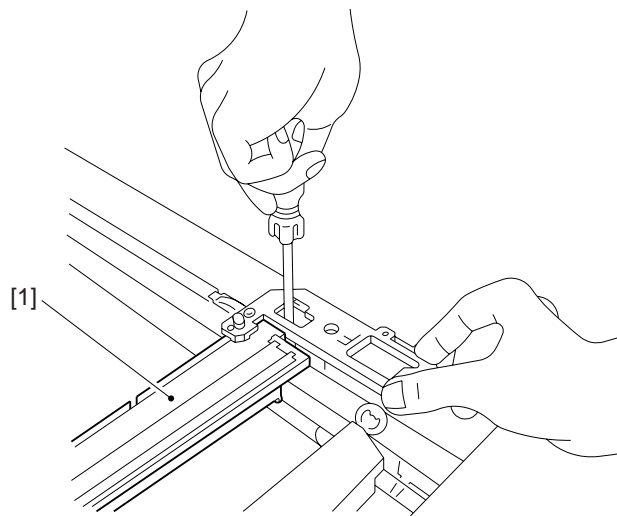


Figure 11-241 (front)

f. Point to Note When Mounting the Scanning Lamp

When mounting the scanning lamp, be sure that its logo mark (manufacturer's name) is toward the front. Further, be sure that the protrusion near its middle is as shown.

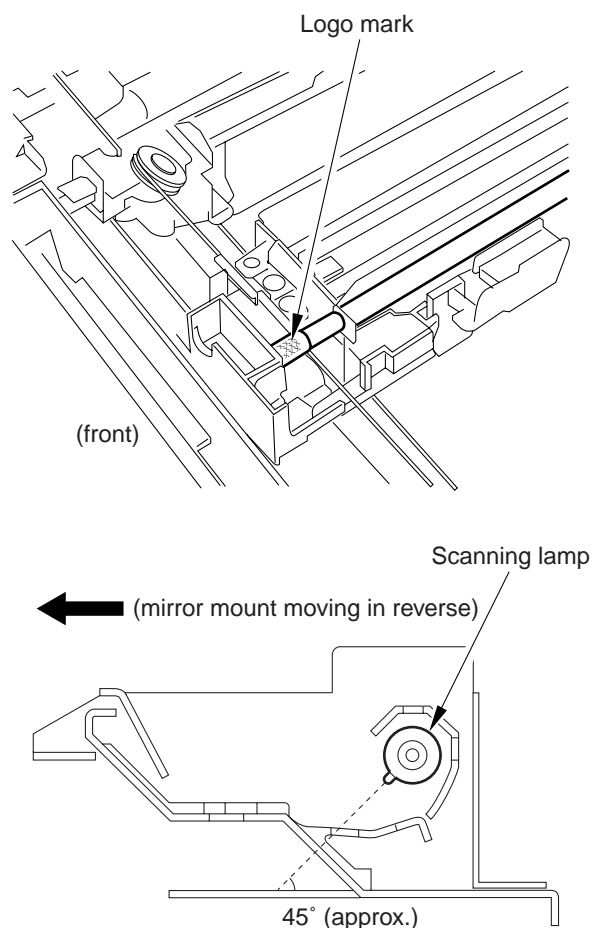


Figure 11-242

Caution:

- If you have replaced the scanning lamp, you must adjust the intensity of the lamp (p. 11-42) and perform AE adjustment.
- Do not touch the lamp when handling it.

g. Points to Note When Mounting the Fuse

When mounting the thermal fuse of the No. 1 mirror mount, be sure that the fuse is oriented as shown.

Make sure that the fuse is in contact with the reflecting plate.

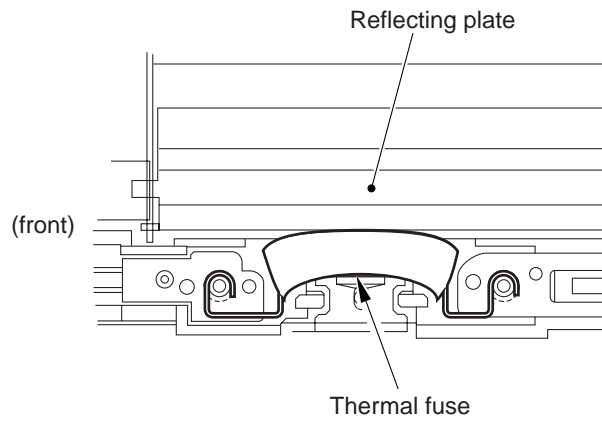


Figure 11-243

B. ADF

1. Adjusting the Original Stop Position

Adjust the original stop position in the following order:

1. Correcting original skew
2. Adjusting the rear/front original stop position
3. Adjusting the original leading edge stop position

2. Correcting Original Skew

- 1) Obtain a sheet of A4 or LTR white copy paper, and draw two lines as indicated.
 - The sheet will be used as a test sheet.

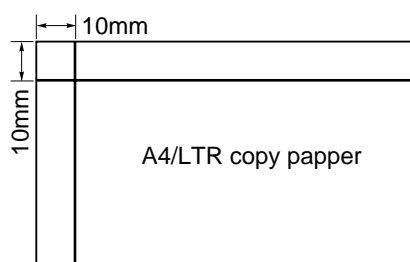


Figure 11-244

- 2) Turn on the machine, and place the test sheet prepared in step 1) on the original tray.

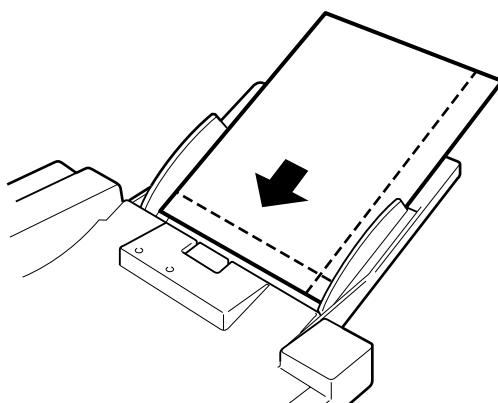
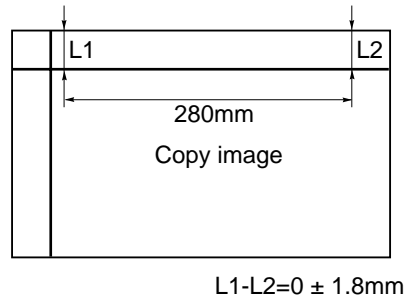
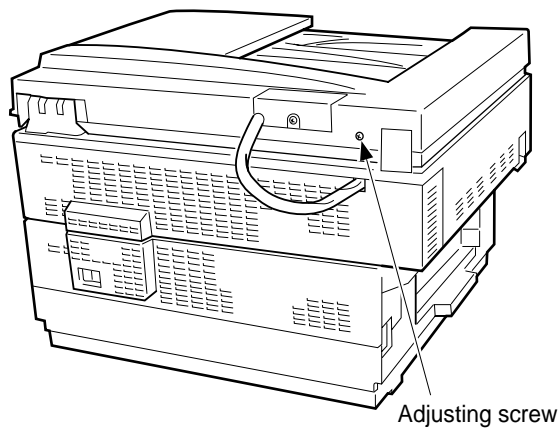


Figure 11-245

- 3) Press the Copy Start key to make a copy.
- 4) Check to make sure that the difference between L1 and L2 on the copy is 1.8 mm (standard) or less.

**Figure 11-246**

- 5) If the difference is not as specified, turn the adjusting screw found to the side of the left hinge unit to make adjustments.

**Figure 11-247**

Relationship between Adjusting Screw and L1/L2

Direction of turn	Relationship between L1 and L2
Clockwise	$L1 > L2$
Counterclockwise	$L1 < L2$

Table 11-203

3. Adjusting the Rear/Front Original Stop Position

You must first correct original skew before adjusting the rear/front original stop position.

- 1) Obtain a sheet of A4 or LTR white copy paper, and draw two lines as indicated.
 - The sheet will be used as a test sheet.

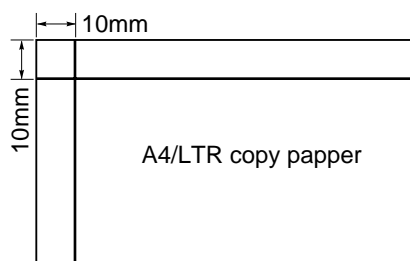


Figure 11-248

- 2) Remove the original tray cover from below the original tray.

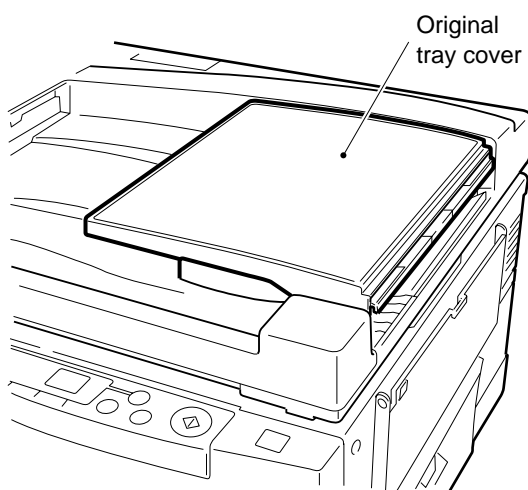


Figure 11-249

- 3) Turn on the machine, and place the test sheet prepared in step 1) on the original tray.

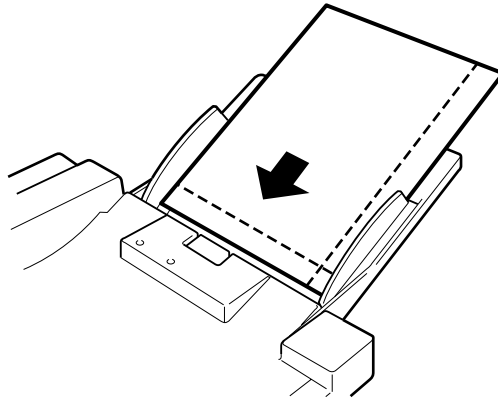


Figure 11-250

- 4) Press the Copy Start key to make a copy.
5) Check to make sure that the distance L3 on the copy image indicated is 10 ± 2.5 mm (standard) or less.

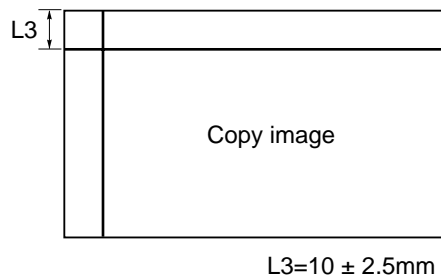


Figure 11-251

- 6) If the distance is not as specified, loosen the pinion gear positioning screw under the original tray, and adjust the position of the pinion gear.

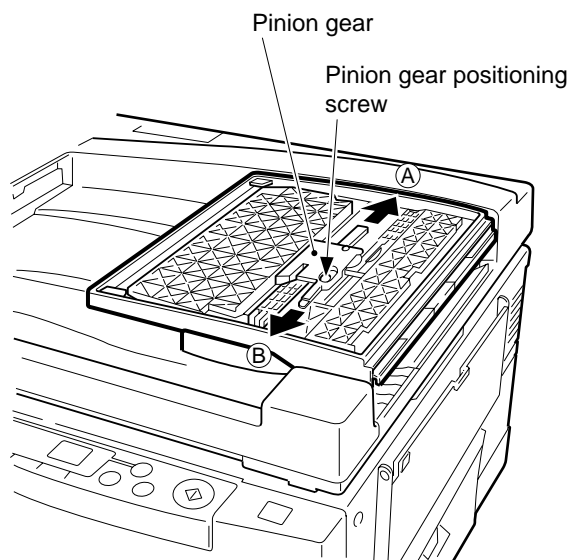


Figure 11-252

Relationship between Pinion Gear Position and L3

Direction of pinion gear	L3
A	Increases
B	Decreases

Table 11-204

4. Adjusting the Original Leading Edge Stop Position

You must first correct original skew and adjust the rear/front original stop position before adjusting the original leading edge stop position.

- 1) Obtain a sheet of A4 or LTR white copy paper, and draw two lines as indicated.
 - The sheet will be used as a test sheet.

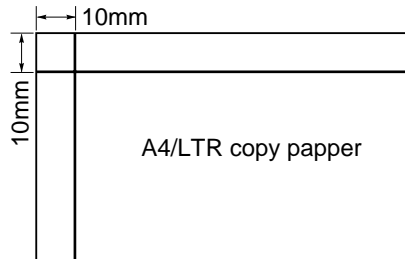


Figure 11-253

- 2) Remove the screw, and remove the ADF controller cover.

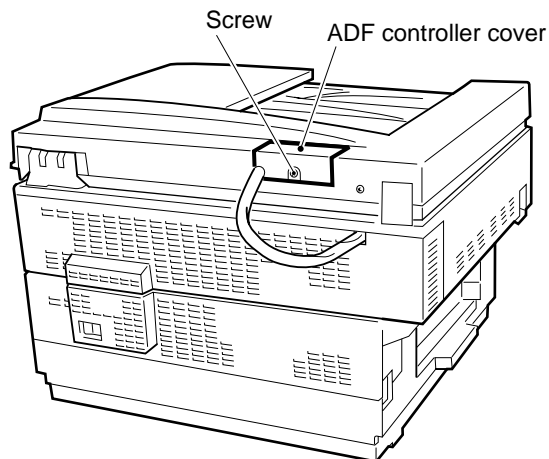


Figure 11-254

- 3) Turn on the machine, and place the test sheet prepared in step 1) on the original tray.

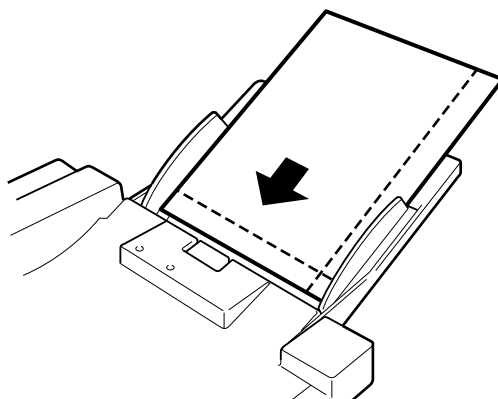


Figure 11-255

- 4) Press the Copy Start key to make a copy.
 5) Check to make sure that the distance L4 on the copy image indicated is 10 ± 2.0 mm (standard) or less.

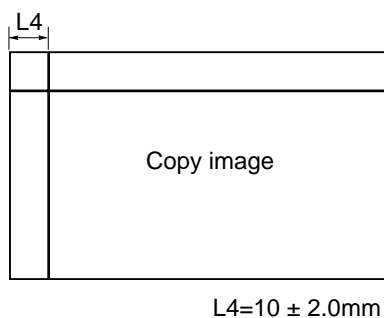


Figure 11-256

- 6) If the distance is not as specified, shift bit 1 of the DIP switch (SW1) on the ADF controller PCB to ON, and place an A4 or LTR white copy paper on the original tray.

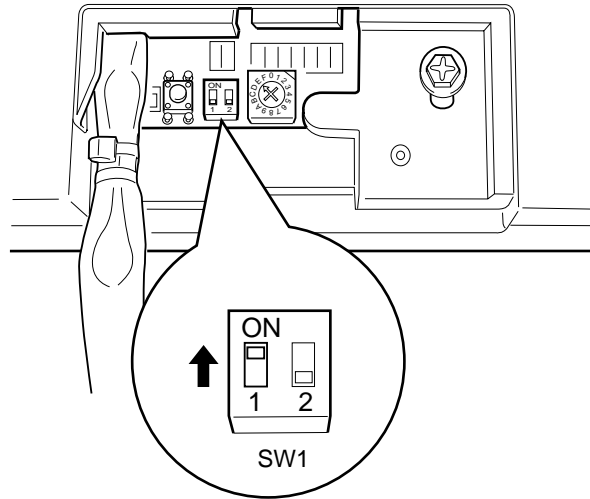


Figure 11-257

- 7) Press the push switch (PSW) on the ADF controller PCB.
- The copy paper will be picked up from the original tray and stopped on the copyboard glass.

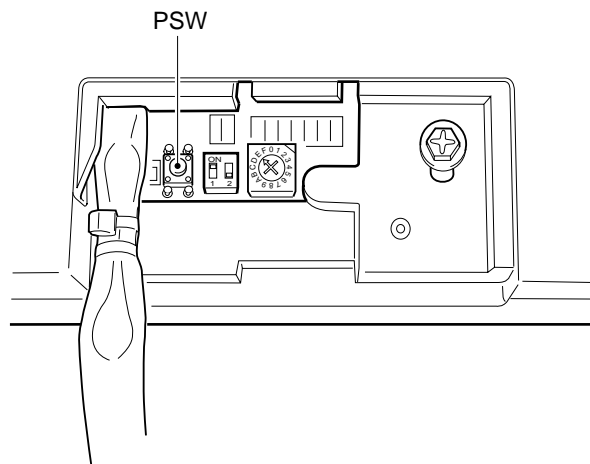


Figure 11-258

- 8) Use the rotary switch (SW2) on the ADF controller PCB to adjust the original leading edge stop position.

Moving the rotary switch by a single notch changes the original stop position by about 0.3 mm. Press the push switch (PSW) after deciding on a position to discharge the copy paper and store the optimum value.

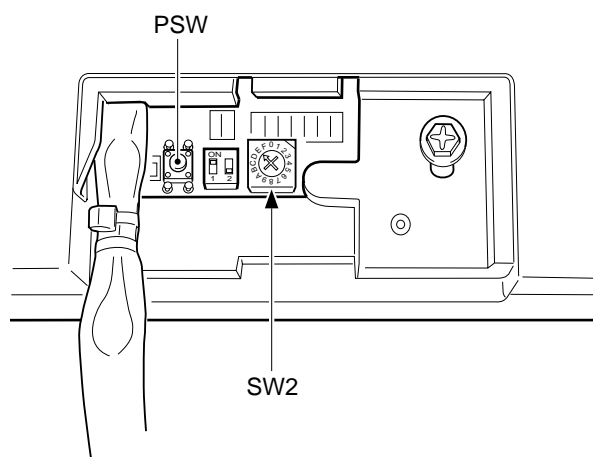


Figure 11-259

Relationship between Rotary Switch Direction and Original Position

Direction of rotary switch	Position (shift) of original
Clockwise	Toward leading edge
Counterclockwise	Toward trailing edge

Table 11-205

Example:

If L4 is 13 mm,

You must shift the original stop position toward the leading edge by 3 mm.

- 1) Place a sheet of A4 or LTR white copy paper on the original tray.
- 2) Shift bit 1 of the DIP switch (SW1) on the ADF controller PCB to ON; then, push the push switch (PSW) to pick up the copy paper.

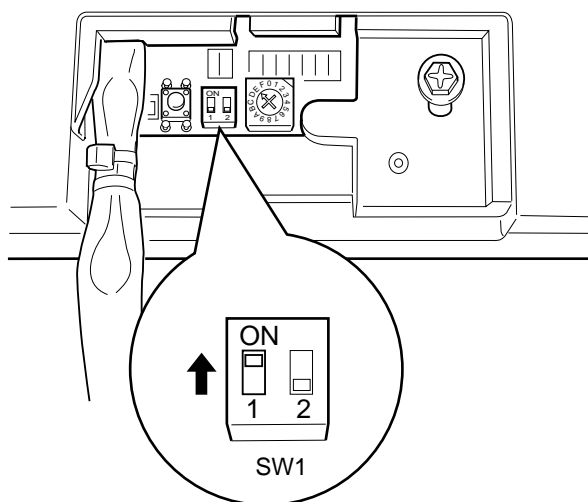


Figure 11-260

- 3) Turn the rotary switch (SW2) on the ADF controller PCB clockwise by 10 notches.

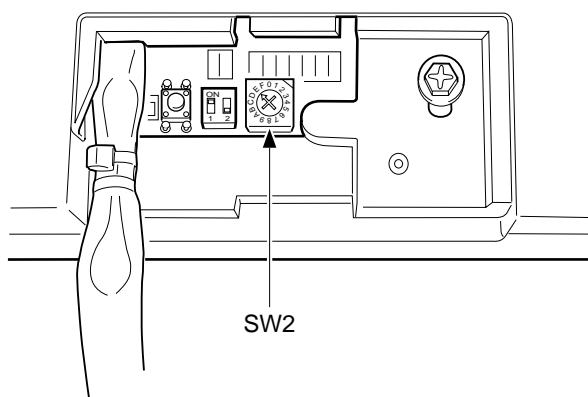


Figure 11-261

- 4) Press the push switch (PSW) on the ADF controller PCB.
 - The copy paper on the copyboard will be discharged, and the optimum value will be stored.

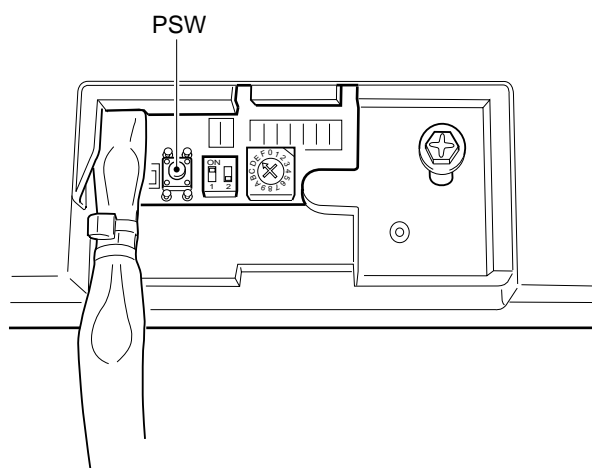


Figure 11-262

C. Electrical

1. After Replacing the Major Parts

Parts	Adjustment
Scanning lamp	1. Intensity of the scanning lamp 2. AE mechanism
AE sensor PCB	1. AE mechanism
Composite power supply PCB*1	(1. Intensity of the scanning lamp) (2. AE mechanism)
DC controller PCB	1. Intensity of the scanning lamp 2. AE mechanism 3. Leading edge non-image width 4. Image leading edge margin 5. Reproduction ratio (fine adjustment)
ADF controller PCB	1. Excute original leading edge stop position adjustment

*1: If you have replaced the composite power supply PCB, check copy images using the Test Sheet; if (and only if) an image fault is found, adjust the intensity of the scanning lamp and execute AE adjustment.

Table 11-206

2. Adjusting the Intensity of the Scanning Lamp

Adjust the intensity of the scanning lamp if you have replaced any of the following:

- DC controller PCB
- Composite power supply PCB (See p.11-41.)
- Scanning lamp

Caution:

If you have performed this adjustment, you must always perform AE adjustment.

Making Adjustments

- 1) Set a cartridge in the machine.
- 2) Set the density correction switch (SW101) to its middle index.


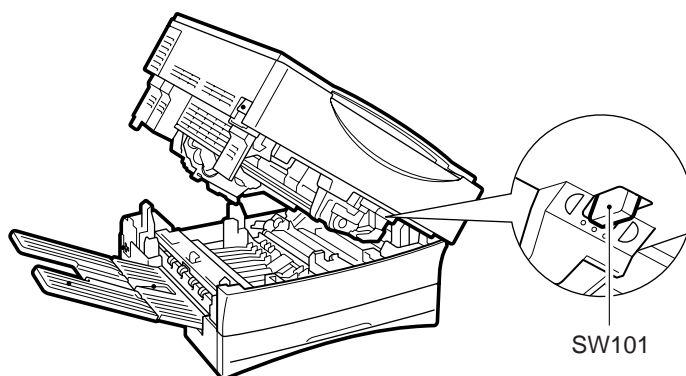


Figure 11-263

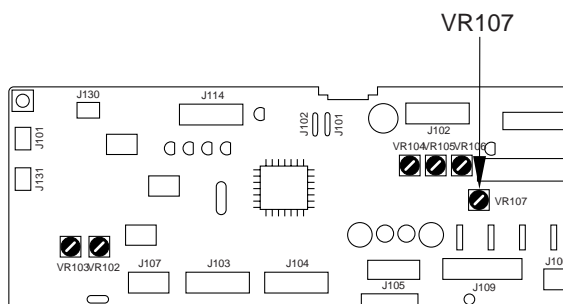- 3) Turn off the AE mechanism, and set the copy density adjusting lever on the control panel to its middle index.
- 4) Place the Test Sheet on the copyboard, and make a copy.
- 5) Turn VR107 on the DC controller PCB gradually until gray scale No. 9 is barely visible.



3. AE Adjustment

Perform this adjustment if you have replaced any of the following:

- DC controller PCB
- Composite power supply PCB (See p.11-41.)
- AE sensor PCB
- Scanning lamp

Making Adjustments

Before Starting the Work

- Obtain a newspaper with more or less even print. (Avoid ones with many photos or large display text.)
- Obtain five sheets of white sheets of paper.
- Be sure that the intensity of the scanning lamp has been adjusted when you have replaced the scanning lamp.
- Set the density correction switch (SW101) to the middle setting. If the machine is not equipped with a density correction switch, set the density adjusting lever to the middle setting.

- 1) Short JP103 and JP104 on the DC controller PCB.

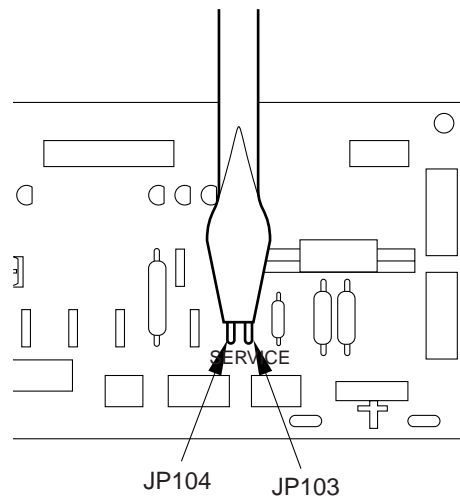


Figure 11-265

- 2) While keeping the condition in step 1), turn on the power.
 - The scanning lamp will turn on, and the main motor (M1) will rotate.
- 3) Stop shorting JP103 and JP104.

- 4) Turn VR103 on the DC controller PCB fully clockwise.

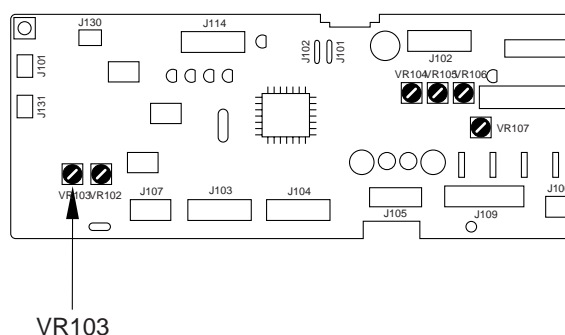


Figure 11-266

- 5) Place a newspaper on the copyboard, and close the copyboard cover.
6) Turn VR102 so that the display indicates 'A3' to 'Ad'.

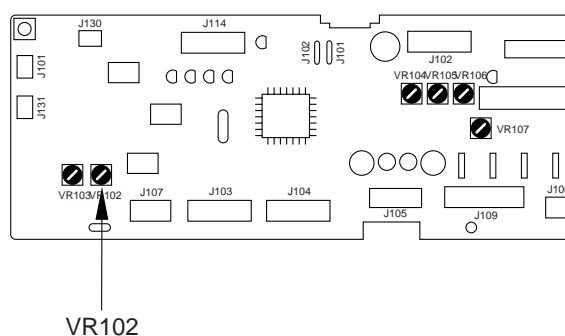


Figure 11-267

- 7) Remove the newspaper from the copyboard, and place five sheets of copy paper in its place; then, close the copyboard cover.
8) Turn VR103 on the DC controller PCB so that the display will indicate '52' to '5c'.

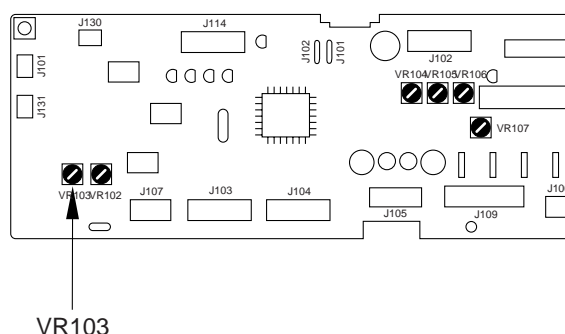


Figure 11-268

- 9) Repeat steps 5) through 8) so that the values of both VR102 and VR103 are target values.

Caution:

If you cannot set VR102 and VR103 to the target values at the same time, turn VR103 fully counterclockwise, and go back to step 5) and make adjustments once again.

- 10) Make a copy, and check to make sure that it is free of fogging and its text is adequately dark.
- If the copy is foggy or its text is too light, go back to step 1) and start over.
 - If the results of adjustment for a second time are not good, make adjustments using the density correction switch (SW101).

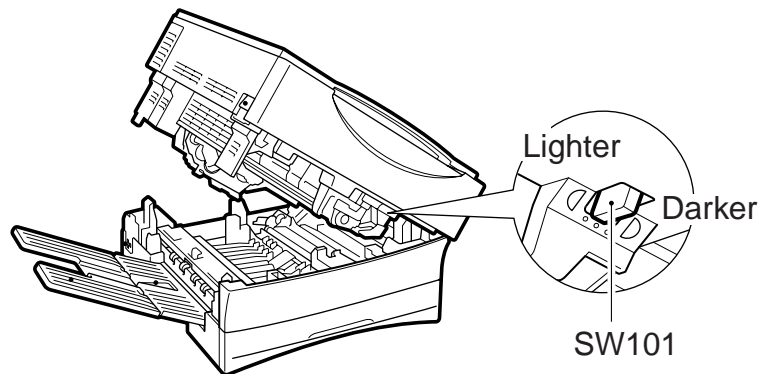


Figure 11-269

4. Adjusting the Reproduction Ratio (fine adjustment)

Adjust the reproduction ratio if you have replaced the following:

- DC controller PCB

Making Adjustments

Before Starting the Work

- Meter

- 1) Before replacing the DC controller PCB, turn on the power; then, connect the meter probes to CP23 and GND on the DC controller PCB, and measure the voltage.

+ probeCP23

- probeGND

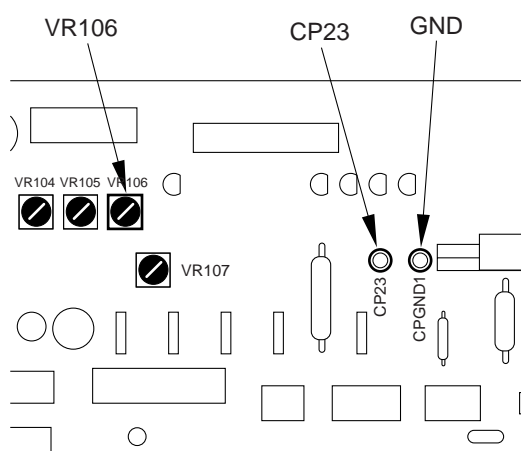


Figure 11-270

- 2) After replacing the DC controller PCB, measure the voltage as in step 1); then, turn VR106 on the DC controller PCB so that the reading is the same as before replacement.

5. Checking the Photointerrupters

- 1) Set the meter range to 12 VDC.
- 2) Connect the - probe to GND (CPGND1) on the DC controller PCB.

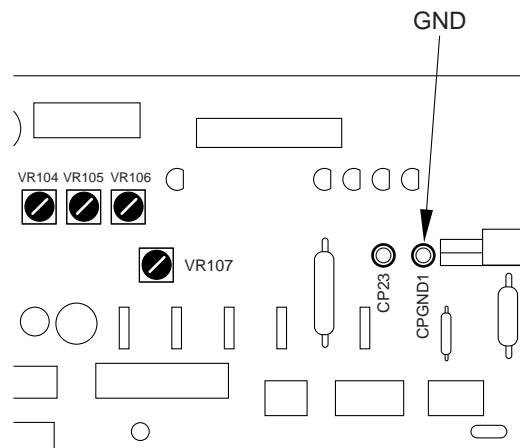


Figure 11-271

- 3) Make checks as instructed.

Reference:

The photointerrupters other than those shown in Table 11-209 are connected in a matrix, hence the omission from the table.

Sensor	Connector	Checks		Voltage (approx.)
PS1 Scanner home position sensor (SCHP)	J101-3	During standby, move the scanner by hand.	When the light-blocking plate is at PS1, When the light-blocking plate is not at PS1,	5V 0V
PS2 Lens home position sensor (LHP)	J109-10	During standby, move the lens mount by hand.	When the light-blocking plate is at PS2, When the light-blocking plate is not at PS2,	5V 0V
PS4 Vertical path roller paper sensor (PDP)	J132-5	During standby, move the detecting lever by hand.	When the light-blocking plate is at PS4, When the light-blocking plate is not at PS4,	5V 0V
Q751 Pre-registration roller paper sensor (RPD)	J108-3	During standby, move the detecting lever by hand.	When the light-blocking plate is at Q751, When the light-blocking plate is not at Q751,	0V 5V

Table 11-208

III. TROUBLESHOOTING IMAGE FAULTS

A. Making Initial Checks

1. Site Environment

Check the site against the following considerations:

- a. The voltage of the power source is as rated.
- b. The site must not be subject to high temperature or humidity (as near a water faucet, water boiler, humidifier) or dust. The machine must not be near a source of fire.
- c. The site must not be subject to ammonium gas.
- d. The machine must not be exposed to direct rays of the sun. (As necessary, instruct the user to provide curtains.)
- e. The site must be well ventilated.
- f. The machine must be kept level.

2. Checking the Originals

Check the originals to find out whether the problem in question is caused by the machine or the originals.

- a. The copy density adjusting lever is often best if set to the middle index.
- b. Originals with a red tint tend to produce copies with poor contrast; e.g., red sheets.
- c. Originals which are diazo copies or with transparency tend to produce copies which can be mistaken for "foggy" copies.

Originals prepared in pencil tend to produce copies with "light" images.

3. Copyboard Cover and Copyboard Glass

If the copyboard cover or the copyboard glass is soiled, clean it with mild detergent solution or alcohol; if scratched, replace it.

4. Lens

Check the lens for dirt. If any, clean it with a cotton swab.

5. Checking the Transfer Charging Roller

- a. Check the transfer charging roller for dirt or fault (scratches).

6. Feeding Assembly

Check the feeding assembly for dirt. If any dirt is found, clean it with a moist cloth.

7. Copy Paper

- a. Is copy paper of a type recommended by Canon?
- b. Is copy paper moist?
Try paper fresh out of package.

8. Consumable

a. Cartridge

When the cartridge starts to run out of toner, copies will start to have white lines or spots as shown.

Preface

Thank you for purchasing this Canon copier. This manual explains the functions and method of use. It is important to read this manual in order to familiarize yourself with its capabilities. After you have read this manual, please read this manual again.

Canon copier. This manual explains the functions and method of use. It is important to read this manual in order to familiarize yourself with its capabilities. After you have read this manual, please read this manual again.

CAUTION

In this manual, CAUTION is used to indicate a procedure that must be followed.

AGES with this manual. It is important to read this manual in order to familiarize yourself with its capabilities. After you have read this manual, please read this manual again.

Figure 11-301

Try the following as necessary:

- 1) Take out the cartridge from the machine, and shake it several times.

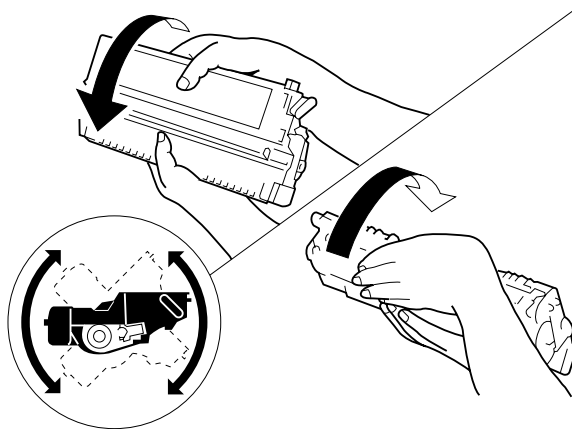


Figure 11-302

- 2) Set the cartridge back into the machine, and make copies.
 - If the copies are normal,
You may continue to use the cartridge, but the user must know that it must be replaced with a new cartridge soon.
 - If the copies are not normal,
Replace the new cartridge.

9. Others

When a machine is brought in from a cold place (e.g., warehouse) to a warm place, condensation can occur inside it, leading to various problems; e.g.,

- a. Condensation on the scanner (glass, lens, mirror, reflecting plate) will cause dark images.
- b. The drum is likely to be cold (high OPC electrical resistance), not enabling good contrast.
- c. Condensation in the pickup/feeding assembly tends to cause feeding faults.
- d. Condensation on the lower roller of the manual feed assembly will reduce friction, causing pickup faults.

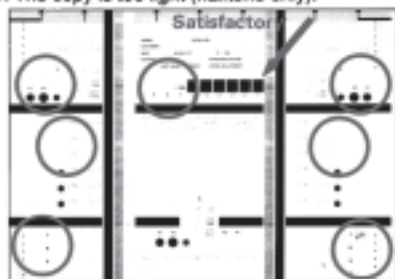
If condensation is noted, dry wipe the parts in question.

The cartridge can develop condensation if it is opened immediately after it has been brought from a cold to warm place. Instruct the user so that the cartridge is not opened before it has become used to the room temperature (one to two hours).



B. Image Fault Samples

NOTE: The samples are created intentionally. The NA-3 Test Sheet was copied in the direct mode in A3 and printed with a reduction of about 19%; actual images may be somewhat different.


1. The copy is too light (halftone only).



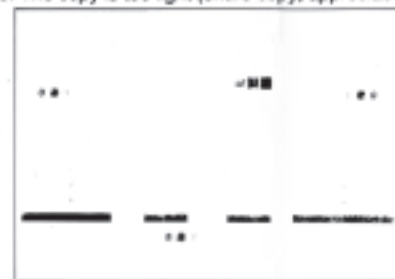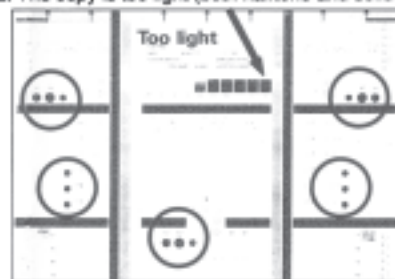
2. The copy is too light (both halftone and solid black). 3. The copy is too light (entire copy, appreciably).



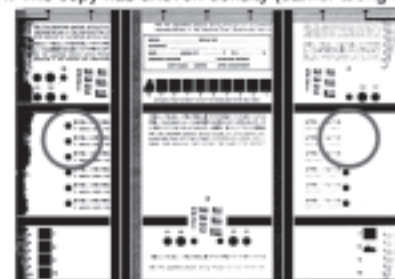4. The copy has uneven density (darker along front).



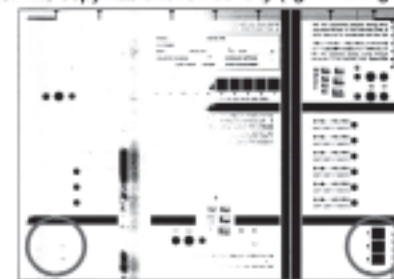
5. The copy has uneven density (lighter along front).




6. The copy is foggy (entire copy).



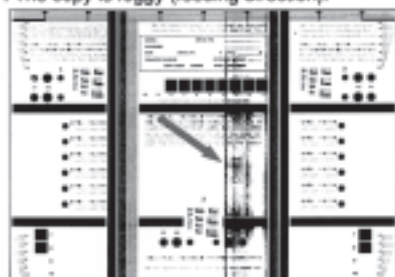
7. The copy is foggy (feeding direction).



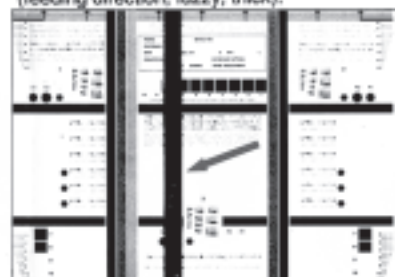8. The copy has black lines (feeding direction, fuzzy, thick).



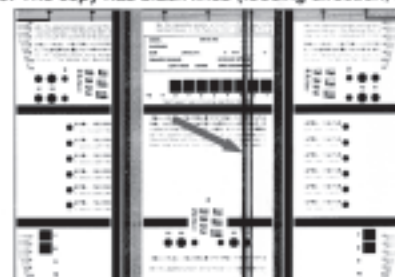
9. The copy has black lines (feeding direction, fine).



10. The copy has white strips (feeding direction).†



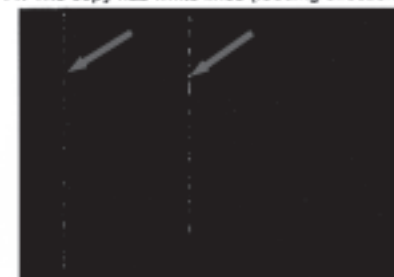11. The copy has white lines (feeding direction).*



12. The copy has white strips (cross-feeding direction).



13. The back of the copy is soiled.



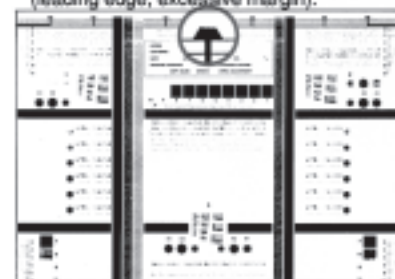
14. The copy has poor fixing.




15. The copy has displaced registration (leading edge, extremely excessive margin).



16. The copy has displaced registration (leading edge, excessive margin).



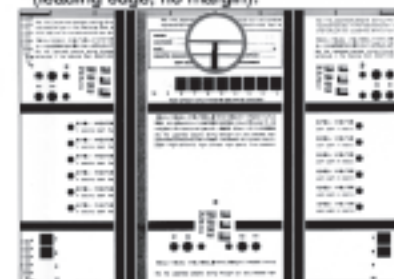17. The copy has displaced registration (leading edge, no margin).




18. The copy has blurred images.



19. The copy is foggy (cross-feeding direction).



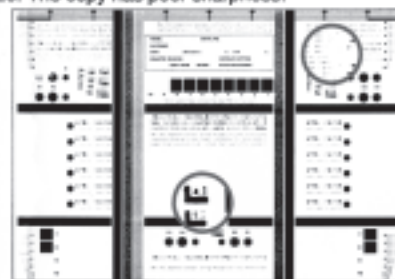20. The copy has poor sharpness.



21. The copy is blank.



22. The copy is solid black.



* Copies made with the copyboard lifted; faults may also appear on normally made copies.

† Strips may vary in width.

C. Troubleshooting Image Faults

1	The copy is too light. (halftone area only)
2	The copy is too light. (including solid area)
3	The copy is too light. (enter image, appreciably)

Cause	Step	Checks	YES/NO	Action
Lens, Reflecting plate, AE sensor, Static eliminator	1	Clean the lens, reflecting plate, AE sensor, and static eliminator. Is the problem corrected?	YES	End.
-----	2	Turn off the power in the middle of a copying run, and open the machine's top unit. Is the toner image before transfer more or less normal? (Be sure to make a check in a short time to protect the drum from light.)	NO	Go to step 6.
Transfer charging roller	3	Is the transfer charging roller normal?	NO	1. Mount the transfer charging roller correctly. 2. Replace the transfer charging roller.
Copy paper	4	Try fresh copy paper. Is the problem corrected?	YES	1. The copy paper may be moist. Instruct the user on the correct method of storage. 2. Inform the user that using non-recommended paper may not bring the best results.
Transfer lower guide, Varistor	5	Measure the electrical resistance on the transfer lower guide plate and the side plate (metal) of the fixing assembly. Is it 0Ω?	YES	1. Check to find out if the transfer lower guide happens to be in contact with a metal part (side plate). 2. Replace the varistor.
Composite power supply PCB, DC controller PCB			NO	1. Check the transfer high-voltage terminal contacts for electrical continuity. 2. Check the composite power supply and the DC controller PCB.
Cartridge	6	Replace the cartridge. Is the problem corrected?	YES	End.
Developing bias, Developing bias terminal			NO	Replace the electric unit (composite power supply PCB, DC controller PCB).

4	The copy has uneven density. (darker at front)
5	The copy has uneven density. (lighter at front)

Cause	Step	Checks	YES/NO	Action
Scanner	1	Clean the scanning lamp, reflecting plate, lens, and mirror. Is the problem corrected?	YES	End.
Cartridge, Scanning lamp	2	Turn off the power in the middle of a copying run, and open the machine. Is the toner image on the photosensitive drum before transfer more or less uneven?	YES	1. Replace the cartridge. 2. Replace the scanning lamp.
Transfer charging roller			NO	1. Mount the transfer charging roller correctly. 2. Replace the transfer charging roller correctly.

6	The copy is foggy. (entire face)
----------	---

Cause	Step	Checks	YES/NO	Action
-----	1	Is the density correction switch (SW101) or the density adjusting lever set to the middle setting?	NO	Set the switch or the lever to the middle setting, and make a copy. If the image is still foggy, to step 2).
Scanner	2	Clean the scanning lamp, reflecting plate, lens, and mirror. Is the problem corrected?	YES	End.
Grounding spring	3	Set the cartridge in the machine. Is there electrical continuity between the PCB of the base of the drum and the machine's top unit?	NO	Check to see if the grounding spring is mounted correctly (in reference to the drum drive gear).
Scanning lamp, Developing bias			YES	1. Check the activation of the scanning lamp. 2. Check the developing assembly.

- | | |
|----------|---|
| 7 | The copy is foggy vertically. |
| 8 | The copy has black lines. (vertical, fuzzy, thick) |
| 9 | The copy has black lines. (vertical, fine) |

Cause	Step	Checks	YES/NO	Action
Scanner	1	Clean the scanning lamp, reflecting plate, lens, and mirror. Is the problem corrected?	YES	End.
Transfer guide assembly	2	Clean the transfer guide assembly. Is the problem corrected?	YES	End.
Cartridge	3	Take out and then set the cartridge once again. Is the problem corrected?	YES	End.
			NO	Replace the cartridge.

- | | |
|-----------|---|
| 10 | The copy has white spots. (vertical) |
| 11 | The copy has white lines. (vertical) |

Cause	Step	Checks	YES/NO	Action
Fixing assembly	1	Turn off the power in the middle of a copying run, and open the machine's top unit. Does the copy image before moving through the fixing assembly have white spots or white lines?	YES	Check the fixing assembly.
Cartridge	2	Shake the cartridge several times. Is the problem corrected?	YES	Inform the user that the cartridge is running out of toner.
Static eliminator	3	Clean the static eliminator. Is the problem corrected?	YES	End.
Transfer charging roller	4	Is there foreign matter or scratches in the transfer charging roller assembly?	YES	Remove the foreign matter, or replace the transfer charging roller.
Cartridge			NO	Replace the cartridge.

12 The copy has white spots. (horizontal)

Cause	Step	Checks	YES/NO	Action
Copy paper	1	Is the paper of a recommended type?	YES	Try a recommend type. If the results are good, ask the user to use a recommended type.
	2	Try paper fresh out of package. Is the problem corrected?	YES	The paper may be moist. Instruct the user on the correct method of storing paper.
Scanner rail	3	Is the problem noted at the same position on all copies?	Yes	1. Check the scanner rail for foreign matter. 2. Adjust the tension of the scanner cable.
Scanning lamp, Developing bias			NO	Check the scanning lamp for flickering and the presence/absence of a developing bias.

13 The back of the copy is soiled.

Cause	Step	Checks	YES/NO	Action
-----	1	Turn off the power while copy paper is moving through the feeding assembly. Is the back of the paper soiled?	NO	Go to step 3.
Transfer guide assembly	2	Is the transfer guide assembly soiled?	YES	1. Clean the transfer guide. 2. Clean the registration roller. 3. Check the varistor. 4. Check the cartridge for leakage of toner.
Feeding assembly	3	Is the feeding assembly soiled?	YES	Clean the feeding assembly.
Pickup guide assembly, Delivery roller			NO	Clean the pickup guide assembly and the delivery roller.

14 The copy has a fixing fault.

Cause	Step	Checks	YES/NO	Action
Copy paper	1	Is the copy paper of a recommended type?	NO	Try a recommended type. If the results are good, ask the user to use a recommended type.
Fixing film	2	Is the problem vertical and, in addition, in the form of lines?	YES	Check the fixing film and the fixing lower roller for scratches. If there are scratches, replace them.
Fixing heater	3	Does the heater turn on when the Copy Start key is pressed?	NO	See "The fixing heater fails to turn on."
DC controller PCB, Composite power supply PCB			YES	The control temperature of the fixing heater is likely to be too low. Check the fixing assembly top unit, DC controller PCB, and composite power supply PCB.

15 The copy has a misplaced leading edge. (extremely excess margin)**16 The copy has a misplaced leading edge. (excess margin)****17 The copy has a misplaced leading edge (no margin)**

Cause	Step	Checks	YES/NO	Action
Pickup roller, Pickup clutch, Cassette	1	Make copies using the cassette and manually. Are the results the same?	NO	Check the pickup roller, pickup clutch, and cassette. Or, replace them.
Sensor (PS1), Light-blocking plate	2	Are the scanner home position sensor (PS1) and the light-blocking plate normal? (See the instructions on how to check the photointerrupter.)	NO	Replace the sensor, or check the light-blocking plate.
VR104	3	Adjust the image leading edge margin. (p. 11-6) Is the problem corrected?	YES	End.
Solenoid (SL2), DC controller PCB	4	Does the registration clutch solenoid (SL2) operate normally?	NO	1. Check the solenoid (SL2). 2. Check the DC control PCB.
Copy paper	5	Is the paper of a recommended type?	NO	Try a recommended type. If the results are good, ask the user to use a recommended type.
Registration clutch			YES	Check the registration clutch.

18 The copy has a blurred image.

Cause	Step	Checks	YES/NO	Action
Scanner drive cable	1	Does the cable wind on itself when the scanner is moving? Or, is the cable too slack or too taut?	YES	1. Route the cable correctly. 2. If the cable is twisted or frayed, replace it.
Scanner rail	2	Move the No. 1 mirror mount slowly by hand. Does it move slowly?	NO	Clean the surface of the scanner rail with alcohol. Then, apply lubricant. (CK-0551)
-----	3	Is abnormal noise heard from the scanner motor?	YES	See "The scanner fails to move forward/in reverse."
Feeding system	4	Does the copy paper spring up or stop around the transfer assembly?	YES	Check the feeding assembly for burrs.
Cartridge			NO	Replace the cartridge.

19 The copy has horizontal fogging.

Cause	Step	Checks	YES/NO	Action
Scanning lamp	1	Does the scanning lamp flicker?	YES	Replace the scanning lamp.
Cartridge, High-voltage transformer assembly	2	Replace the cartridge. Is the problem corrected?	YES	End.
			NO	Check the high-voltage transformer (composite power supply PCB).
Scanning system	3	Make a reduced copy, and compare it against one made in Direct. Is the problem found at different positions?	YES	Check the scanning system.
Feeding system			NO	Check the feeding system.

20 The copy has poor sharpness. (out-of-focus)

Cause	Step	Checks	YES/NO	Action
-----	1	Is the image also too light?	YES	Correct the light image problem first.
Original	2	Is the original off the copyboard glass?	YES	1. Check the copyboard cover too see if it happens to be warping. 2. Instruct the user on the correct method of placing originals.
Lens	3	Turn off and then on the power switch. Does the lens move smoothly?	NO	Check the lens rail for foreign matter, and clean it.
Mirror position	4	Is the horizontal ratio in Direct within specification?	NO	Adjust the distance between No. 1 mirror and the No. 2 mirror.
Scanner	5	Clean the scanning lamp, reflecting plate, mirror, and lens. Is the problem corrected?	YES	End.
Cartridge			NO	Replace the cartridge.

21 The copy is blank.

Cause	Step	Checks	YES/NO	Action
Cartridge	1	Is the cartridge set in the machine?	NO	Set the cartridge in the machine.
	2	Does the cartridge have toner?	YES	Replace the cartridge.
	3	Has the open seal been removed?	NO	Remove the opening seal.
	4	Set the cartridge in the machine, and close the machine. Does the drum cover shutter open properly?	NO	Check the cartridge.
Drum drive assembly	5	Does the drum drive gear rotate normally?	NO	Check the drum drive assembly.
High-voltage transformer	6	Is the primary charging terminal on the front left of the cartridge in firm contact with the high-voltage terminal at the machine's bottom?	YES	Check the high-voltage transformer (composite power supply PCB).
Primary high-voltage charging terminal, cartridge			NO	1. Check the contacts for electrical continuity. 2. Replace the cartridge


22 The copy is solid black.

Cause	Step	Checks	YES/NO	Action
-----	1	Does the scanning lamp remain on during copying?	NO	See “The scanning lamp fails to turn on.”
			YES	Is the cartridge set correctly?

IV. TROUBLESHOOTING MALFUNCTIONS

A. Troubleshooting Malfunctions

1	E0
---	----

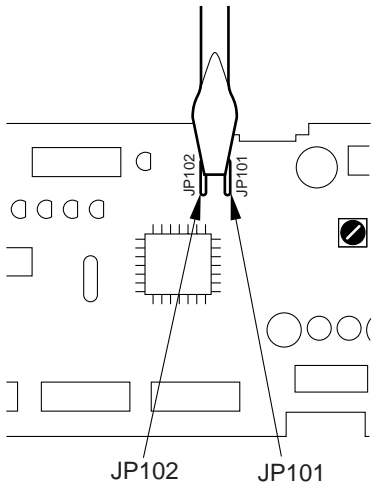Cause	Step	Checks	YES/NO	Action
-----	1	<p>1) Turn off the power, and short JP101 and JP102 on the DC controller PCB with a screwdriver.</p>  <p style="text-align: center;">Figure 11-401</p> <p>2) While keeping the condition in step 1), turn on the power switch.</p> <p>3) Is an error code indicated in response to a press on the Copy Start key?</p>	<p>YES</p> <p>NO</p>	<p>See the instructions given for the respective error code.</p> <p>End.</p>

2 E000

Cause	Step	Checks	YES/NO	Action
Thermistor (TH1)	1	Are the connection of J102 on the DC controller PCB and the wiring to the thermistor (TH1) normal?	NO	Correct the connection of J102 on the DC controller PCB and the wiring to the thermistor (TH1).
Heater, Fuse (FU2)	2	Is there electrical continuity between J207-1 and -2 on the fixing heater side?	NO	Check the wiring from the composite power supply PCB to the fixing heater; if normal, replace the fixing assembly upper unit.
Thermistor (TH1)	3	Replace the fixing upper unit. Is the problem corrected?	YES	End.
Composite power supply PCB	4	Replace the composite power supply PCB. Is the problem corrected?	YES	End.
DC controller PCB			NO	Replace the DC controller PCB.

3 E001

Cause	Step	Checks	YES/NO	Action
Thermistor (TH1)	1	Are the connection of J102 on the DC controller PCB and the wiring to the thermistor (TH1) normal?	NO	Correct the connection of J102 on the DC controller PCB and the wiring to the thermistor (TH1).
Thermistor	2	Replace the fixing assembly upper unit. Is the problem corrected?	YES	End.
Composite power supply PCB	3	Replace the composite power supply PCB. Is the problem corrected?	YES	End.
DC controller PCB			NO	Replace the DC controller PCB.

4 E002, E003

Cause	Step	Checks	YES/NO	Action
Thermistor (TH1)	1	Is the connection of J102 on the DC controller PCB and the wiring to the thermistor (TH1) normal?	NO	Correct the connection of J102 on the DC controller PCB and the wiring to the thermistor (TH1).
Heater, Fuse (FU2)	2	Is there electrical continuity between J207-1 and -2 on the fixing heater side?	NO	Check the wiring from the composite power supply PCB to the fixing heater; if normal, replace the fixing upper unit.
Thermistor (TH1)	3	Replace the fixing assembly upper unit. Is the problem corrected?	YES	End.
Composite power supply PCB	4	Replace the composite power supply PCB. Is the problem corrected?	YES	End.
DC controller PCB			NO	Replace the DC controller PCB.

5 E010

Cause	Step	Checks	YES/NO	Action
Wiring 1	1	Are the connection of J205 on the composite power supply PCB and the wiring to the main motor (M1) normal?	NO	Correct the connection of J205 on the composite power supply PCB and the wiring to the main motor (M1).
Wiring 2	2	Is the wiring from J203 and J202 on the composite power supply PCB to J103 and J105, respectively, on the DC controller PCB normal?	NO	Correct the connection and wiring of the connectors.
DC power supply	3	Turn on the power switch. Is the voltage between J901-1 (+) and -2 (-) on the main motor drive PCB about 24 V?	NO	Check the wiring from the main motor driver PCB to the composite power supply PCB; if normal, see "DC power fails to turn on."
Main motor (M1)	4	Replace the main motor (M1). Is the problem corrected?	YES	End.
DC controller PCB			NO	Replace the DC controller PCB.

6 E064

Cause	Step	Checks	YES/NO	Action
Wiring	1	Turn off and then on the power switch; then, set the copy count to '1'. Is 'E064' indicated at the end of a copying run?	YES	Check the wiring between the DC controller PCB and the composite power supply PCB. Check the wiring between the composite power supply PCB and the high-voltage contact PCB.
High-voltage contact	2	Is the connection between the high-voltage contacts of the machine's top and bottom units normal?	NO	Correct the high-voltage contacts of the machine's top and bottom units.
Transfer charging roller	3	Is the transfer charging roller or the contact faulty?	YES	Replace the transfer charging roller.
Primary charging roller	4	Replace the cartridge. Is the problem corrected?	YES	End.
High-voltage cable	5	Does the high-voltage cable have scratches or tears?	YES	Replace the high-voltage cable.
Composite power supply PCB	6	Replace the composite power supply PCB. Is the problem corrected?	YES	End.
DC controller PCB			NO	Replace the DC controller PCB.

7 The keys on the control panel are locked. ('E202')

Cause	Step	Checks	YES/NO	Action
-----	1	Is the scanner in the home position when 'E202' turns on?	NO	See "The scanner fails to move forward."
Scanner home position sensor (PS1)	2	Is the scanner home position sensor (PS1) normal? (For instructions on how to check photointerrupters, see p. 11-47.)	NO	Check the wiring from J101 on the DC controller PCB to PS1; if normal, replace PS1.
DC controller PCB			YES	Replace the DC controller PCB.

8 E210

Cause	Step	Checks	YES/NO	Action
-----	1	Does the lens move when the power is turned on?	NO	See “The lens fails to move.”
Lens home position sensor (PS2)	2	Is the lens home position sensor (PS2) normal? (For instructions on how to check the photointerrupters, see p. 11-47.)	NO	Check the wiring from J109 on the DC controller PCB to PS2; if normal, replace PS2.
DC controller PCB			YES	Replace the DC controller PCB.

9 E220

Cause	Step	Checks	YES/NO	Action
-----	1	Does the scanning lamp turn on when the Copy Start key is pressed?	NO	See “The scanning lamp fails to turn on.”
Composite power supply PCB	2	Replace the composite power supply PCB. Is the problem corrected?	YES	End.
DC controller PCB			NO	Replace the DC controller PCB.

10 E240

Cause	Step	Checks	YES/NO	Action
Wiring	1	Is the wiring from J203 and J204 on the composite power supply PCB and J103 and J104, respectively, on the DC controller PCB normal?	NO	Correct the connection and the wiring of the connectors.
Composite power supply PCB	2	Replace the composite power supply PCB. Is the problem corrected?	YES	End.
DC controller PCB			NO	Replace the DC controller PCB.

11 E261

Cause	Step	Checks	YES/NO	Action
Power supply frequency	1	Turn off and then on the power switch. Is the problem corrected?	YES	End. However, if ‘E261’ occurs frequently, advise the user to use a frequency stabilizer.
Composite power supply PCB			NO	Replace the composite power supply PCB.

12 E400

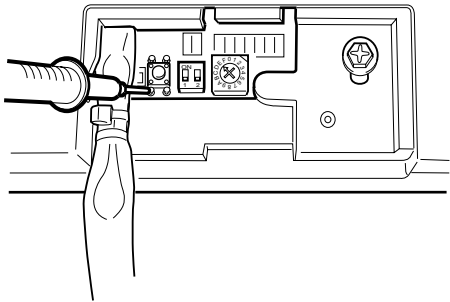
Cause	Step	Checks	YES/NO	Action
-----	1	Turn off and then on the power. Is the problem corrected?	YES	End. (Check the wiring between the copier's DC controller PCB and the ADF controller PCB.)
5V power supply	2	Set the meter to the 20VDC range, and connect the + probe to the foot of the push switch on the ADF controller PCB and the - probe to the copier ground. Is the voltage about 5V? 	NO	Replace the ADF controller PCB.
ADF controller PCB	3	Replace the ADF controller PCB. Is the problem corrected?	YES	End.
			NO	Replace the copier's DC controller PCB.

Figure 11-402
13 E803

Cause	Step	Checks	YES/NO	Action
Malfunction	1	Turn off and then on the power switch. Is the problem corrected?	YES	End.
DC controller PCB.	2	Replace the DC controller PCB. Is the problem corrected?	YES	End.
Composite power supply PCB			NO	Replace the composite power supply PCB.

14 AC power fails to turn on.

Cause	Step	Checks	YES/NO	Action
Power plug	1	Is the power plug connected to the power outlet?	NO	Connect the power plug.
-----	2	Turn on the power switch. Is 'E0' indicated in the display?	YES	See the descriptions under "E0."
Machine top unit	3	Is the machine's top unit closed firmly?	NO	Close the machine's top unit.
Power supply	4	Is the rated voltage present at the power outlet?	NO	Inform the user that the problem is not the machine's.
Fuse (FU501)	5	Is the fuse (FU501) on the noise filter PCB blown? $\left\langle \begin{array}{l} 120\text{V model: } 250\text{ V, } 15\text{ A} \\ 220/240\text{V model: } 250\text{ V, } 6.3\text{ A} \end{array} \right\rangle$	YES	Remove the cause, and replace the fuse.
Fuse (FU102)	6	Is the fuse (FU102) on the composite power supply PCB blown? $\left\langle \begin{array}{l} 120\text{V model: } 125\text{ V, } 5\text{ A} \\ 220/240\text{V model: } 250\text{ V, } 2.5\text{ A} \end{array} \right\rangle$	YES	Remove the cause of the problem, and replace the fuse.
Door switch (DS1)	7	Remove the door switch (DS1), and connect the meter probes to F1 and F3 or F2 and F4 of the faston of the door switch. Is the resistance about $0\ \Omega$ when the actuator is pressed and about $\infty\ \Omega$ when it is released?	NO	Replace the door switch (DS1).
Noise filter PCB	8	Is the rated voltage present between J501-1 and -2?	NO	Replace the noise filter PCB.
Harness	9	Is the rated voltage present between J201-1 and J201-2?	NO	Check the connectors and the wiring if they are normal.
Connector connection 1	10	Is there electrical continuity between J111-15 on the DC controller PCB and J301-15 on the control panel PCB?	NO	Correct the electrical continuity of J111 on the DC controller PCB and J301 on the control panel PCB.
Connector connection 2	11	Is there electrical continuity between J204-1 on the composite power supply PCB and J104-7 on the DC controller PCB?	NO	Check the connection of J104 on the DC controller PCB and J204 on the composite power supply PCB; if normal, replace the DC controller PCB.
Control panel PCB	12	Replace the control panel PCB. Is the problem corrected?	YES	End.
Composite power supply PCB			NO	Replace the composite power supply PCB.

15 DC power fails to turn on.

Cause	Step	Checks	YES/NO	Action																												
AC power supply	1	Is AC power present between J201-1 and -2 on the composite power supply PCB?	NO	See “AC power fails to turn on.”																												
Wiring, DC load	2	<div>Turn off the power switch, and disconnect J202 and J205 from the composite power supply PCB. Set the meter range to 30 VDC, and turn on the power switch. Is the voltage between the following terminals normal?</div> <table><tr><th>Connector</th><th>Pin</th><th>Output</th><th>Remarks</th></tr><tr><td rowspan="6">J202</td><td>1</td><td>GND</td><td rowspan="6">To DC controller PCB</td></tr><tr><td>2</td><td>24V</td></tr><tr><td>3</td><td>5V</td></tr><tr><td>4</td><td>5V</td></tr><tr><td>5</td><td>GND</td></tr><tr><td>6</td><td>24V</td></tr><tr><td rowspan="4">J205</td><td>1</td><td>-</td><td rowspan="4">To main motor driver PCB</td></tr><tr><td>2</td><td>-</td></tr><tr><td>3</td><td>GND</td></tr><tr><td>4</td><td>24V</td></tr></table> <div>Table 11-401</div>	Connector	Pin	Output	Remarks	J202	1	GND	To DC controller PCB	2	24V	3	5V	4	5V	5	GND	6	24V	J205	1	-	To main motor driver PCB	2	-	3	GND	4	24V	YES	See the descriptions under “E0.”
Connector	Pin	Output	Remarks																													
J202	1	GND	To DC controller PCB																													
	2	24V																														
	3	5V																														
	4	5V																														
	5	GND																														
	6	24V																														
J205	1	-	To main motor driver PCB																													
	2	-																														
	3	GND																														
	4	24V																														
Fuse	3	Is the fuse (FU102) on the composite power supply PCB blown? ⌈ 120V model: 125 V, 5 V ⌋ ⌈ 220/240V model: 250 V, 2.5 A ⌋	YES	Remove the cause of the problem, and replace the fuse.																												
Composite power supply PCB			NO	Replace the composite power supply PCB.																												

16 Pickup fails. (cassette)

Cause	Step	Checks	YES/NO	Action									
Main motor (M1)	1	Does the main motor (M1) rotate when the Copy Start key is pressed?	NO	See “The main motor fails to rotate.”									
Cassette	2	Is the cassette set correctly?	NO	Set the cassette correctly.									
Paper in cassette	3	Is the paper in the cassette placed correctly?	NO	Instruct the user on the correct method of placing paper.									
Pickup clutch solenoid (SL1), Cassette pickup solenoid (SL5)	4	<div>Set the meter range to 30 VDC, and connect the meter probes to the following terminals. Does the voltage change to about 24 V in keeping with pickup operation?</div> <table><tr><td></td><td>+</td><td>-</td></tr><tr><td>Pickup clutch solenoid (SL1)</td><td>J109-4</td><td>J109-3</td></tr><tr><td>Cassette pickup solenoid (SL5)</td><td>J132-2</td><td>J132-1</td></tr></table> <div>Table 11-402</div>		+	-	Pickup clutch solenoid (SL1)	J109-4	J109-3	Cassette pickup solenoid (SL5)	J132-2	J132-1	NO	Check the wiring from the solenoid to the DC controller PCB; if normal, replace the solenoid.
	+	-											
Pickup clutch solenoid (SL1)	J109-4	J109-3											
Cassette pickup solenoid (SL5)	J132-2	J132-1											
Cassette spring	5	Is the force of the cassette spring within specification? (See p. 11-10.)	NO	Replace the cassette spring.									
DC controller PCB			YES	Replace the DC controller PCB.									

17 Pickup fails. (multifeeder)

Cause	Step	Checks	YES/NO	Action								
Wrong operation	1	Is the multifeeder selected on the control panel?	NO	Instruct the user on the correct way of operating the machine.								
Main motor (M1)	2	Does the main motor (M1) rotate when the Copy Start key is pressed?	NO	See “The main motor fails to rotate.”								
Paper placement	3	Is the paper placed in the multifeeder correctly?	NO	Instruct the user on the correct way of placing paper.								
Multifeeder pickup solenoid (SL4), Pickup clutch solenoid (SL1)	4	Set the meter range to 30 VDC, and connect the meter probes as indicated. Does the voltage change to about 24 V in keeping with pickup operation?	NO	Check the wiring from the solenoid to the DC controller PCB; if normal, replace the solenoid in question.								
DC controller PCB		<table><tr><td></td><td>+</td><td>-</td></tr><tr><td>Multifeeder pickup solenoid (SL4)</td><td>J109-8</td><td>J109-7</td></tr><tr><td>Pickup clutch solenoid (SL1)</td><td>J109-4</td><td>J109-3</td></tr></table>		+	-	Multifeeder pickup solenoid (SL4)	J109-8	J109-7	Pickup clutch solenoid (SL1)	J109-4	J109-3	YES
	+	-										
Multifeeder pickup solenoid (SL4)	J109-8	J109-7										
Pickup clutch solenoid (SL1)	J109-4	J109-3										

Table 11-403

Table 11-403
18 Pickup fails. (single-feeder)

Cause	Step	Checks	YES/NO	Action
Main motor (M1)	1	Does the main motor rotate when the Copy Start key is pressed?	NO	See "The main motor fails to rotate."
Single-feeder paper sensor (PS5)	2	Is the single-feeder paper sensor (PS5) normal?	NO	Check the wiring from J113 to PS5 on the DC control PCB; if normal, replace PS5.
DC controller PCB			YES	Replace the DC controller PCB.

19 The scanner fails to move forward.

Cause	Step	Checks	YES/NO	Action
Cable	1	Is the scanner drive cable routed correctly?	NO	Route the cable correctly.
Scanner path	2	Is the scanner rail soiled? Move the scanner by hand. Does it move smoothly?	NO	Check the surface of the scanner rail for dirt, foreign matter, or object which may interfere.
Composite power supply PCB	3	Set the meter range to 30 VDC, and connect the meter probes to J202-2 (+) and -1 (-) on the composite power supply PCB. Is the meter reading about 24 V?	NO	See "DC power fails to turn on."
Pre-registration roller paper sensor (Q751)	4	Is the pre-registration roller paper sensor (Q751) normal? (For instructions on how to check the photointerrupters, see p. 11-47.)	NO	Check the wiring from J108 on the DC controller PCB to Q751; if normal, replace Q751.
Scanner/lens drive motor (M2)	5	Replace the scanner/lens drive motor (M2). Is the problem corrected?	YES	End.
DC controller PCB			NO	Replace the DC controller PCB.

20 The registration roller fails to rotate.

Cause	Step	Checks	Yes/No	Action
Main motor (M1)	1	Does the main motor (M1) start to rotate when the Copy Start key is pressed?	No	See "The main motor fails to rotate."
Pre-registration roller paper sensor (Q751)	2	Is the pre-registration roller paper sensor (Q751) normal? (For instructions on how to check the photointerrupters, see p. 11-47.)	No	Check the wiring from J108 on the DC controller PCB to Q751; if normal, replace Q751.
Registration roller spring clutch	3	Does the registration clutch solenoid (SL2) turn on for a moment after the Copy Start key is pressed?	No	Check the position of the solenoid; if normal, check or replace the control ring.
Registration clutch solenoid (SL2)	4	Set the meter range to 30 VDC. Does the voltage between J109-6 (+) and -5 (-) on the DC controller PCB change to about 24 V for a moment after the Copy Start key is pressed?	Yes	Check the wiring from J109 on the DC controller PCB to SL2; if normal, replace SL2.
DC controller PCB			No	Replace the DC controller PCB.

21 The blanking lamp fails to turn on.

Cause	Step	Checks	YES/NO	Action
Side blanking PCB	1	Remove J106 from the DC control PCB, and set the meter range to 1 k Ω ; then, connect the meter probes to J106-1 and -2 on the harness side. Is the meter reading about 20 Ω ?	NO	Check the harness; if normal, replace the side blanking PCB.
DC controller PCB			YES	Replace the DC controller PCB.

22 The scanning lamp fails to turn on.

Cause	Step	Checks	YES/NO	Action
Scanning lamp	1	Turn off the power switch, and disconnect the power plug from the power outlet. Is the scanning lamp (LA1) mounted correctly?	NO	Mount the scanning lamp correctly.
Fuse (FU1)	2	Set the meter range to 1 k Ω , and connect the meter probes to both terminals of the fuse (FU1). Does the index of the meter swing?	NO	Replace the fuse (FU1).
Lamp	3	Disconnect the connector J910 from the composite power supply PCB, and set the tester range to 1k Ω . Does the tester index swing when the probes are connected to J910-1 and J910-3 on the lamp side?	NO	Check the cable from the composite power supply PCB to the lamp; if normal, replace the lamp.
DC controller PCB	4	Replace the DC controller PCB. Is the problem corrected?	YES	End.
Composite power supply PCB			NO	Check the wiring between the DC controller PCB and the composite power supply PCB; if normal, replace the composite power supply PCB.

23 The lens fails to turn on.

Cause	Step	Checks	YES/NO	Action
Lens solenoid (SL3)	1	Does the lens solenoid (SL3) turn on when the power switch is turned on?	NO	Check the wiring from J109 on the DC controller PCB to SL3; if normal, replace SL3.
Lens cable, Pulley, Rail	2	Are the lens cable, pulley, and rail normal?	NO	Check the lens cable, pulley, and rail; as necessary, clean the cable and adjust its tension.
DC power supply	3	Set the meter range to the 30 VDC, and connect J202-2 (+) and -1 (-) on the composite power supply PCB. Is the meter reading about 24 V?	NO	See "DC power fails to turn on."
Scanner/lens drive motor (M2)	4	Replace the scanner/lens drive motor (M2). Is the problem corrected?	YES	End.
DC control PCB			NO	Replace the DC controller PCB.

24 The fixing heater fails to turn on.

Cause	Step	Checks	YES/NO	Action
-----	1	Is 'E0' indicated?	YES	See the descriptions under "E0."
DC controller PCB	2	Replace the DC controller PCB. Is the problem corrected?	YES	End.
Composite power supply PCB			NO	Replace the composite power supply PCB.

25 The "Add Paper" message fails to turn off.

Cause	Step	Checks	YES/NO	Action
Cassette	1	Is the cassette set correctly?	NO	Set the cassette correctly.
Lens cable, Pulley, Rail	2	Are the lens cable, pulley, and rail normal?	NO	Check the lens cable, pulley, and rail; as necessary, clean the cable and adjust its tension.
DC power supply	3	Set the meter range to 30 VDC, and connect the meter probes to J202-2 (+) and -1 (-) on the composite power PCB. Is the meter reading about 24 V?	NO	See "The DC power fails to turn on."
Vertical path roller paper sensor (PS4)	4	Is the vertical path roller paper sensor (PS4) normal? (For instructions on how to check the photointerrupters, see p. 11-47.)	NO	Check the wiring from J132 on the DC controller PCB to PS4; if normal, replace the PS4.
Control panel PCB	5	Replace the control panel PCB. Is the problem corrected?	YES	End.
DC controller PCB			NO	Replace the DC controller PCB.

26 The "Jam" message fails to turn off.

Cause	Step	Checks	YES/NO	Action
Jam paper	1	Is the jam paper near any of the following sensors? <ul style="list-style-type: none"> Vertical path roller paper sensor (PS4) Single-feeder paper sensor (PS5) Pre-registration roller paper sensor (Q751) Delivery sensor (PS3) 	YES	Remove the jam paper.
Sensor	2	Is the sensor checked in step 1 normal? (For instructions on how to check the photointerrupters, see p. 11-47.)	NO	Check the wiring from the DC controller PCB to each sensor; if normal, replace the sensor in question.
DC controller PCB			YES	Replace the DC controller PCB.

V. TROUBLESHOOTING FEEDING PROBLEMS

A. Copy Paper Jam

Inside the machine, jams tend to occur in the following blocks:

- [1] Pickup block
- [2] Separation/feeding block
- [3] Fixing/delivery block

The troubleshooting procedures that follow are organized according to the location of a jam.

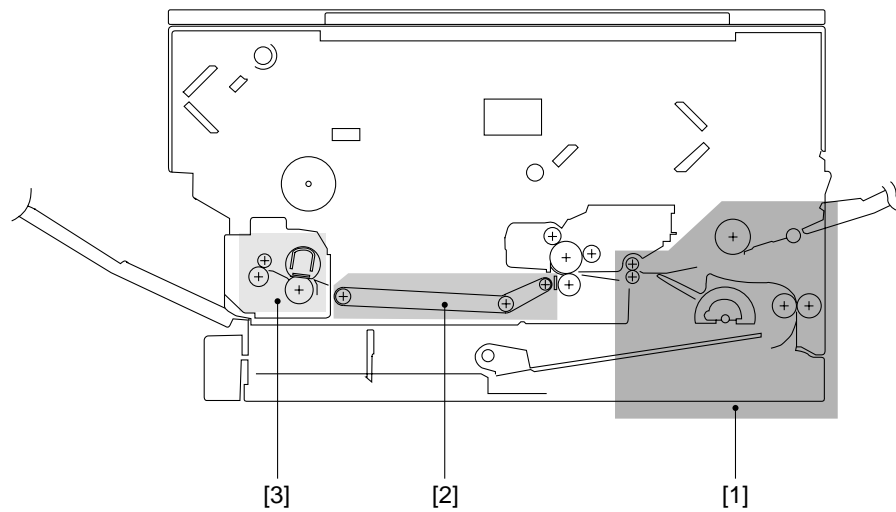


Figure 11-501

1 Pickup Assembly

Cause	Step	Checks	YES/NO	Action
-----	1	Does the problem occur when the cassette is selected as the source of paper?	NO	Go to step 5.
Cassette	2	Is the cassette set correctly?	NO	Set the cassette correctly.
Copy paper	3	Is the copy paper curled or wavy?	YES	Replace the copy paper. Instruct the user on the correct method of storing paper.
Copy paper	4	Try paper recommended by Canon. Is the problem corrected?	YES	Ask the user to use recommended paper.
DC controller PCB, Pickup clutch	5	Does the pickup roller of the pickup assembly of the selected source (cassette, manual feeder) rotate during a copying run?	NO	See "Pickup fails" for the source of paper in question.
Registration roller drive assembly	6	Does the registration roller operate normally?	NO	See "The registration roller fails to rotate."
Vertical path roller paper sensor (PS4)	7	Does the vertical path roller paper sensor operate normally?	NO	Replace the sensor or the lever.
Pickup roller, Vertical path roller, Roll			YES	Check the roller for wear and deformation, and the roll for attachment.

2 Separation/Feeding Assembly

Cause	Step	Checks	YES/NO	Action
Copy paper	1	Try paper recommended by Canon. Is the problem corrected?	YES	Ask the user to use recommended paper.
	2	Is the copy paper curled, wavy, or otherwise deformed?	YES	Replace the paper.
Feeding assembly	3	Is there foreign matter in the feeding assembly?	YES	Instruct the user on the correct method of storing paper.
Feed belt, Roller	4	Is the feed belt rotating properly?	NO	Remove the foreign matter.
Static eliminator	5	Is the static eliminator soiled with toner or the like?	YES	Check the belt and the roller.
Pre-registration roller paper sensor (Q751)	6	Does the pre-registration roller paper sensor operate normally?	NO	Replace the sensor or the lever.
Registration roller	7	Is the registration roller worn, deformed, or soiled?	YES	Clean the static eliminator. If dirt is found, clean with alcohol; if wear or deformation is found, replace it.
Registration-related spring, Spring clutch of registration assembly			NO	1. Check the spring used to control registration. 2. Check the spring clutch of the registration assembly.

3 Fixing/Delivery Assembly

Cause	Step	Checks	YES/NO	Action
Inlet guide	1	Is the fixing inlet guide soiled with toner?	YES	Clean the guide with solvent.
Fixing lower roller, Fixing film	2	Is the fixing lower roller or the fixing film deformed or scratched?	YES	Replace the roller or the fixing assembly upper unit.
Delivery paper detecting lever	3	Does the delivery detecting lever move smoothly?	NO	Make adjustments so that it moves smoothly.
Delivery sensor (PS3)	4	Does the delivery sensor operate normally?	NO	Replace the sensor.
Delivery roller drive assembly	5	Does the delivery roller operate smoothly?	NO	Check the delivery roller drive assembly.
Leading edge margin			YES	Check the leading edge of copy paper for margin.

B. Faulty Feeding

1 Double-Feeding

Cause	Step	Checks	YES/NO	Action
Cassette	1	Is the copy paper placed under the claw properly?	NO	Place the copy paper properly.
	2	Push down the copy paper inside the cassette. Does it move up when let go with its end coming under the claw?	NO	1. Check the copy paper width. 2. Check the position of the side guide plate of the cassette. (universal cassette only) 3. Measure the force of the spring of the cassette; if faulty, replace the cassette spring.
	3	Is the sheets of paper placed in the cassette uneven?	YES	Even out the sheets in the cassette.
Copy paper	4	Is the paper of a type recommended by Canon?	NO	Ask the user to use recommended paper.
Claw (cassette)			YES	Check the claw for deformation.

2 Wrinkles

Cause	Step	Checks	YES/NO	Action
Pickup assembly, Vertical path roller, Registration roller	1	Turn off the power while copy paper is moving through the feeding assembly. Is the copy paper wrinkled or found askew?	YES	<ul style="list-style-type: none"> Check the pickup assembly. Check the vertical path roller. Check the registration roller.
Copy paper	2	Try fresh paper. Is the problem corrected?	YES	The paper is moist. Instruct the user on the correct method of storing paper.
	3	Try paper of a type recommended by Canon. Is the problem corrected?	YES	Ask the user to use recommended paper.
Fixing assembly	4	Is the inlet guide soiled with toner?	NO	Check the fixing assembly.
Inlet guide			YES	Clean the inlet guide with solvent.

VI. ARRANGEMENT AND FUNCTIONS OF ELECTRICAL PARTS

A. Sensors and Solenoids

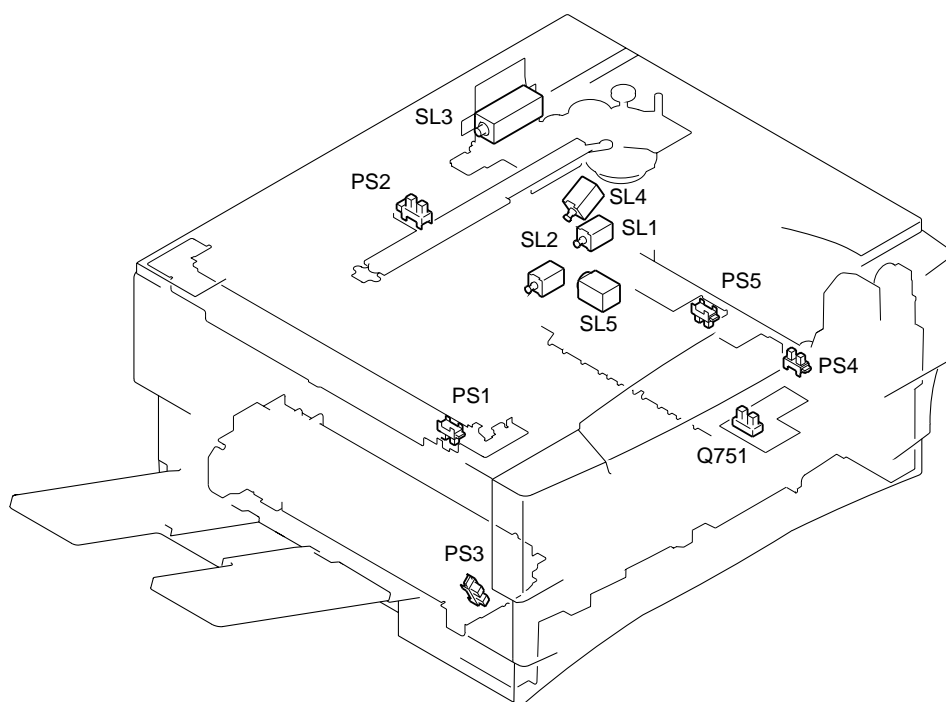
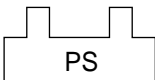
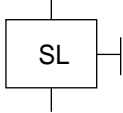


Figure 11-601

Symbol	Name	Notation	Description	Remarks
	Photointerrupters	PS1	Scanner home position detection	Single-feeder type only
		PS2	Lens home position detection	
		PS3	Delivery assembly paper detection	
		PS4	Vertical path assembly paper detection	
		PS5	Single-feeder paper detection	
		Q751	Pre-registration roller paper detection	
	Solenoid	SL1	Pickup clutch solenoid	Multifeeder type only
		SL2	Registration clutch solenoid	
		SL3	Lens solenoid	
		SL4	Multifeeder pickup solenoid	
		SL5	Cassette pickup solenoid	

B. Switches

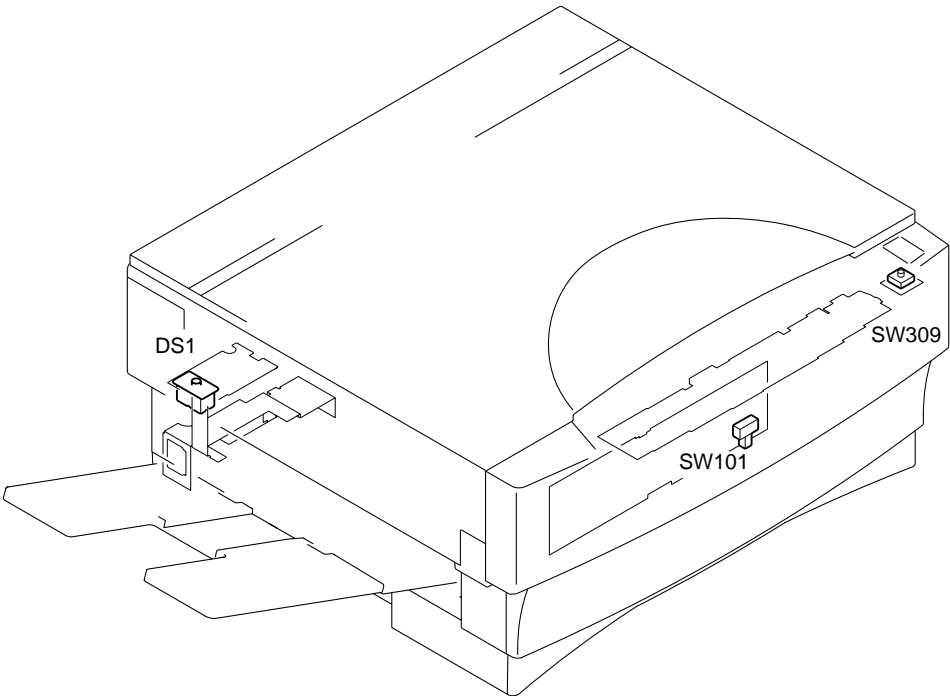


Figure 11-602

Symbol	Name	Notation	Description	Remarks
	Switch	DS1 SW309	Door switch Power switch	
	Switch	SW101	Density correction switch	

C. Lamp, Heater, Motor, Etc.

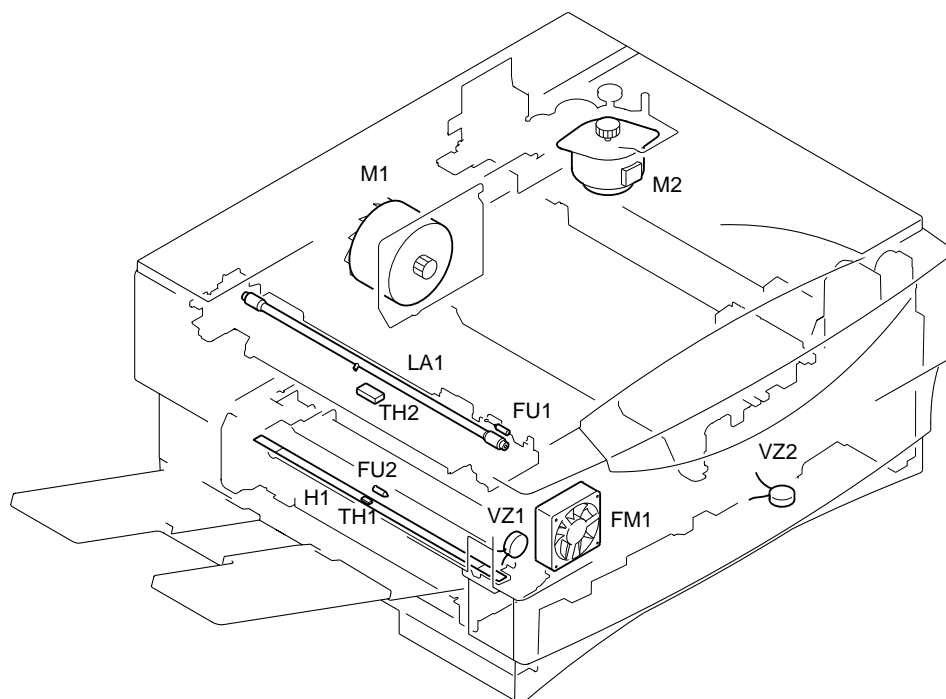


Figure 11-603

Symbol	Name	Notation	Description	Remarks
	Lamp	LA1	Scanning lamp	
	Heater	H1	Fixing heater	
	Motor	M1 M2	Main motor Scanner/lens drive motor	
	Fan motor	FM1	Scanner cooling fan	
	Thermistor	TH1 TH2	Fixing heater temperature detection Scanner temperature detection	
	Thermal fuse	FU1 FU2	Lamp overheating detection Fixing heater overheating detection	
	Varistor	VZ1 VZ2	Fixing film varistor Transfer guide varistor	

D. PCBs

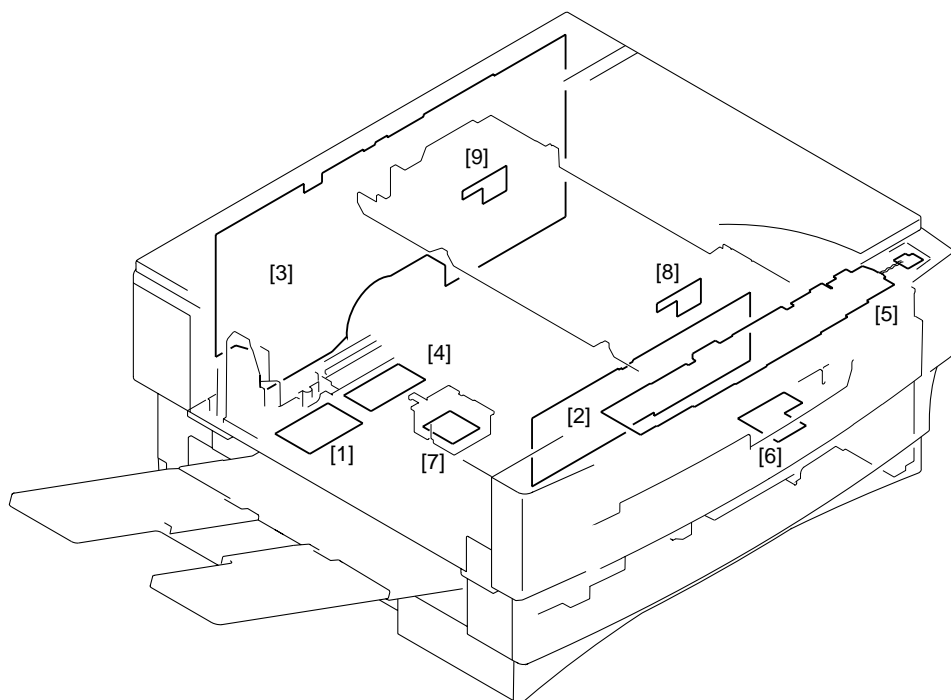


Figure 11-604

Ref.	Name	Description
[1]	Noise filter PCB	Removes noise from the power supply.
[2]	DC controller PCB	Controls sequence of operations.
[3]	Composite power supply PCB	Supplies DC power, generates high voltage, and controls the scanning lamp.
[4]	High-voltage contact PCB	Makes an electrical connection between the machine top and bottom.
[5]	Control panel PCB	Provides copying instructions/indications.
[6]	Sensor PCB	Detects paper in front of the registration roller.
[7]	AE sensor PCB	Detects the density of originals.
[8]	Blanking PCB (front)	Used for blanking exposure.
[9]	Blanking PCB (rear)	Used for blanking exposure.

E. ADF

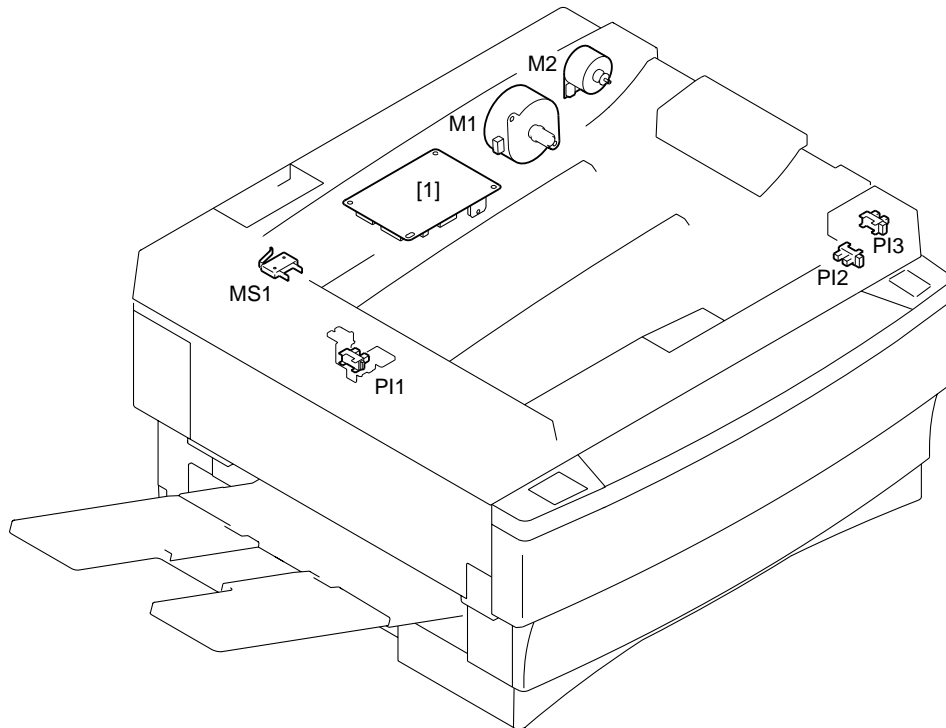


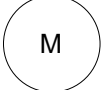


Figure 11-605

Symbol	Name	Notation	Description	Remarks
	Photointerrupter	PI1 PI2 PI3	Delivery paper detection Registration roller paper detection Original placement detection	
	Microswitch	MS1	ADF open/close switch	
	Motor	M1 M2	Belt motor Pickup motor	
[1]	ADF controller PCB		Controls sequence of operations	

F. Variable Resistors (VR) and Check Pins by PCB

Of the variable resistors (VR) and check pins, those needed in the field are discussed herein. Those not found in the discussions are for the factory only, requiring special tools and adjustment to an extremely accuracy. Do not touch them in the field.

Caution:

VRs that may be used in the field
 VRs that must not be used in the field

1. DC Controller PCB

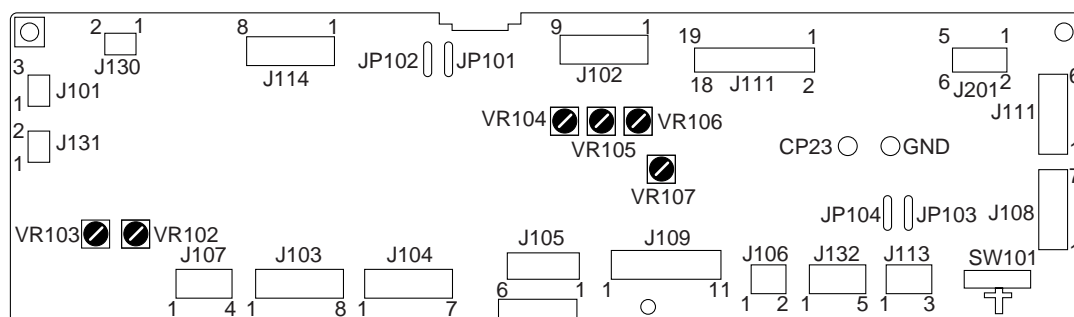


Figure 11-606

2. Composite Power Supply PCB

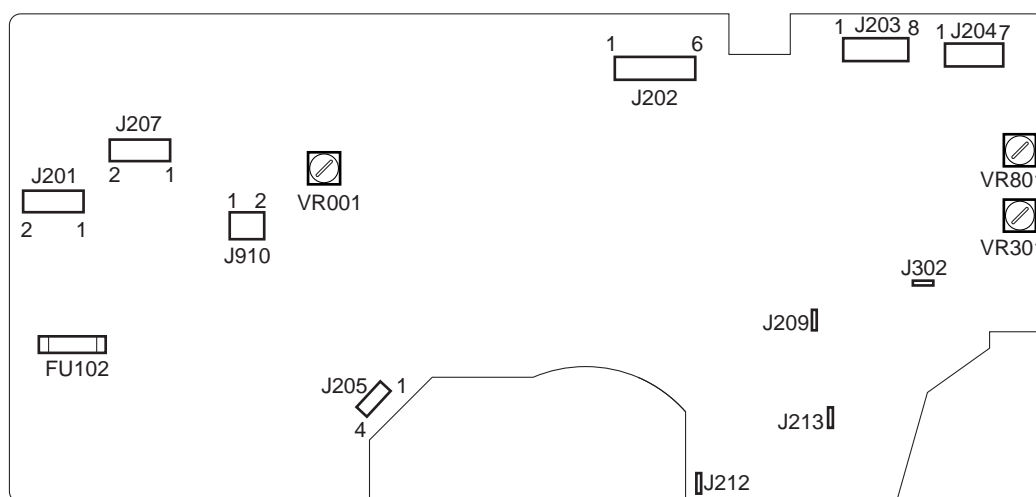


Figure 11-607

3. ADF Controller PCB

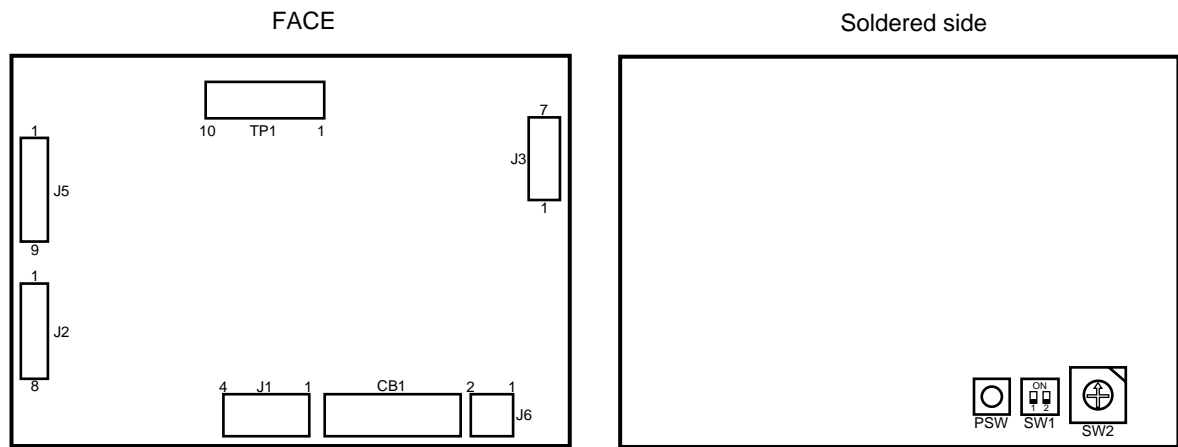


Figure 11-608

VII. SELF DIAGNOSIS

The microprocessor on the machine's DC controller PCB is equipped with a self diagnostic mechanism that checks the condition of the machine (particularly, sensors) and indicates an error code in the count/ratio indicator on the control panel upon detection of a fault.

In the case of 'E001', 'E0' and '01' are flashed alternately.

Code	Cause	Description
E0	'E000', 'E001', 'E002', or 'E003' has occurred.	The power switch is turned off and then on immediately after an error ('E000', 'E001', 'E002', 'E003') has occurred.
E000	<ul style="list-style-type: none"> The thermistor (TH1) is faulty. The fixing heater (H1) is faulty. The thermal fuse (FU2) has blown. The DC controller PCB is faulty. The composite power supply PCB is faulty. 	<ul style="list-style-type: none"> The temperature detected by the thermistor (TH1) does not reach 65°C 1.5 sec after the Copy Start key has been pressed. The temperature detected by the thermistor (TH1) does not reach 150°C 4 sec after the Copy Start key has been pressed.
E001	<ul style="list-style-type: none"> The thermistor (TH1) is faulty. The DC controller PCB is faulty. The composite power supply PCB is faulty. 	<ul style="list-style-type: none"> The temperature detected by the thermistor (TH1) exceeds 230°C. The temperature detected by the thermistor (TH1) exceeds by 30°C or more. The temperature detected by the thermistor (TH1) registers an increase of 100°C or more within 1 sec. The temperature detected by the thermistor (TH1) registers an increase of 40°C or more after it has reached 100°C during standby. E0 detection signal (E0_DT) is detected twice or more in succession.
E002	<ul style="list-style-type: none"> The thermistor (TH1) is faulty. The fixing heater (H1) is faulty. The thermal fuse (FU2) has blown. The DC controller PCB is faulty. The composite power supply PCB is faulty. 	<ul style="list-style-type: none"> The temperature detected by the thermistor (TH1) has exceeded 150°C during copy operation and maximum power is applied for 10 to 14 sec thereafter.
E003	<ul style="list-style-type: none"> The thermistor (TH1) is faulty. The fixing heater (H1) is faulty. The thermal fuse (FU2) has blown. The DC controller PCB is faulty. The composite power supply PCB is faulty. 	<ul style="list-style-type: none"> The temperature detected by the thermistor (TH1) drops to and remains 150°C or lower after it has reached 160°C.

Code	Cause	Description
E010	<ul style="list-style-type: none"> The main motor (M1) is fault. The DC controller PCB is faulty. 	<ul style="list-style-type: none"> The rotation of the main motor deviates (indicated by MLOCK=0) for 1 sec or more while the main motor drive signal (MMD=1) is being generated.
E064	<ul style="list-style-type: none"> The composite power supply PCB is faulty. The DC controller PCB is faulty. 	<ul style="list-style-type: none"> The actual output value of the composite power supply high voltage is different from the setting value twice in succession.
(E202) The keys on the control panel are locked without error code indication.	<ul style="list-style-type: none"> The scanner home position sensor (PS1) is faulty. The scanner/lens drive motor (M2) is faulty. The DC controller PCB is faulty. 	<ul style="list-style-type: none"> The scanner home position is not detected within 10 sec after the scanner has turned on. The scanner does not leave the home position after it has turned on.
E210	<ul style="list-style-type: none"> The lens home position sensor (PS2) is faulty. The scanner/lens drive motor (M2) is faulty. The lens cable is faulty. The DC controller PCB is faulty. 	<ul style="list-style-type: none"> The lens hoe position is not detected after the lens has moved the maximum travel distance. The lens does not leave the home position after it has turned on.
E220	<ul style="list-style-type: none"> The scanning lamp (LA1) is faulty. The DC controller PCB is faulty. The composite power supply PCB is faulty. 	<ul style="list-style-type: none"> The lamp ON detection signal is not detected for 1 sec or more in the presence of the scanning lamp On signal. The lamp ON detection signal is detected for 1 sec or more in the absence of the scanning lamp ON signal.
E240	<ul style="list-style-type: none"> The DC controller PCB is faulty. The composite power supply PCB is faulty. 	<ul style="list-style-type: none"> A fault in the communication between DC controller PCB and composite power supply PCB is detected.
E261	<ul style="list-style-type: none"> The frequency of the power supply is faulty. The composite power supply PCB is faulty. 	<ul style="list-style-type: none"> The interval between zero-cross signals is in excess of the allowed interval.
E400	<ul style="list-style-type: none"> Data communication between the copier and the ADF (faulty). 	<ul style="list-style-type: none"> The communication with the copier is interrupted for 5 sec or more; the communication is monitored at all times.
E803	<ul style="list-style-type: none"> The DC controller PCB is faulty. The composite power supply PCB is faulty. 	<ul style="list-style-type: none"> During a copying run, the +24 V power deviates from the control value by $\pm 20\%$.

Caution:

1. If the self-diagnosis has turned on, turn off the power switch to reset the machine.
In the case of 'E000', 'E001', 'E002', or 'E003', however, the machine must be reset as follows: this consideration is to prevent feeding power to the fixing heater otherwise occurring if the thermistor has an open circuit:
2. In the case of 'E0', 'E000', 'E001', 'E002', 'E003', or 'E220', the machine will turn off in 1.5 sec for 'E0' and 'E000' through 'E003' and in 2 sec for 'E220'.
3. In the case of 'E0', 'E000', 'E001', 'E002', or 'E003', perform the following steps:
 - 1) Turn off the power switch, and short circuit JP101 and JP102 on the DC controller PCB with a screwdriver or the like.

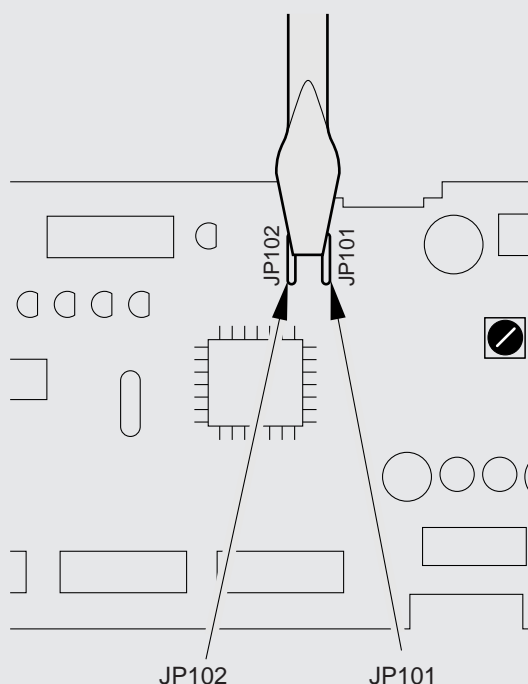



Figure 11-701

- 2) While keeping the condition in step 1), turn on the power switch.
- 3) Stop short-circuiting JP101 and JP102.

APPENDIX

A. GENERAL TIMING CHART	A-1	I. SENSOR CIRCUIT	
B. SIGNALS AND ABBREVIATIONS	A-3	DIAGRAM	A-30
C. GENERAL CIRCUIT DIAGRAM	A-5	J. NOISE FILTER CIRCUIT	
D. DC CONTROLLER CIRCUIT DIAGRAM	A-7	DIAGRAM	A-31
E. ADF CONTROLLER CIRCUIT DIAGRAM	A-15	K. HIGH VOLTAGE CONTACT	
F. COMPOSITE POWER SUPPLY		CIRCUIT DIAGRAM	A-32
CIRCUIT DIAGRAM	A-19	L. BLANK EXPOSURE (front)	
G. CONTROL PANEL CIRCUIT		CIRCUIT DIAGRAM	A-33
DIAGRAM	A-27	M. BLANK EXPOSURE (rear)	
H. AE SENSOR CIRCUIT		CIRCUIT DIAGRAM	A-34
DIAGRAM	A-29	N. SPECIAL TOOLS	A-35
		O. SOLVENTS/OILS	A-36

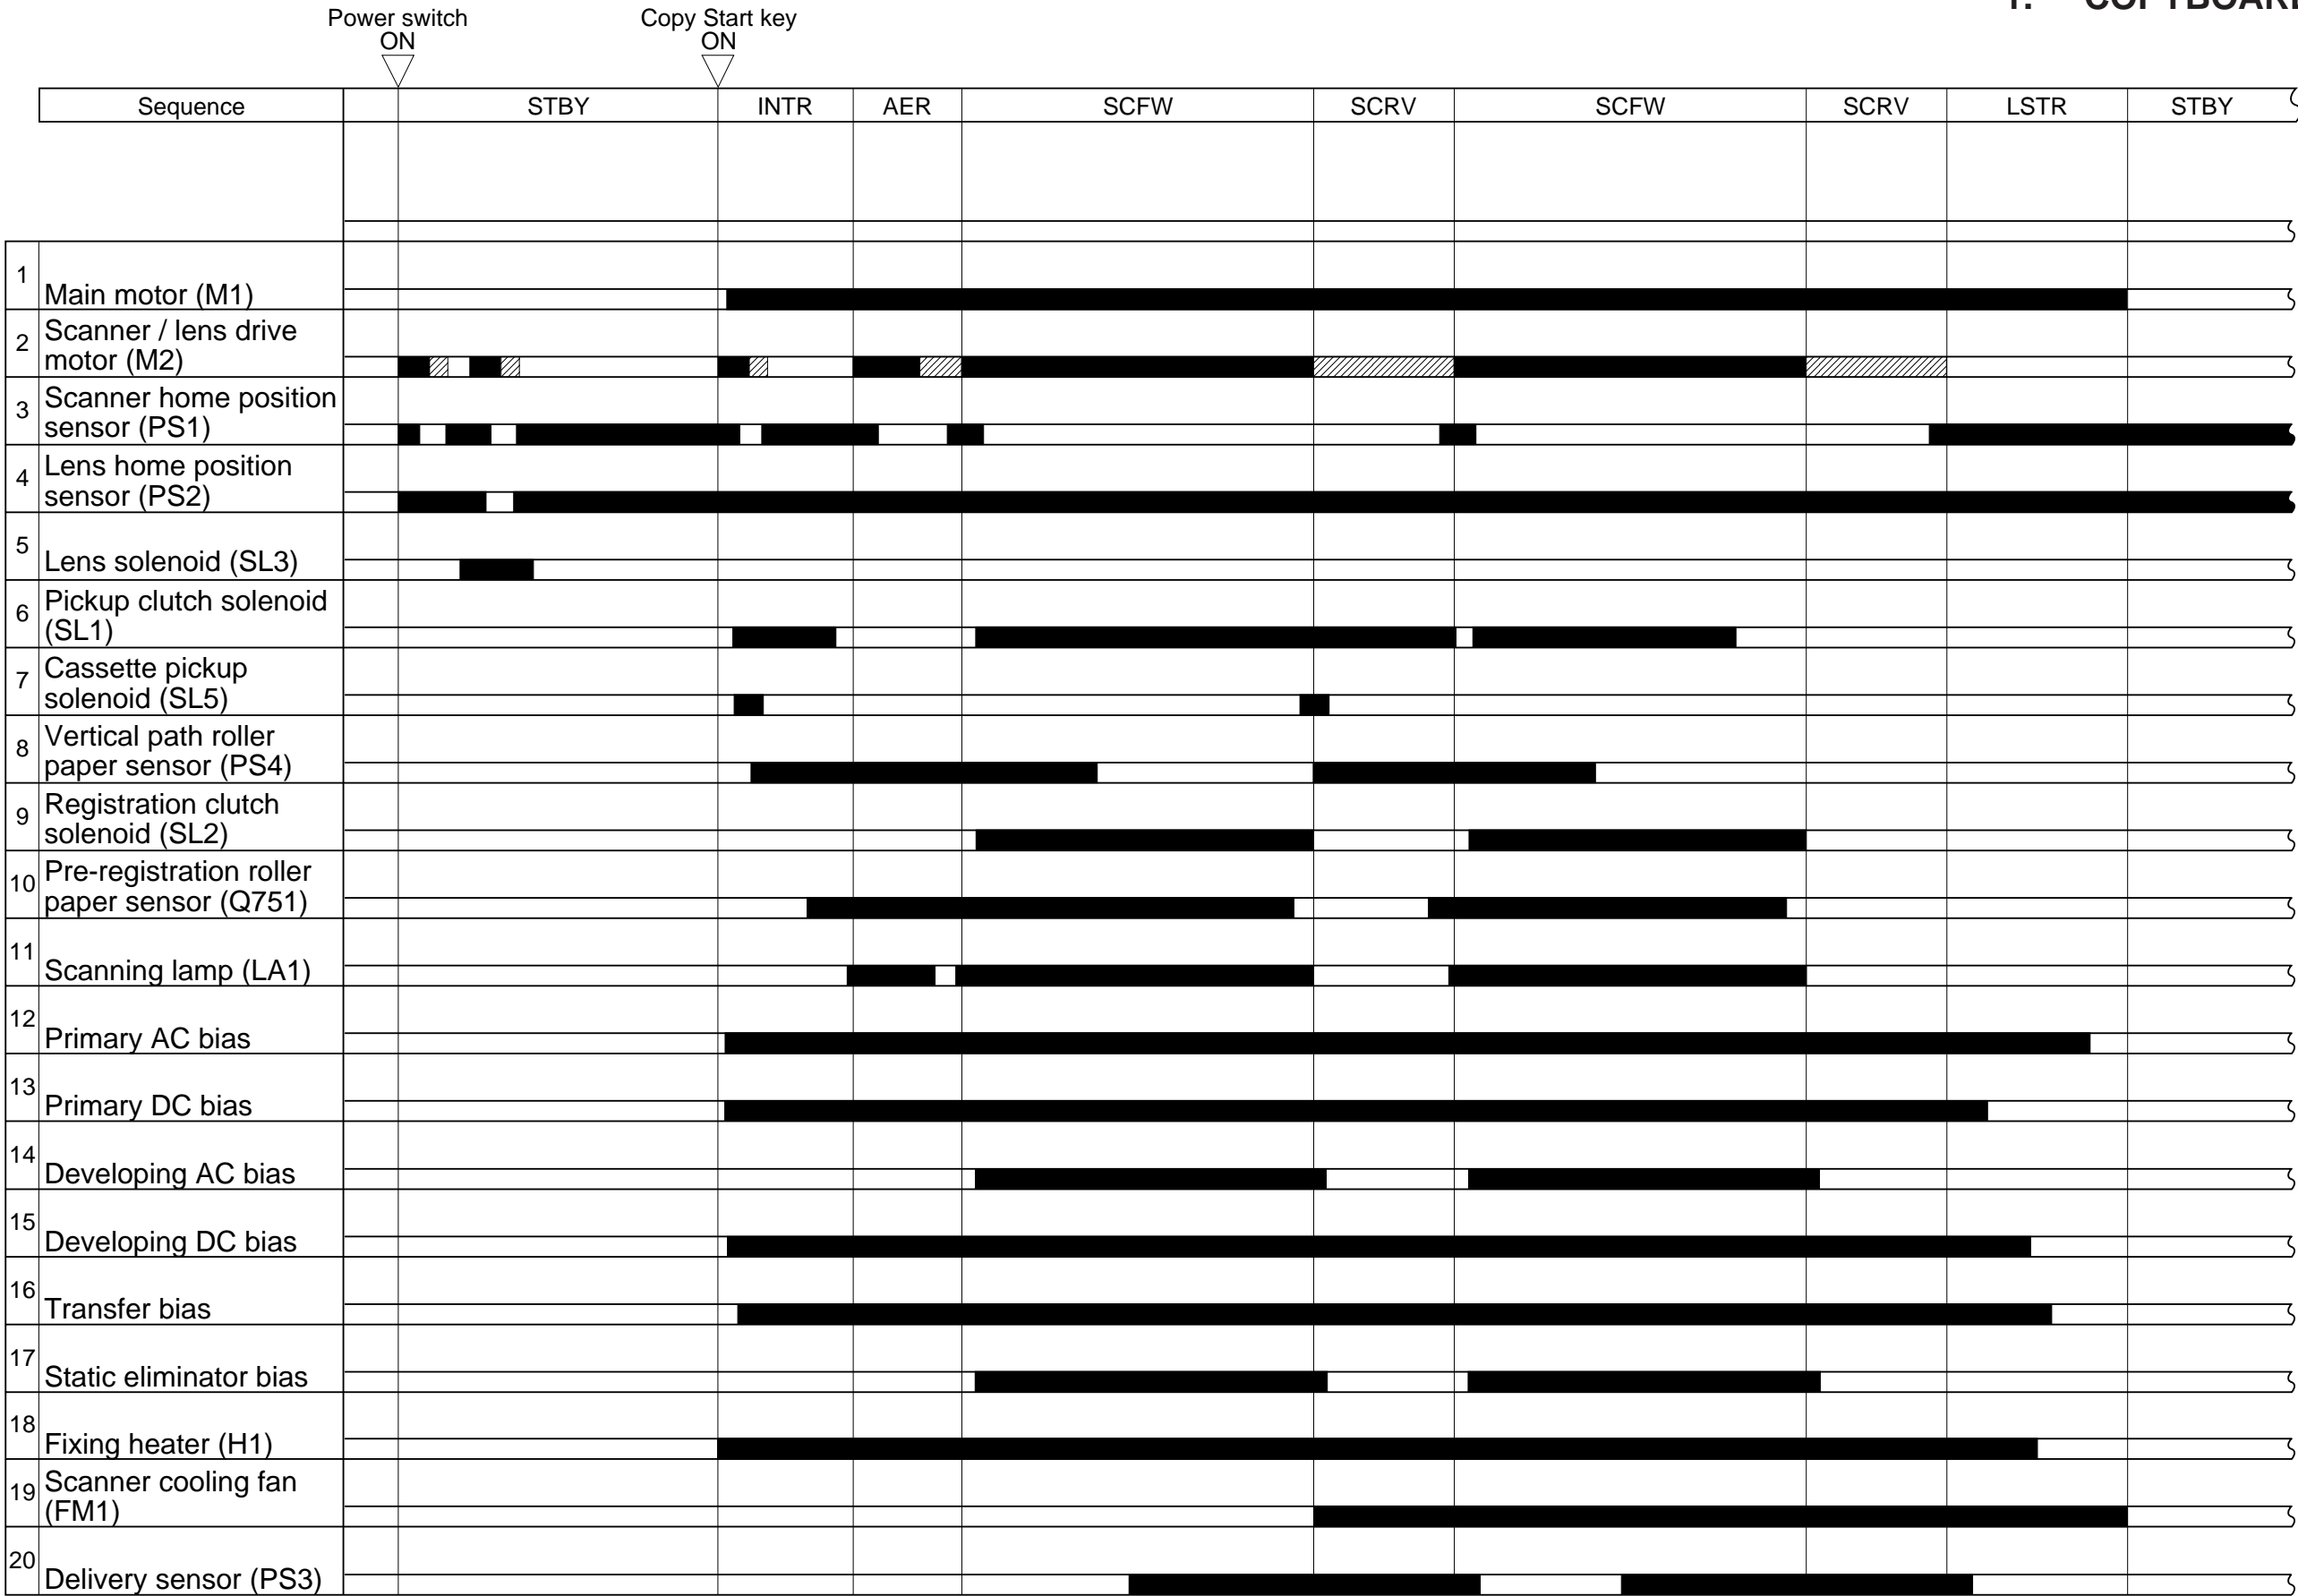A. GENERAL TIMING CHART
1. COPYBOARD TYPE




Scanner / lens drive motor (reverse)

2. ADF TYPE

Power switch
ON
Original set
Copy Start key
ON

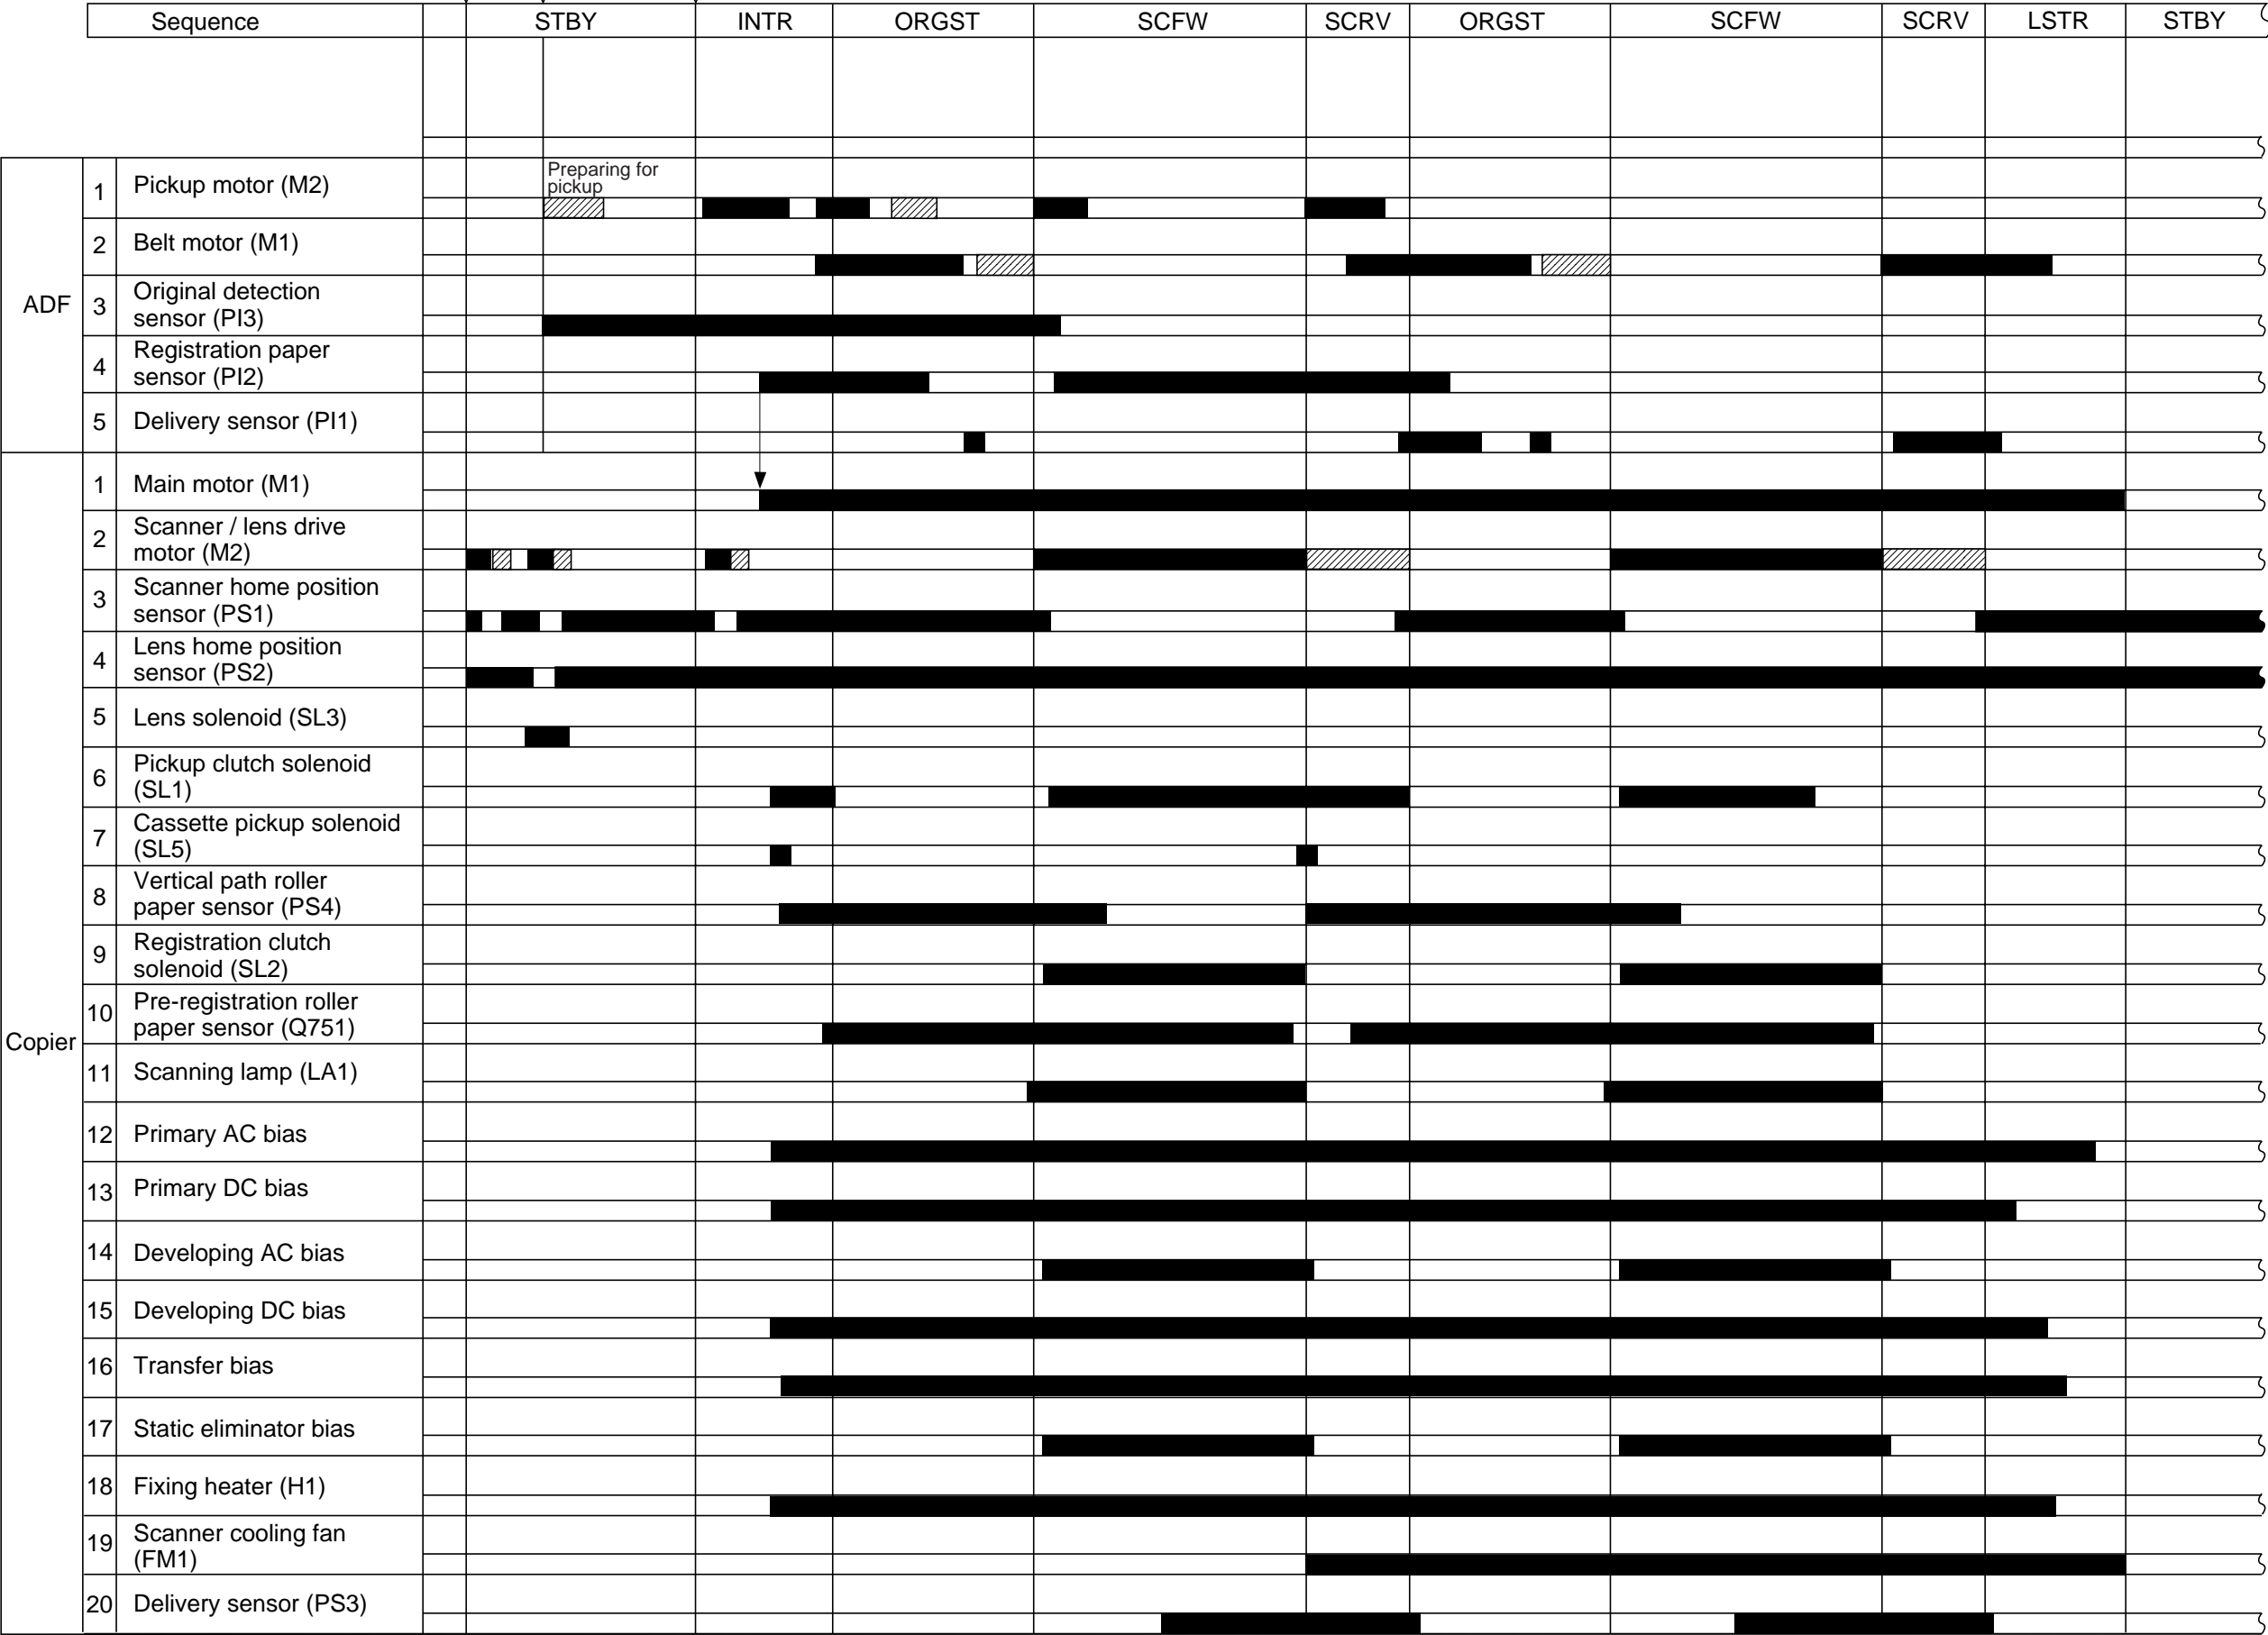(A4, 2 copies, DIRECT, from cassette)



▨ : Scanner / lens drive motor (reverse) / Pickup motor (reverse) / Belt motor (reverse)

B. SIGNALS AND ABBREVIATIONS

What follows below is a list of signals and abbreviations used in the chapters of the manual and circuit diagrams.
The abbreviations within parentheses represent analog signals, which cannot be expressed in terms of ‘1’ or ‘0’.

1. Signals

ACBIAS	AC BIAS OSCILLATION signal
[AE]	AE SENSOR OUTPUT signal
AEREF	AE SENSOR REFERENCE signal
BIAS_PWM	DC BIAS CONTROL signal
BIAS_S	DC BIAS MONITOR signal
CLK32K	TRANSFORMER CONTROL signal
CPUSD	CASSETTE PICKUP SOLENOID DRIVE signal
DPD	DELIVERY PAPER DETECTION signal
DV_AC_ON	DEVELOPING AC BIAS ON signal
DV_DC_ON	DEVELOPING DC BIAS ON signal
E0_DT	E0 DETECTION signal
FM1D	SCANNER COOLING FAN DRIVE signal
HEAT_ERR	FIXING HEATER ERROR signal
HEAT_OFF	FIXING HEATER OFF signal
HEAT_PWM	FIXING HEATER DUTY signal
HEAT_TRG	FIXING HEATER DRIVE signal
LAMP_DETECT	LAMP ACTIVATION DETECTION signal
LAMP_ON	SCANNING LAMP ACTIVATION signal
LHP	LENS HOME POSITION signal
LNSLD	LENS SOLENOID DRIVE signal
MFSLD	MULTIFEEDER PICKUP SOLENOID DRIVE signal
MLOCK	MAIN MOTOR CONSTANT SPEED signal
MMCLK	MAIN MOTOR CLOCK PULSE signal
MMD	MAIN MOTOR DRIVE signal
PAC_OUT	PRIMARY CORONA AC BIAS signal
PAC_S	PRIMARY CORONA AC DETECTION signal
PDC_PWM	DC BIAS CONTROL signal
PDC_S	DC VOLTAGE MONITOR signal
PDP	VERTICAL PATH ROLLER PAPER DETECTION signal
PR_DC_ON	PRIMARY CHARGING DC BIAS ON signal
PUSLD	PICKUP CLUTCH SOLENOID DRIVE signal
PWM_1KHz	SCANNING LAMP INTENSITY ADJUSTMENT signal
PWOFF	POWER SWITCH OFF signal
RGSLD	REGISTRATION CLUTCH SOLENOID DRIVE signal
RLOFF	RELAY DRIVE signal
RPD	PRE-REGISTRATION ROLLER PAPER DETECTION signal
SB_LP	SIDE BLANK EXPOSURE LAMP ON signal
SC_A	SCANNER MOTOR PULSE signal A
SC_B	SCANNER MOTOR PULSE signal B
SC_COM	SCANNER MOTOR DRIVE signal
SCHP	SCANNER HOME POSITION signal
SFPD	SINGLE-FEEDER PAPER DETECTION signal
T_FEEDBACK	TRANSFER BIAS VOLTAGE DETECTION signal
T_FW_DRV	TRANSFER DC BIAS CONTROL signal


T_FW_ON	TRANSFER DC BIAS ON signal
T_FW_S	TRANSFER CURRENT DETECTION signal
T_REV_ON	TRANSFER POSITIVE DC BIAS ON signal
TH1	FIXING THERMISTOR signal
TH2	SCANNER THERMISTOR signal

2. Abbreviations


AER	AE (MEASUREMENT) ROTATION
INTR	INITIAL ROTATION
LSTR	LAST ROTATION
SCFW	SCANNER FORWARD
SCRV	SCANNER REVERSE
STBY	STANDBY

C. GENERAL CIRCUIT DIAGRAM

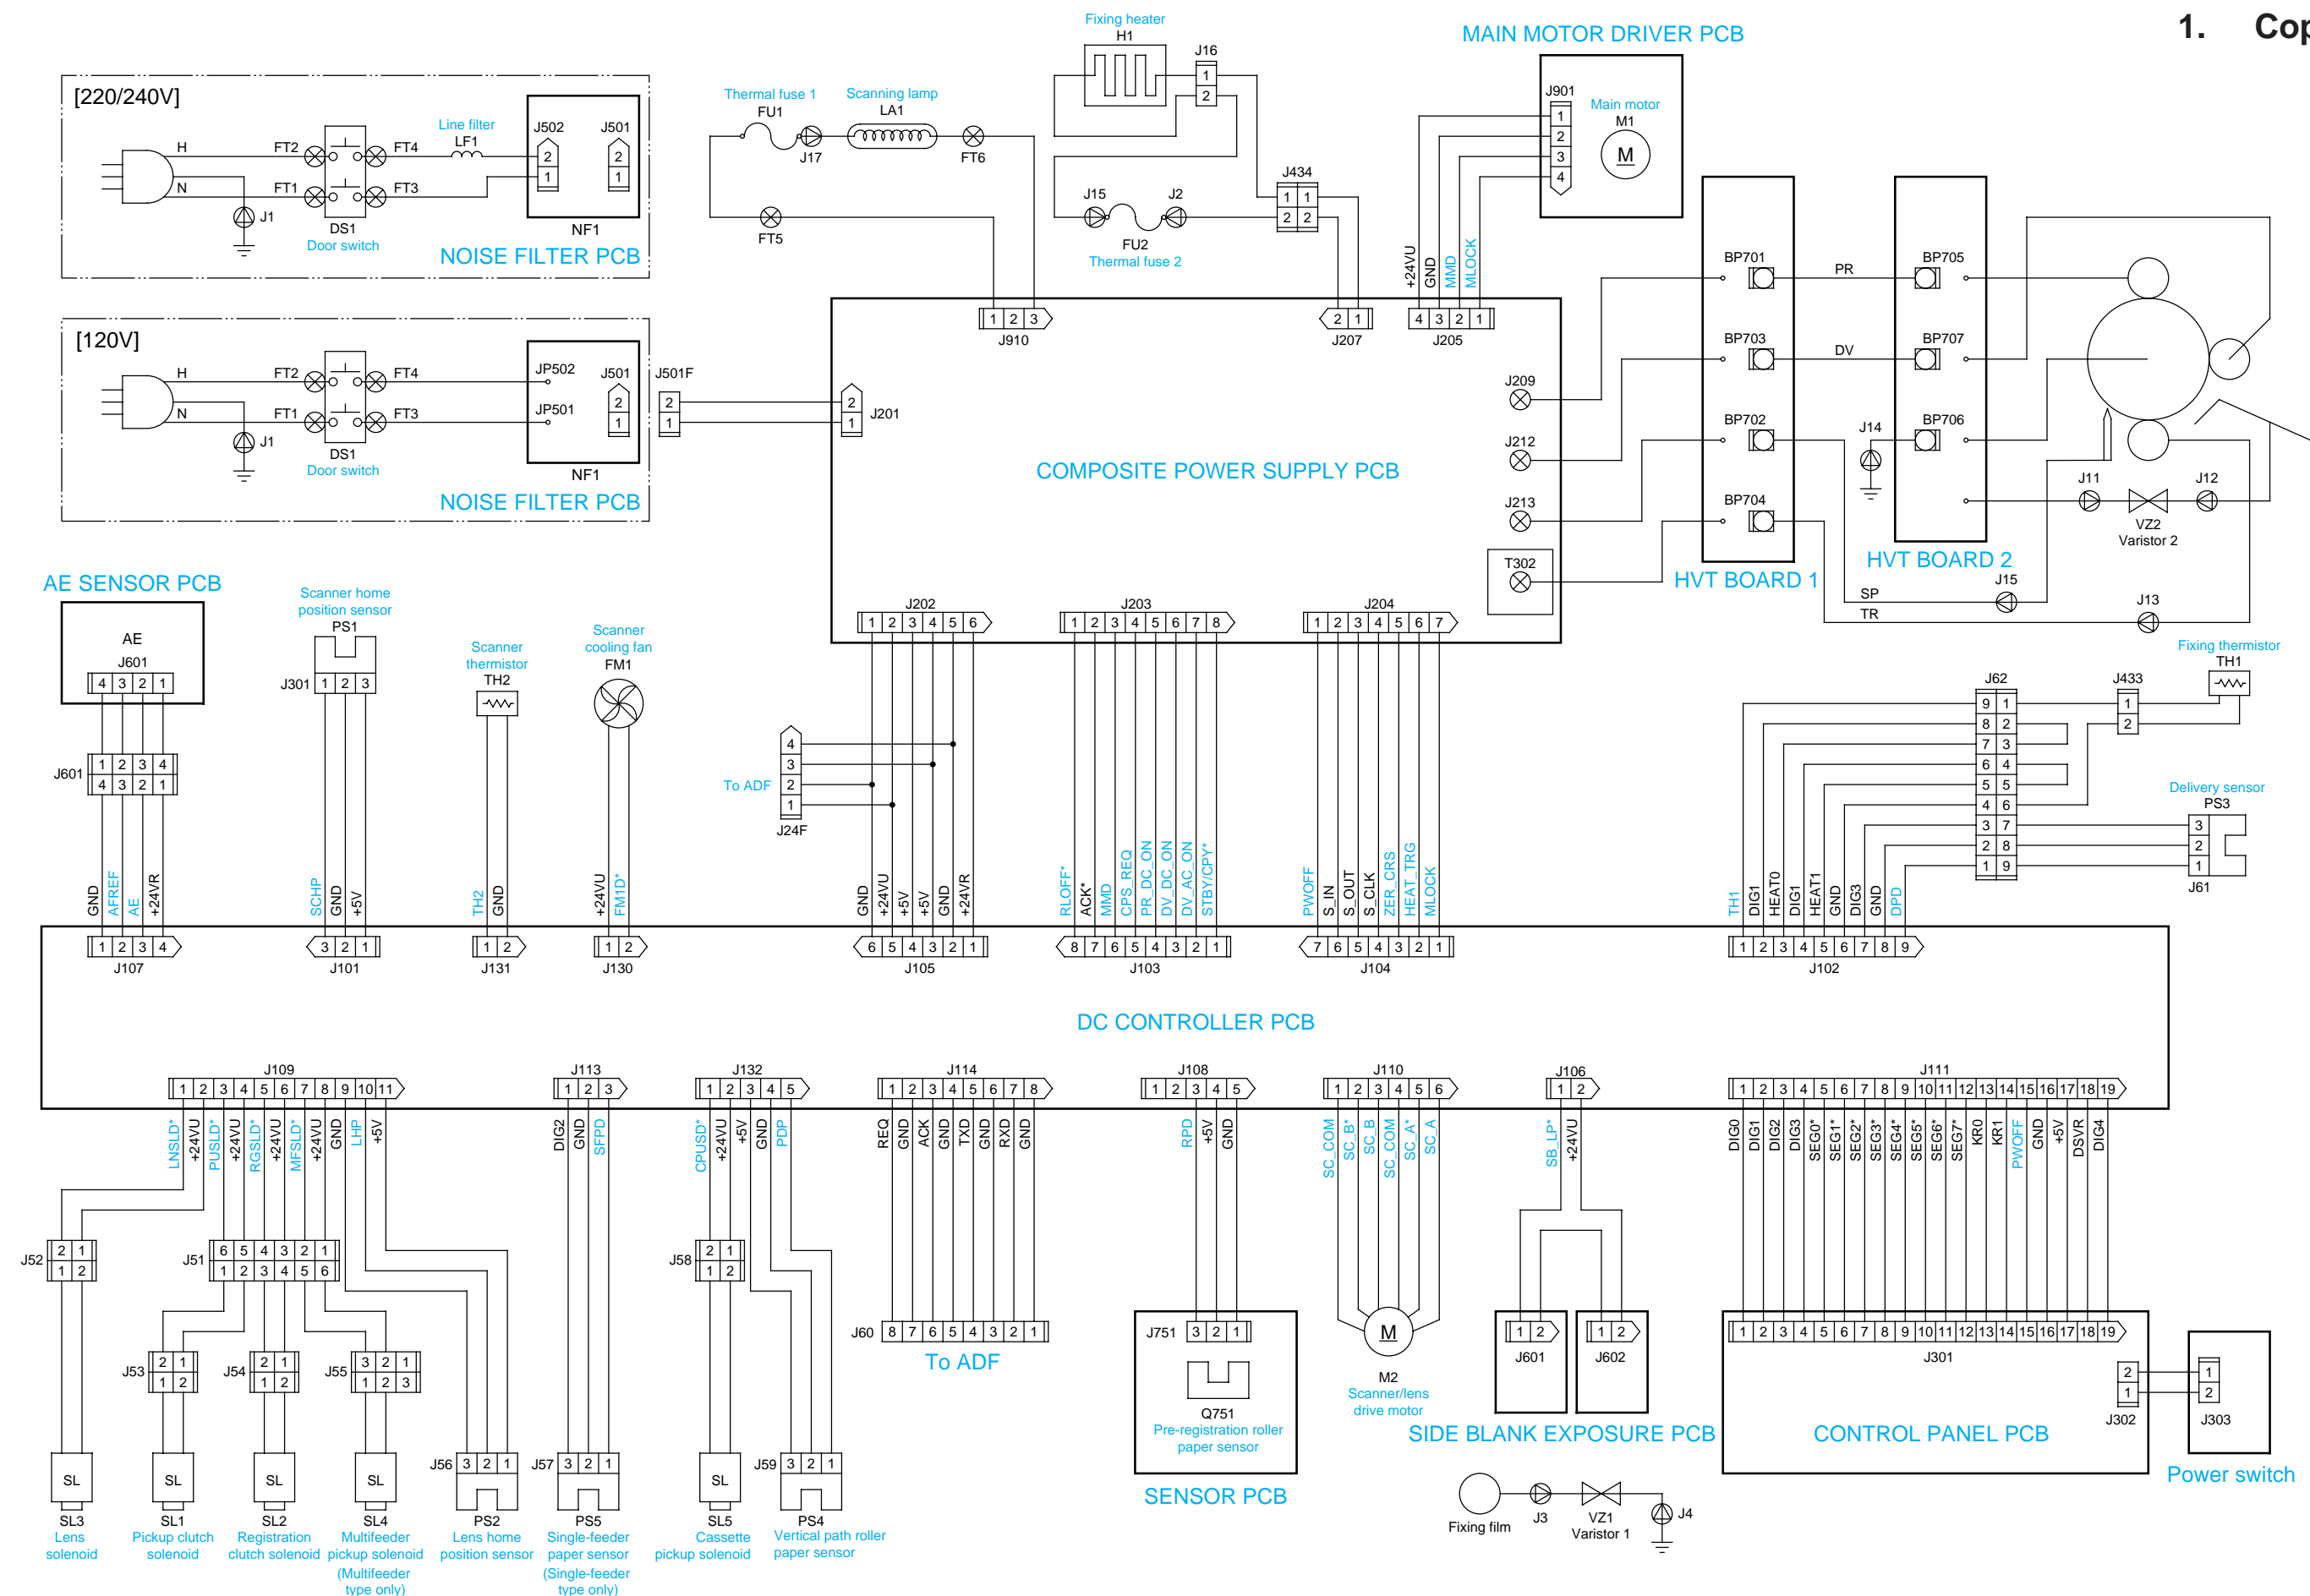1. Copier




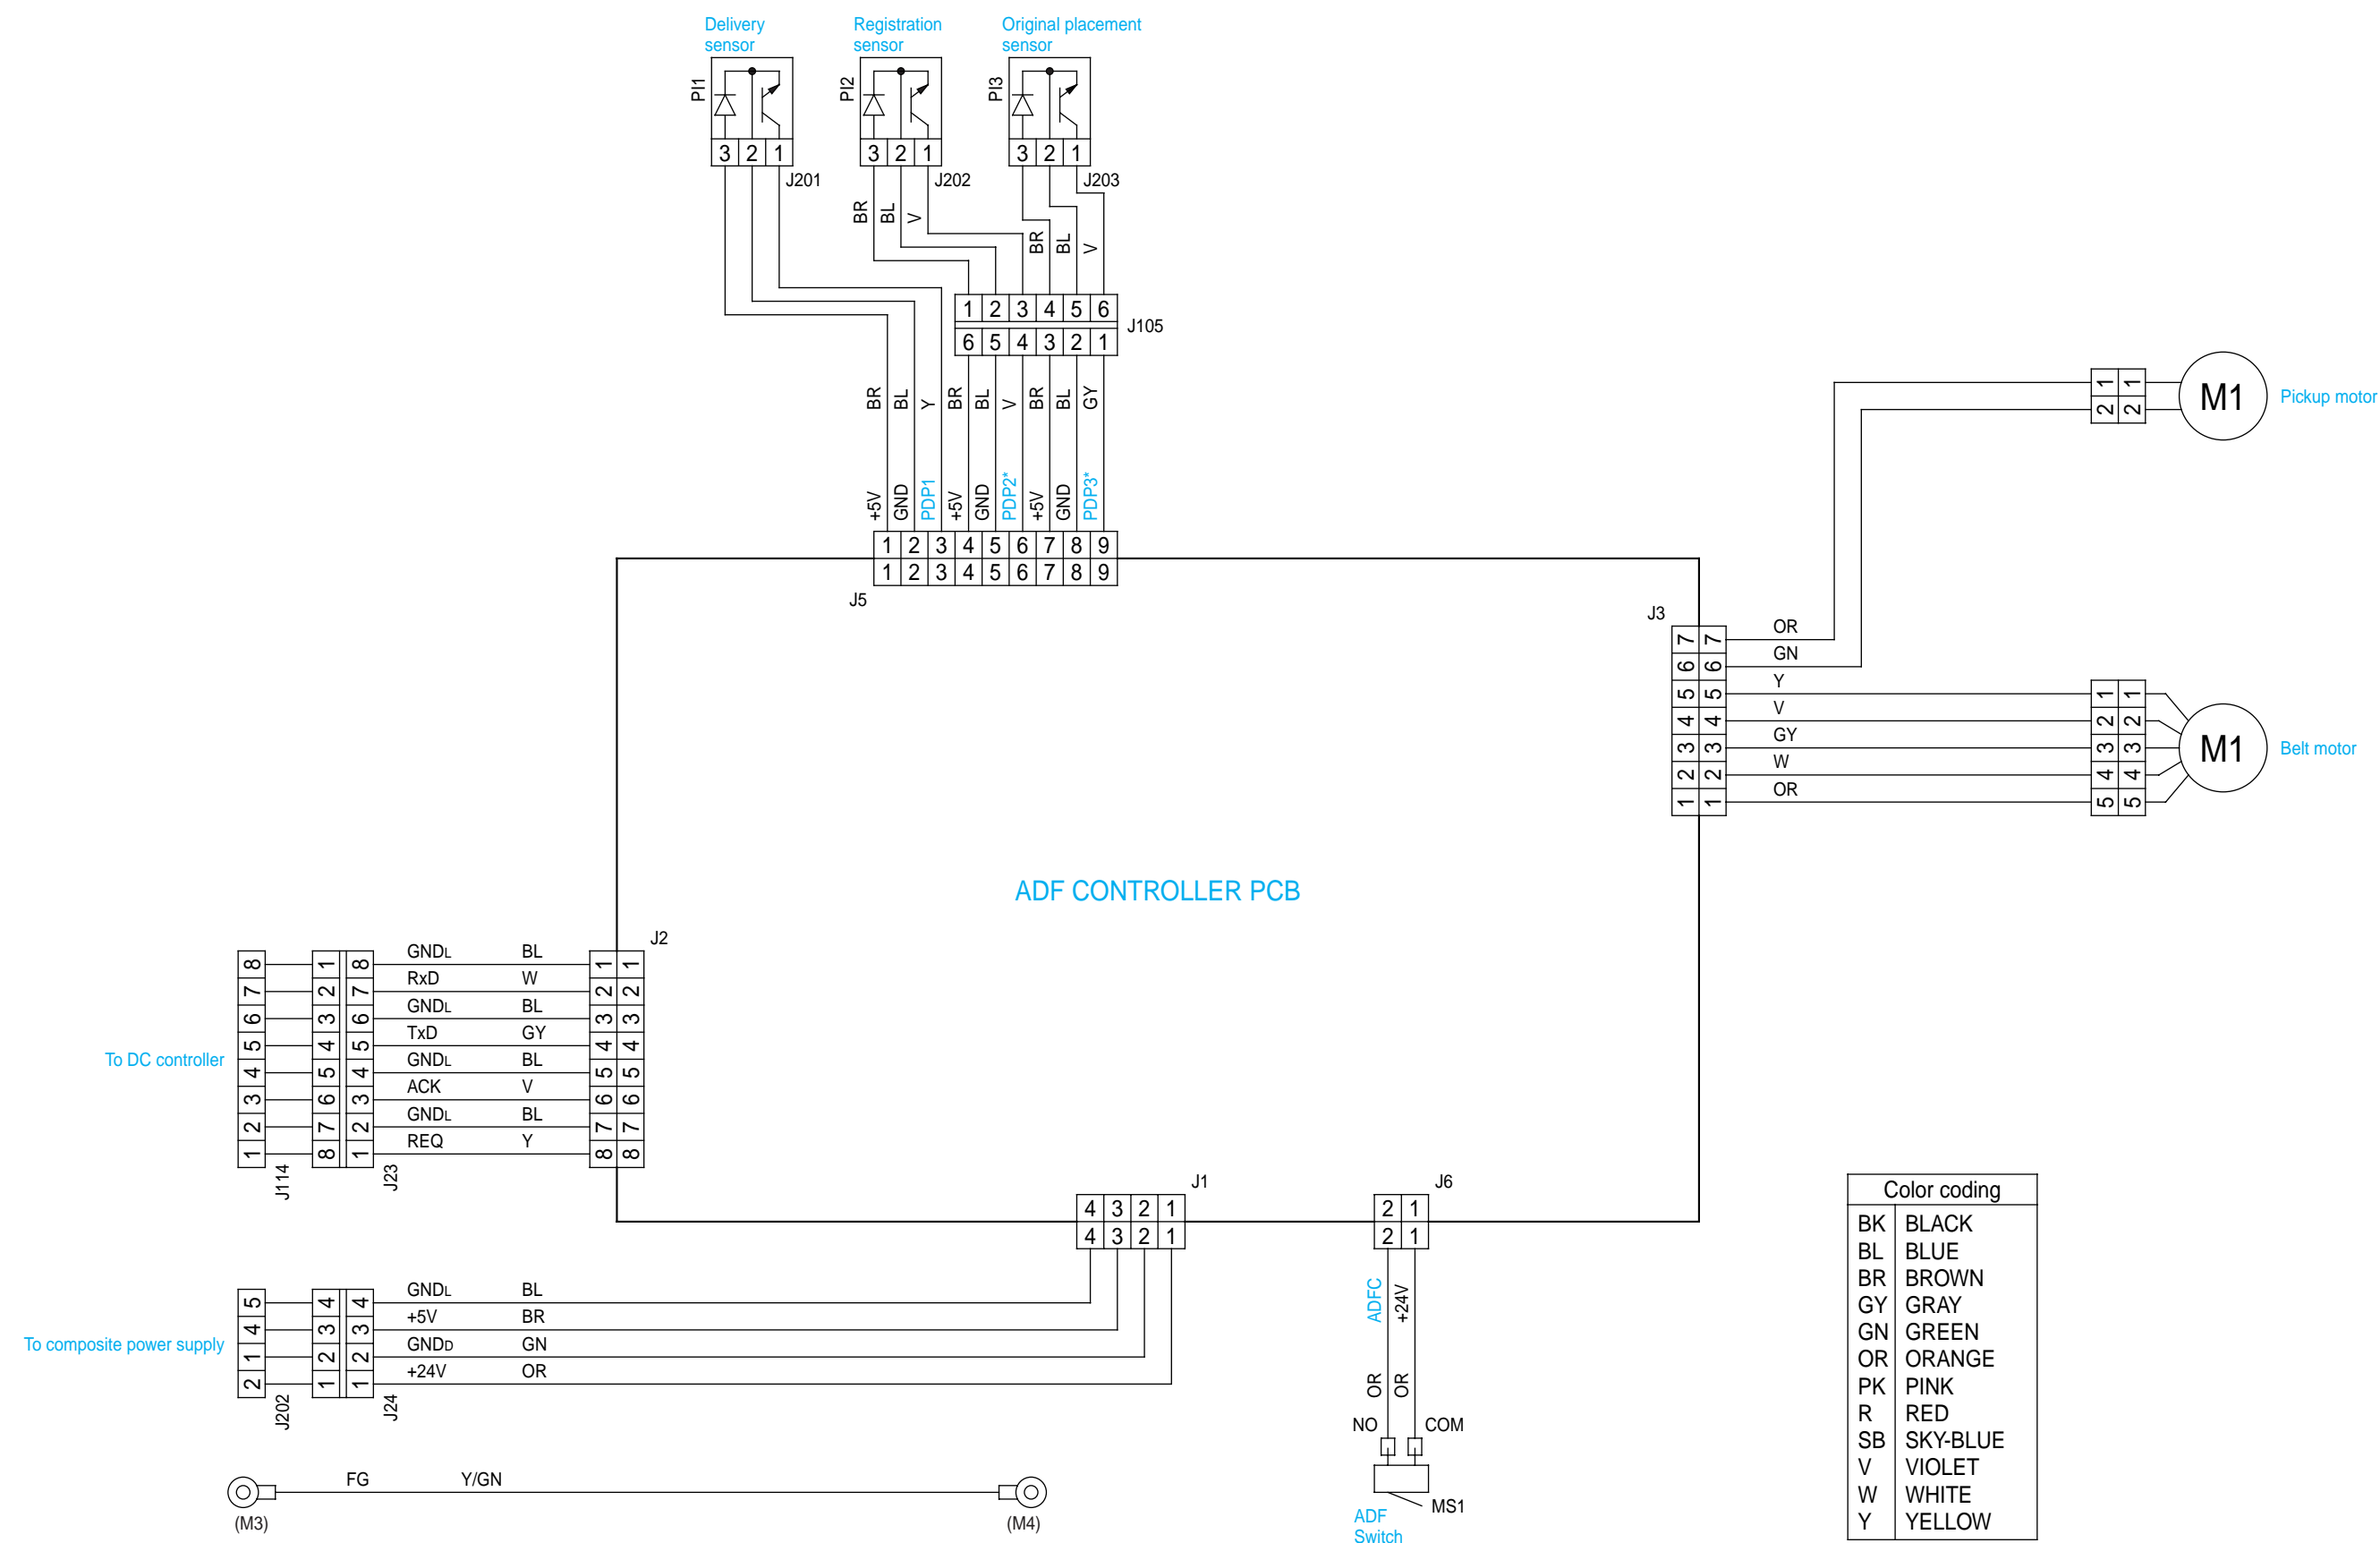2. ADF






D. DC CONTROLLER CIRCUIT DIAGRAM

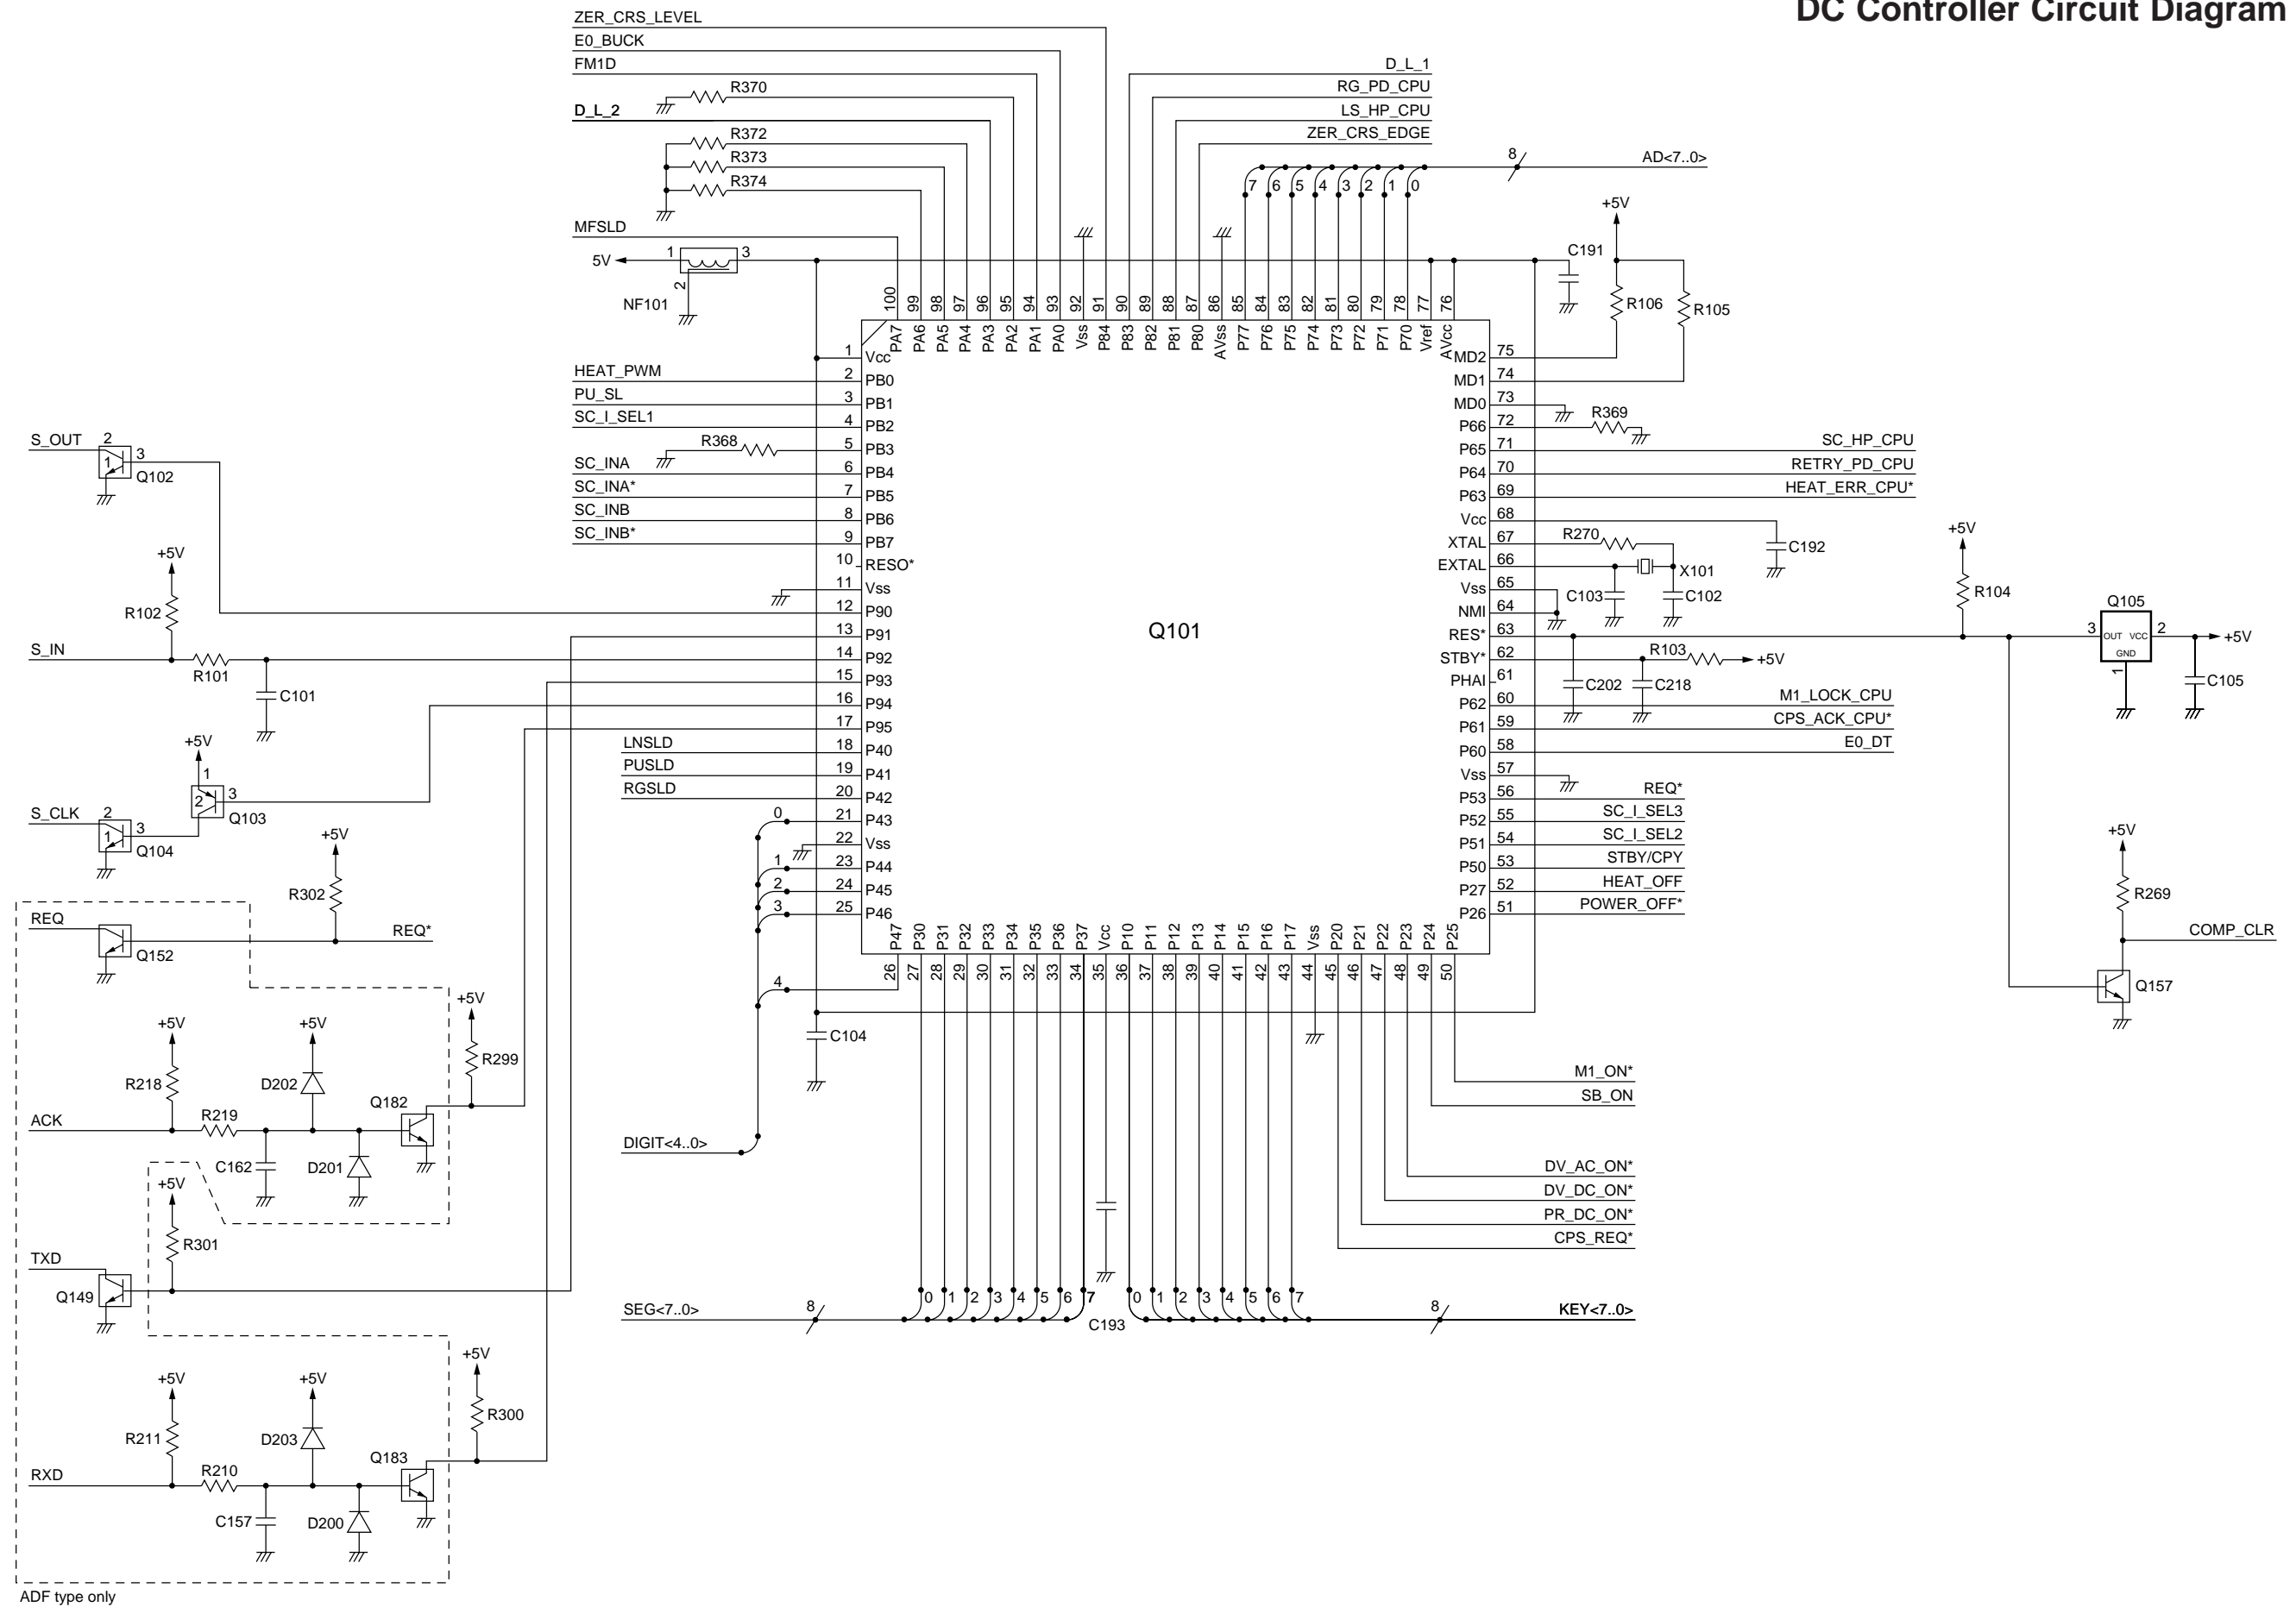DC Controller Circuit Diagram (1/8)









DC Controller Circuit Diagram (2/8)

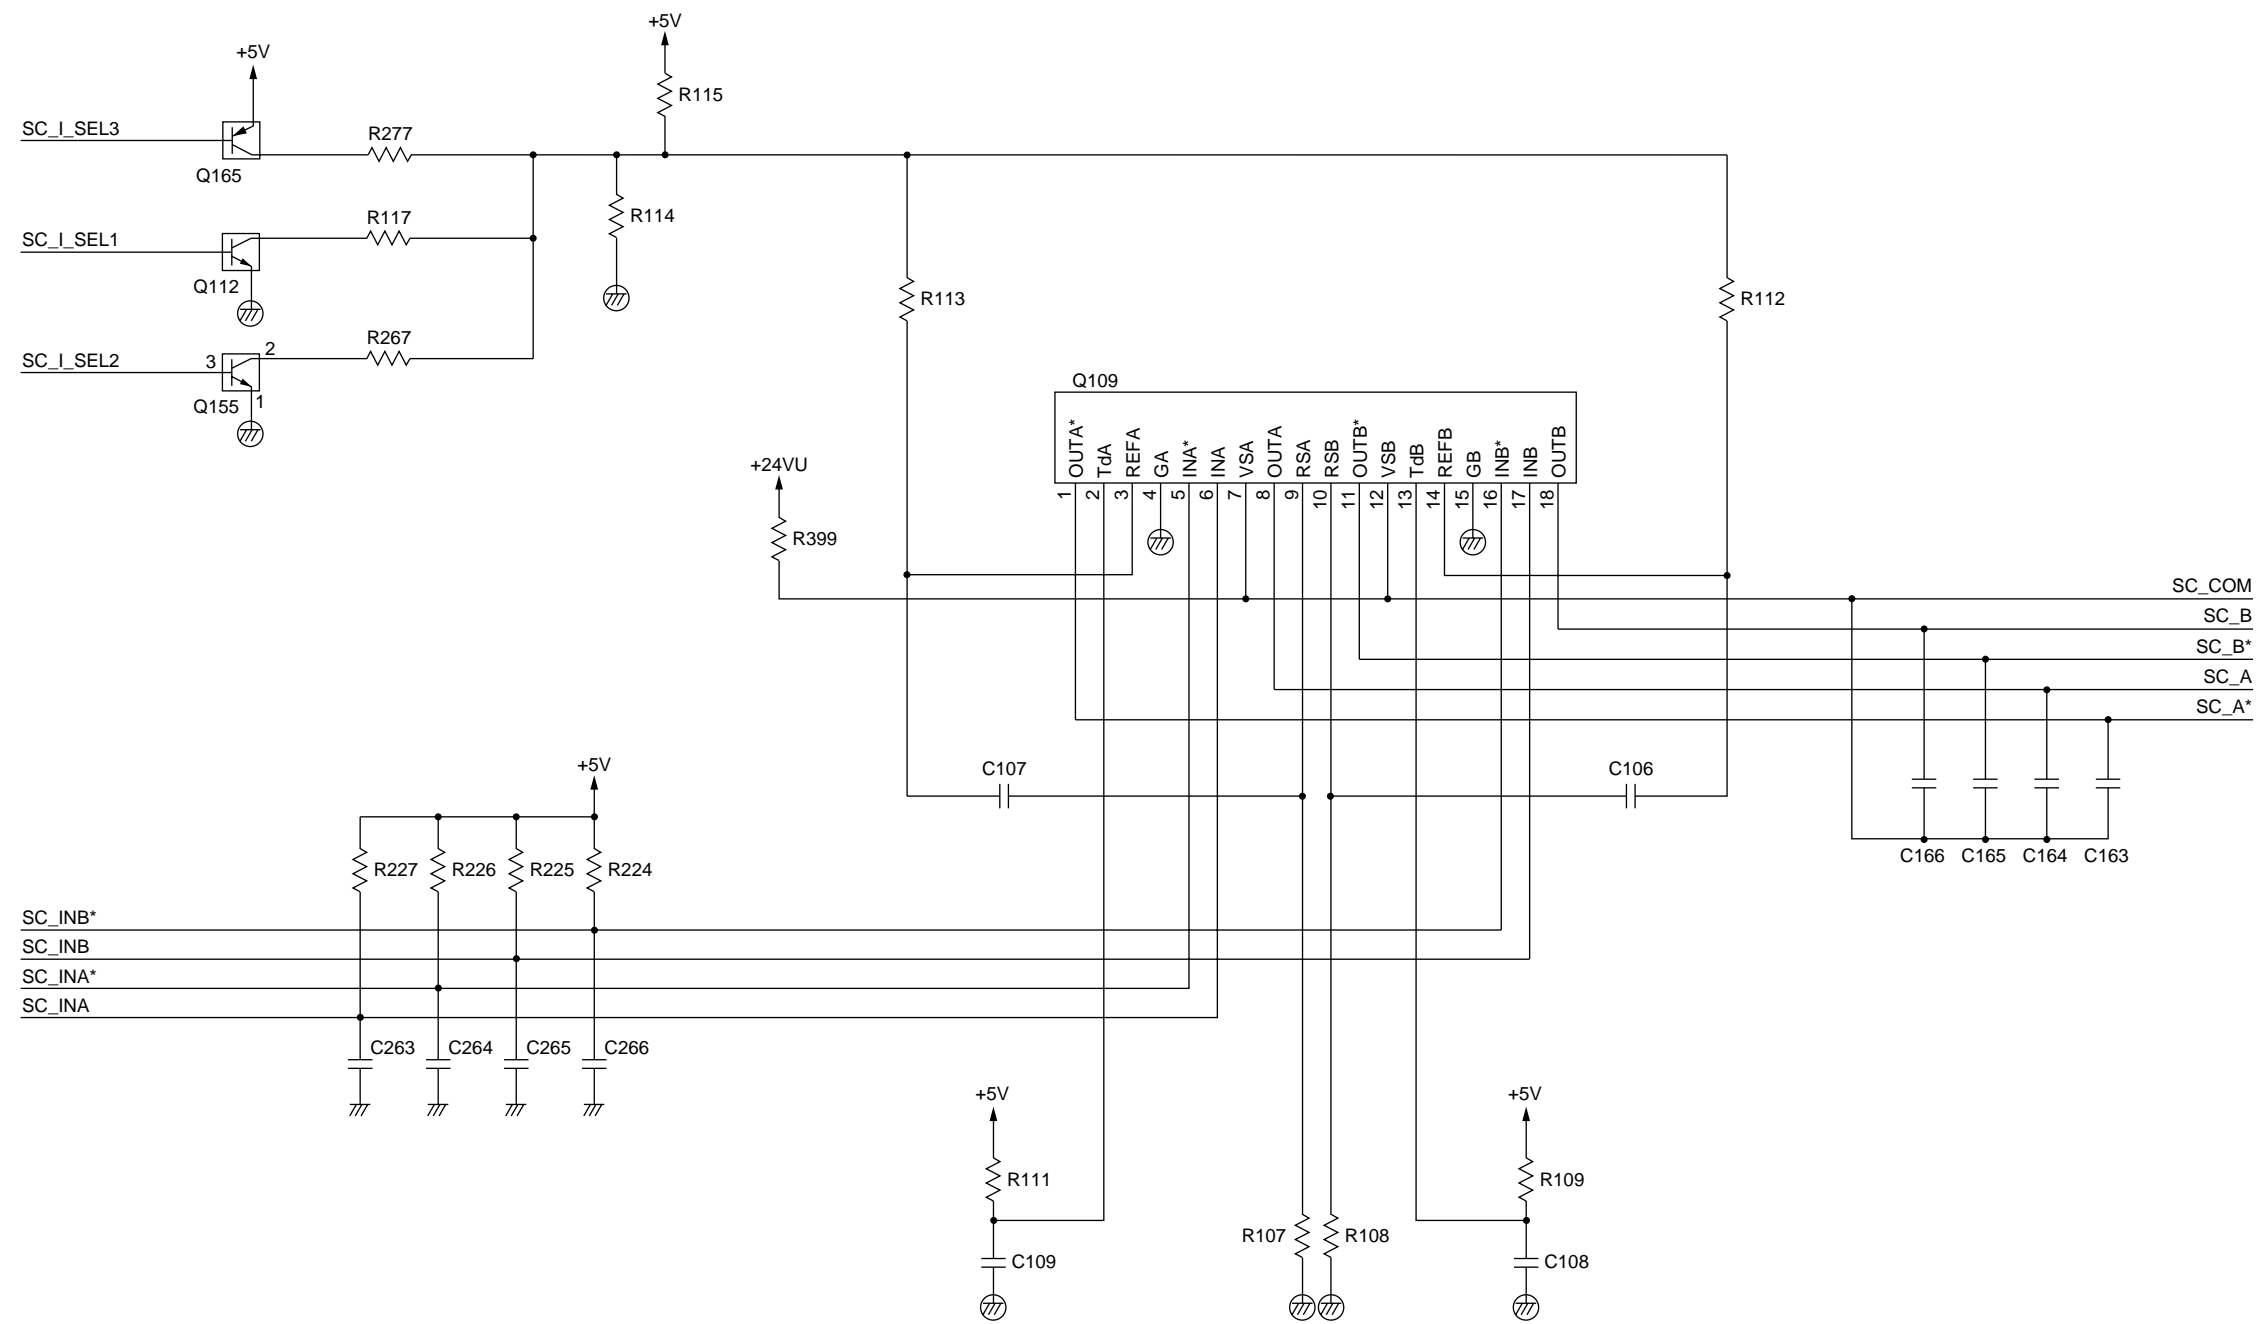


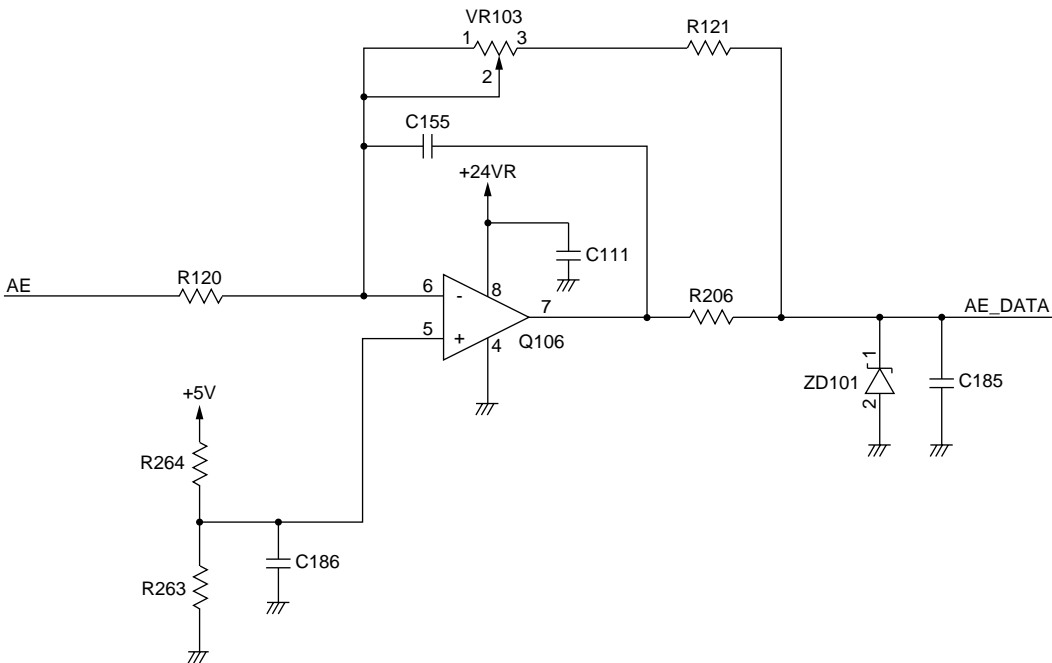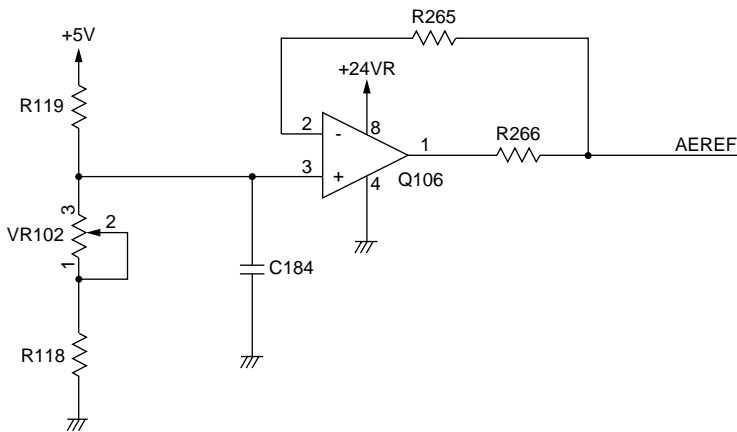


DC Controller Circuit Diagram (4/8)

  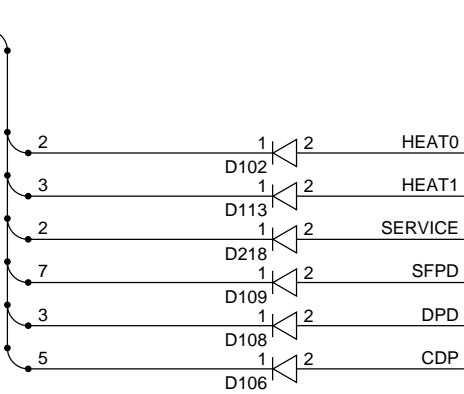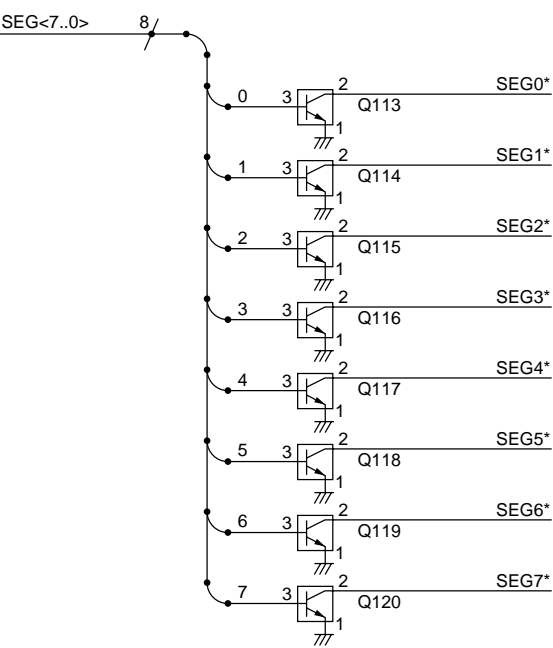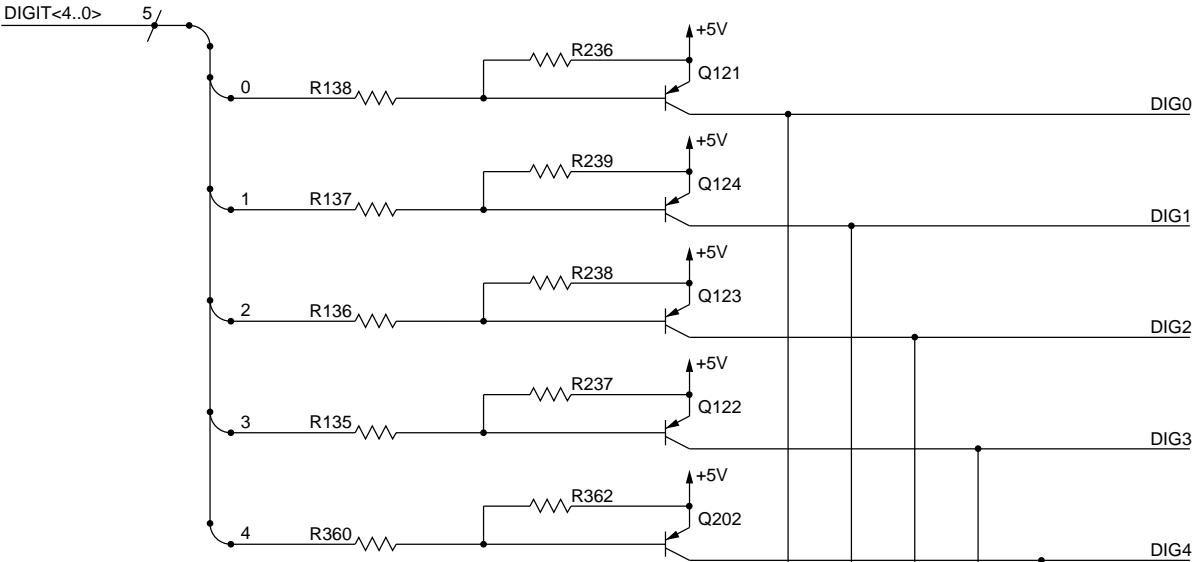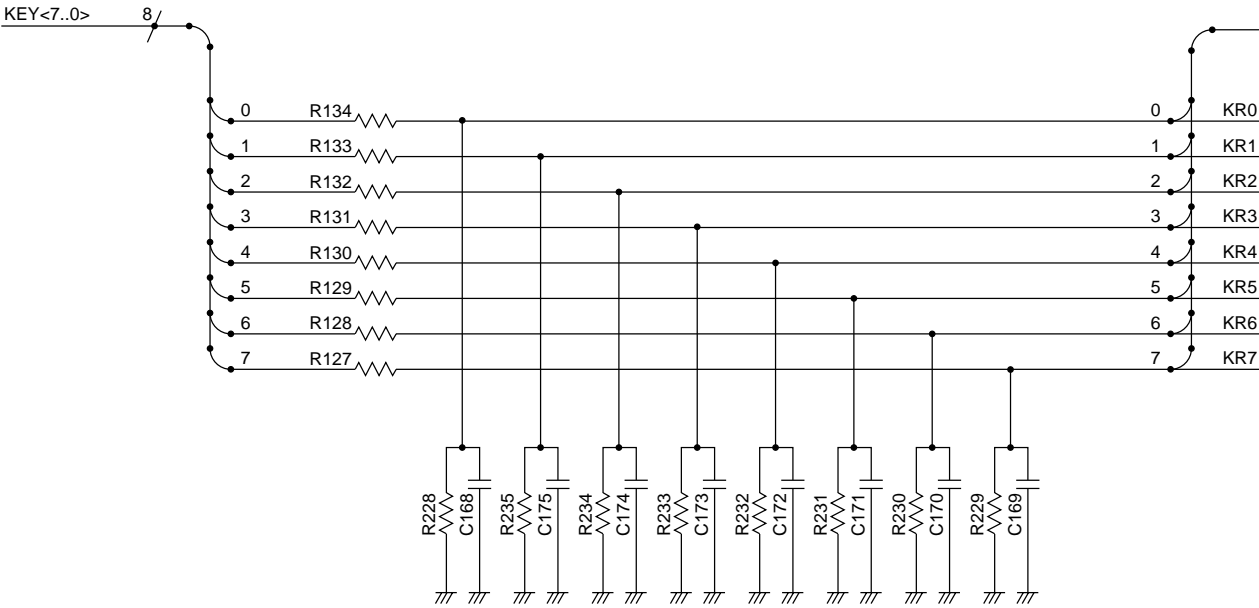

	10CPM	12/13CPM
D114	×	○




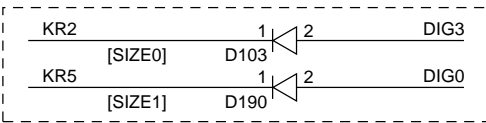


	AB/inch	inch
D103	○	×
D190	○	×


 


	120V	220/240V
D214	×	○

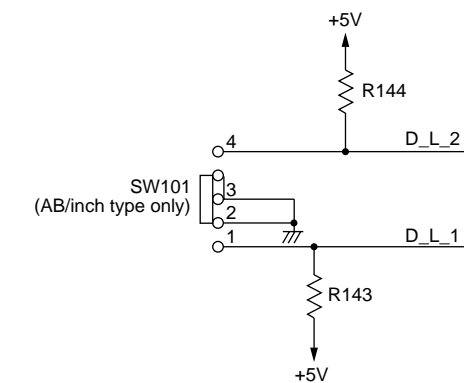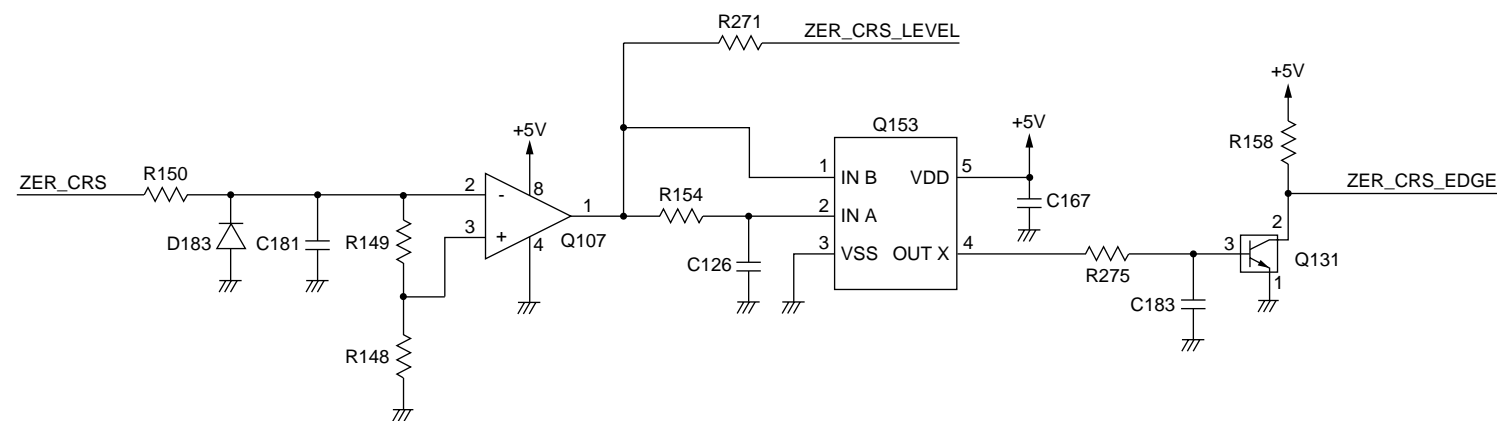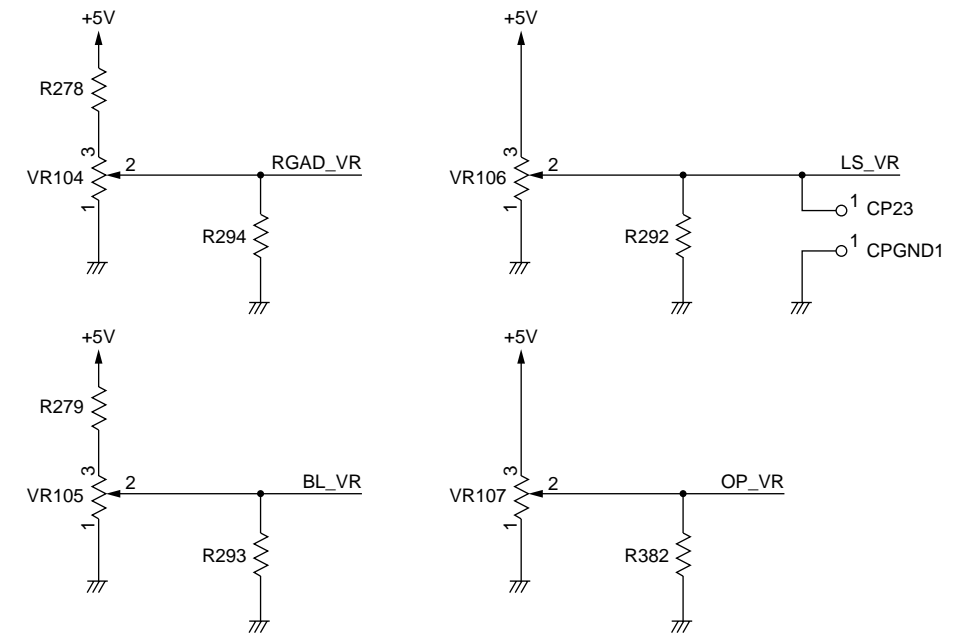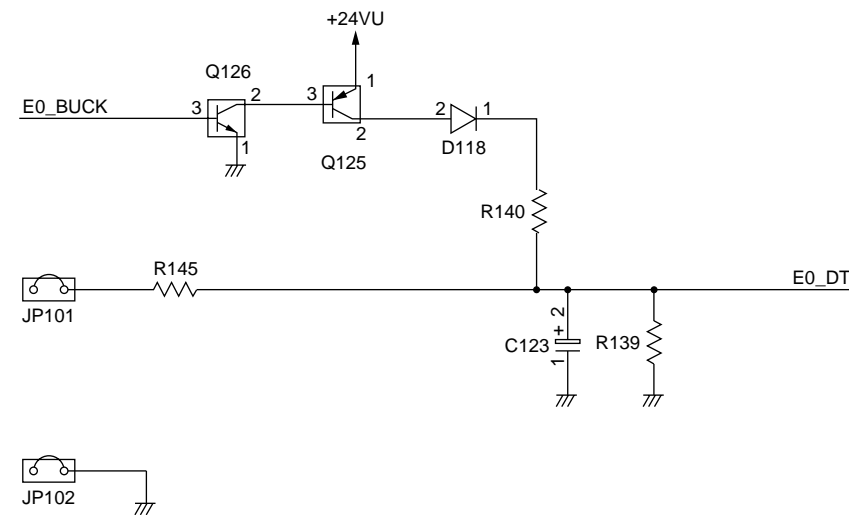
DC Controller Circuit Diagram (5/8)



DC Controller Circuit Diagram (6/8)

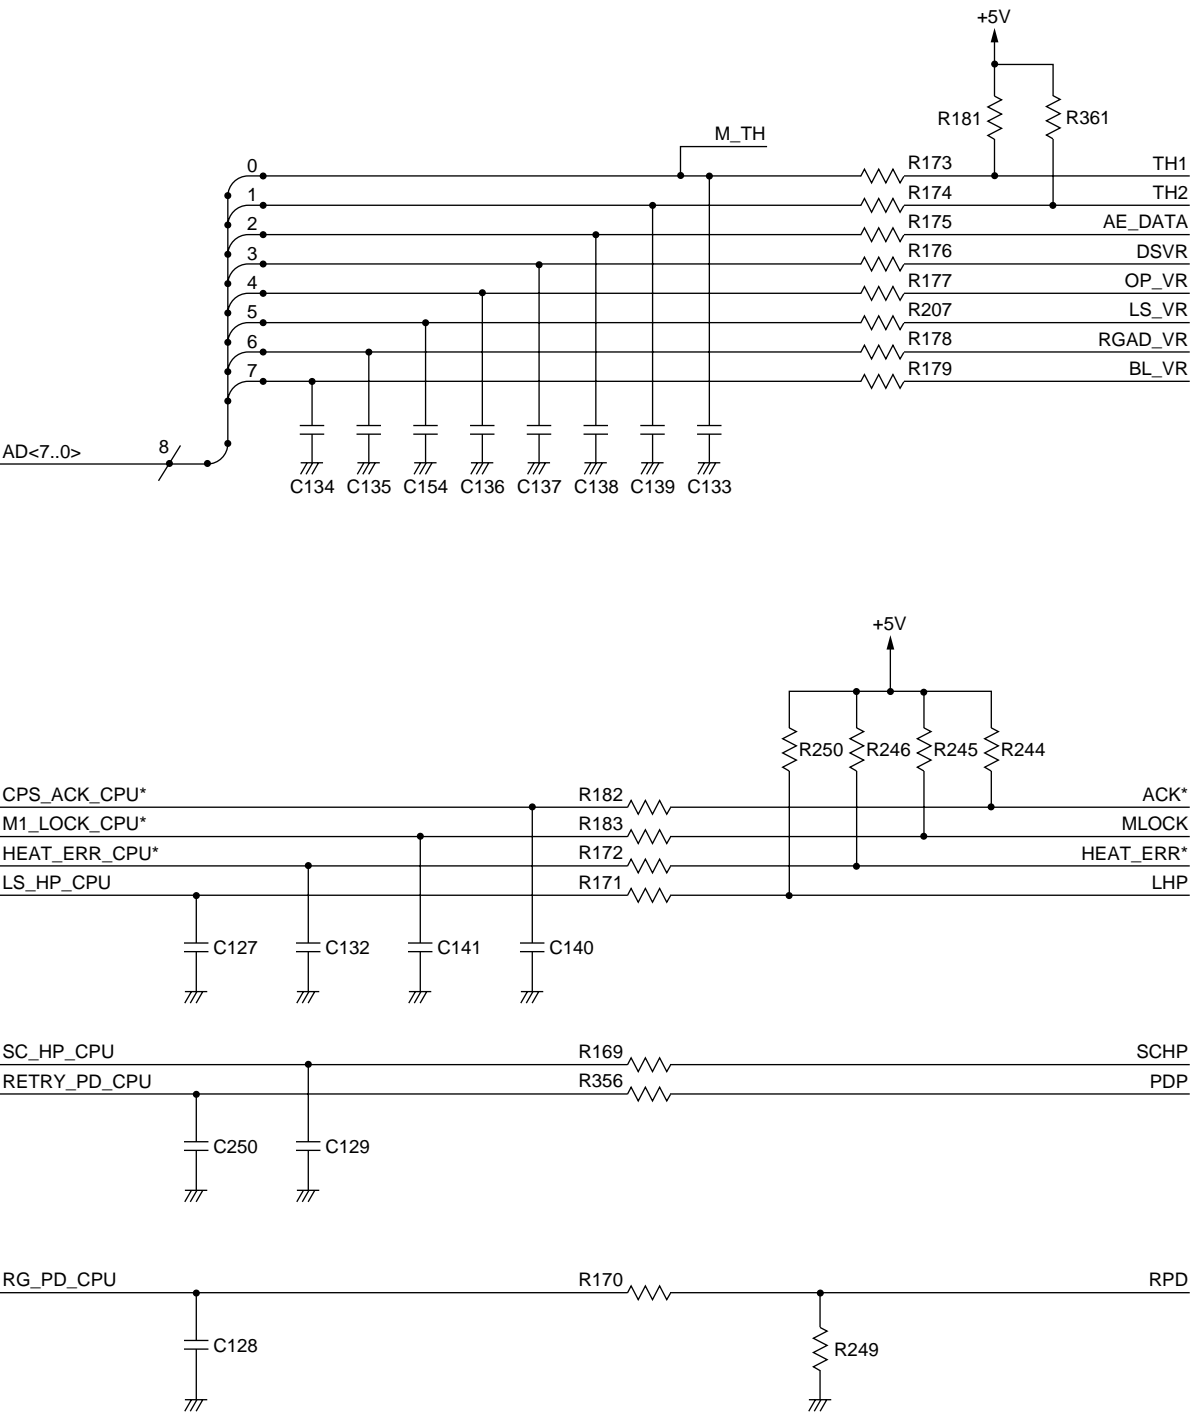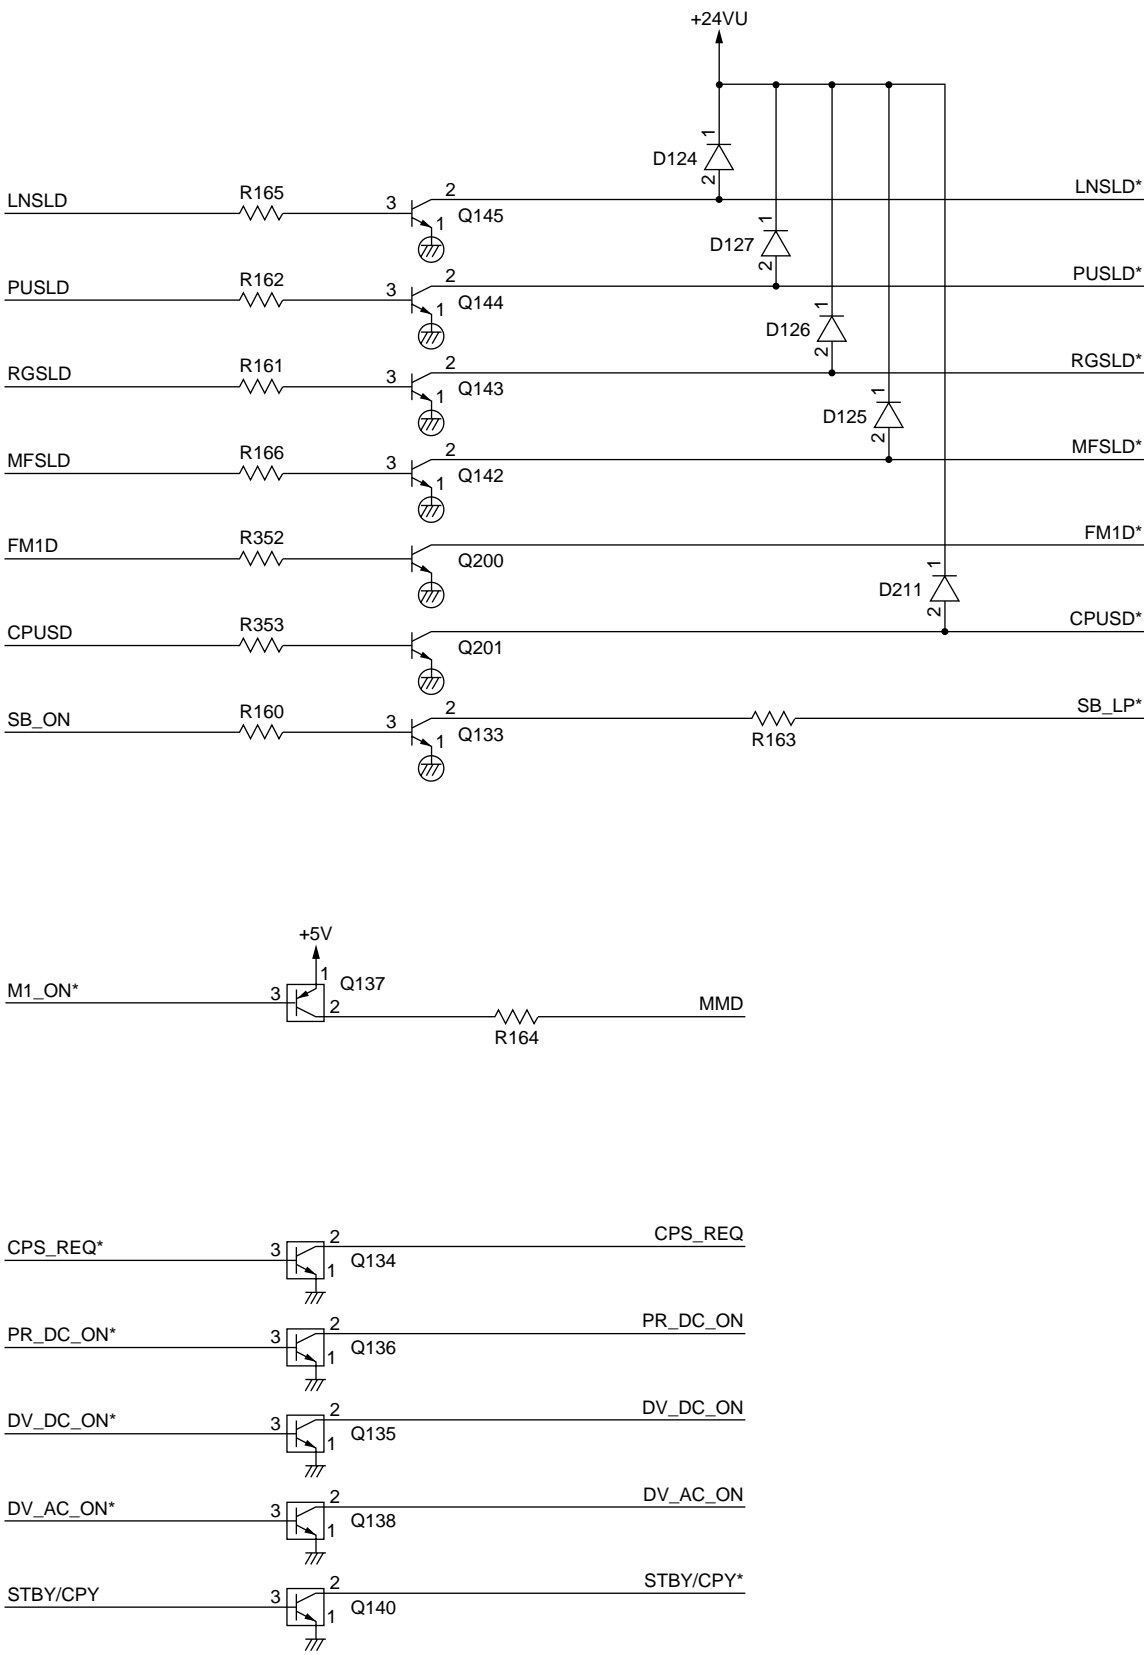

DC Controller Circuit Diagram (7/8)

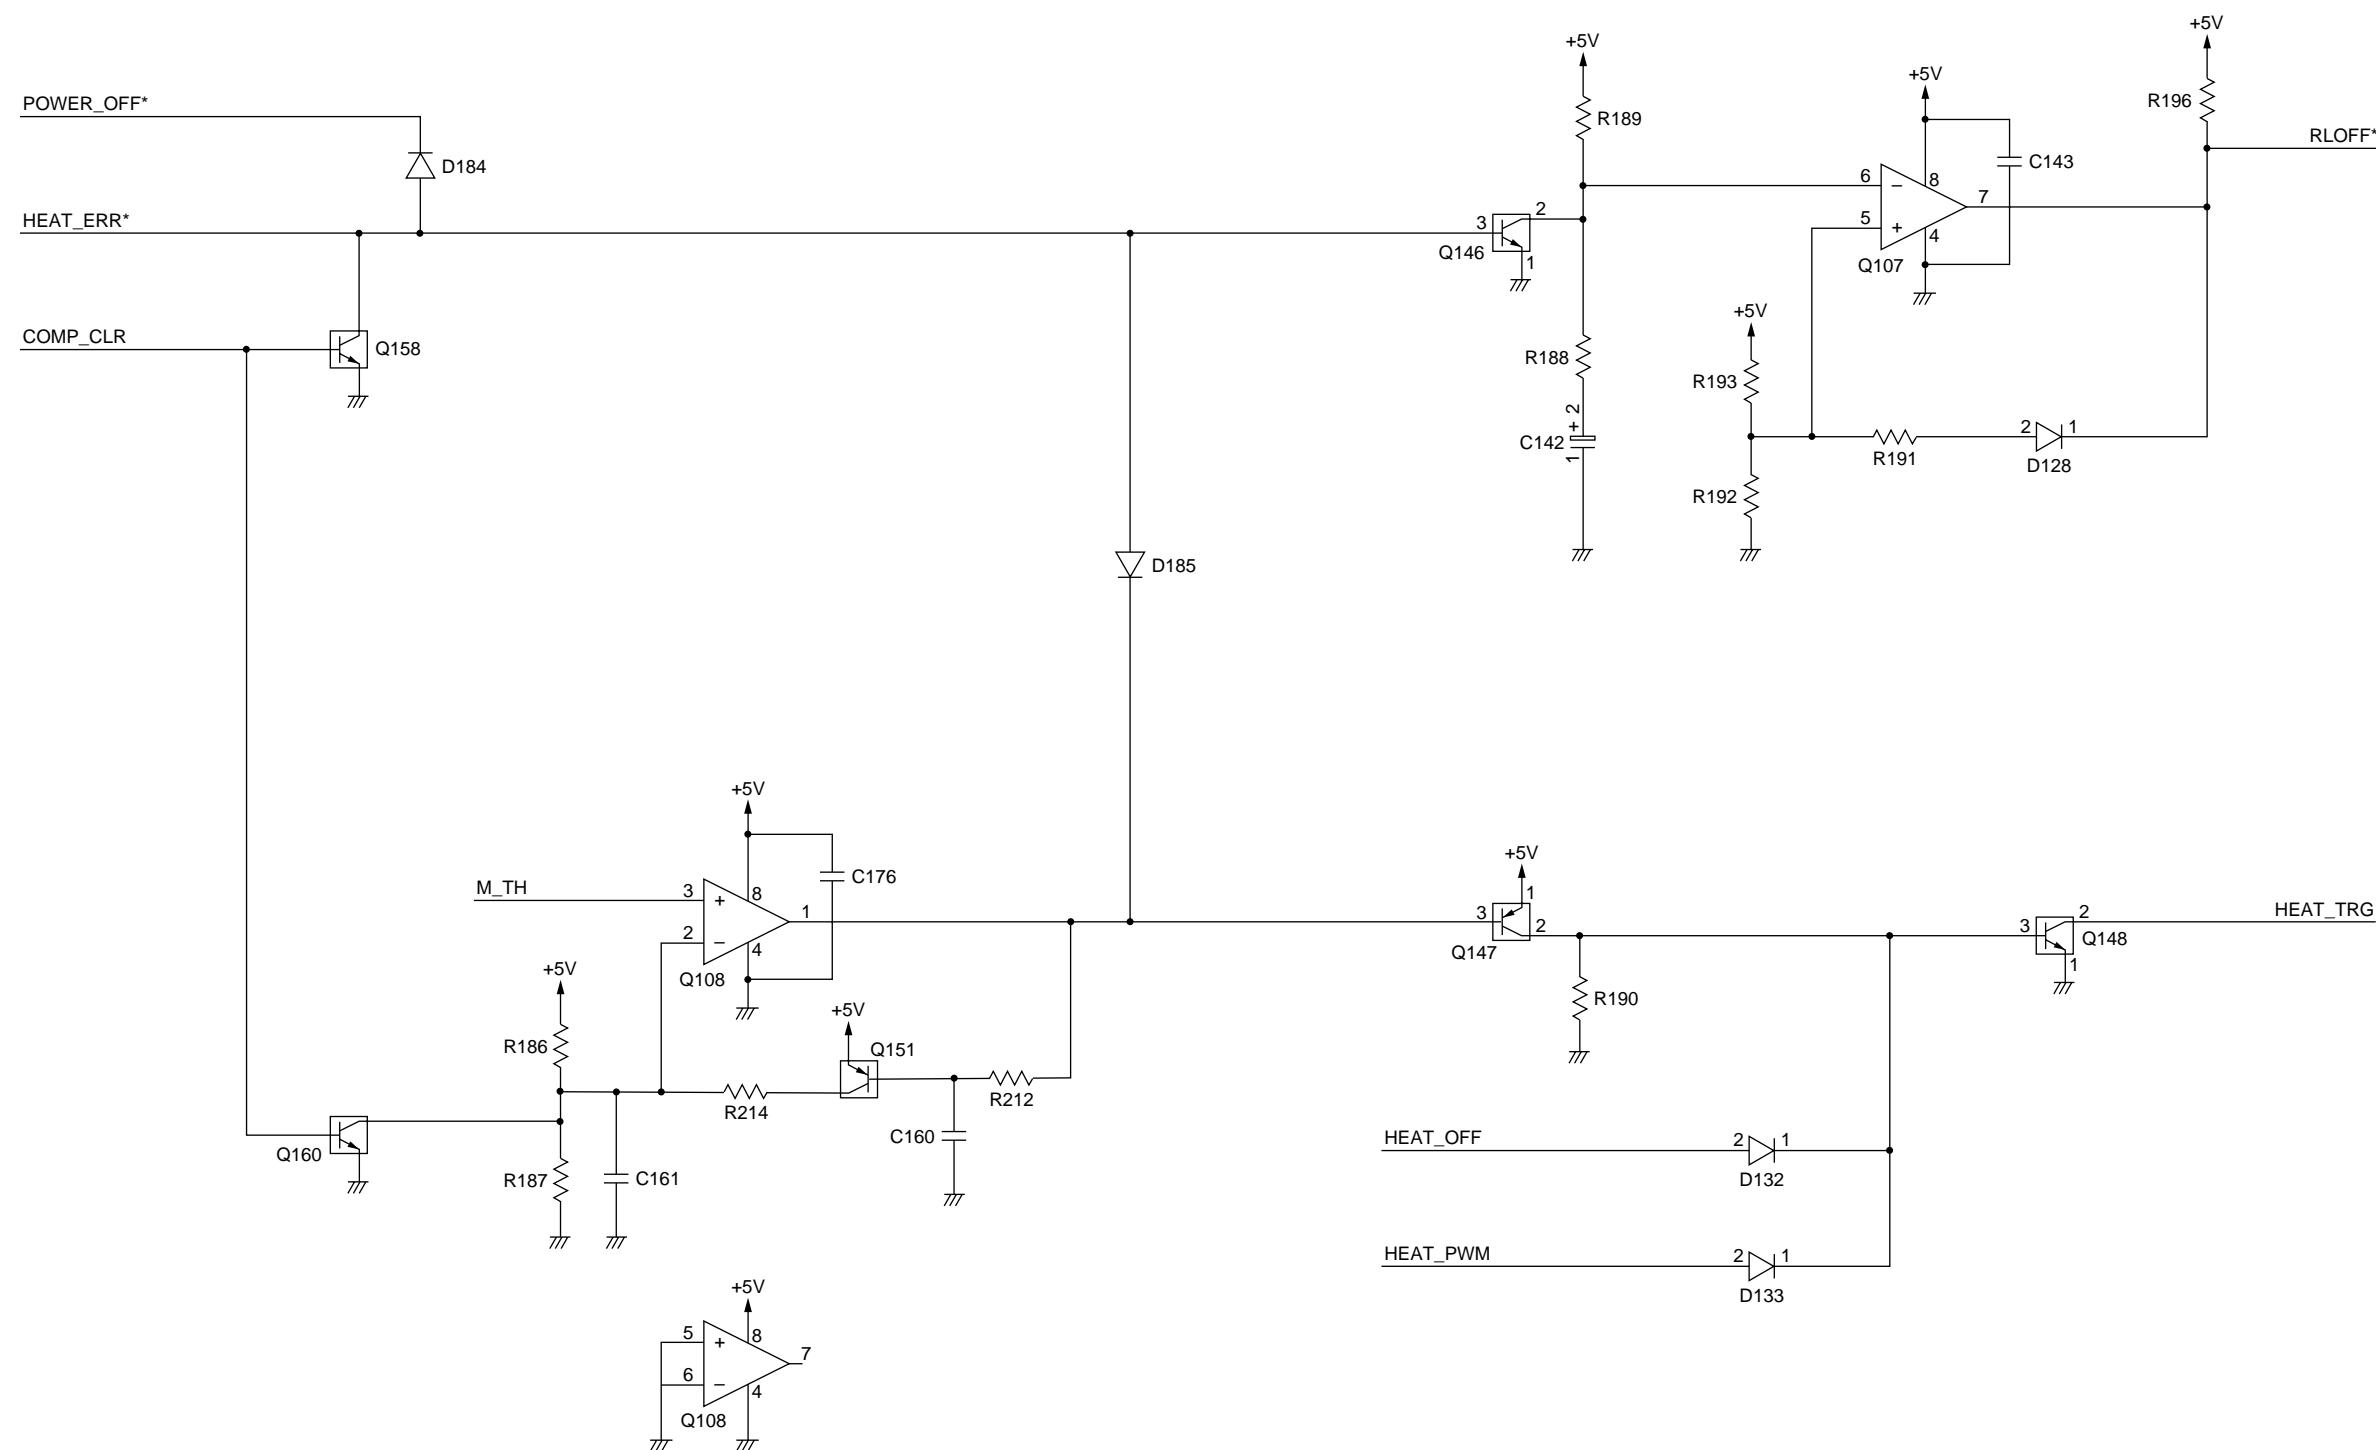


A-14






E. ADF CONTROLLER CIRCUIT DIAGRAM

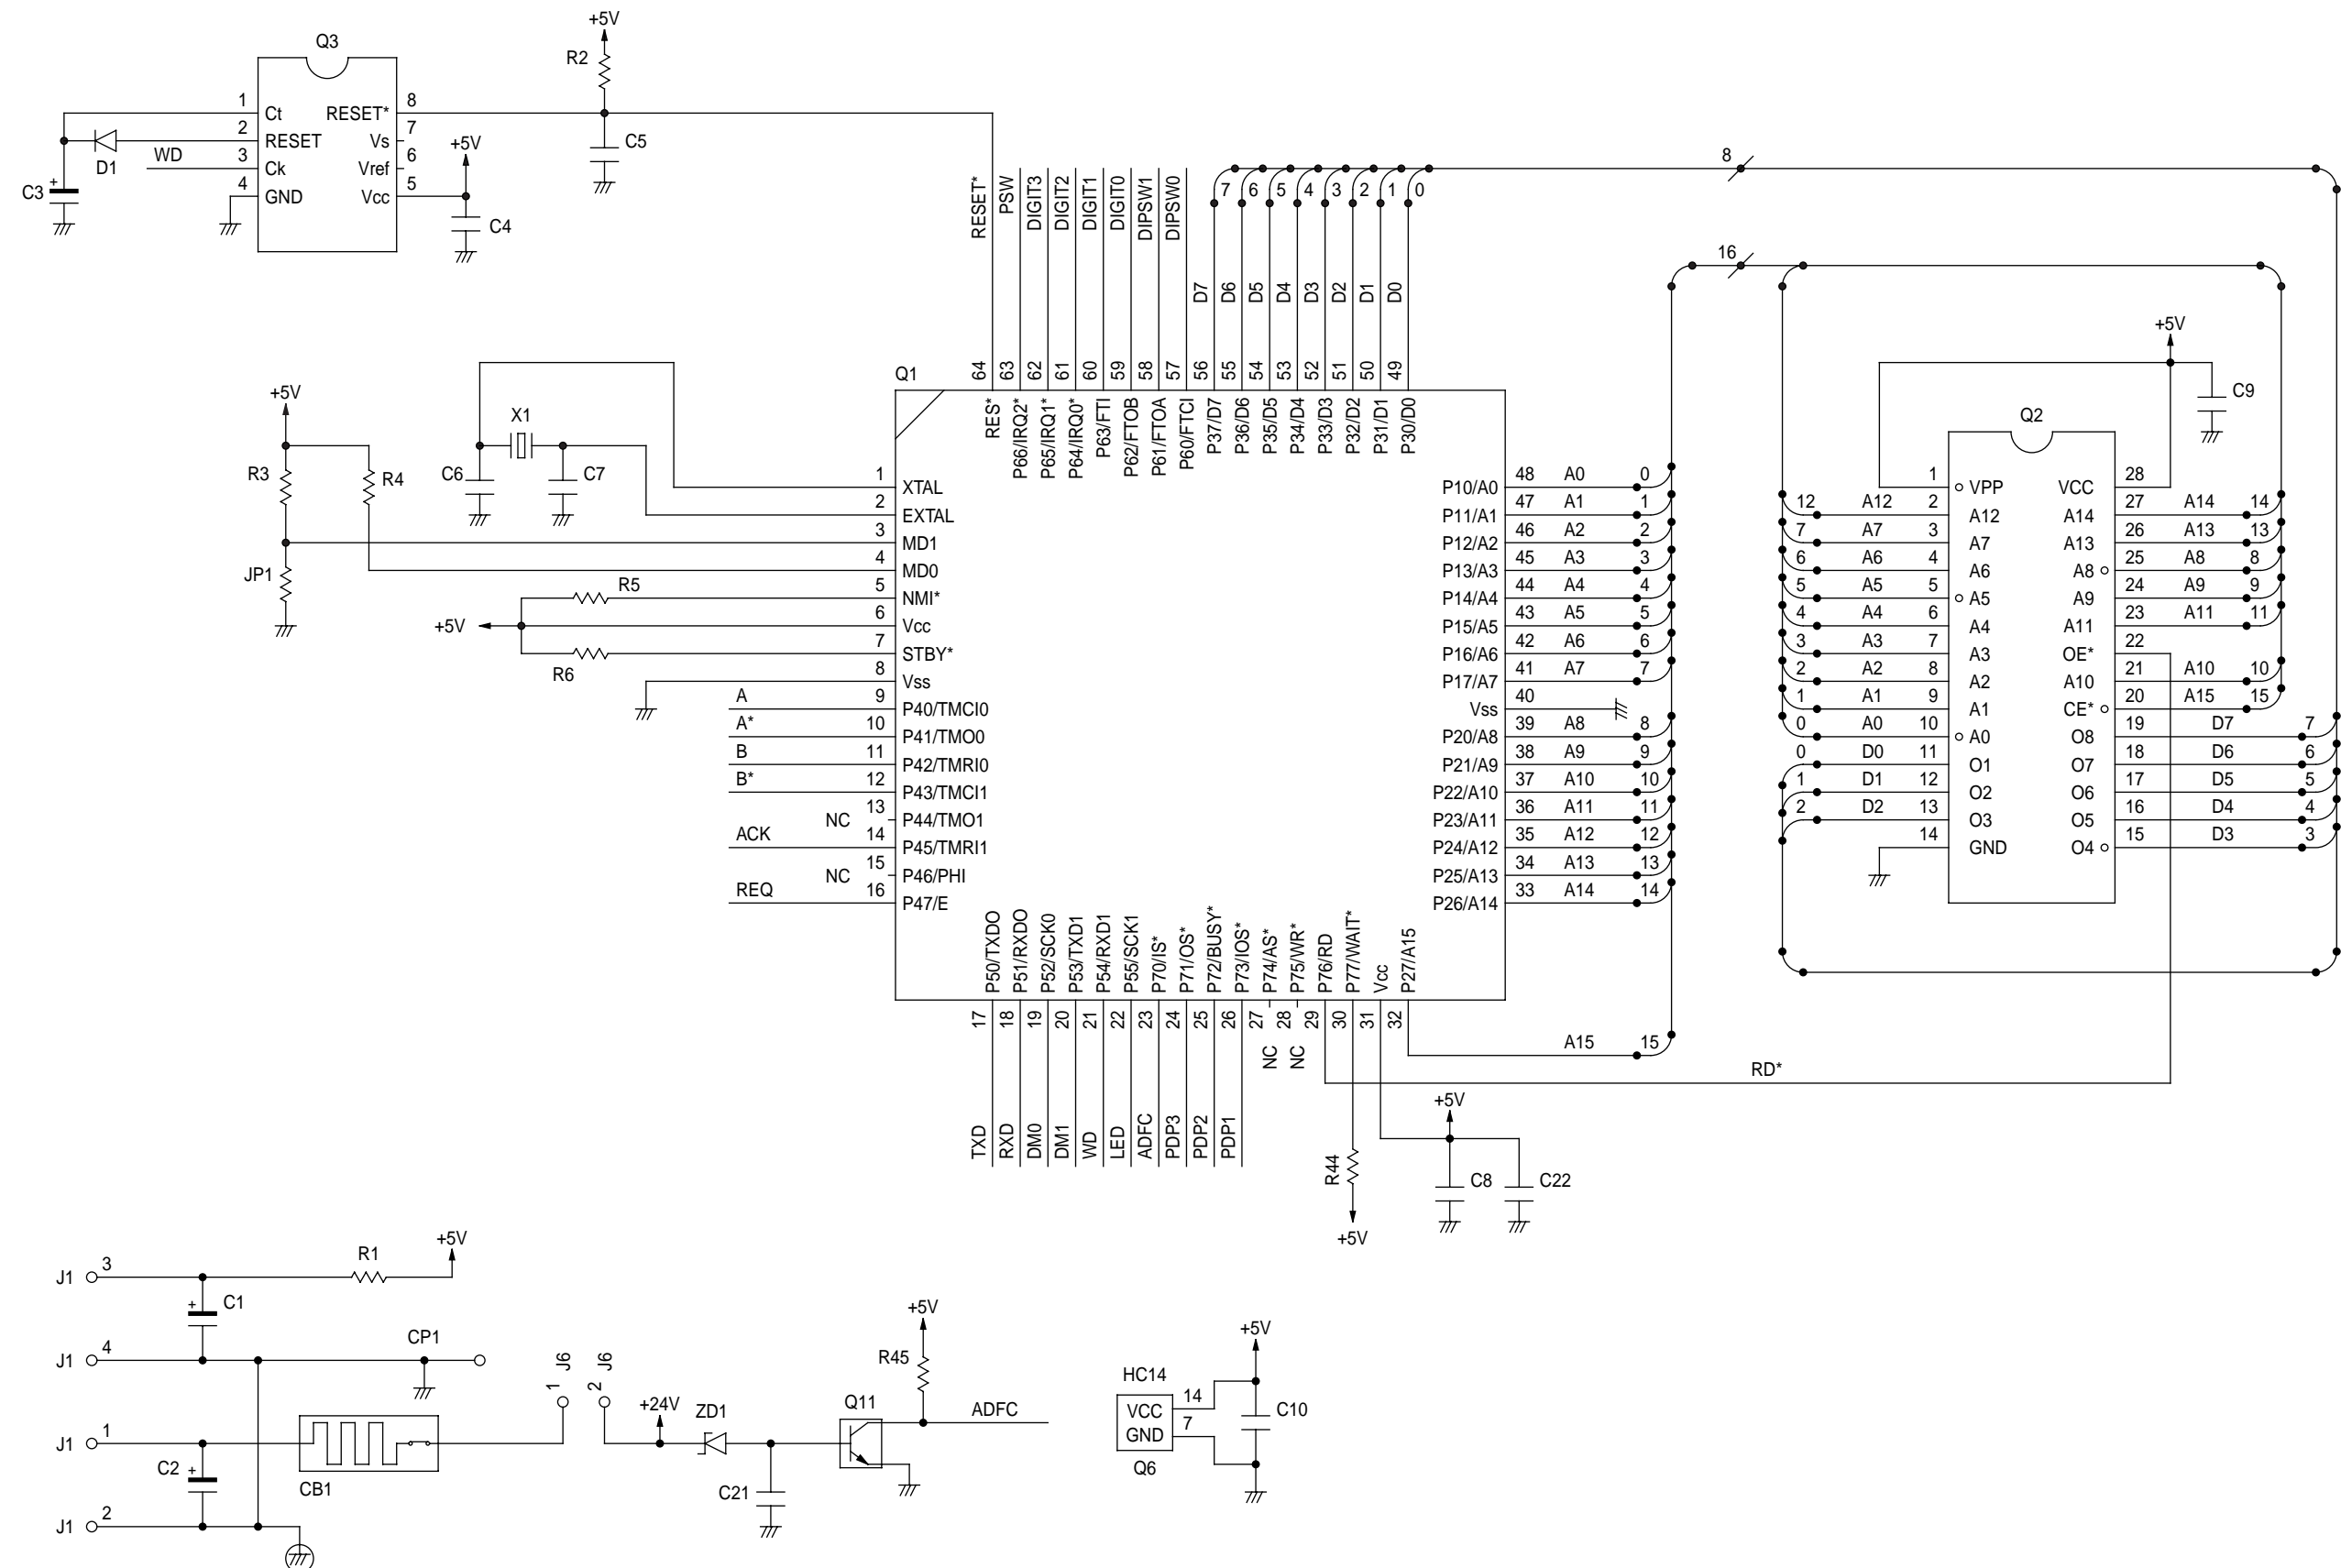ADF Controller Circuit Diagram (1/3)



ADF Controller Circuit Diagram (2/3)

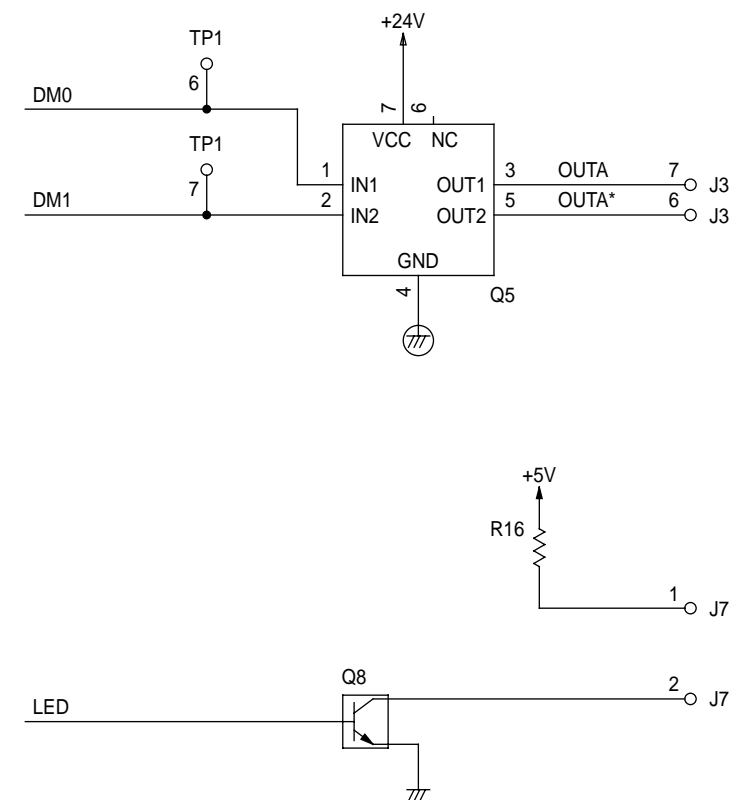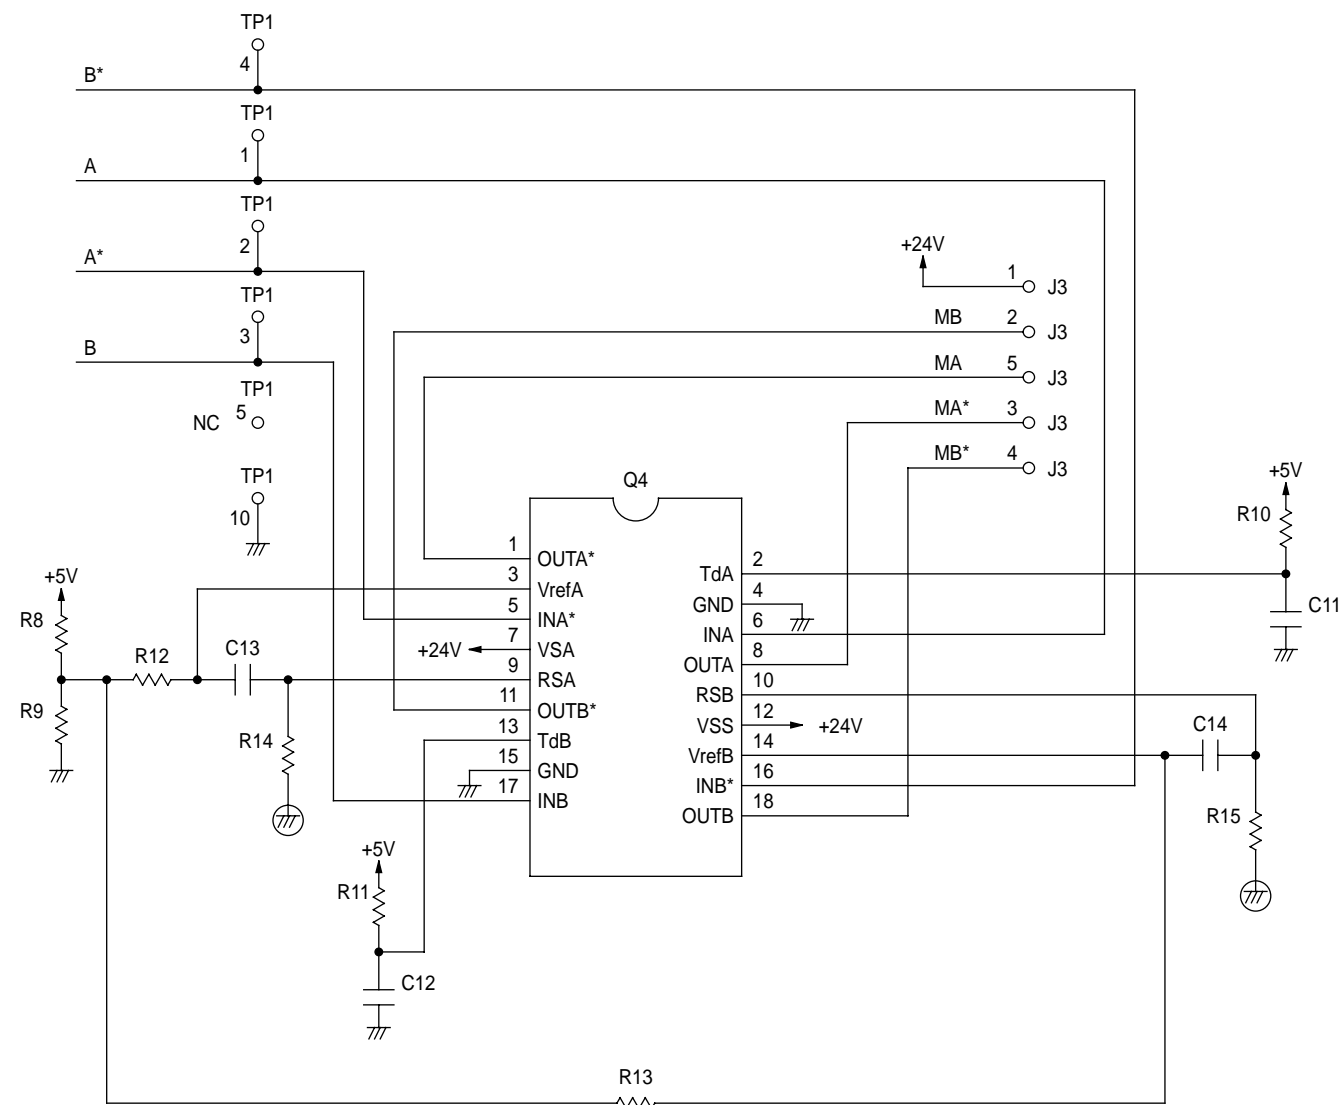


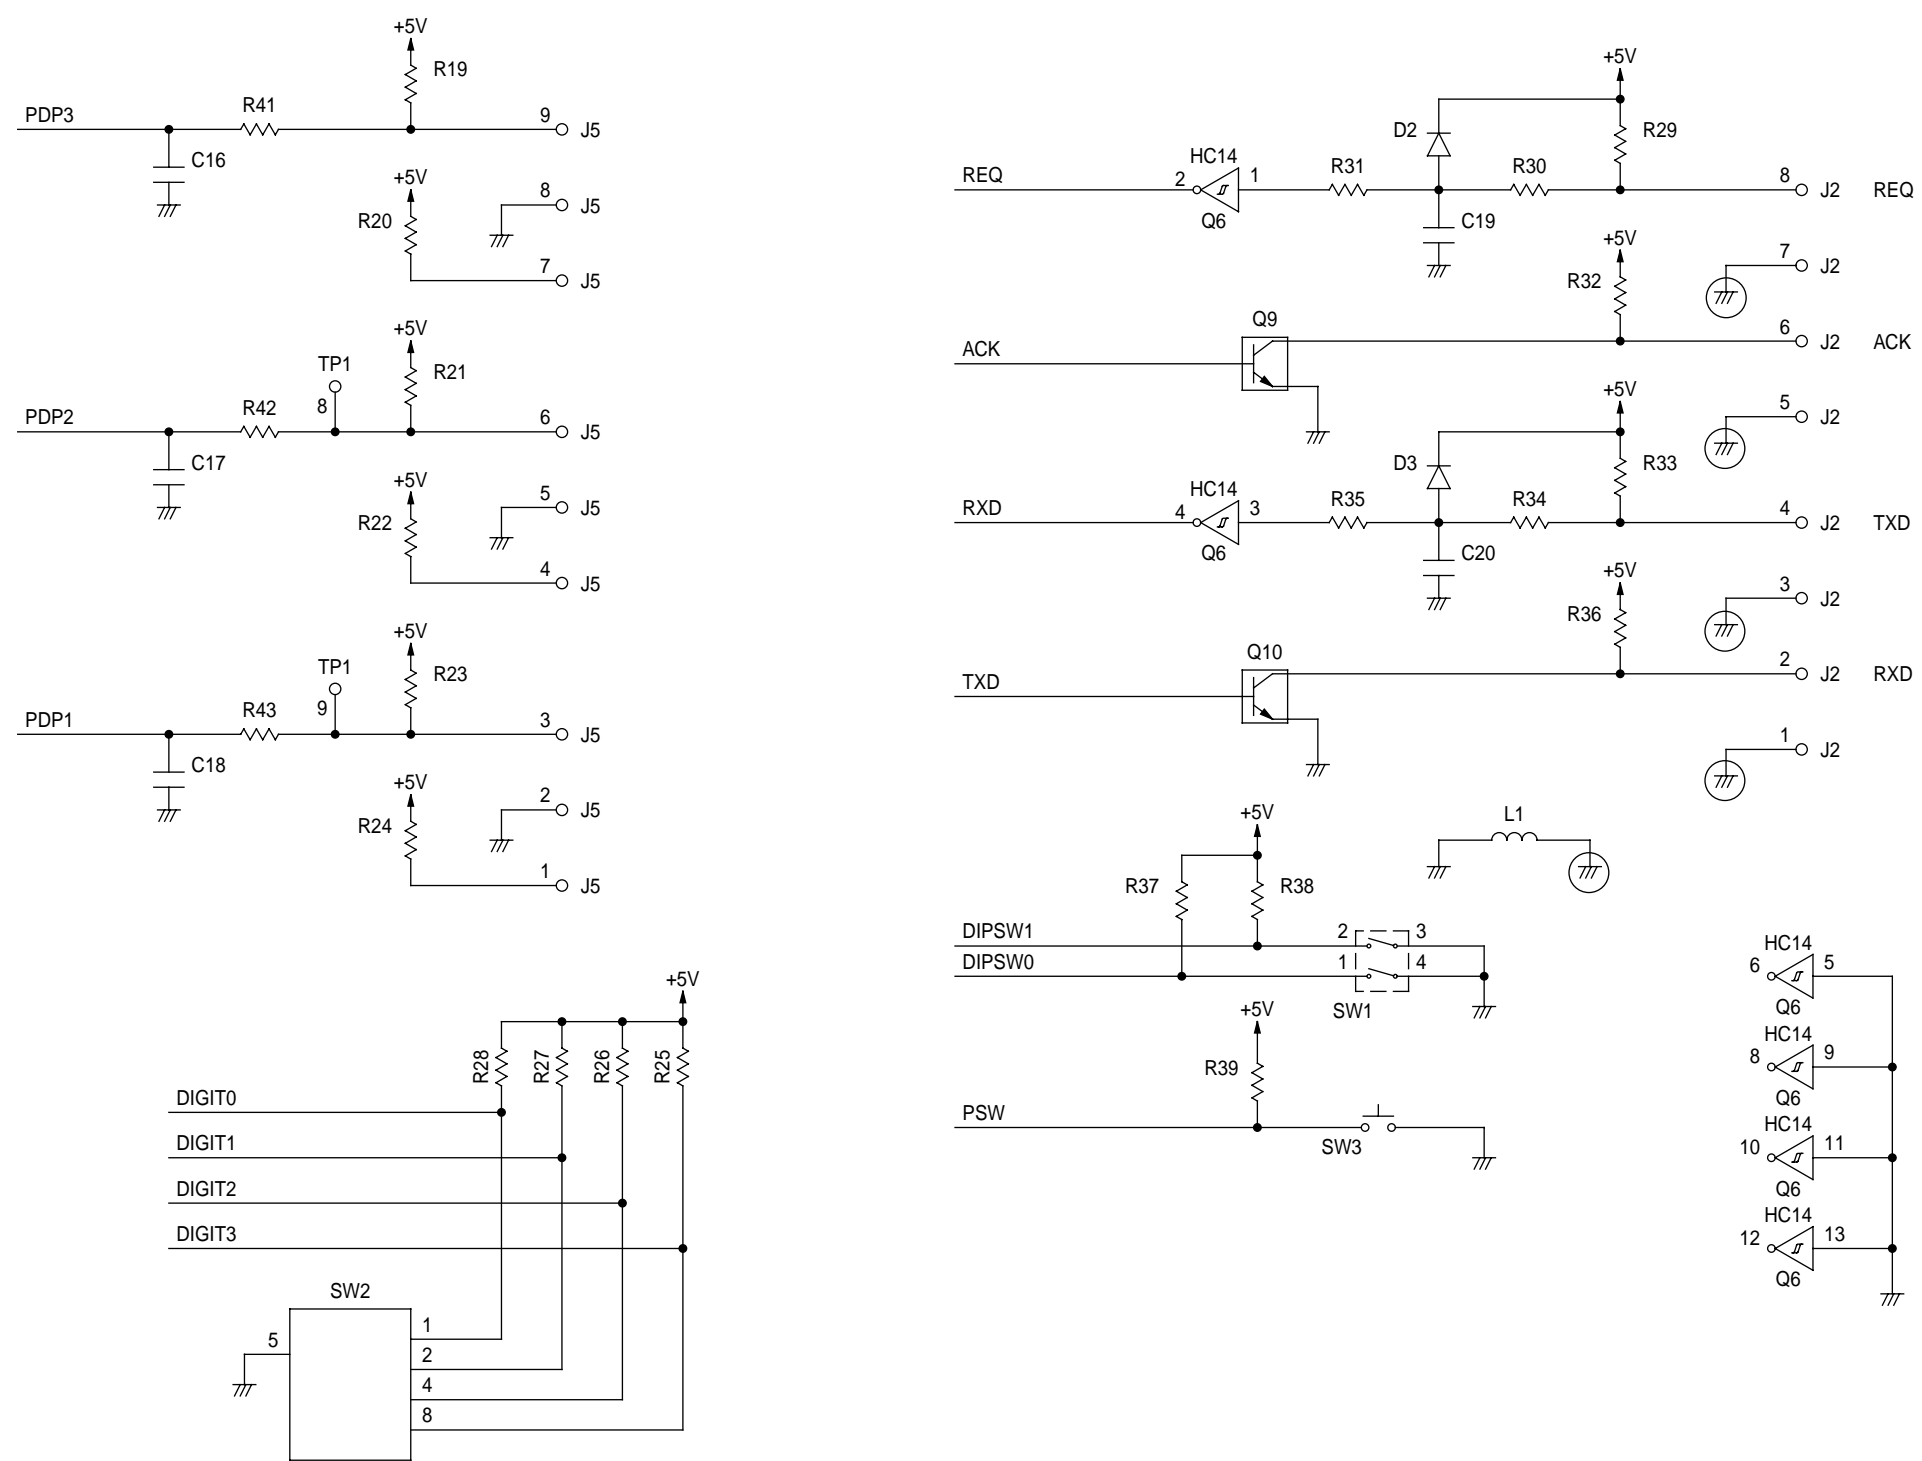


A-20



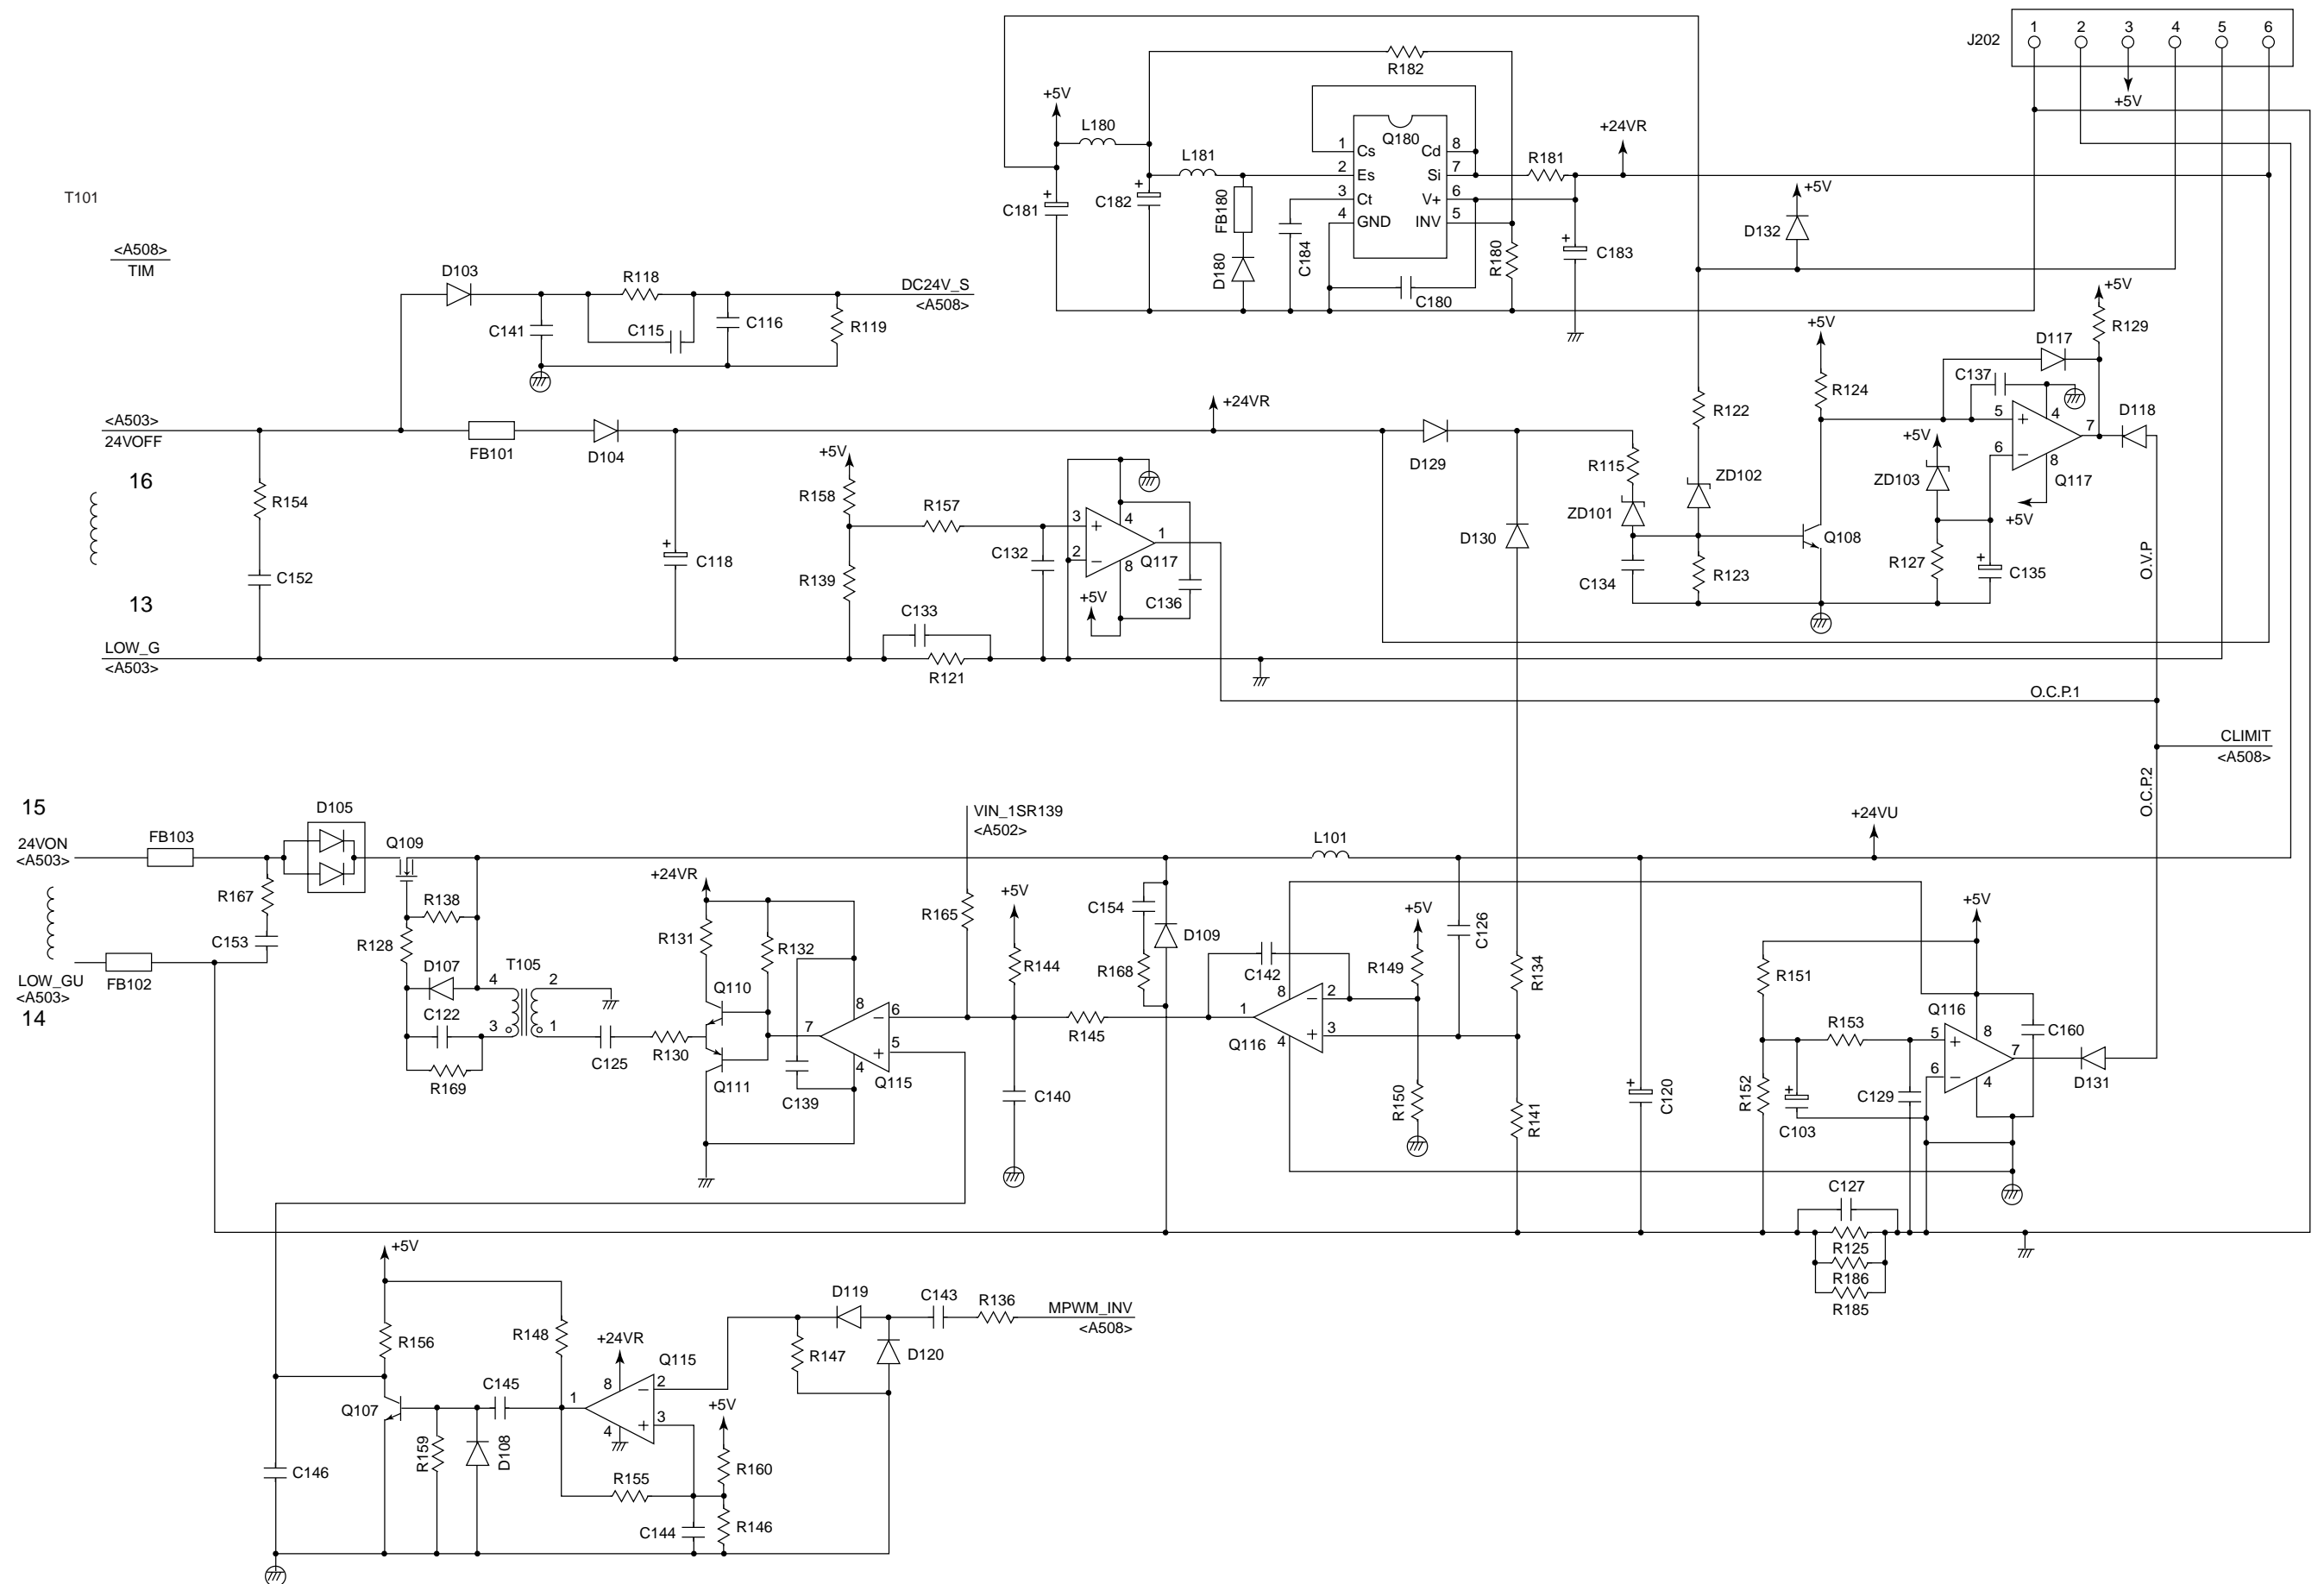
Composite Power Supply Circuit Diagram [A504] (3/8)



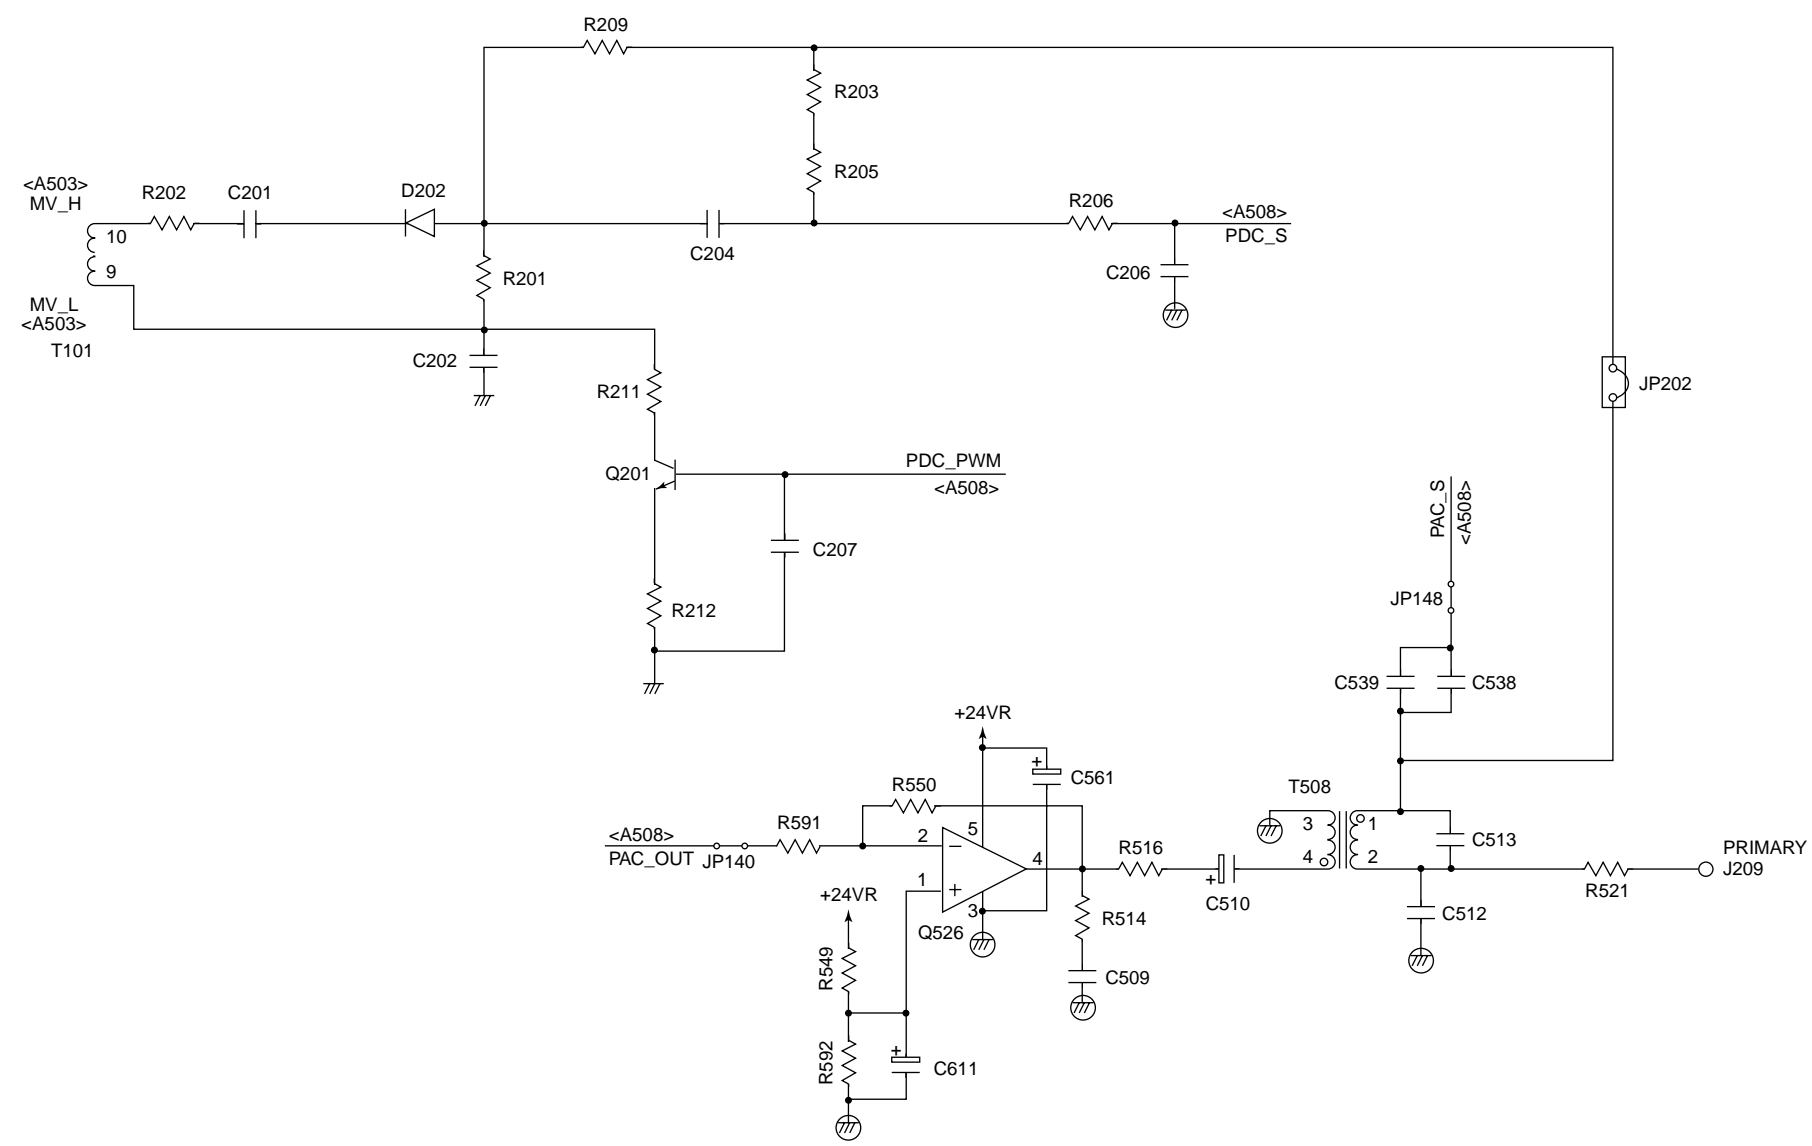
Composite Power Supply Circuit Diagram [A505] (4/8)



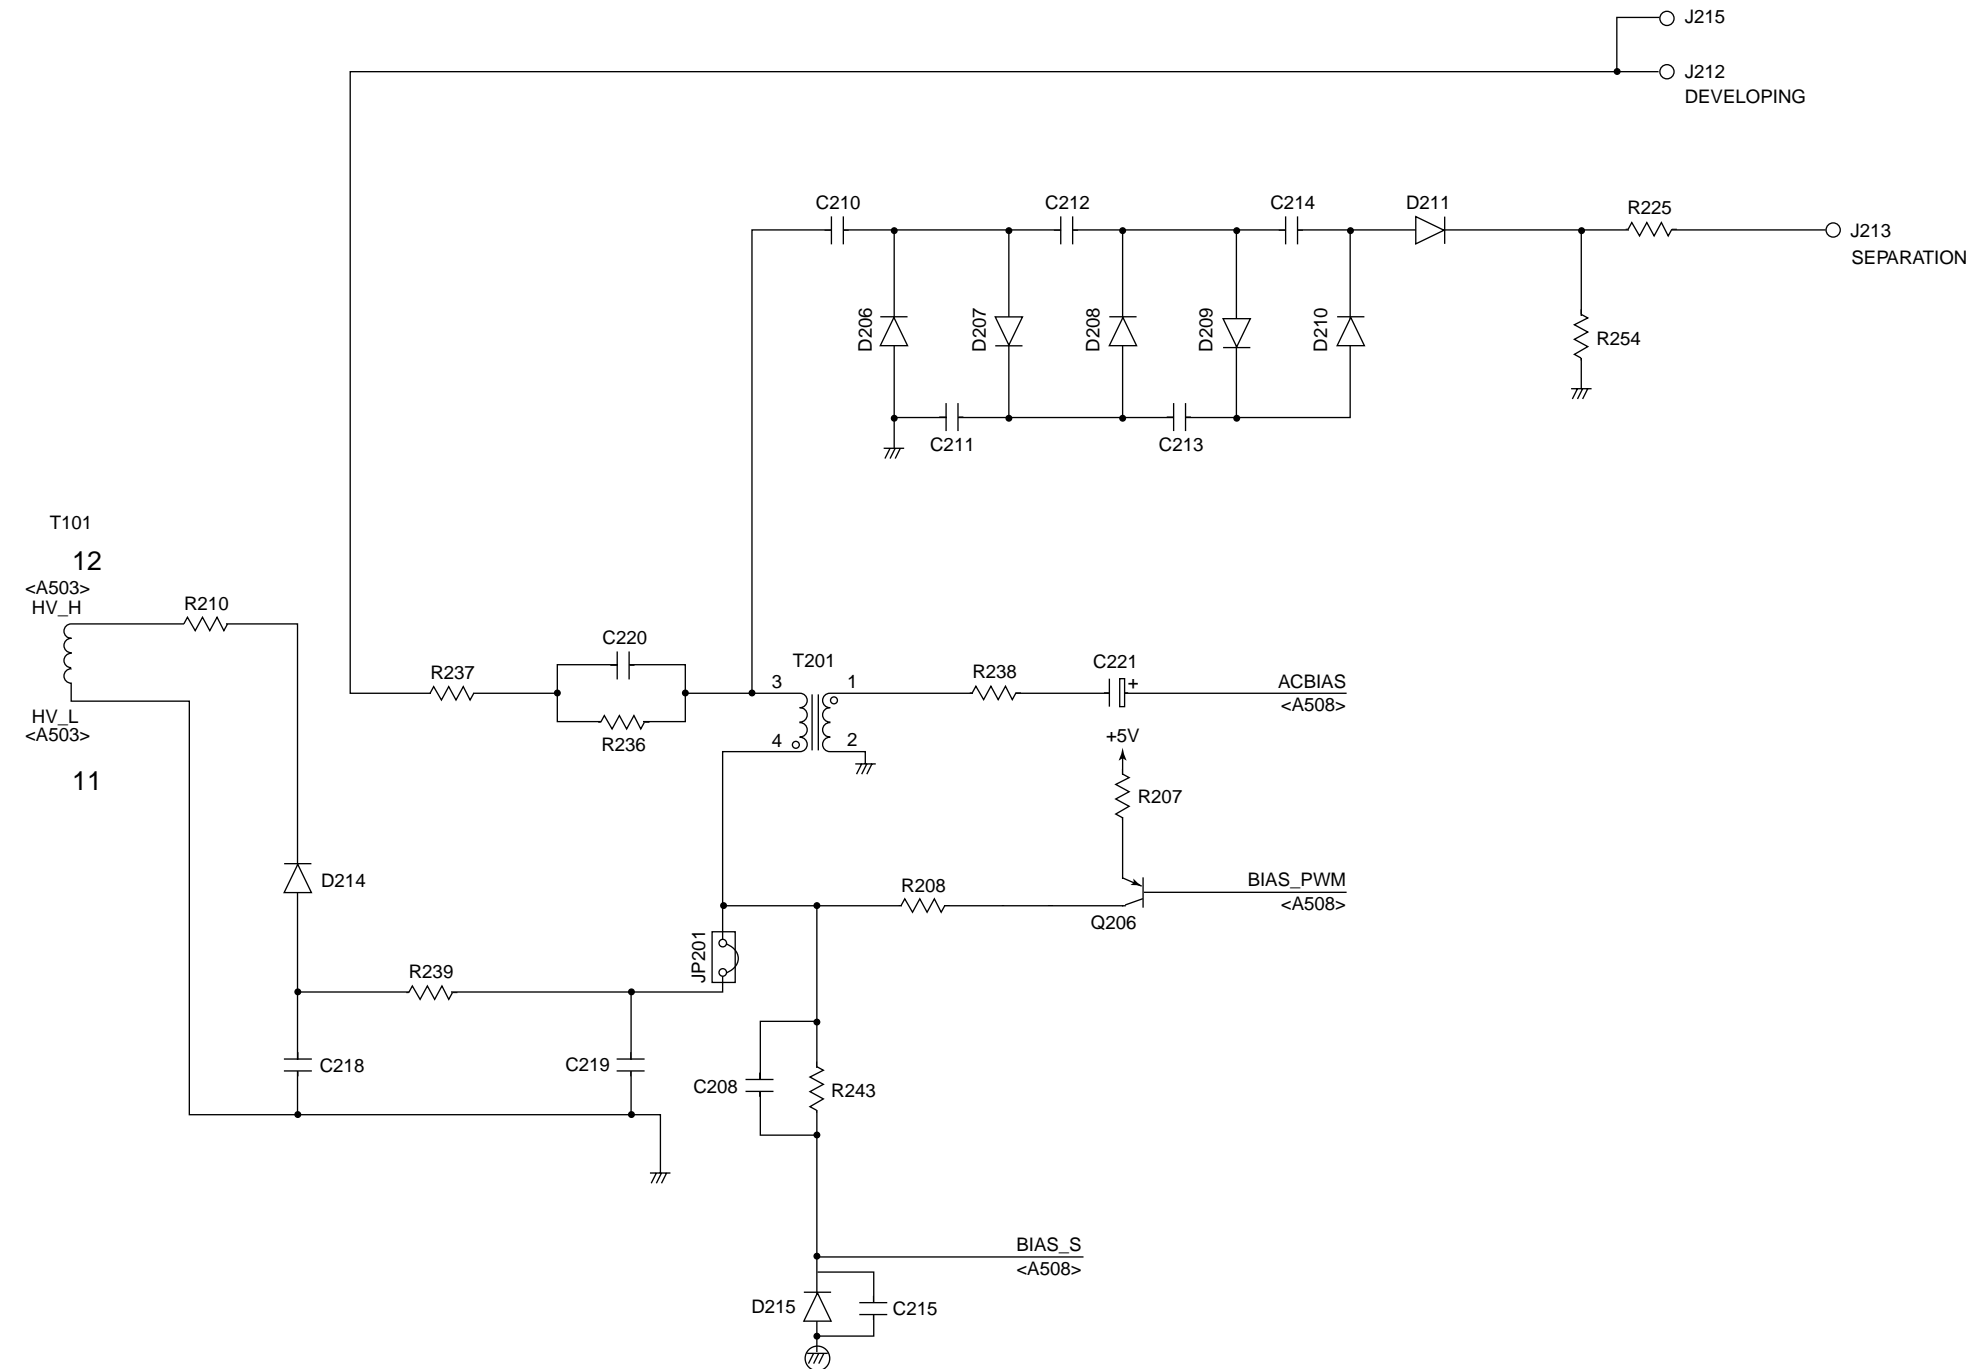
Composite Power Supply Circuit Diagram [A506] (5/8)



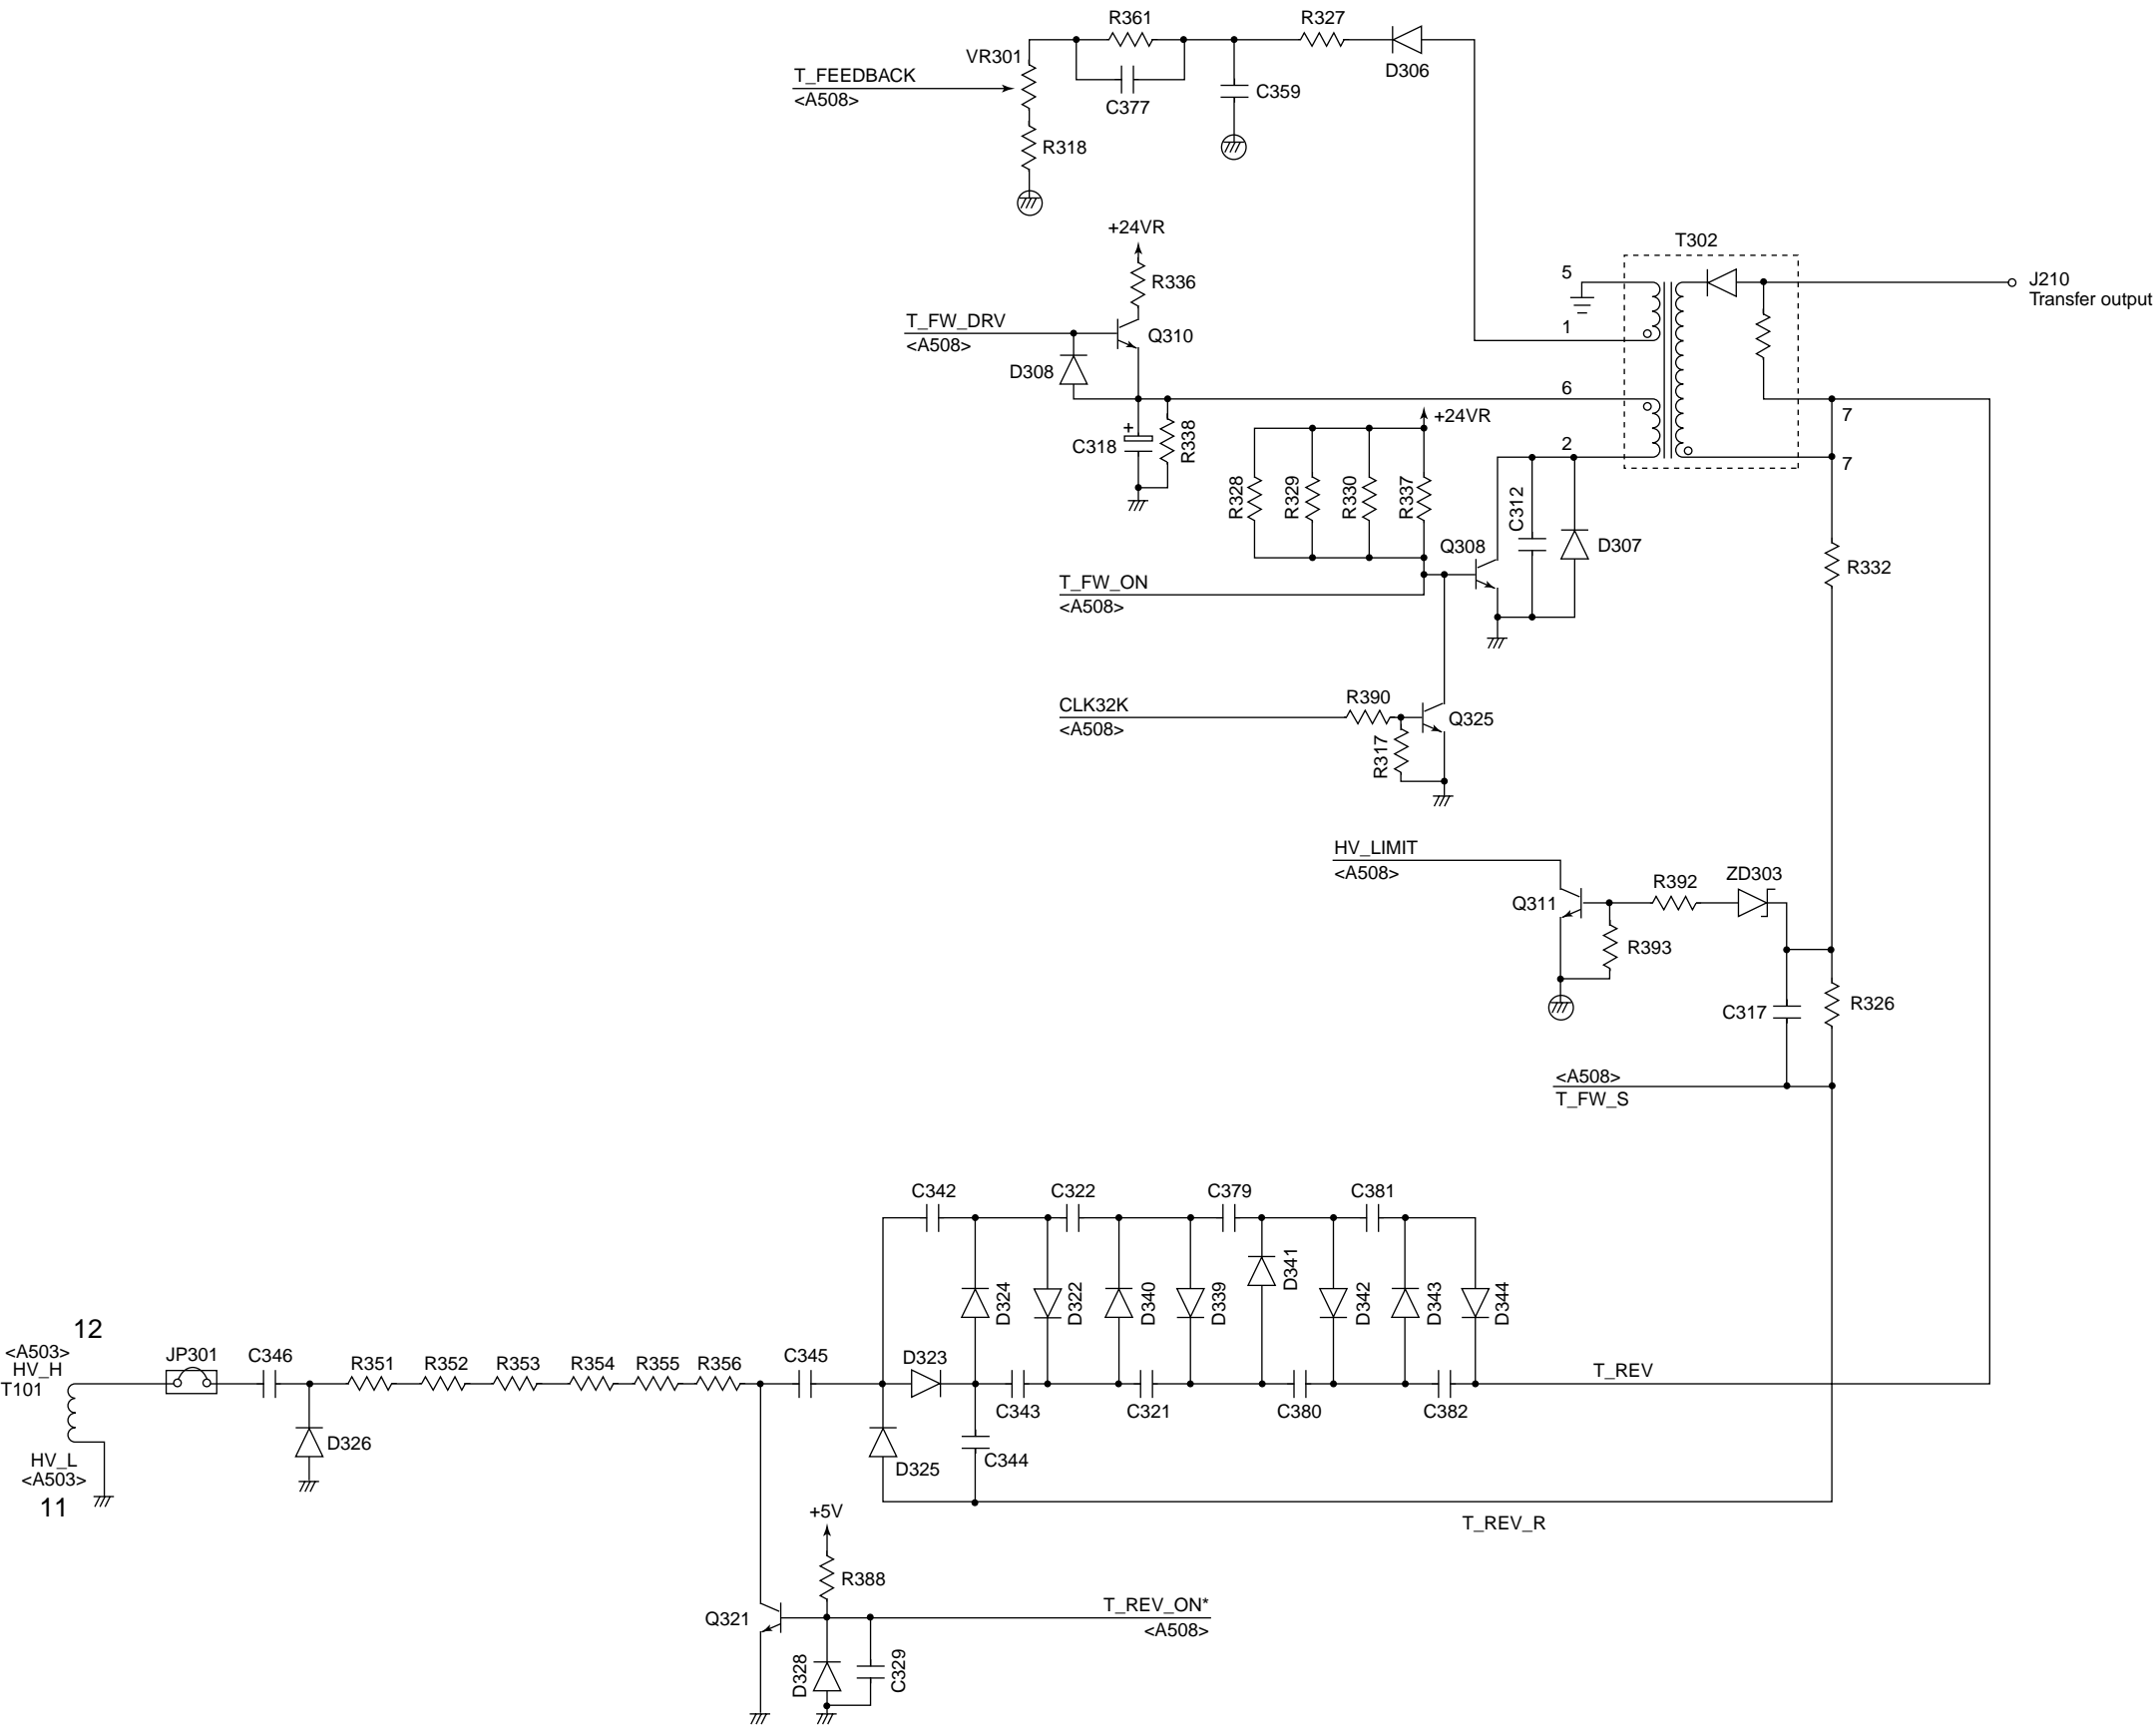
Composite Power Supply Circuit Diagram [A507] (6/8)



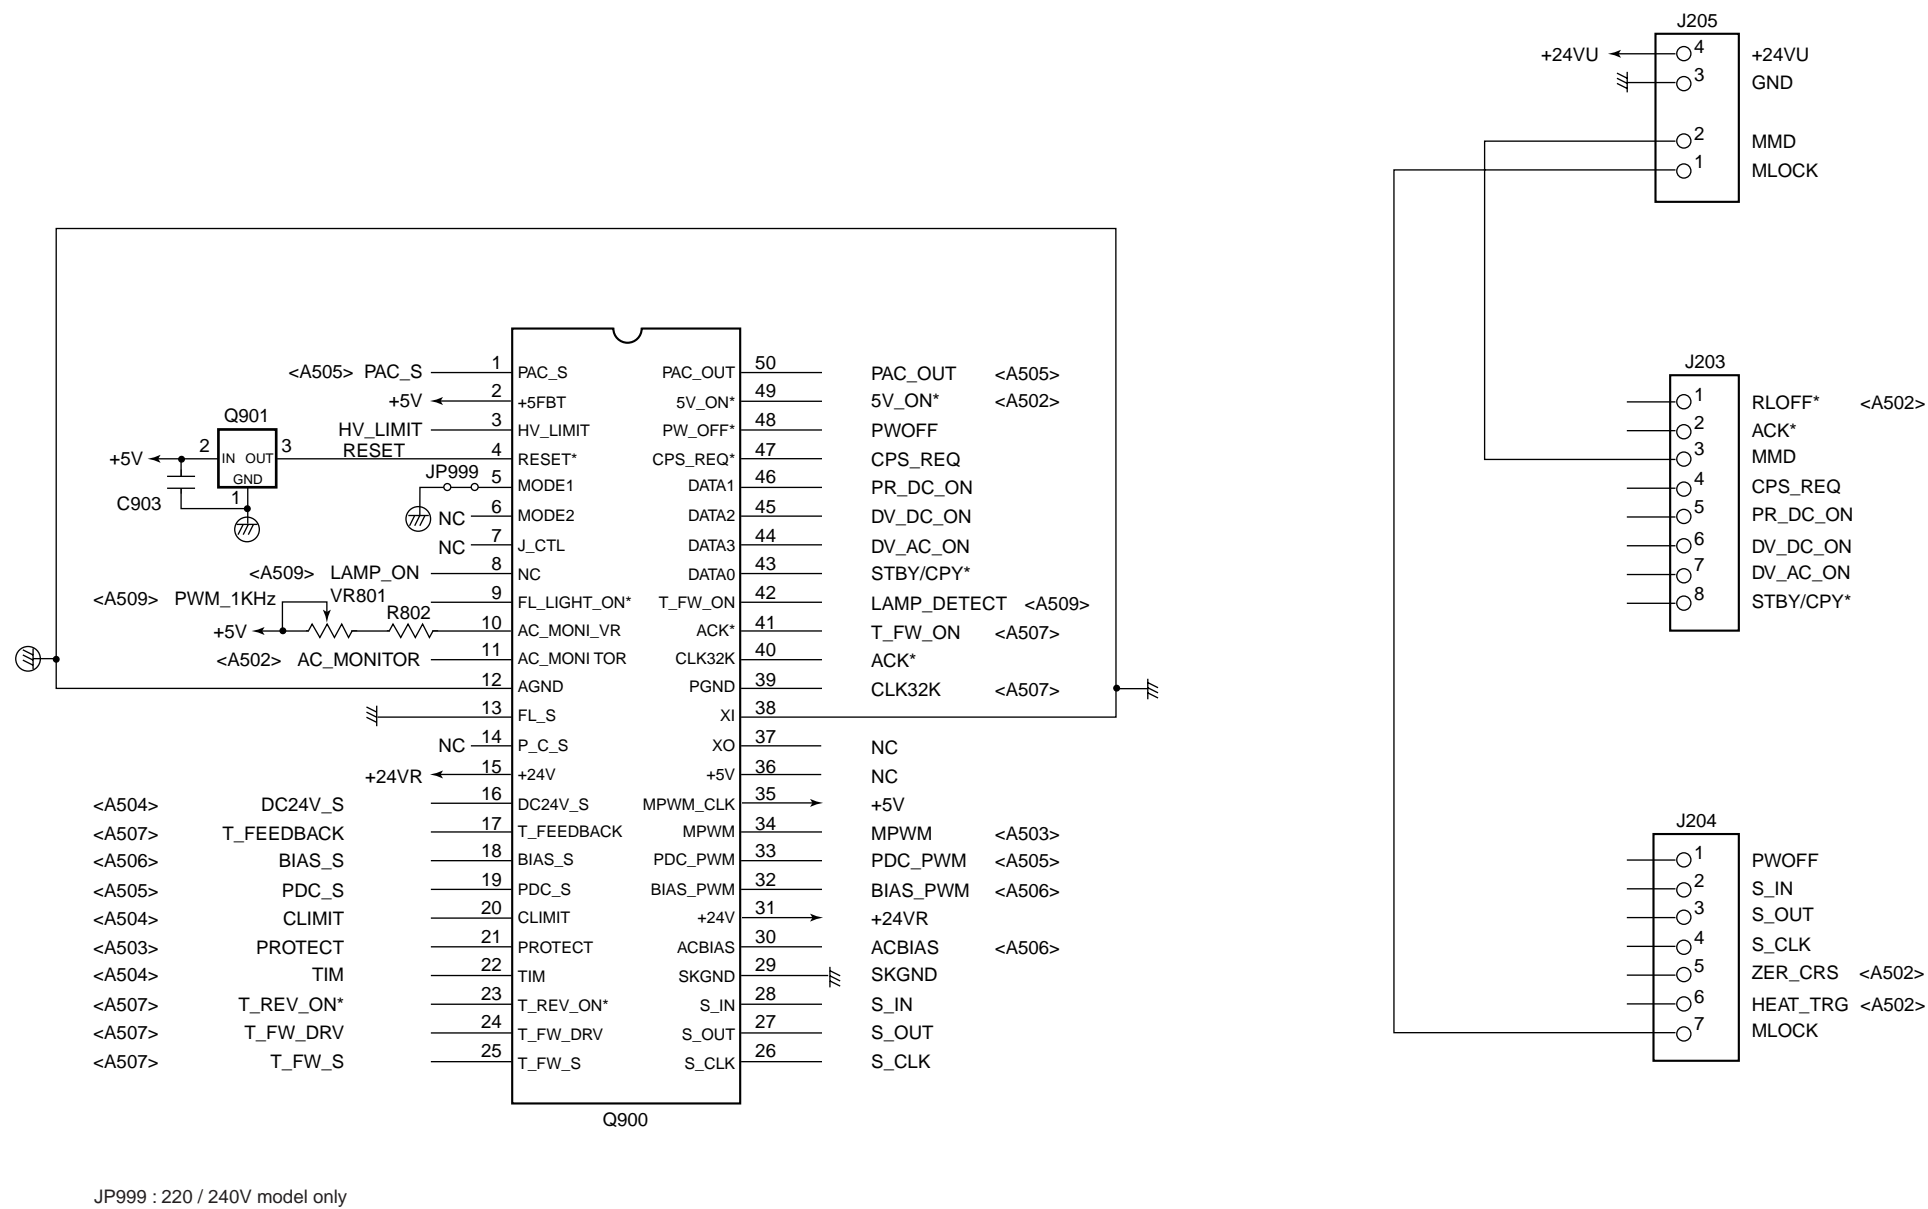
Composite Power Supply Circuit Diagram [A508] (7/8)



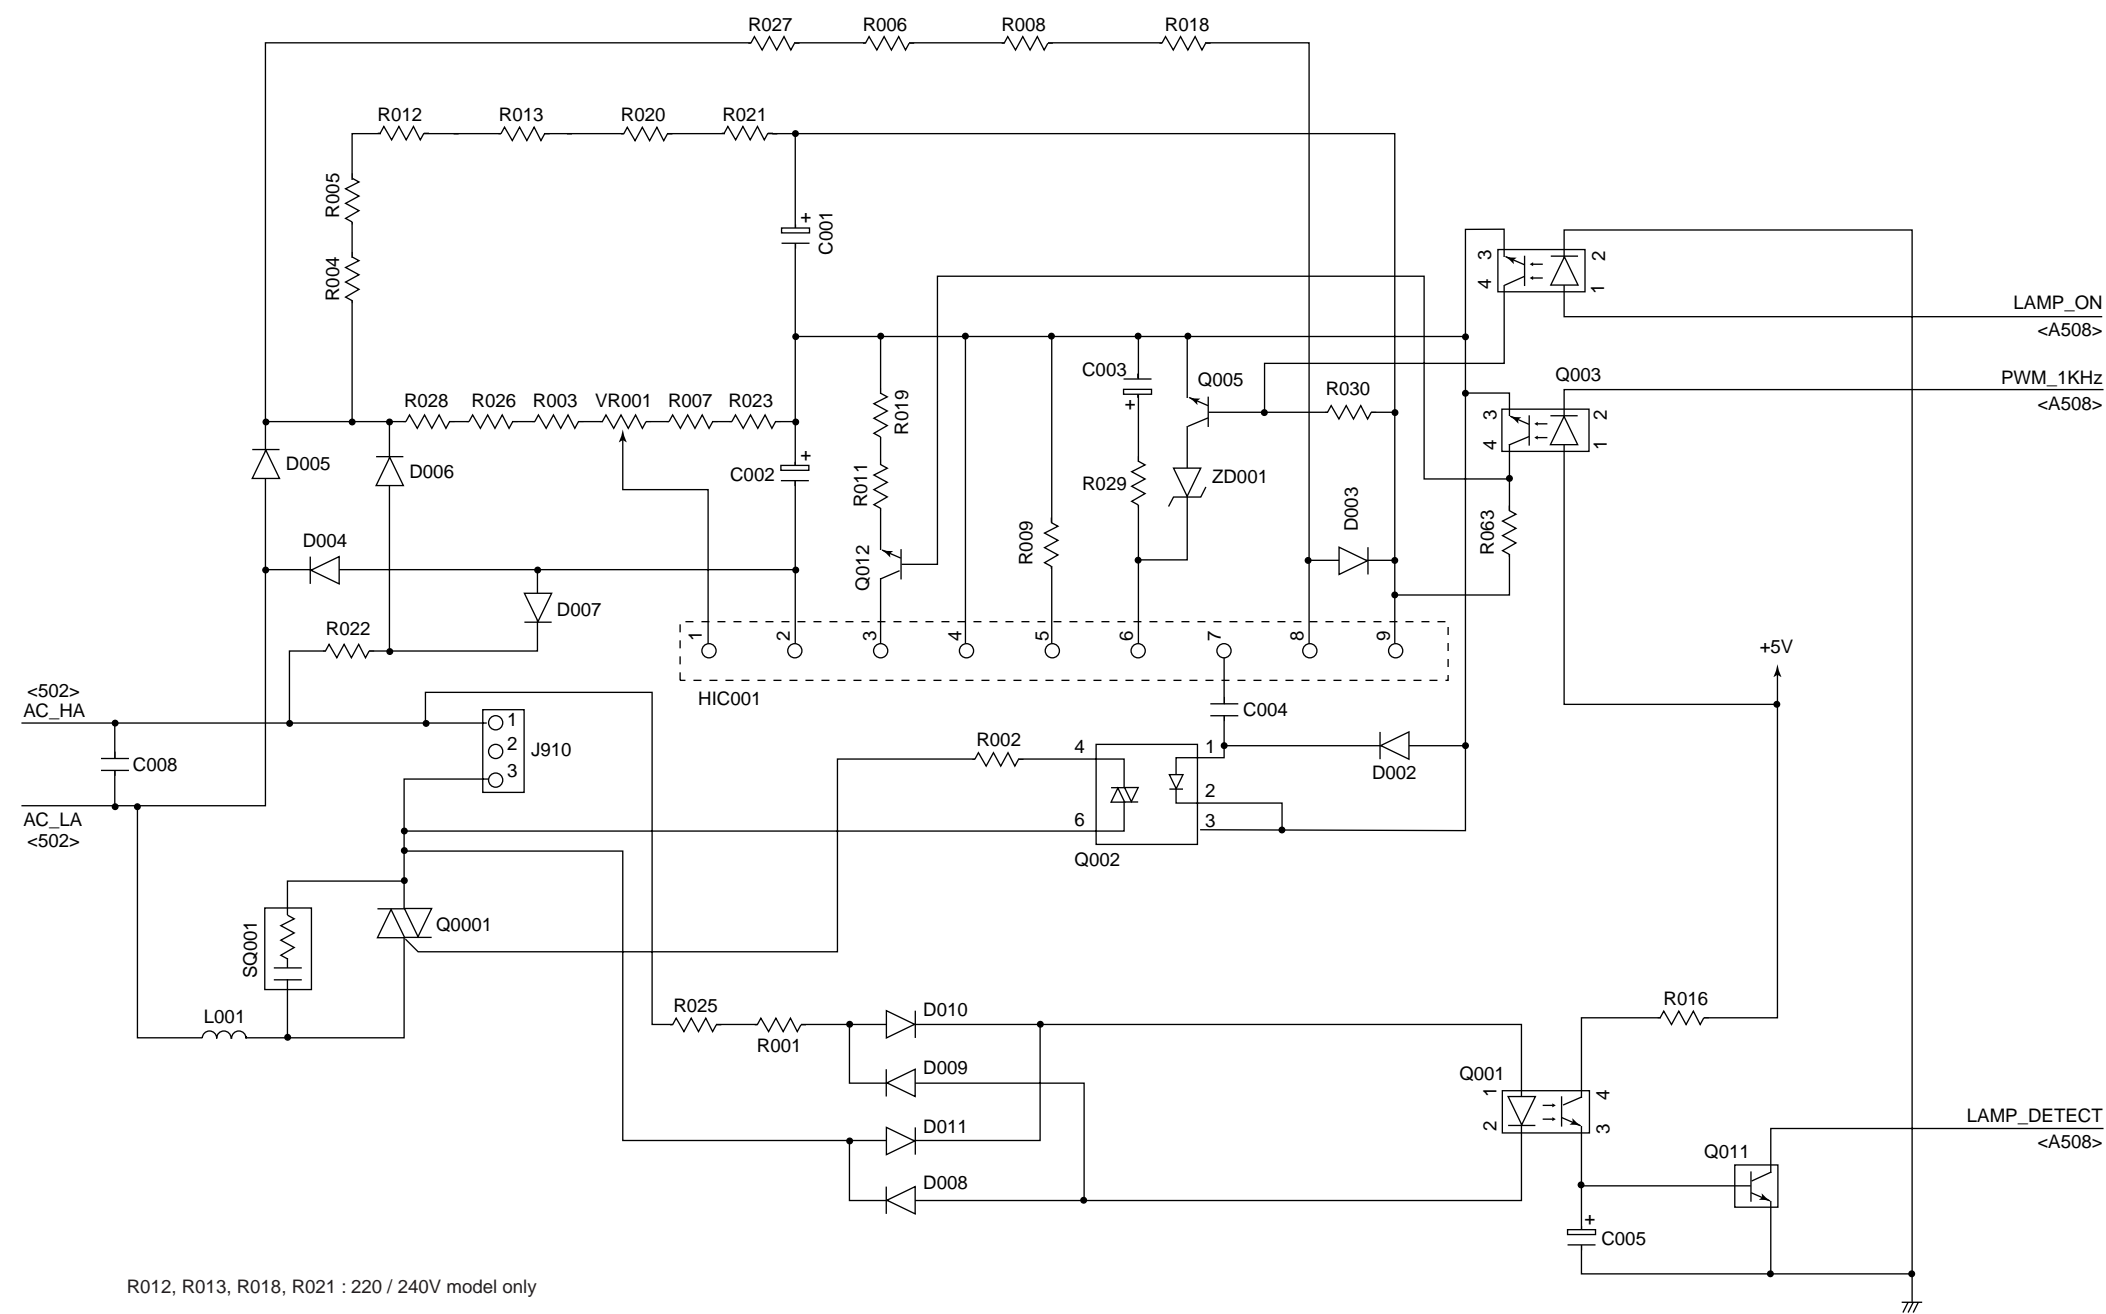
Composite Power Supply Circuit Diagram [A509] (8/8)



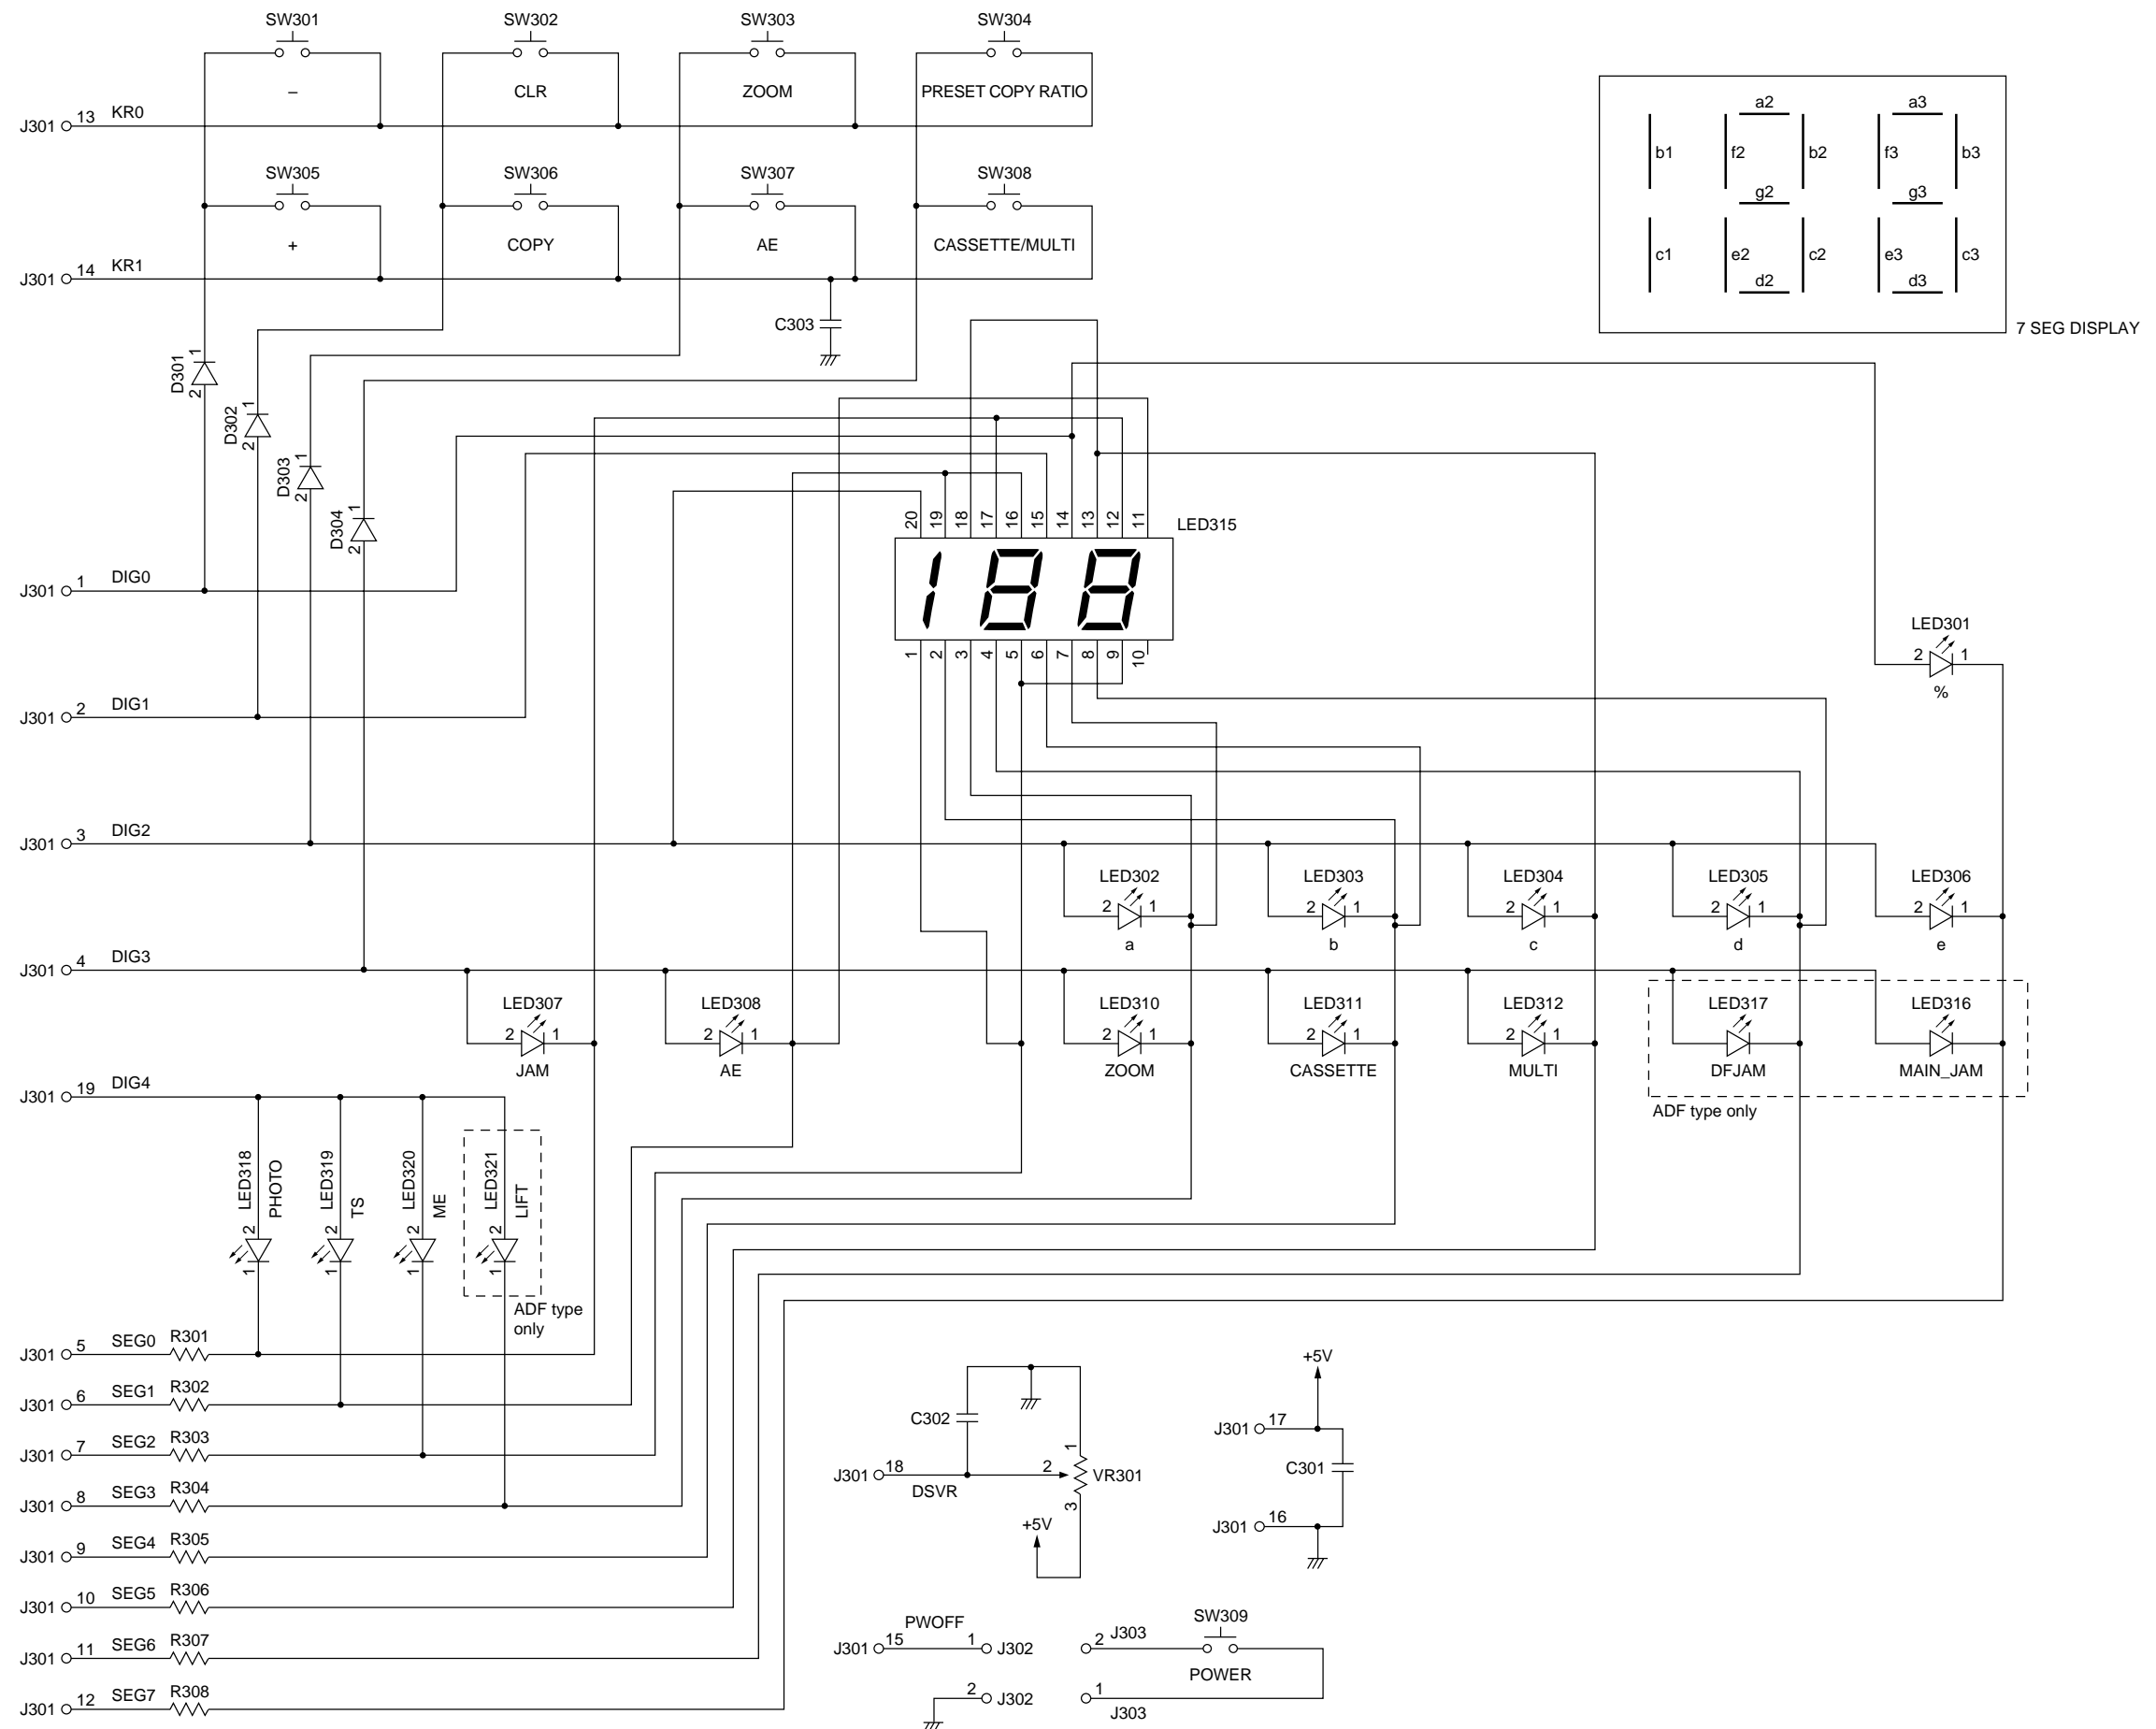
G. CONTROL PANEL CIRCUIT DIAGRAM



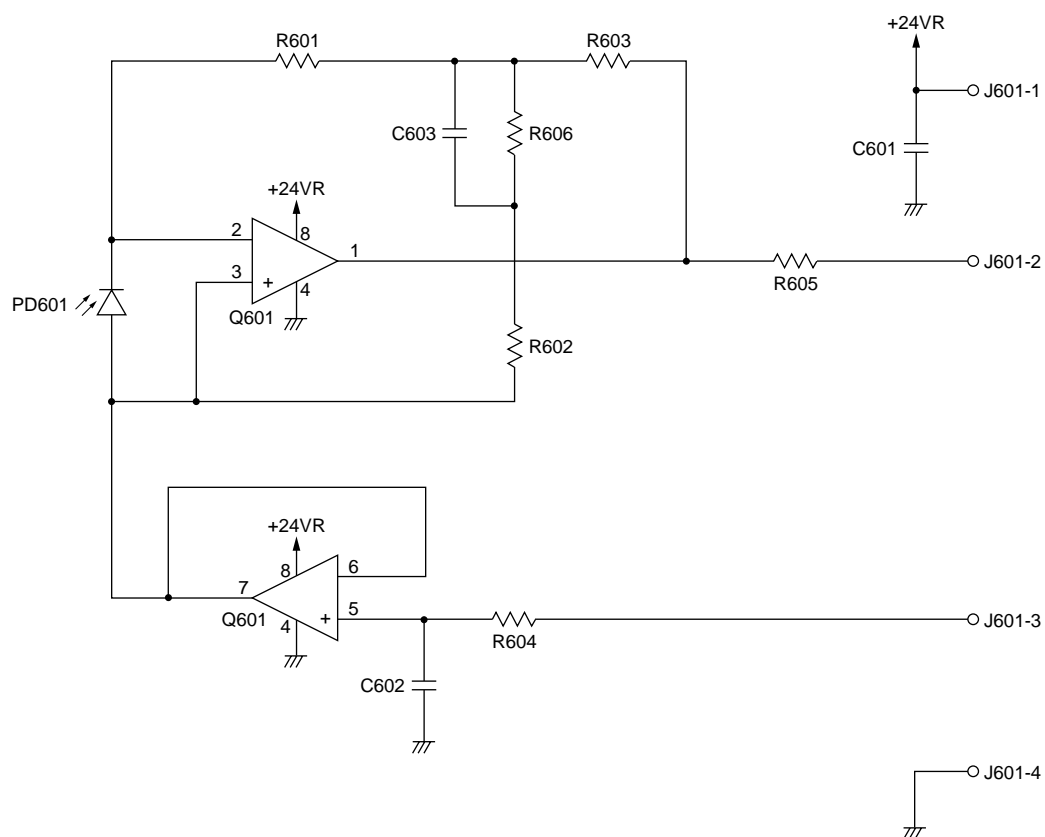
H. AE SENSOR CIRCUIT DIAGRAM



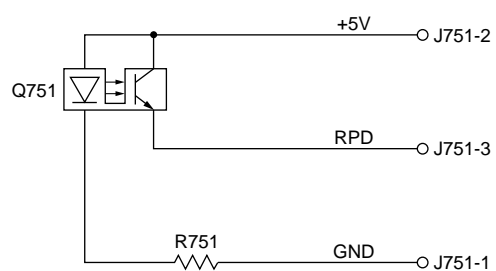
I. SENSOR CIRCUIT DIAGRAM



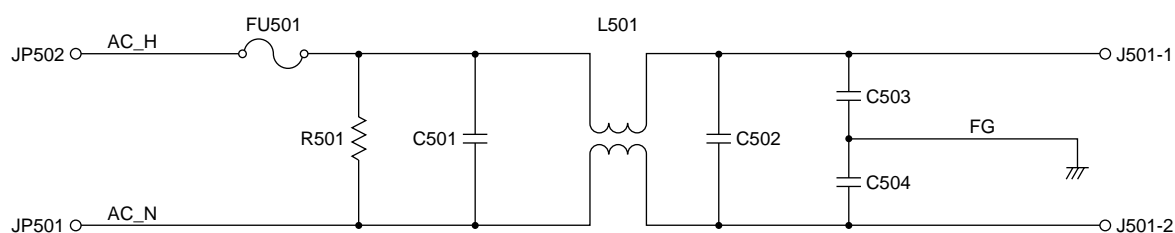
J. NOISE FILTER CIRCUIT DIAGRAM



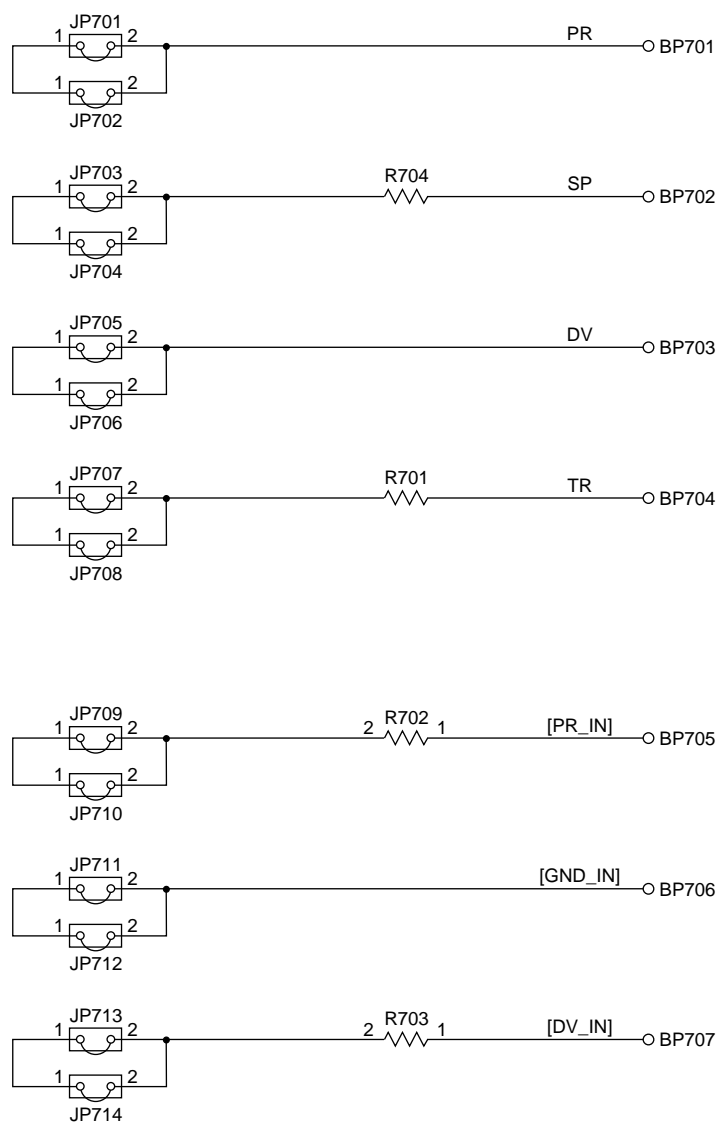
K. HIGH VOLTAGE CONTACT CIRCUIT DIAGRAM



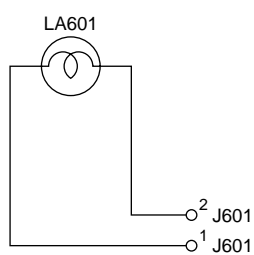L. BLANK EXPOSURE (front) CIRCUIT DIAGRAM






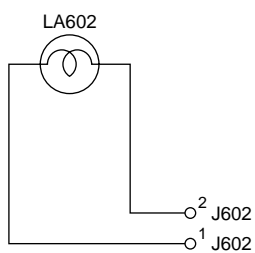M. BLANK EXPOSURE (rear) CIRCUIT DIAGRAM



N. SPECIAL TOOLS

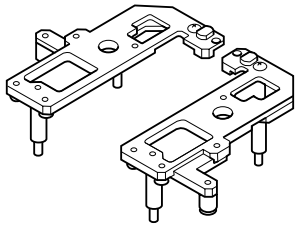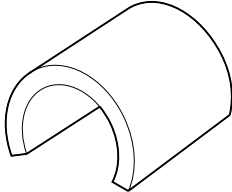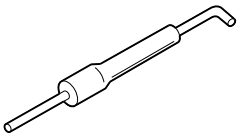You will need the following special tool(s) in addition to the standard tools set when servicing the machine.

No	Tool	Tool No.	Shape	Rank*	Remarks
1	Mirror positioning tool (pair for front and rear)	FY9-3009		B	For adjusting the distance between the No.1 and No.2 mirrors.
2	Wire clip	FY9-3017		B	For fixing the scanner wire in place while adjusting its tension.
3	Spring gauge	CK-0054		B	For checking the cassette spring pressure Range of measurements: 0 to 1,500g

*Rank:

- A: Each service person is expected to carry one.
- B: Each five or so service persons is expected to carry one.
- C: Each workshop is expected to carry one.

O. SOLVENTS/OILS

No.	Name	Uses	Composition	Remarks
1	Alcohol	Cleaning: e.g., glass, plastic, rubber parts; external covers	Hydrocarbon (fluorine family) Alcohol Surface active agent	<ul style="list-style-type: none"> • Do not bring near fire. • Procure locally. • Isopropyl alcohol may be substituted.
2	Solvent	Cleaning: e.g., metal; oil or toner dirt	Hydrocarbon (fluorine/chlorine family) Alcohol	<ul style="list-style-type: none"> • Do not bring near fire. • Procure locally.
3	Lubricating oil	Lubricating spring clutch	Mineral oil (paraffin family)	<ul style="list-style-type: none"> • CK-0451 (100cc)
4	Lubricating oil	Lubricating drive and friction parts, scanner rail	Silicone oil	<ul style="list-style-type: none"> • CK-0551 (20g)

Prepared by
Office Imaging Products Technical Support Division
CANON INC.
Printed in Japan

REVISION 0 (AUG. 1999) (30359/10317)

5-1, Hakusan 7-chome, Toride-shi, Ibaraki 302-8501 Japan

Canon



This publication is printed on
70% reprocessed paper.

RF-A1/RDF-A1

PARTS- CATALOG

Canon

FY8 - 31AC - 020

目 次

CONTENTS

A. 主要部品配置図

10. 外装カバー部
12. 原稿トレイ部 (RF-A1)
13. 上カバー部 (RF-A1)
15. RF 部
16. 右フィーダ部
17. 右フィーダカバー部
18. DF 部
20. ベルトモータ部
21. 搬送モータ部
22. 給紙モータ部
30. 下ガイド部
35. 反転ガイド部
40. 分離・搬送部 (RF-A1)
41. 給/排紙ガイド部
60. 本体取付部品 (サブフィーダ)
62. サブ原稿トレイ部 (サブフィーダ)
63. 上カバー部 (サブフィーダ)
65. サブフィーダ本体
70. サブフィーダモータ部
75. 分離・搬送部 (サブフィーダ)
80. コントロールカードVキット (サブフィーダ)
90. RF コントローラ回路基板
95. サブフィーダコントローラ回路基板
- B. コネクタ一覧表
- C. 機械標準部品一覧表
- D. 部品索引表

A. ASSEMBLY LOCATION DIAGRAM

10. EXTERNAL COVERS, PANELS, ETC.
12. DOCUMENT TRAY (RDF-A1)
13. UPPER COVER (RDF-A1)
15. RF ASSEMBLY
16. FEEDER RIGHT ASSEMBLY
17. FEEDER RIGHT COVER
18. DF ASSEMBLY
20. BELT DRIVE MOTOR ASSEMBLY
21. PAPER FEED MOTOR ASSEMBLY
22. PICK-UP MOTOR ASSEMBLY
30. LOWER PAPER GUIDE ASSEMBLY
35. REVERSE GUIDE ASSEMBLY
40. SEPARATION/FEEDER ASSEMBLY (RDF-A1)
41. FEED/DELIVERY GUIDE ASSEMBLY
60. MOUNTING HARDWARE (SUB FEEDER)
62. SUB DOCUMENT TRAY ASSEMBLY (SUB FEEDER)
63. UPPER COVER ASSEMBLY (SUB FEEDER)
65. SUB FEEDER MAIN BODY
70. SUB FEEDER MOTOR ASSEMBLY
75. SEPARATION/FEEDER ASSEMBLY (SUB FEEDER)
80. CONTROL CARD V KIT (SUB FEEDER)
90. RF CONTROLLER P.C.B. ASSEMBLY
95. SUB FEEDER CONTROLLER PCB ASSEMBLY
- B. LIST OF CONNECTORS
- C. LIST OF STANDARD FASTENERS
- D. NUMERICAL INDEX

FIGURE A ASSEMBLY LOCATION DIAGRAM (1/2)
主要部品配置図 (1/2)

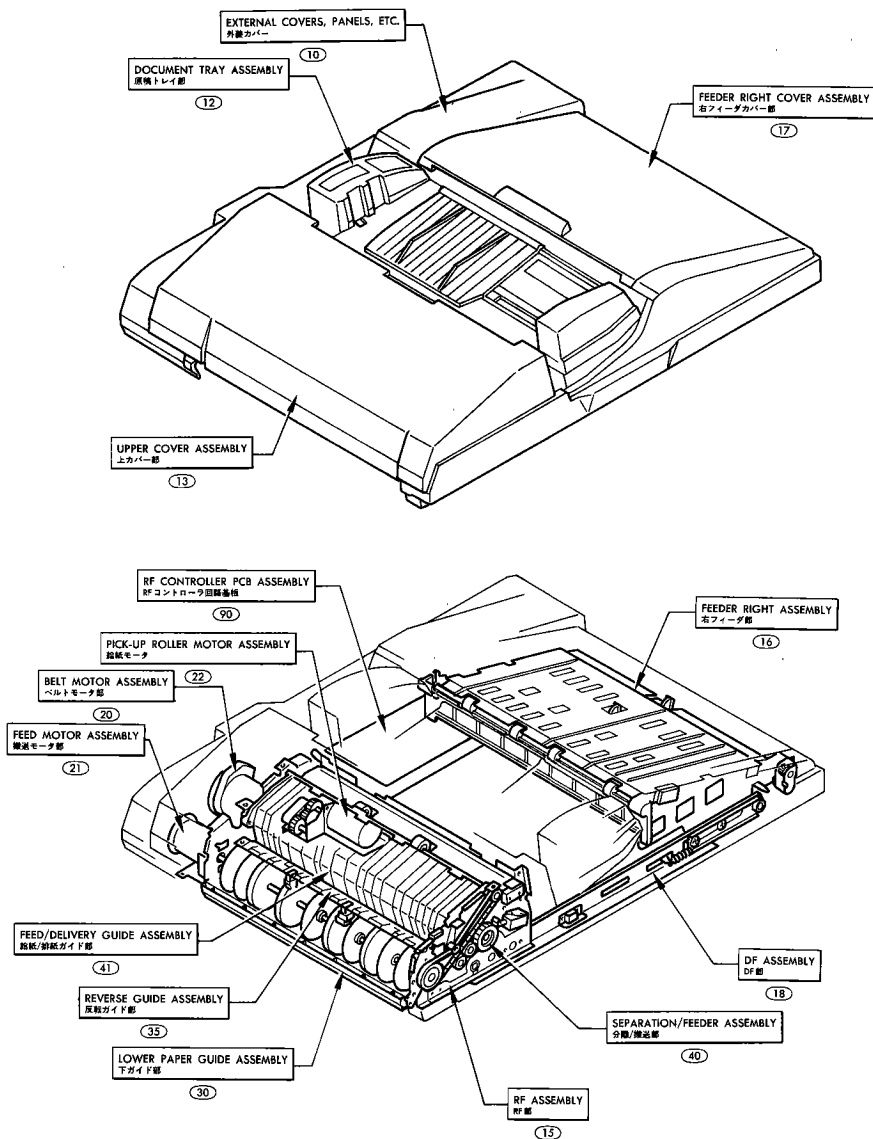


FIGURE A ASSEMBLY LOCATION DIAGRAM (2/2)
主要部品配置図 (2/2)

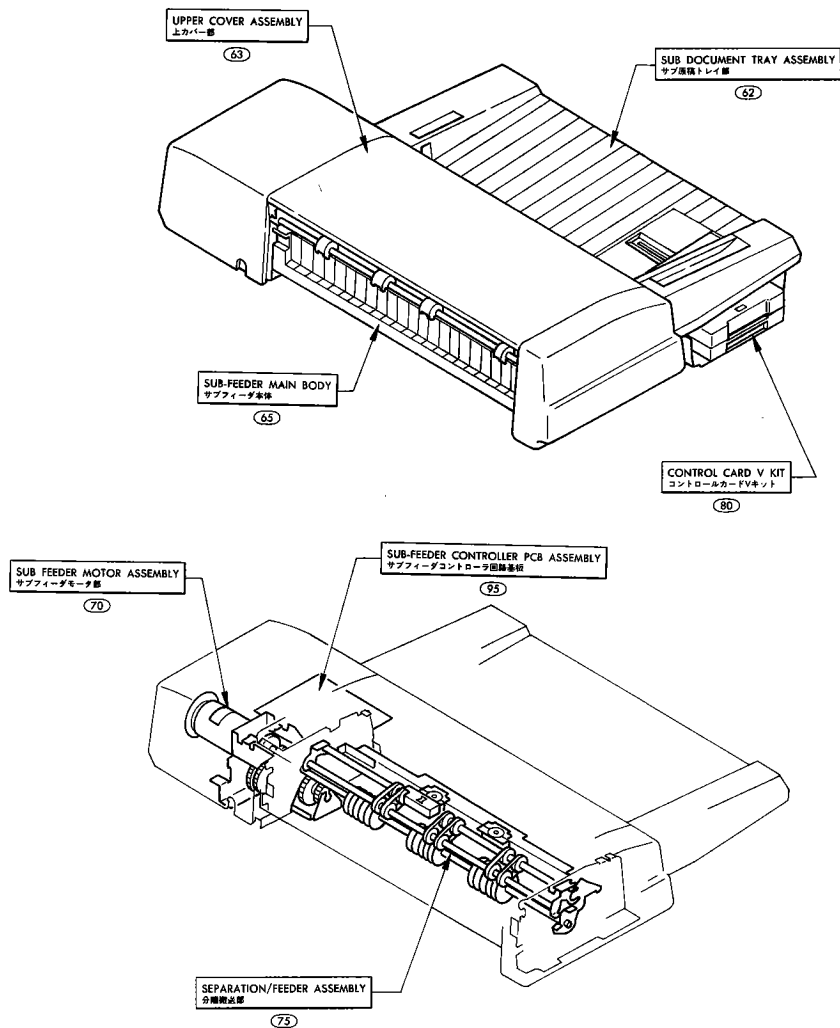


FIGURE 10: EXTERNAL COVERS, PANELS, ETC
外装カバー部

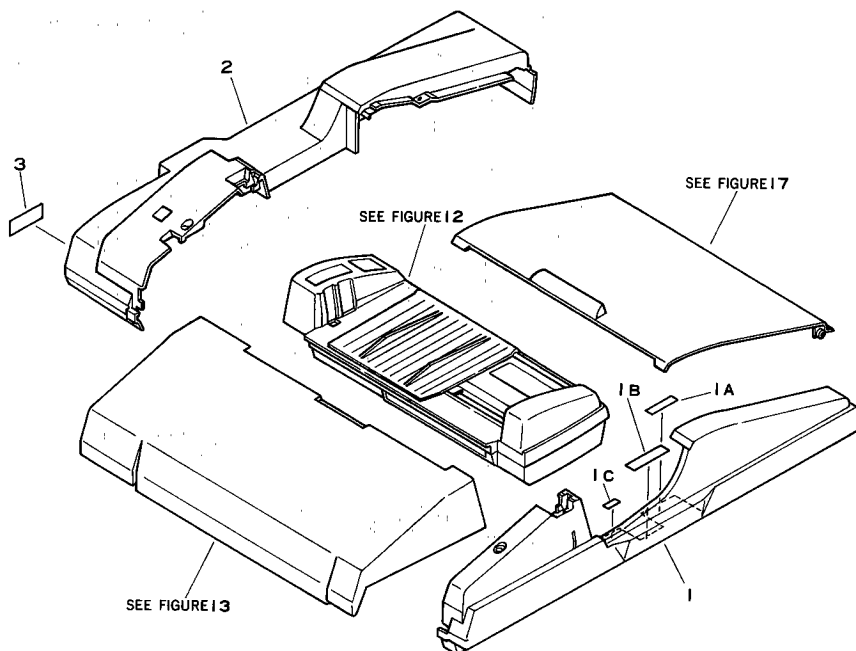


FIGURE 12 DOCUMENT TRAY (RDF-A1)
原稿トレイ部 (RF-A1)


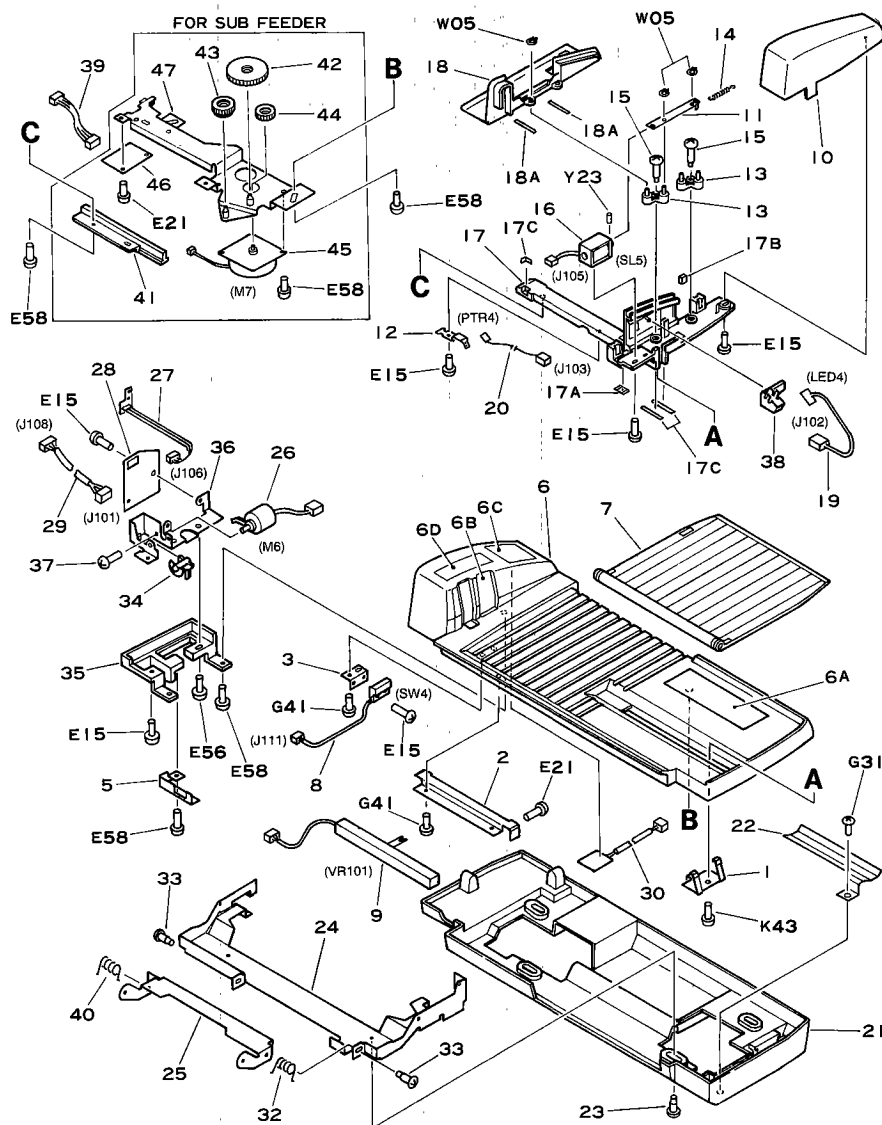


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
12 -	NPN		RF	DOCUMENT TRAY ASS'Y (RDF-A1) ゲンコウトレイブ (RF-A1)	
1	FA5-5495-000		1	SPRING, LEAF クリツク イタ バネ	
2	FA5-5508-000		1	PLATE, VR MOUNTING ボ リューム ダイ	
3	FA6-7431-000		1	PLATE, SENSOR HOLDING センサ ホルダ	
5	FA6-7461-000		1	COVER, CORD トレイ コード カバ -	
6	FF2-4601-030		1	TRAY, DOCUMENT ゲンコウトレイ	A/B SIZE
	FF2-4602-030		1	TRAY, DOCUMENT ゲンコウトレイ	INCH SIZE
	FF2-4603-030		1	TRAY, DOCUMENT ゲンコウトレイ	A SIZE
	FF2-4604-030		1	TRAY, DOCUMENT ゲンコウトレイ	A/B/INCH SIZE
6A	FA6-5844-000		1	LABEL, PAPER SIZE サイズ メイバン	A/B SIZE
	FA6-5845-000		1	LABEL, PAPER SIZE サイズ メイバン	INCH SIZE
	FA6-5846-000		1	LABEL, PAPER SIZE サイズ メイバン	A SIZE
	FA6-5847-000		1	LABEL, PAPER SIZE サイズ メイバン	A/B INCH SIZE
6B	FA6-7429-000		1	SIZE PLATE, 1 サイズ プレート (コクナイ)	A/B SIZE
	FA6-7430-000		1	SIZE PLATE, 1 サイズ プレート (カイガイ)	A/B/INCH SIZE
6C	FA6-7457-000		1	SHEET, MODE SWITCH モード スイッチ シート	
6D	FA6-7458-000		1	LABEL チヨウイ ラベル	
7	FF2-4616-020		1	TRAY, AUXILIARY ボジョトレイ	
8	FH7-7249-000		1	SWITCH, LEAD リード スイッチ	SW4
9	FF2-0833-000		1	SENSOR, PAPER SIZE カミ サイズ ケンチ	VR101
10	FA6-7434-000		1	COVER, PAPER GUIDE ASS'Y ジヨグ カバ -	
11	FA6-7435-000		1	ARM, PAPER GUIDE ASS'Y ジヨグ アーム	
12	FA5-5491-000		1	PLATE, SENSOR MOUNTING ガイド センサホルダー	
13	FA5-5492-000		2	LEVER, GUIDE ジヨグ ガイド レバ -	
14	FS3-2185-000		1	SPRING, TENSION ヒバシリバネ	
15	FS2-9020-000		2	SCREW, STEPPED, M3X2.2 ダンピス	
16	FH7-5175-020		1	SOLENOID, DC24V ソレノイド	SL5
17	FF2-4605-000		1	MOUNT, PAPER GUIDE ASS'Y スライド ガイド	
17A	FA5-5489-000		1	FILTER センサ フィルタ	
17B	FA5-5490-000		3	DAMPER ダンバ	
17C	FA6-5181-000		3	SHEET シート	
18	FF2-4606-000		1	GUIDE, DOCUMENT ジヨグ ガイド	
18A	FA6-5181-000		2	SHEET シート	
19	FF2-0824-000		1	GUIDE SENSOR, 2 ガイド センサ (2)	
21	FF2-4894-000		1	TRAY, DOCUMENT ゲンコウトレイ	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
12 - 22	FA6-7476-000		1	COVER, SLIDE スライド カバー	M6
23	FS1-9003-000		2	SCREW, STEPPED, M4 ダンピス	
24	FA6-7576-000		1	FRAME, TRAY, A トレイ フレーム A	
25	FF2-4615-000		1	FRAME, TRAY, B トレイ フレーム B	
26	FF2-0829-000		1	MOTOR, RECYCLE リサイクル モータ	
27	FF2-0830-000		1	SENSOR, RECYCLE リサイクル センサ	
28	FG2-2197-000		1	DISPLAY PCB ヒヨウジ キパン	
29	FH6-3218-000		1	HARNESS ヒヨウジ キパン ハネス	
30	FG2-1935-000		1	SW/LED PCB ASSEMBLY SW/LED キパン	
32	FS3-2873-000		1	SPRING, TORSION ネジ リバネ	
33	FS2-9357-000		2	SCREW, STEPPED ダンピス	
34	FA6-7488-000		1	LEVER, RECYCLE リサイクル レバー	
35	FA6-2238-000		1	COVER, RECYCLE MOTOR, LOWER リサイクル モータ カバー (シタ)	
36	FA5-5486-000		1	MOUNT, RECYCLE MOTOR リサイクル モータ ダイ	
37	XB1-2200-309		2	SCREW, MATCH. TRUSS HEAD, M2X3 バインド ネジ	
38	FA5-5505-000		1	COVER, SENSOR ガイド センサ ホルダ	
39	FH6-3232-000		1	HARNESS ハネス	
40	FS3-5013-000		1	SPRING, TORSION ネジ リバネ	
41	FA6-7536-000		1	RACK ラック	M7
42	FS3-0912-000		1	GEAR, 38T/16T 38T/16T ギア	
43	FS3-0913-000		1	GEAR, 20T 20T ギア	
44	FS3-0914-000		1	GEAR, 16T 16T ギア	
45	FH7-1787-000		1	MOTOR モータ	
46	FH6-3249-000		1	STEPPING MOTOR PCB STM カイロキパン	
47	FF2-4629-000		1	MOUNT, MOTOR モータ ダイ	

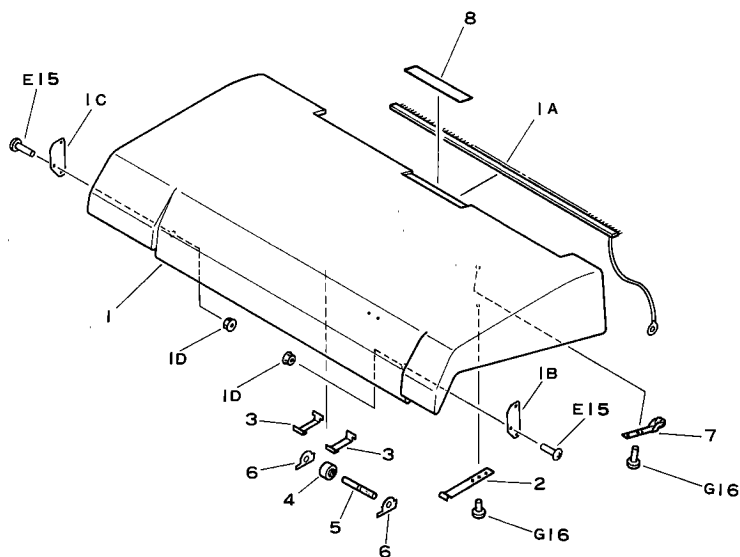FIGURE 13 UPPER COVER (RDF-A1)
上カバー部 (RF-A1)



NOTE : This assembly does not include the parts shown in key No. 8

注：このユニットには、KEY NO. 8のパーツは含まれません。

FIGURE 15 RF ASSEMBLY ($\frac{1}{3}$)
RF部 ($\frac{1}{3}$)

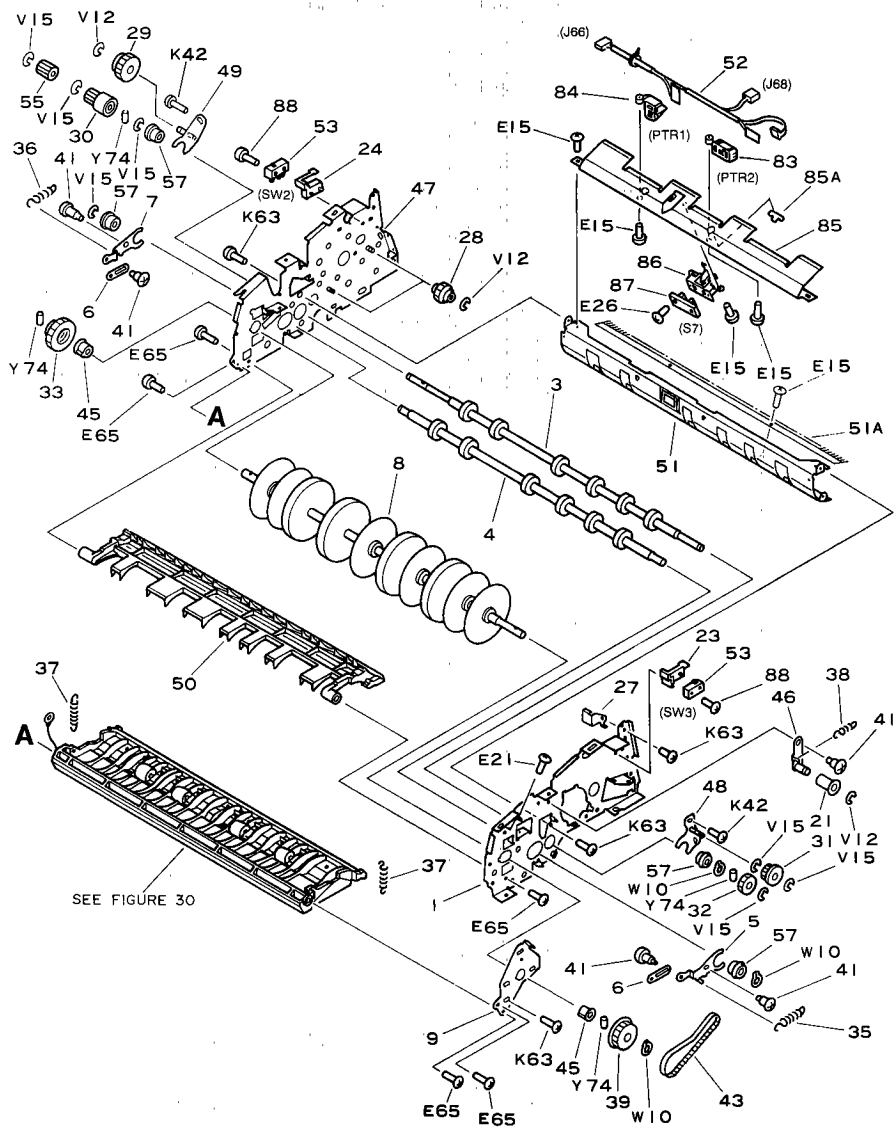


FIGURE 15 RF ASSEMBLY ($\frac{2}{3}$)
RF部 ($\frac{2}{3}$)

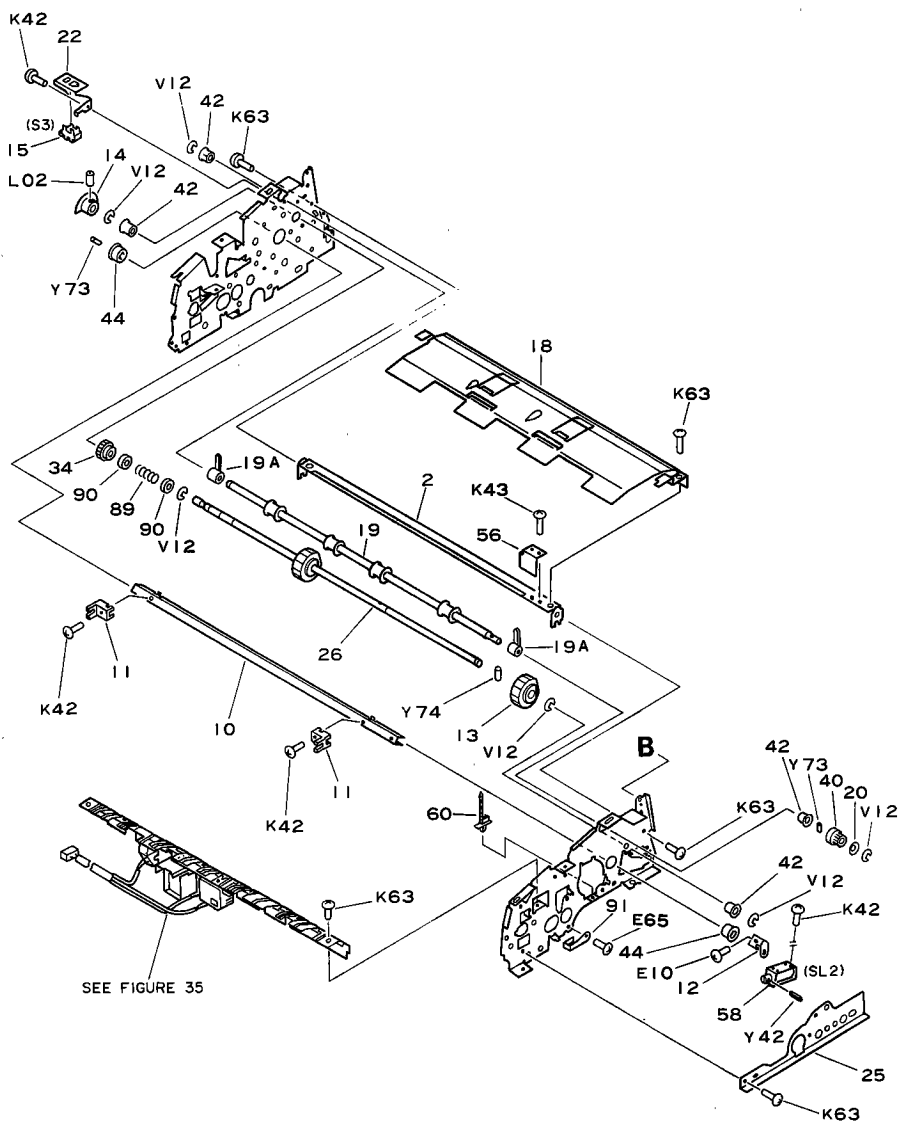


FIGURE 15 RF ASSEMBLY ($\frac{3}{3}$)
RF部 ($\frac{3}{3}$)

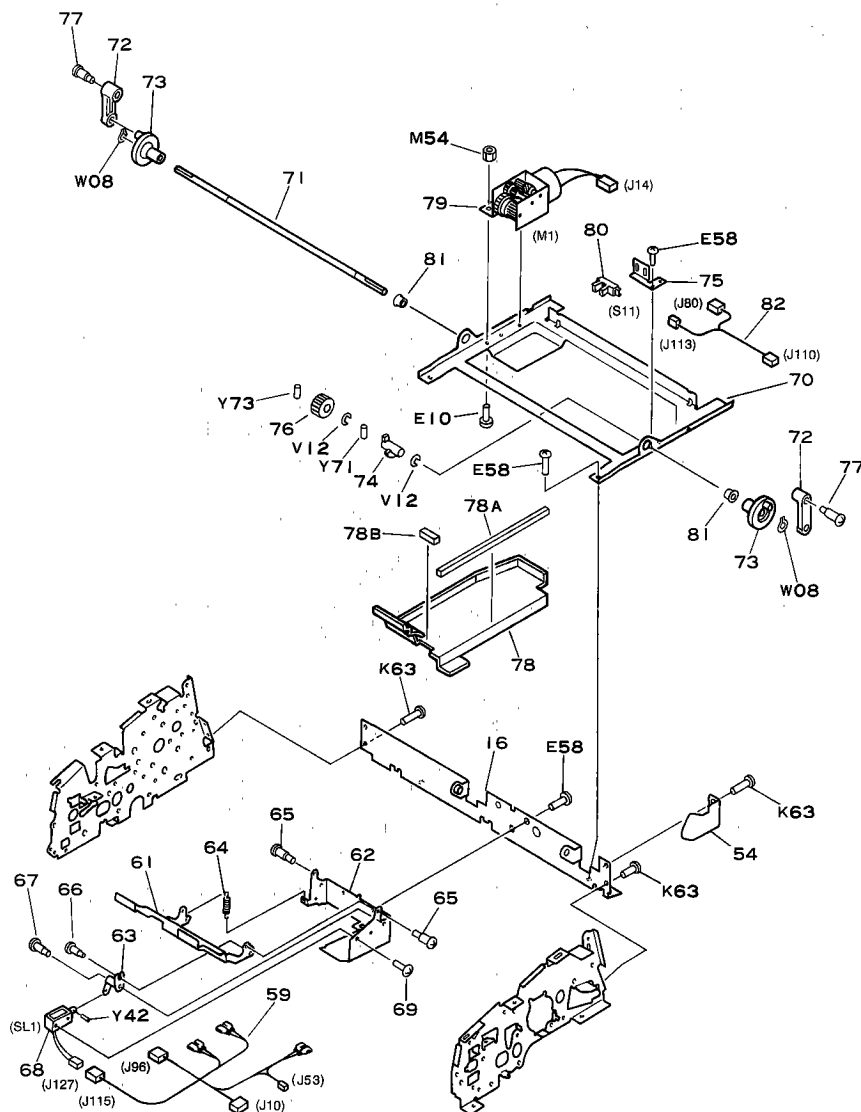


FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
15 -	NPN		RF	RF ASSEMBLY RF ア	
1	FA5-5381-030	N	1	PLATE, FRONT マエ ソクパン	
2	FA6-7450-000		1	CROSSMEMBER, PAPER PICK-UP キコウシ スター	
3	FA6-7451-000		1	ROLLER, REGISTRATION レジ スト ローラ	
4	FA5-5388-000		1	ROLL, REGISTRATION レジ スト コロ	
5	FA5-5389-000		1	LEVER, RELEASE, FRONT カイジヨ レバー (マエ)	
6	FA5-5390-000		2	LEVER, RELEASE, REGISTRATION レジ スト カイジヨ レバー	
7	FA5-5391-000		1	LEVER, RELEASE, REAR カイジヨ レバー (ウシロ)	
8	FA5-5392-000		1	ROLLER, REVERSE, UNIT ハンデン ローラ ユニット	
9	FA5-5398-000		1	PLATE ヨコ レジ チョウセイ パン	
10	FA5-5407-000		1	SHAFT カク シャフト	
11	FA5-5408-000		2	LEVER, PLATE, PAPER, PRESSING カミ オサエ パン レバー	
12	FA5-5409-000		1	LEVER ソレノイド レバー	
13	FA5-5410-000		2	PICK-UP ROLLER キコウシ ローラ	
14	FA5-5411-000		1	FLAG ゼンザパン	
15	WG8-0164-000		1	PHOTOINTERRUPTER フォトインタラプタ	S3
16	FF2-4610-000		1	CROSSMEMBER, SHUTTER シャッター スター	
18	FA6-7555-000		1	TRAY, FEED キコウシ トレイ	
19	FA5-5448-020		1	ROLLER, DELIVERY ハイス ローラ	
19A	FA6-7485-000		2	RUBBER ハイス バドル	
20	FA5-5457-000		1	RING リング	
21	FA5-5459-000		1	ROLLER コロ	
22	FA5-5460-000		1	PLATE, MOUNTING, SENSOR センサ トリツク パン	
23	FA5-5461-000		1	HOLDER, SWITCH, FRONT スイッチホルダー (マエ)	
24	FA5-5462-000		1	HOLDER, SWITCH, REAR スイッチホルダー (ウシロ)	
25	FA5-5463-000		1	PLATE ジョイント パン	
26	FA5-5501-000		1	SHAFT, PICK-UP ROLLER キコウシ ローラ ジク	
27	FA5-5507-000		1	STOP, GUIDE ガイド ストツバ	
28	FS3-0196-000		2	GEAR 24T 24T ギア	
29	FS3-0197-000		1	GEAR 35T 35T ギア	
30	FS3-0904-000		1	GEAR, 20T, ONE-WAY 20T ワンウェイ ギア	
31	FS3-0199-000		1	GEAR 26T 26T ギア	
32	FS3-0200-000		1	GEAR 30T 30T ギア	
33	FS3-0201-000		1	GEAR 45T 45T ギア	
34	FS3-0202-000		1	GEAR 29T 29T ギア	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
15 - 35	FS3-2176-000		1	SPRING, TENSION ヒツバリバネ	
36	FS3-2177-000		1	SPRING, TENSION ヒツバリバネ	
37	FS3-2178-000		2	SPRING, TENSION ヒツバリバネ	
38	FS3-2174-000		1	SPRING, TENSION ヒツバリバネ	
39	FS2-3052-000		1	PULLEY プーリ	
40	FS2-3055-000		1	PULLEY プーリ	
41	FS2-9019-000		5	SCREW, STEPPED, M3X1.4 ダンピス	
42	FS2-1052-000		4	BUSHING ブッシング	
43	XF9-0238-000		1	BELT, TIMING, 180T タイミング ベルト, 180T	
44	FA2-6468-000		2	BUSHING, OUTER カクステーリング	
45	FS1-1189-000		2	BUSHING ブッシング	
46	FF2-0796-000		1	PLATE, BELT, TENSION ベルトテンションイタ	
47	FF2-0802-000	N	1	PLATE, REAR ソクパン (ウシロ)	
48	FF2-0808-000		1	PLATE, IDLER アイドラパン	
49	FF2-0809-000		1	PLATE, ADJUSTING, REAR チヨウセイパン (ウシロ)	
50	FF2-4608-000		1	GUIDE, LOWER シタガイド	
51	FF2-4609-000		1	GUIDE PLATE, INNER ウチガイドパン	
51A	FA6-7478-000		1	ELIMINATOR, STATICCHARGE シヨデンシン	
52	FF2-0820-000		1	SENSOR センサ	
53	WC4-0215-000		2	MICROSWITCH マイクロスイッチ	SW2, SW3
54	FA6-7477-000		1	COVER, SOLENOID ソレノイド カバー	
55	FA6-7472-000		1	KNOB クドウギアローゼット	
56	FA6-7558-000		1	HOLDER, THRUST, TRAY トレイスラストホルダー	
57	XG9-0237-000		4	BEARING, BALL ボールベアリング	
58	FH7-5296-000		1	SOLENOID, DC24V ソレノイド	SL2
59	FH6-3211-020		1	HARNES ハーネス	
60	WT2-0242-000		4	TIE, CABLE ソクセンバンド	
61	FA6-7566-000		1	SHUTTER シャッター	
62	FA6-7567-000		1	HOLDER, SHUTTER シャッターホルダー	
63	FA6-7568-000		1	LEVER, SHUTTER シャッターレバー	
64	FS3-2870-000		1	SPRING, TENSION ヒツバリバネ	
65	FS2-9020-000		2	SCREW, STEPPED, M3X2.2 ダンピス	
66	FS1-9009-000		1	SCREW, STEPPED, M3 ダンピス	
67	FS1-9167-000		1	SCREW, STEPPED, M4 ダンピス	
68	FH7-5294-000		1	SOLENOID, DC ソレノイド	SL1

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
15 - 69	XB6-7300-309		2	SCREW, TP, M3X3 TP ネジ	
70	FA6-7582-000		1	BASE, TRAY トレイ ベース	
71	FA6-7583-000		1	SHAFT, TRAY トレイ シャフト	
72	FA6-7584-000		2	LINK クランク シャフト	
73	FA6-7585-000		2	CRANK ジョウゴウ クランク	
74	FA6-7587-000		1	FLAG, SENSOR ジョウゴウ フラグ	
75	FA6-7589-000		1	HOLDER, SENSOR ジョウゴウ センサ ホルダー	
76	FS3-0905-000		1	GEAR, 18T 18T ギア	
77	FS1-9005-000		2	SCREW, STEPPED, M4 ダンピス	
78	FF2-4895-000		1	COVER, BELT, RIGHT ベルト カバー (ミギ)	
78A	FA6-7496-000		1	RUBBER, 3 ウレタン リブ (3)	
78B	FA6-7497-000		1	RUBBER, 4 ウレタン リブ (4)	
79	FH7-1786-000		1	MOTOR, DC24V モータ	M1
80	FH7-7247-000		1	PHOTOINTERRUPTER フォトインタラプタ	S11
81	FS1-1213-000		2	BUSHING ブツシング	
82	FH6-3208-020		1	HARNESS ハーネス	
83	FF2-0813-000		1	HOLDER, SENSOR センサ ホルダー	PTR2
84	FF2-0814-000		1	HOLDER, SKEW SENSOR シャコウ センサ ホルダー	PTR1
85	FF2-0801-000		1	PLATE, PAPER GUIDE ウチ ガイド パン	
85A	FA5-5434-000		2	SHEET, SENSOR COVER センサ マイラー	
86	FF2-0793-020		1	SENSOR LEVER UNIT センサ レバー ユニット	
87	FH7-7094-000		1	PHOTO-INTERRUPTER フォトインタラプタ	S7
88	XA9-0458-000		2	SCREW, MACH., TRUSS HEAD, M2.3X18 バインド ネジ	
89	FS3-2705-000		1	SPRING, COMPRESSION アジメック バネ	
90	FA6-2513-000		2	WASHER ワシヤ	
91	FE9-0153-000		1	PLATE プレート	

FIGURE 16 FEEDER RIGHT ASSEMBLY (1/2)
右フィーダ部 (1/2)

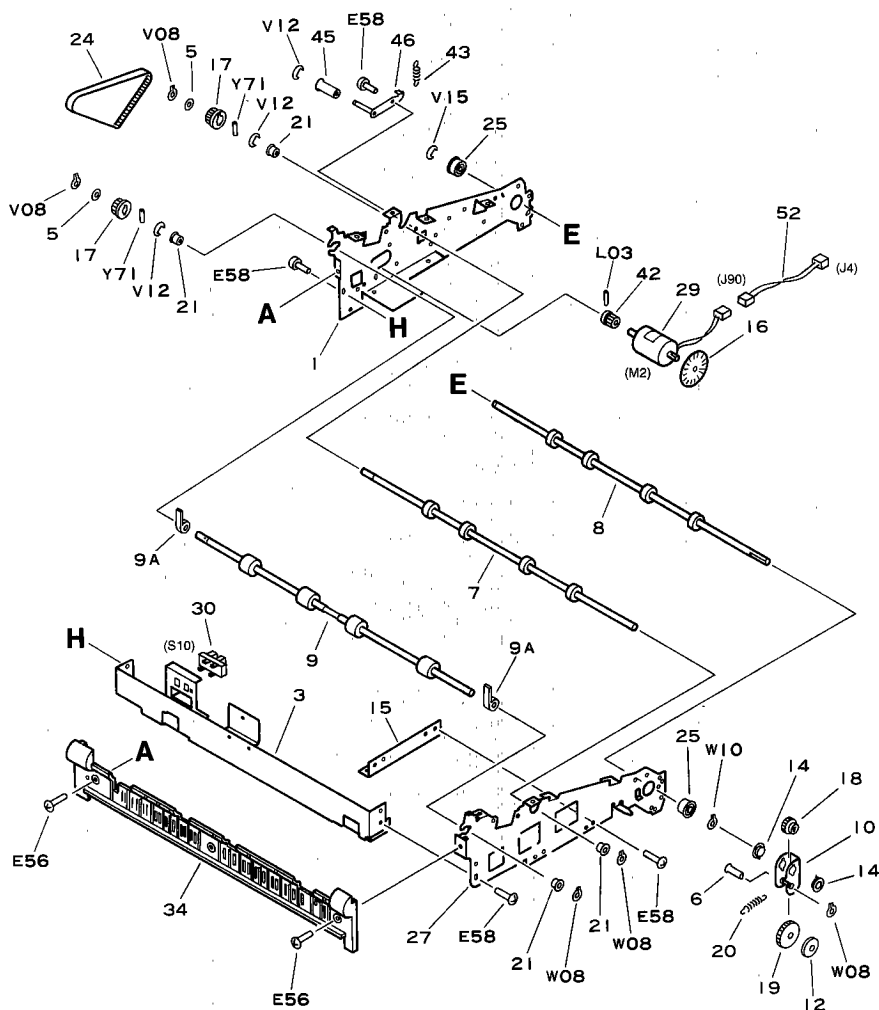


FIGURE 16 FEEDER RIGHT ASSEMBLY ($\frac{2}{2}$)
右フィーダ部 ($\frac{2}{2}$)

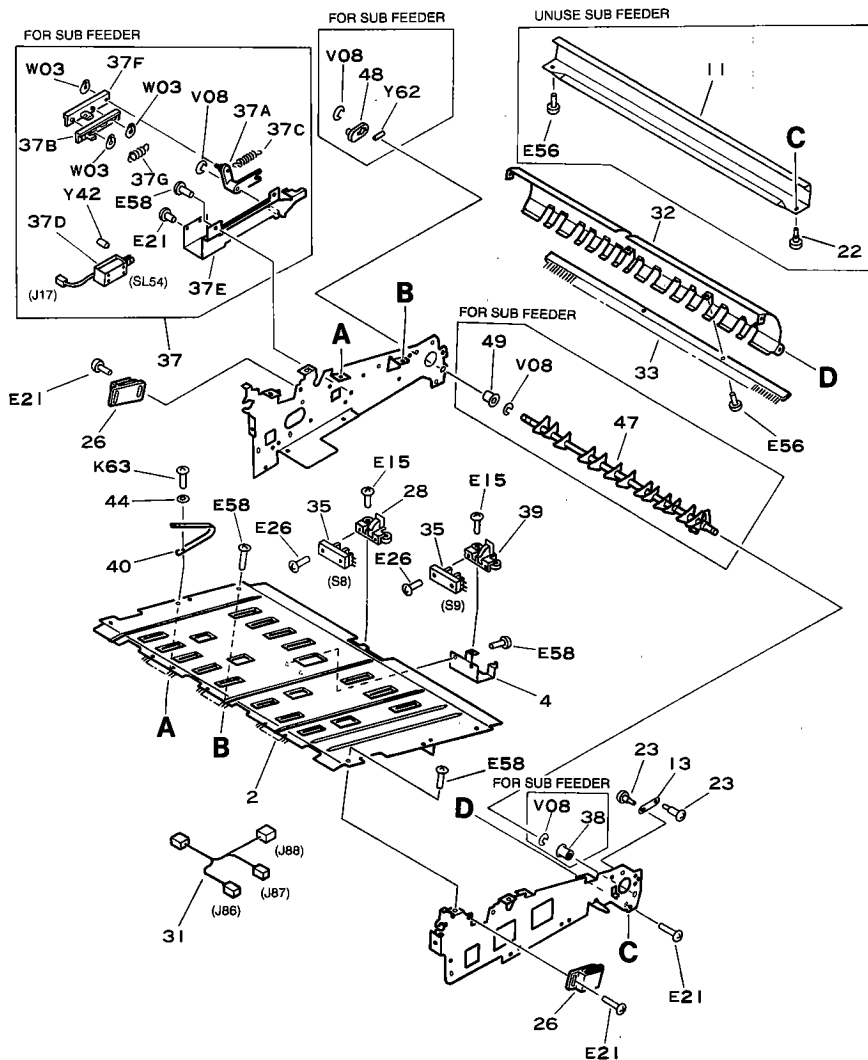


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
16 -	NPN		RF	FEEDER RIGHT ASSEMBLY ミギ フィーダ ブ	
1	FA6-7376-000	N	1	PLATE, REAR ウシロ ソクパン	
2	FA6-7378-000		1	GUIDE, PAPER フラット ガイド	
3	FA6-7379-000		1	CROSSMEMBER ステー	
4	FA6-7381-000		1	HOLDER, SENSOR センサ ホルダー	
5	FA6-7383-000		2	SPACER スペーサ	
6	FA6-7384-000		1	PIN, IDLER ギア ホルダー	
7	FA6-7385-000		1	ROLLER チヨウゲイ ローラ ジク	
8	FA6-7386-000		1	ROLLER ウケフタシ ローラ ジク	
9	FA6-7387-020		1	ROLLER, OUTLET デグ チ ローラ	
9A	FA6-7485-000		2	RUBBER ハイン バドル	
10	FA6-7388-000		1	HOLDER, GEAR ギア ホルダー	
11	FA6-8712-000		1	GUIDE, PAPER ターン ガイド	SEE NOTE
12	FA6-7391-000		1	DISK, CLEARANCE バツクラッシュ パン	
13	FA6-7392-000		1	PLATE, STOP ストッパ	
14	FA6-7465-000		2	BUSHING ジクウケ	
15	FA6-7467-000		1	SUB PLATE サブ ソクパン	
16	FA6-7475-000		1	DISK, CLOCK クロック パン	
17	FS2-3470-000		2	PULLEY, 20T 20T プーリ	
18	FS3-0902-000		1	GEAR, 20T 20T ギア	
19	FS3-0903-000		1	GEAR, 36T 36T ギア	
20	FS3-2869-000		1	SPRING, TENSION ヒツバリ バネ	
21	FS1-1213-000		4	BUSHING ブッシング	
22	FS1-9003-000		1	SCREW, STEPPED, M4 ダンピス	
23	FS2-9019-000		2	SCREW, STEPPED, M3X1.4 ダンピス	
24	XF9-0333-000		1	BELT, TIMING, T125 タイミング ベルト	
25	XG9-0237-000		2	BEARING, BALL ボール ベアリング	
26	XZ9-0326-000		2	CATCH, MAGNET マグ ネット キャッチ	
27	FF2-4618-000	N	1	PLATE, FRONT マエ ソクパン	
28	FF2-0793-020		1	SENSOR LEVER UNIT センサ レバー ユニツト	
29	FH7-1601-000		1	MOTOR, DC24V DC モータ	M2
30	WGB-0164-000		1	PHOTO INTERRUPTER フォトインタラプタ	S10
31	FH6-3210-000		1	CABLE ハイン ソクセン	
32	FF2-5383-000		1	GUIDE, PAPER ガイド	
33	FA6-7470-000		1	ELIMINATOR, STATICCHARGE シヨデ ン シン	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
16 - 34	FA6-7460-000		1	COVER, DELIVERY ハビシ カバ -	S8, S9 FOR SUB FEEDER
35	FH7-7108-000		2	PHOTO-INTERRUPTER UNIT フォトセンサ ユニツト	
37	FG2-2608-020		1	FLAPPER SOLENOID ASSEMBLY フラツバ ソレノイド	
37A	FA6-7540-000		1	ARM アーム	
37B	FA6-8710-000		1	LINK, 1 リンク (1)	
37C	FS3-5014-000		1	SPRING, TENSION ヒツバリ バネ	SL54
37D	FH7-5337-000		1	SOLENOID ソレノイド	
37E	FF2-4634-020		1	MOUNT, SOLENOID ソレノイド ダイ	
37F	FA6-8711-000		1	LINK, 2 リンク (2)	
37G	FS3-5012-000		1	SPRING, TENSION ヒツバリ バネ	
38	FS1-1528-000		1	BUSHING ブツシツ	FOR SUB FEEDER
39	FF2-4899-000		1	MOUNT, SENSOR センサ ダイ	
40	FA6-7490-000		1	TAPE, HOLDING ホルド テープ	
42	FS2-3471-000		1	PULLEY プーリ	
43	FS3-2872-000		1	SPRING, TENSION ヒツバリ バネ	
44	FE9-0027-000		2	WASHER, BAND バンド ワシヤ	FOR SUB FEEDER FOR SUB FEEDER
45	FA5-5459-000		1	ROLLER コロ	
46	FF2-4893-000		1	PLATE, TENSION テンション パン	
47	FF2-4639-000		1	FLAPPER フラツバ	
48	FA6-7538-000		1	ARM, FLAPPER フラツバ アーム	
49	FS1-1528-000		1	BUSHING ブツシツ	FOR SUB FEEDER
50	FA6-7545-000		1	BRUSH, STATIC CHARGE ジヨデン シン	
51	FA6-7546-000		1	SHEET シート	
52	FH6-3237-000		1	CABLE ハビシ モタ ソクセン	

FIGURE 17 FEEDER RIGHT COVER
右フィーダカバー部

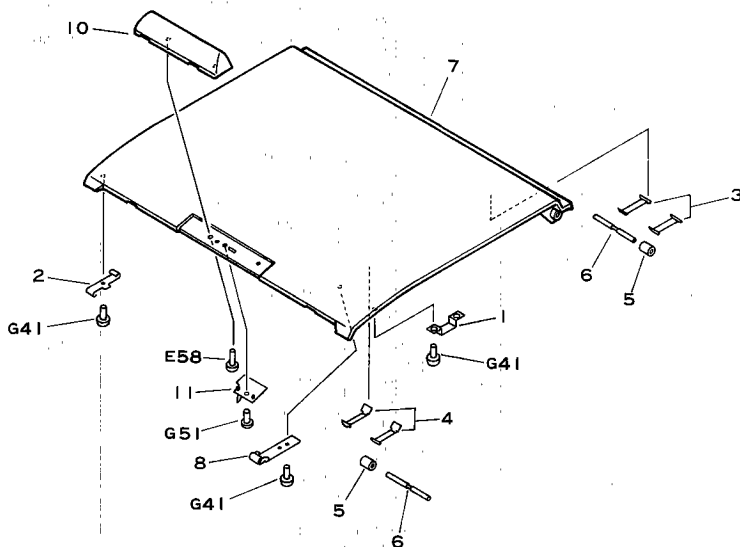


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
17 -	FG2-1913-030		1	FEEDER RIGHT COVER ASS'Y ミキフィーダカバー組	
1	FA6-7401-000		2	PLATE, MAGNET マグネットパン	
2	FA6-7402-000		1	SPRING, GROUNDING アースバネ	
3	FA6-7407-000		8	SPRING, LEAF, 1 イタバネ (1)	
4	FA6-7408-000		8	SPRING, LEAF, 2 イタバネ (2)	
5	FA6-7409-000		8	ROLLER ハンデンコロ	
6	FA5-5404-000		8	ROD ハンデンコロジク	
7	FA6-7400-000		1	GUIDE カイヘイガイド	
8	FF2-4862-000		4	COLLAR, PLATE コロイタ	
10	FA6-7491-000		1	GRIP, GUIDE グリップ	
11	FA6-7544-020		1	GUIDE ガイド	

DF ASSEMBLY
DF部



FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
18 -	NPN		RF	DF ASSEMBLY DF フ	
1	FA6-7569-000	N	1	PLATE, BASE ソコイタ	
2	FA6-7570-000		1	PLATE, SIDE ベルト ステ	
3	FA5-5365-020		1	CROSSMEMBER, LEFT ステイ (ヒダリ)	
4	FA5-5366-000		12	MOUNT, ROLLER オサエコロ アーム	
5	FA5-5367-000		12	ROLLER オサエコロ	
6	FA5-5368-000		1	MOUNT, FOOT, RUBBER ゴム アシ トリツケ ダイ	
7	FA5-5369-000		1	FOOT, RUBBER, LEFT FRONT ゴム アシ (ヒダリ マエ)	
8	FA6-7571-000		1	CROSSMEMBER, CENTER ステイ (ナカ)	
9	FA6-7572-000		1	CROSSMEMBER, RIGHT ステイ (ミギ)	
10	FA5-5372-000		1	PLATE, GUIDE, FRONT シユウドウ バン	
12	FA5-5375-000		1	SHAFT, FEED BELT クドウ シク	
13	FA5-5376-000		4	ROLLER, FEED BELT DRIVE クドウ ローラ	
14	FA5-5377-000		1	PULLEY プーリ	
15	FS3-0195-000		1	GEAR, 24T 24T ギア	
16	FS3-2174-000		8	SPRING, TENSION ヒツバリ バネ	
17	FS3-2173-000		12	SPRING, TENSION ヒツバリ バネ	
18	FS3-5011-000		2	SPRING, TENSION ヒツバリ バネ	
19	FA3-4683-000		1	BELT, DOCUMENT FEED (WHITE) ハンノウ ベルト (シロ)	
20	FA3-4508-000		2	ROLLER, FEED BELT IDLER ターン ローラ	
21	FA3-4509-000		8	BAND, ROLLER ローラ バンド	
22	FA6-7548-000		2	COLLAR カラ	
23	FA3-4725-000		1	LATCH, MAGNET マグ ネット キヤッチ	
24	FA2-3597-000		2	BUSHING, IDLER ROLLER ターニング ローラ ブツシュ	
25	FA3-4518-000		3	FOOT, RUBBER ゴム アシ	
26	FF2-4611-000		1	PLATE, GUIDE, REAR シユウドウ バン (ウシロ)	
27	WT2-0431-000		5	SUPPORT, PCB ロツキンク サポート	
28	WC4-0216-000		1	MICROSWITCH マイクロ スイッチ	SW1
29	FA6-7436-000		1	HINGE, LEFT ヒンジ (ヒダリ)	
30	FA6-7437-000		1	HINGE, RIGHT ヒンジ (ミギ)	
31	FA6-7442-000		1	BRACKET, HARNESS ハーネス フ ラケット	
32	FH6-3216-000		1	CABLE, INTERFACE インタフェース ケーブル	
33	XF9-0237-000		1	BELT, TIMING, 50T タイミング ベルト 50T	
34	FA6-7445-000		1	MOUNT, PLATE スイツチ オシタ トリツケバン	
35	FA6-7443-000		1	PLATE, SWITCH スイツチ オシタ	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
18 - 36	FS3-2186-000		1	SPRING, TENSION ヒツバリ パネ	
37	FA6-7573-000		1	HOOK パネ カガ	
38	FA6-7466-000		1	SHAFT, FEED BELT IDLER ROLLER シュウドウ ジク	
39	FA6-7463-000		1	PLATE, STOP ターン ガイド ドメ	
40	FS3-0906-000		1	GEAR, 38T, ONE-WAY 38T ワンウェイ ギア	
41	FA3-4552-000		4	STEPPED SCREW, M3 ダンピス M3	
42	FA6-5826-000		1	PILLAR, LEFT シチュウ (ヒダリ)	
43	FA6-5827-000		1	PILLAR, RIGHT シチュウ (ミギ)	
44	FA5-5499-000		1	SCREW ADJUSTING チヨクセイ ネジ	
45	XA9-0519-000		2	BOLT, M5X20 ボルト	
46	WT2-0510-000		2	SUPPORT, PCB ロツキング サポート	
47	FF2-4613-000		1	LEVER, SOLENOID ソレノイド レバー	
47A	FA6-7593-000		1	RUBBER, STOP ストップ ラバー	
48	FF2-4614-000		1	HOLDER, SOLENOID ソレノイド ホルダー	
49	FH7-5295-000		1	SOLENOID, DC ソレノイド	SL3
51	WG8-0164-000		1	PHOTO INTERRUPTER フォトインタラプタ	S5
52	FA5-5469-000		1	PLATE, CLOCK, DISK, MOUNTING クロック プラケット	
53	FS2-9019-000		2	SCREW, STEPPED, M3X1.4 ダンピス	
54	XB6-6301-609		2	SCREW, WITH WASHER, M3X16 TP ネジ	
55	XG9-0237-000		4	BEARING, BALL ボールベアリング	
56	FA6-7543-000		1	GUARD, PCB PCB ガイド	
57	FS1-9199-000		2	STEPPED SCREW, M4 ダンピス	

ベルトモータ部



S2

FIGURE 21 PAPER FEED MOTOR ASSEMBLY
搬送モータ部

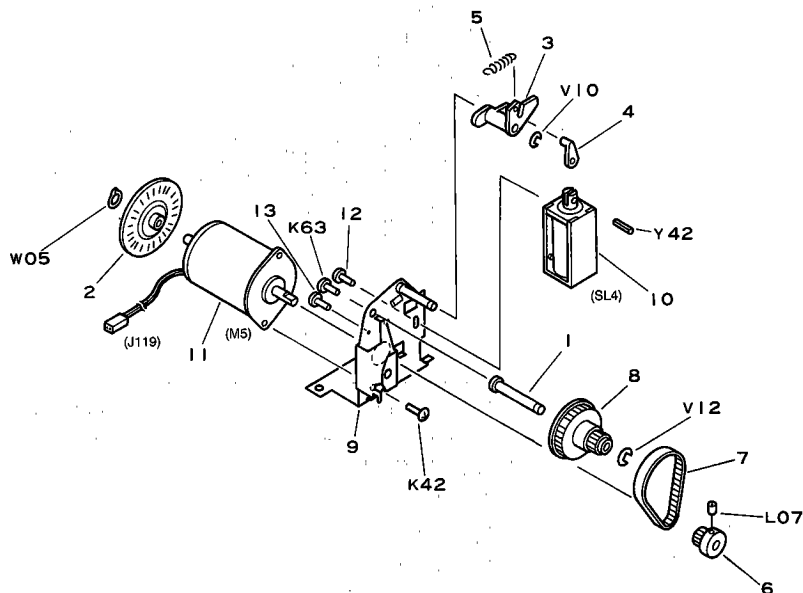


FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
21 -	NPN		RF	PAPER FEED MOTOR ASSEMBLY ハンノウ モータ ア	
1	FA5-5465-000		1	SHAFT シャフト	
2	FA5-5466-000		1	CLOCK, DISK クロツク イタ	
3	FA5-5467-000		1	SOLENOID, LEVER ソレノイド レバー	
4	FA5-5468-000		1	SOLENOID, LINK ソレノイド リンク	
5	FS3-2184-000		1	SPRING, TENSION ヒツバリ バネ	
6	FS2-3054-000		1	PULLEY, 16T プーリ 16T	
7	XF9-0240-000		1	BELT, 71T ベルト 71T	
8	FS2-3056-000		1	PULLEY, 17T プーリ 17T	
9	FF2-0810-000		1	MOUNT, MOTOR モータ トリツケ ダイ	
10	FH7-5280-000		1	SOLENOID, DC24V ソレノイド	SL4
11	FH7-1601-000		1	MOTOR, DC24V DC モータ	M5
12	XB6-7300-309		1	SCREW, TP, M3X3 TP ネジ	
13	XA9-0265-000		1	SCREW, W/WASHER TRUSS HEAD ザ ツキ バインド ネジ	

FIGURE 22 PICK-UP MOTOR ASSEMBLY
給紙モータ部

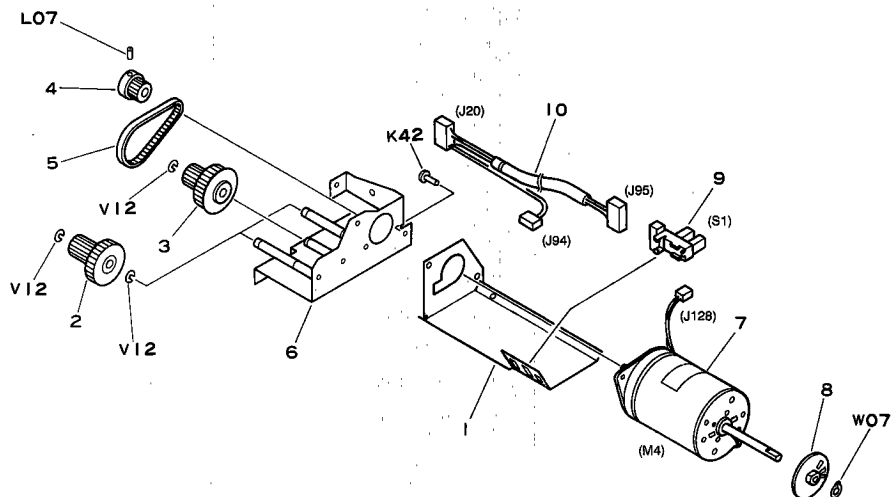


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
22 -	NPN		RF	PICK-UP ROLLER MOTOR ASSEMBLY キウシ モータ ブ	
1	FA6-5174-000		1	COVER, PICK-UP ROLLER MOTOR キウシ モータ カバー	
2	FS3-0206-000		2	GEAR, 17/32T 17/32T ギア	
3	FS2-3053-000		1	PULLEY, 17T 17T プーリ	
4	FS2-3054-000		1	PULLEY, 16T プーリ 16T	
5	XF9-0241-000		1	BELT, 56T 56T ベルト	
6	FF2-0805-000		1	MOUNT, PICK-UP ROLLER MOTOR キウシ モータ ダイ	
7	FH7-1737-000		1	MOTOR, DC24V DC モータ	M4, J128
8	FA6-5173-000		1	PULLEY, LOCK ロック パン	
9	WG8-0164-000		1	PHOTO INTERRUPTER フォトインタラプタ	S1
10	FH6-3221-000		1	HARNESS ハーネス	

FIGURE 30 LOWER PAPER GUIDE ASSEMBLY
下ガイド部

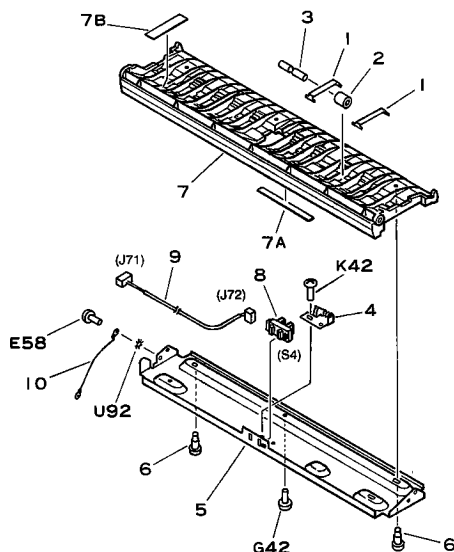


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
30 -	FG2-1939-020		1	LOWER PAPER GUIDE ASSEMBLY シタガイドブ	
1	FA6-7482-000		8	SPRING, LEAF バネ	
2	FA6-7562-000		4	ROLLER コロ	
3	FA5-5404-000		4	ROD 棒	
4	FF2-4859-020		1	LOWER GUIDE SENSOR センサー	
5	FA6-7561-020		1	CROSSMEMBER, LOWER クロスメンバー	
6	FS2-9019-000		2	SCREW, STEPPED, M3X1.4 ネジ	
7	FF2-4861-000		1	GUIDE, PAPER, LOWER ガイド	
7A	FS8-8252-000		1	SEAL シール	
7B	FA5-5532-000		8	SHEET, 2 シート (2)	
8	WG8-0164-000		1	PHOTO INTERRUPTER フォトインタラプタ	S4
9	FH6-3214-000		1	HARNESS ハーネス	
10	FF2-0875-000		1	WIRE, GROUNDING アース線	

FIGURE 35 REVERSE GUIDE ASSEMBLY
反転ガイド部

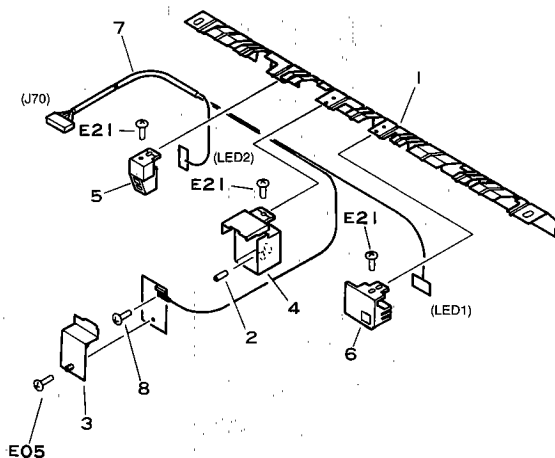


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
35 -	FG2-1940-000		1	REVERSE GUIDE ASSEMBLY 反転ガイド部	
1	FA6-7565-000		1	PLATE, GUIDE, REVERSE 反転ガイド	
2	FA6-7417-000		1	HOLDER, LAMP ランプホルダ	
3	FA6-7418-000		1	COVER, SENSOR, REAR AE センサ ウェロカバー	
4	FF2-4617-000		1	CABLE, SENSOR センサケーブル	
5	FA5-5394-000		1	HOLDER, LED (SKEW SENSOR) シャコウセンサ LED ホルダ	
6	FA5-5395-020		1	HOLDER, LED LED ホルダ	
7	FG2-2195-000		1	ENTRANCE PCB ASSEMBLY エントランス カイロキバン	
8	XB1-2260-409		1	SCREW, MACH. TRUSS HEAD, M2.6X4 バインド ネジ	

FIGURE 40 SEPARATION/FEEDER ASSEMBLY (RDF-A1)
 分離・搬送部 (RF-A1)

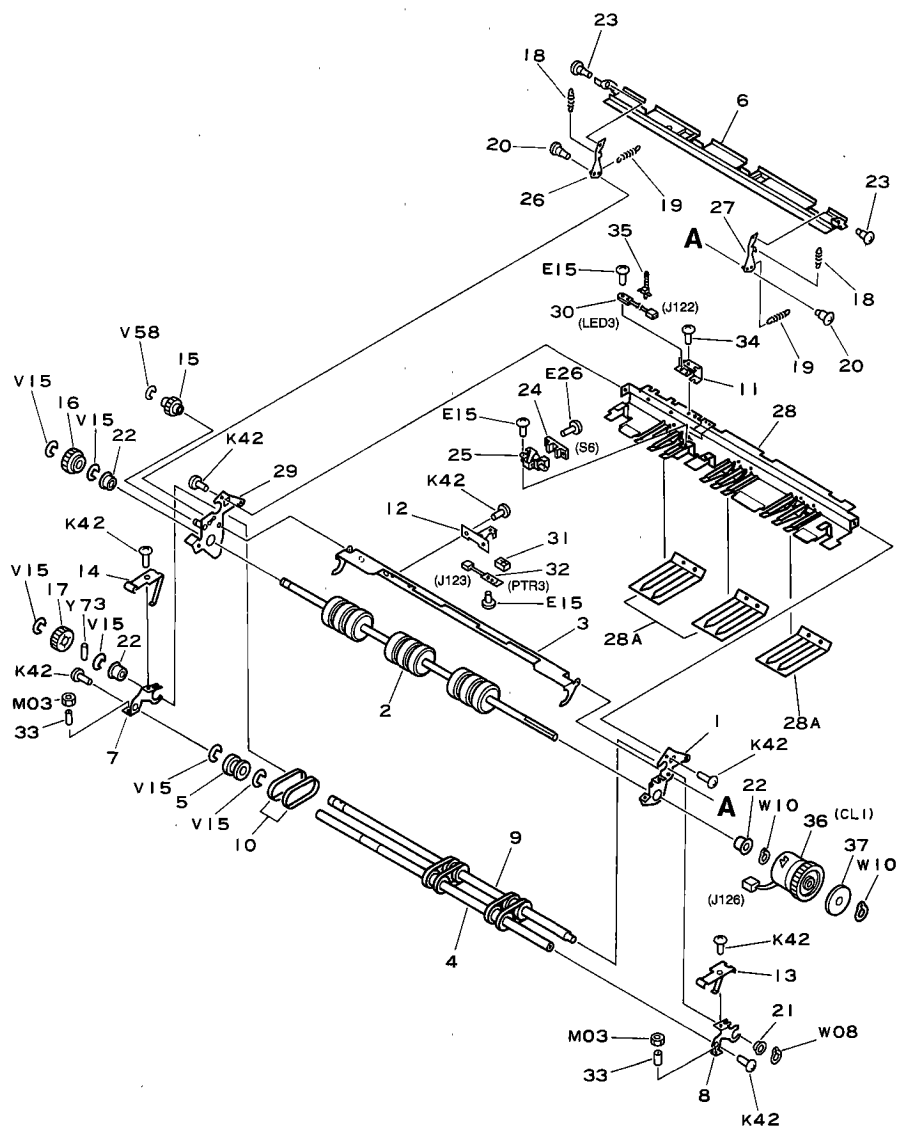


FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
40 -	FG2-1938-030		1	SEPARATION/FEEDER ASSY (RDF-A1) ﾌﾝﾘ ｾﾊﾞﾝｸﾞ ｱｯｾﾑ (RDF-A1)	
1	FA5-5413-000		1	PLATE, END, FRONT ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
2	FA5-5416-000		1	FEED ROLLER UNIT ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
3	FA5-5417-000		1	MOUNT, SEPARATION PULLEY ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
4	FA5-5418-000		1	SHAFT, SEPARATION PULLEY ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
5	FA5-5419-000		3	PULLEY, SEPARATION BELT ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
6	FA6-7487-020		1	STACK PRESSURE PLATE ｶﾐ ｵｾﾞ ｵｾﾞ ｵｾﾞ	
7	FA5-5423-000		1	MOUNT, SEPARATION SHAFT, FRONT ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
8	FA5-5425-000		1	MOUNT, SEPARATION SHAFT, REAR ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
9	FA5-5426-000		1	SEPARATION PULLEY UNIT ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
10	FA5-5427-000		6	BELT, SEPARATION ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
11	FA5-5428-000		1	PLATE, LED MOUNTING LED ﾀﾞｲ	
12	FA5-5429-000		1	PLATE, PHOTOSENSOR MOUNTING ｾﾝｻ ﾀﾞｲ	
13	FA5-5521-000		1	SPRING, LEAF, FRONT ｲﾀﾞ ﾀﾞｲ (ﾌﾞﾗﾝｸ)	
14	FA5-5522-000		1	SPRING, LEAF, REAR ｲﾀﾞ ﾀﾞｲ (ﾌﾞﾗﾝｸ)	
15	FS3-0203-000		1	GEAR, 20T 20T ﾂﾅﾐ	
16	FS3-0204-000		1	CLUTCH, ONE WAY ﾌﾞﾗﾝｸ ﾀﾞｲ ｸﾗｯﾁ	
17	FS3-0205-000		1	GEAR, 29T 29T ﾂﾅﾐ	
18	FS3-2179-000		2	SPRING, TENSION ﾋｯｽﾞ ﾀﾞｲ ﾀﾞｲ	
19	FS3-2180-020		2	SPRING, TENSION ﾋｯｽﾞ ﾀﾞｲ ﾀﾞｲ	
20	FS2-9020-000		2	SCREW, STEPPED, M3X2.2 ﾀﾞﾝﾋﾞｽ	
21	FS1-1213-000		1	BUSHING ﾌﾞｯｼﾝｸﾞ	
22	FS1-1189-000		3	BUSHING ﾌﾞｯｼﾝｸﾞ	
23	FS1-9009-000		2	SCREW, STEPPED, M3 ﾀﾞﾝﾋﾞｽ	
24	FH7-7160-000		1	PHOTO INTERRUPTER ﾌｵﾄｵﾌﾞｼﾞｬｸ ﾀﾞｲ	S6
25	FF2-0793-020		1	SENSOR LEVER UNIT ｾﾝｻ ﾀﾞｲ ﾀﾞｲ ﾀﾞｲ	
26	FF2-0794-020		1	PLATE, WEIGHT MOUNTING, REAR ｵﾍﾞﾘ ﾀﾞｲ ﾀﾞｲ ﾀﾞｲ	
27	FF2-0795-020		1	PLATE, WEIGHT MOUNTING, FRONT ｵﾍﾞﾘ ﾀﾞｲ ﾀﾞｲ ﾀﾞｲ	
28	FF2-4858-000		1	LIMIT PLATE, SEPARATION ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
28A	FA6-7534-000		3	SHEET ｼｰﾄ	
29	FF2-0807-000		1	PLATE, END, REAR ﾌﾝﾘ ｾｯｸﾞ ｵﾌﾞ ｴﾝﾄﾞ ｳｵｼﾛ	
30	FF2-0817-000		1	SENSOR ｾﾝｻ	
31	FF2-0792-000		1	COVER, SENSOR ｾﾝｻ ﾀﾞｲ ﾀﾞｲ	
32	FF2-0816-000		1	PHOTO-TRANSISTOR ﾌｵﾄ ﾀﾞｲ ﾀﾞｲ ﾀﾞｲ	PTR3
33	XB6-2301-209		2	SETSCREW, M3X12 ﾛｯｸ ﾀﾞｲ ﾀﾞｲ ﾀﾞｲ	

FIGURE 41 FEED/DELIVERY GUIDE ASSEMBLY
給/排紙ガイド部

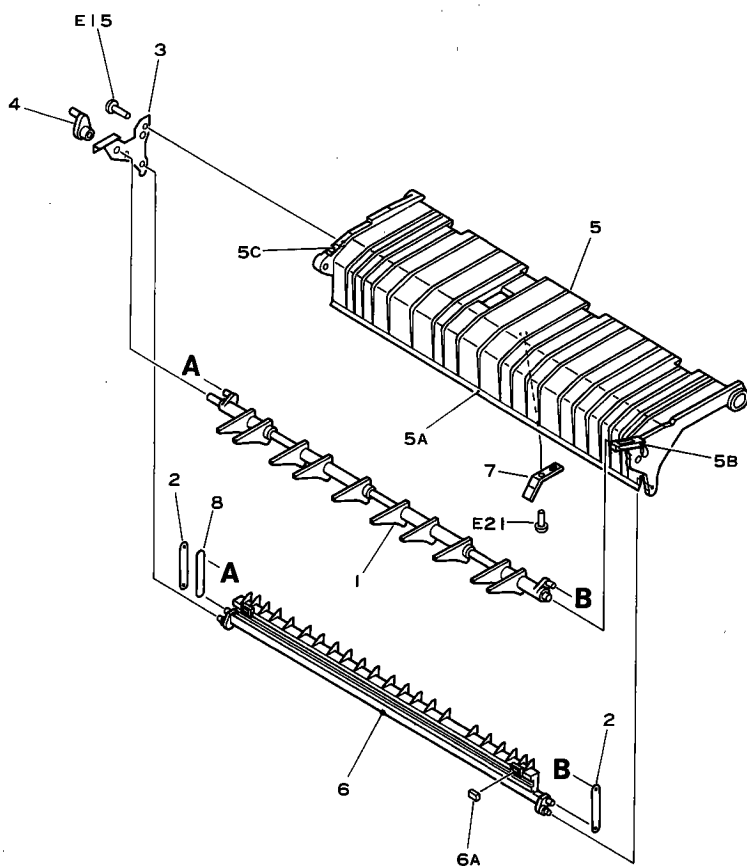


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
41 -	FG2-2166-000		1	FEED/DELIVERY GUIDE ASSEMBLY キコウシ/ハイン ガイド	
1	FA5-5453-000		1	DEFLECTOR カミ ヘコウ パン	
2	FA5-5454-000		2	LINK リンク	
3	FA5-5455-000		1	PLATE, DEFLECTOR, MOUNTING カミ ヘコウ パン トリツケ イタ	
4	FA5-5456-000		1	ARM, DEFLECTOR カミ ヘコウ パン アーム	
5	FF2-4860-000		1	FEED/DELIVERY GUIDE キコウシ/ハイン ガイド	
5A	FA5-5450-000		1	SHEET シート	
5B	FS8-8253-000		1	SEAL タイプ シール	
5C	FA5-5451-000		1	DAMPER ダンパ	
6	FF2-0800-000		1	FEED/DELIVERY, GUIDE 2 キコウ ハイン ガイド (2)	
6A	FA5-5451-000		2	DAMPER ダンパ	
7	FF2-3887-000		1	STOPPER, GUIDE ガイド ストップバ	
8	FA6-7493-000		1	RING, RUBBER ラバ - リング	

FIGURE 60 MOUNTING HARDWARE (SUB FEEDER)
 本体取付部品 (サブフィーダ)

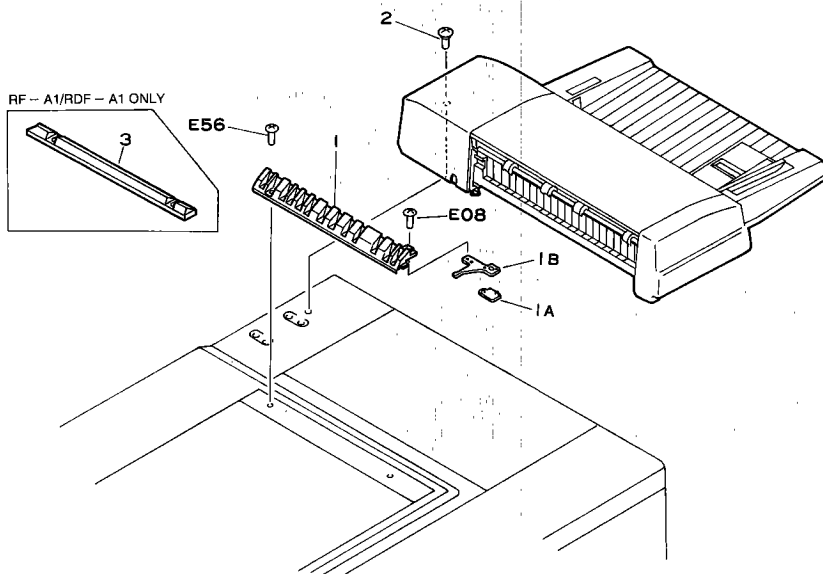


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
60 -	NPN		RF	MOUNTING HARDWARE (SUB FEEDER) ホタイトリツクブヒン (サブフィーダ)	
1	FG2-1919-000		1	GUIDE, PAPER ウケワタシタイ	
1A	FA6-8722-000		1	SPACER, RUBBER スペーサ	
1B	FA6-7554-000		1	SUPPORT, JUMP サポート	
2	FA6-8685-000		1	SCREW, STEPPED M5 ダンピス	
3	FF2-4891-000		1	RETAINER, GLASS ゲンコウダイガラスオサエ	

FIGURE 62 SUB DOCUMENT TRAY ASSEMBLY
サブ原稿トレイ部


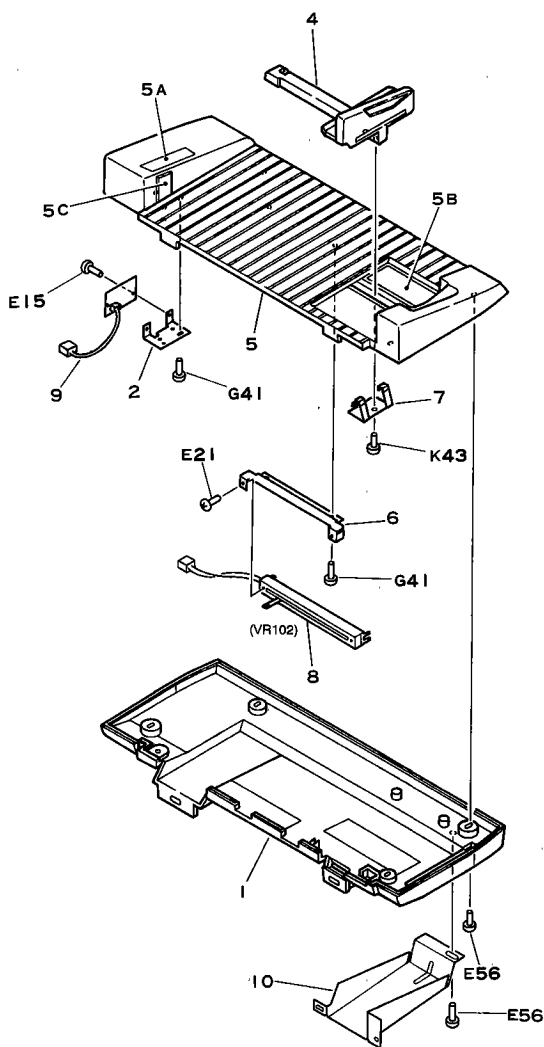


FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
62 -	NPN		RF	SUB DOCUMENT TRAY ASSEMBLY サブ ドキュメントトレイ	
1	FA6-8618-000		1	COVER, TRAY, LOWER トレイ シタ カバー	
2	FA6-8691-000		1	BRACKET, PCB PCB ブラケット	
4	FF2-4637-000		1	GUIDE, SLIDE スライド ガイド	
5	FF2-4640-000		1	TRAY, DOCUMENT ドキュメントトレイ	
5A	FA6-7458-000		1	LABEL ラベル	
5B	FA6-7532-000		1	LABEL, SIZE サイズ ラベル	
5C	FA6-8692-000		1	PALTE, DISPLAY ヒョウシ プレート	
6	FA5-5508-000		1	PLATE, VR MOUNTING ボリューム タイ	
7	FA5-5495-000		1	SPRING, LEAF クリツク イタ バネ	
8	FF2-0833-000		1	SENSOR, PAPER SIZE カミ サイズ センサ	
9	FH6-3250-000		1	SUB INDICATOR PCB ASSEMBLY サブ ヒョウシ キヤン	
10	FA6-8724-000		1	RETAINER, TRAY トレイ ガイド	

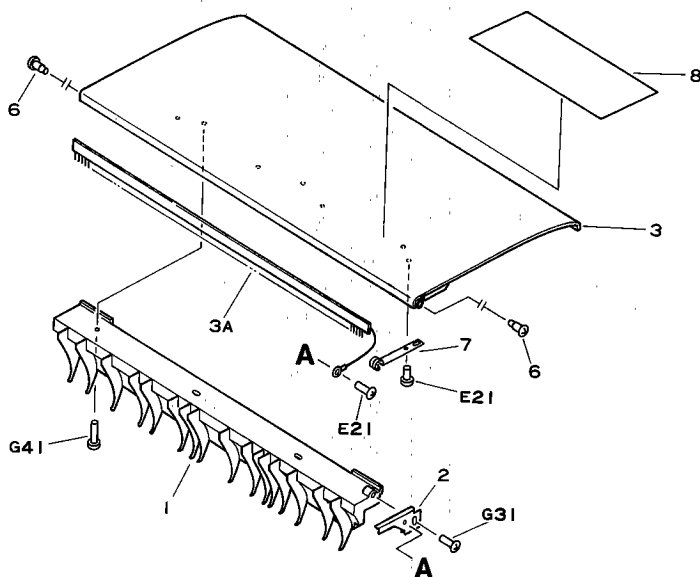FIGURE 63 UPPER COVER ASSEMBLY (SUB FEEDER)
 上カバー部 (サブフィーダ)




NOTE: This assembly does not include the parts shown in key NO. 8.

注: このユニットには、KEY NO. 8 のパーツは含まれません。

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
63 --	FG2-2204-020		1	UPPER COVER ASS'Y (SUB FEEDER) ウエカバー部 (サブフィーダ)	
1	FA6-8617-000		1	COVER, PAPER, 2 カペーパー (2)	
2	FA6-8671-000		1	PLATE, GROUNDING アース板	
3	FF2-4635-020		1	COVER, UPPER ウエカバー	
3A	FA6-7479-000		1	ELIMINATOR, STATICCHARGE 静電消去装置	
6	FS2-9020-000		2	SCREW, STEPPED, M3X2.2 ダンピス	
7	FF2-4622-000		4	ROLLER ハシコロ	
8	FA6-8723-000		1	LABEL, CONSECUTIVE JOB MODE ヨヤクモード セツメイ ラベル	SEE NOTE

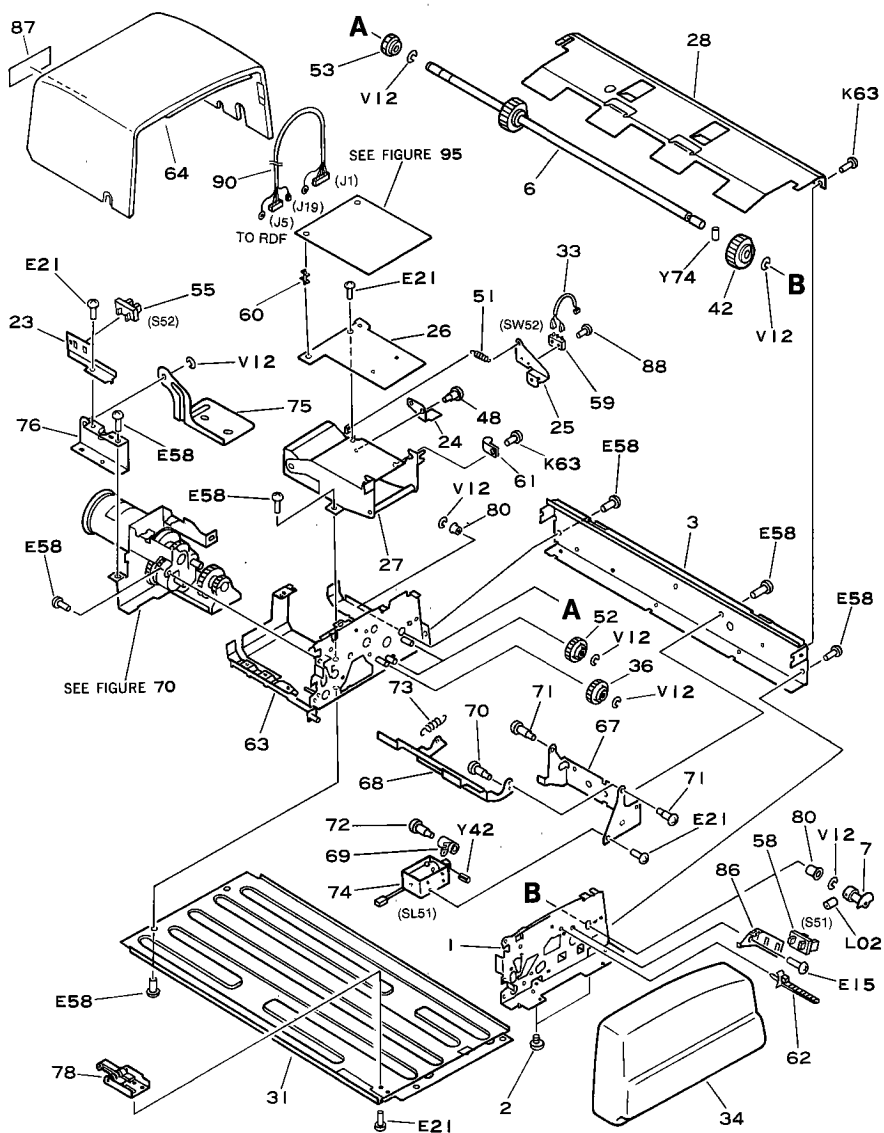FIGURE 65 SUB FEEDER MAIN BODY (1/2)
サブフィーダ本体 (1/2)



サブフィーダ本体 (2/2)



FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
65 -	NPN		RF	SUB FEEDER MAIN BODY サブ フィーダ ボンタイ	
1	FA6-8622-020	N	1	PLATE, FRONT マエ ソクバン	
2	FA6-8623-000		2	FOOT, RUBBER ウケ ゴム	
3	FA6-8624-020		1	CROSSMEMBER, PICK-UP キョウシ ステア	
4	FA6-8631-000		1	ROLLER, SUB DELIVERY サブ ハイシ ローラ	
5	FA6-8632-000		1	GUIDE, REGISTRATION レジ ガイド	
6	FA6-8625-000		1	SHAFT, SUB PICK-UP ROLLER サブ キョウシ ローラ	
7	FA6-8626-000		1	FLAG センサ バン	
8	FA6-8628-000		1	BRACKET, SOLENOID ソレノイド ブ ラケット	
9	FA6-8633-000		1	GUIDE, PAPER ターン ガイド	
10	FA6-8688-000		1	BRACKET, SENSOR センサ ブ ラケット	
11	FF2-4638-000		1	HOLDER, SENSOR センサ ホルダ	
12	FA6-8634-000		1	ROLL, REGISTRATION レジ スト コロ	
13	FA6-8635-000		1	PLATE, IDLER, FRONT レジ スト バン (マエ)	
14	FA6-8636-000		1	PLATE, IDLER, REAR レジ スト バン (ウシロ)	
15	FA6-8639-000		1	LEVER, DEFLECTOR, 2 フラツバ レバ - (2)	
16	FA6-8640-000		1	PLATE, SOLENOID フラツバ ソレノイド バン	
17	FA6-8641-000		1	LINK, SOLENOID フラツバ ソレノイド リンク	
18	FA6-8642-000		1	LEVER, DEFLECTOR, 1 フラツバ レバ - (1)	
19	FA6-8643-000		1	LINK, DEFLECTOR, 1 フラツバ リンク (1)	
20	FA6-8644-000		1	LINK, DEFLECTOR, 2 フラツバ リンク (2)	
21	FA6-8645-000		1	ROLLER, SUB REGISTRATION サブ レジ スト ローラ	
22	FA6-8650-000		1	FLANGE, IDLER アイドラ フランジ	
23	FA6-8657-000		1	PLATE, SENSOR センサ バン	
24	FA6-8658-000		1	BRACKET, SWITCH, HINGE ヒンジ スイッチ ブ ラケット	
25	FA6-8659-000		1	PLATE, SWITCH, HINGE ヒンジ スイッチ トリツケ バン	
26	FA6-8673-000		1	BRACKET, PCB キバン ブ ラケット	
27	FA6-8690-000		1	HINGE ヒンジ	
28	FA6-8660-000		1	GUIDE, PAPER キョウシ ガイド	
29	FA6-8661-000		1	LEVER, RELEASE, FRONT カイジ ヨ レバ - (マエ)	
30	FA6-8662-000		1	HOLDER, SENSOR レジ センサ ホルダ	
31	FA6-8663-020		1	COVER, LOWER シタ カバ -	
32	FA6-8664-000		1	LEVER, RELEASE, REAR カイジ ヨ レバ - (ウシロ)	
33	FH6-3226-000		1	HARNESS ハーネス	
34	FA6-8614-020		1	COVER, FRONT マエ カバ -	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
65 - 35	FA6-8619-000		1	COVER, LEFT ヒダリ カバ ー	
36	FS3-0917-000		1	GEAR, 35T 35T ギ ア	
37	FS3-0919-000		1	GEAR, 20T 20T ギ ア	
38	FS3-0920-000		1	GEAR, 27T 27T ギ ア	
39	FS3-2873-000		1	SPRING, TORSION ネジリ バ ネ	
40	FS2-3474-000		1	GEAR, 15T 15T ギ ア	
41	FS2-3475-000		1	GEAR, 20T 20T ギ ア	
42	FA5-5410-000		2	PICK-UP ROLLER キユウシ ローラ	
43	FA5-5407-000		1	SHAFT カク シャフト	
44	FA5-5408-000		2	LEVER, PLATE, PAPER, PRESSING カミ オサエ パン レバ ー	
45	FA2-6468-000		2	BUSHING, OUTER カク ステ ー リング	
46	FA5-5409-000		1	LEVER ソレノイド レバ ー	
47	FA5-5457-000		1	RING リング	
49	FS3-2176-000		1	SPRING, TENSION ヒツバリ バ ネ	
50	FS3-2177-000		1	SPRING, TENSION ヒツバリ バ ネ	
51	FS3-2186-000		1	SPRING, TENSION ヒツバリ バ ネ	
52	FS3-0196-000		2	GEAR 24T 24T ギ ア	
53	FS3-0202-000		1	GEAR 29T 29T ギ ア	
54	XF9-0335-000		1	BELT, TIMING, T152 T152 タイミング ベルト	
55	FH7-7247-000		1	PHOTO INTERRUPTER フォトインタラプ タ	S52
56	FH7-5300-000		1	SOLENOID ソレノイド	SL52
57	FH7-5297-000		1	SOLENOID ソレノイド	SL53
58	WG8-0164-000		1	PHOTO INTERRUPTER フォトインタラプ タ	S51
59	WC4-0150-000		1	MICROSWITCH マイクロ スイッチ	SW52
60	WT2-0001-006		2	SUPPORT, PCB ロッキング サポ ート	
61	WT2-0351-000		2	CLIP, CABLE ソクセン オサエ	
62	WT2-0200-000		2	TIE, CABLE ソクセン バ ンド	
63	FF2-4621-000	N	1	PLATE, REAR ウシロ ソクバ ン	
64	FA6-8615-000		1	COVER, REAR ウシロ カバ ー	
65	FA6-8629-000		1	DEFLECTOR 1 フラツバ (1)	
66	FA6-8637-000		1	DEFLECTOR 2 フラツバ (2)	
67	FA6-8667-020		1	HOLDER, SHUTTER シャツタ ホリダ	
68	FA5-5443-000		1	PLATE, PAPER STOP シャツタ	
69	FA5-5445-000		1	LEVER, PAPER STOP PLATE シャツタ レバ ー	
70	FS1-9009-000		3	SCREW, STEPPED, M3 ダ ンピ ス	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
65 - 71	FS2-9020-000		2	SCREW, STEPPED, M3X2.2 ダンピス	SL51
72	FS1-9167-000		1	SCREW, STEPPED, M4 ダンピス	
73	FS3-2182-000		1	SPRING, TENSION ヒツバリバネ	
74	FH7-5297-000		1	SOLENOID ソレノイド	
75	FA6-8655-000		1	PLATE, HINGE ヒンジ アタッチ	
76	FF2-4626-000		1	BRACKET, HINGE ヒンジ ブラケット	
78	FF2-4632-000		1	LEVER レバー	
79	FS1-1189-000		2	BUSHING ブッシング	
80	FS2-1052-000		4	BUSHING ブッシング	
81	FS1-1213-000		2	BUSHING ブッシング	
82	FA6-8697-000		1	COLLAR カラー	PTR51
83	FS3-2877-000		1	SPRING, TORSION ネジリバネ	
84	FH6-3227-000		1	PHOTO-TRANSISTOR フォトトランジスタ	
85	FH6-3228-000		1	LED LED	
86	FA6-8627-000		1	HOLDER, SENSOR センサホルダ	
87	FY1-0770-000		1	LABEL, NAME メシヨウ メイバン	
88	XB1-2231-009		1	SCREW, MACH. TRUSS HEAD, M2.3X10 バインド ネジ	
89	FA6-8700-000		4	SCREW, STEPPED, M3X1.6 ダンピス	
90	FH6-3222-000		1	HARNESS ハーネス	

FIGURE 70 SUB FEEDER MOTOR ASSEMBLY
サブフィーダモータ部

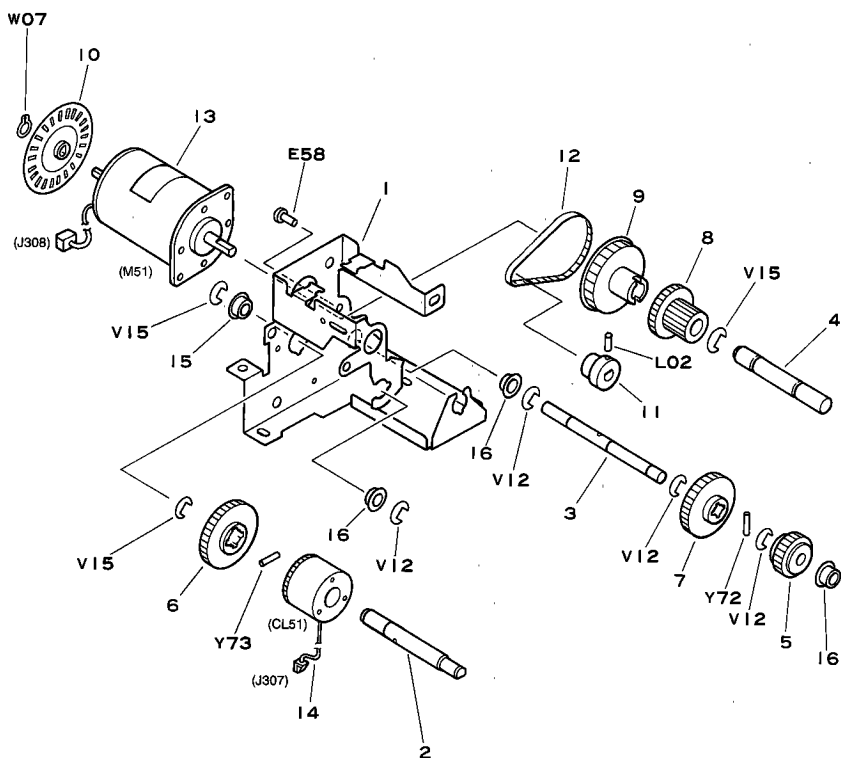


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
70 -	FG2-2203-000		1	SUB FEEDER MOTOR ASSEMBLY サブ フィーダ モータ ブ	
1	FA6-8651-000		1	BRACKET, MOTOR モータ ブラケット	
2	FA6-8653-000		1	SHAFT, CLUTCH クラッチ シャフト	
3	FA6-8649-000		1	SHAFT, MOTOR BRACKET モータ ブラケット シャフト	
4	FA6-8652-000		1	SHAFT, MOTOR モータ シャフト	
5	FA6-8648-000		1	GEAR, 27T 27T ギア	
6	FS3-0975-000		1	GEAR, 45T 45T ギア	
7	FS3-0918-000		1	GEAR, 46T 46T ギア	
8	FS3-0921-000		1	GEAR, 19T/34T 19T/34T ギア	
9	FS2-3476-000		1	PULLEY, 54T 54T プーリ	
10	FA5-5466-000		1	CLOCK, DISK クロック イタ	
11	FS2-3054-000		1	PULLEY, 16T プーリ 16T	
12	XF9-0336-000		1	BELT, TIMING, 138T 138T タイミング プーリ	
13	FH7-1601-000		1	MOTOR, DC24V DC モータ	M51
14	FH7-5159-000		1	CLUTCH, ELECTROMAGNETIC デ ン ジ ク ラ ッ チ	CL51
15	FS1-1189-000		1	BUSHING ブ ヅ ン グ	
16	FS1-1213-000		3	BUSHING ブ ヅ ン グ	

FIGURE 75 SEPARATION/FEEDER ASSEMBLY (SUB FEEDER)
 分離・搬送部 (サブフィーダ)

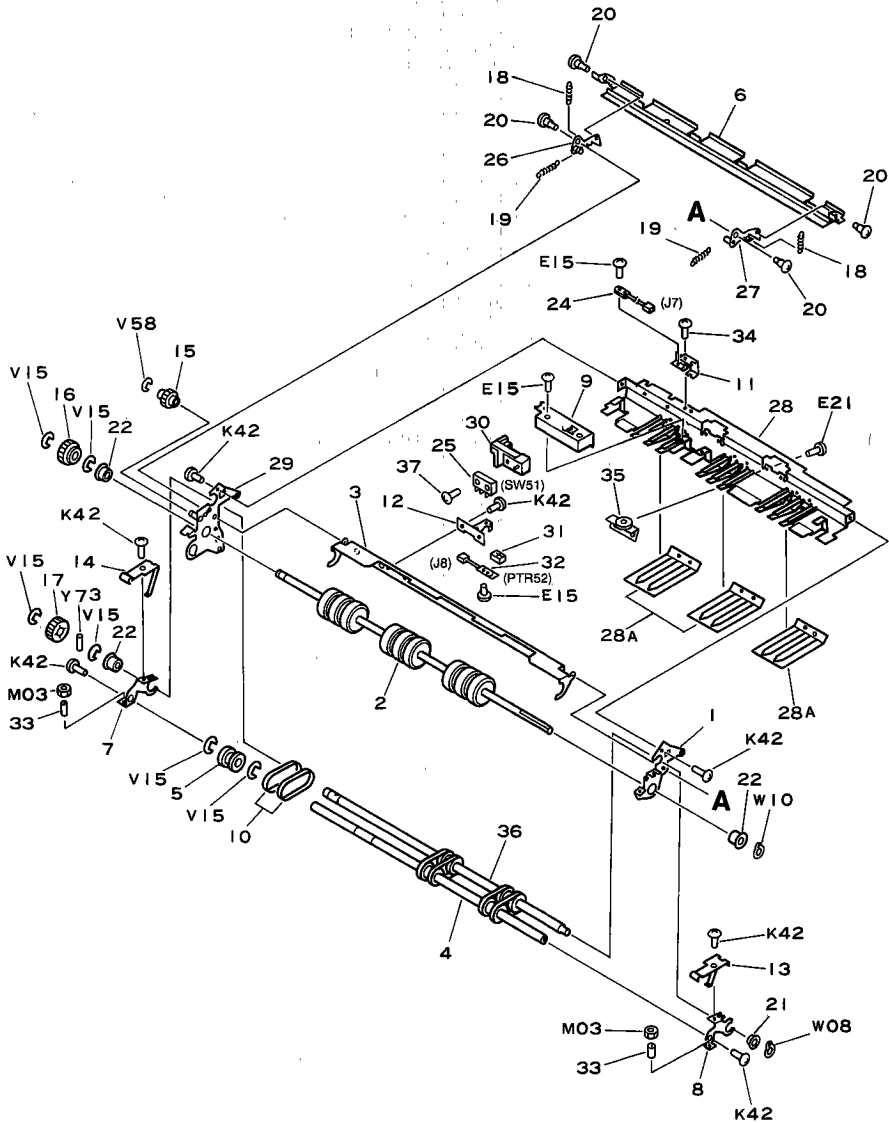


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
75 -	FG2-2202-030		1	SEPARATION/FEEDER ASSEMBLY ブ リ ハンソウ プ (サブ フィーダー)	
1	FA5-5413-000		1	PLATE, END, FRONT ブ リ ソクパン メ	
2	FA6-8686-000		1	ROLLER, FEED ハンソウ ゴム ローラー	
3	FA5-5417-000		1	MOUNT, SEPARATION PULLEY ブ リ スター	
4	FA5-5418-000		1	SHAFT, SEPARATION PULLEY ブ リ シャフト	
5	FA5-5419-000		3	PULLEY, SEPARATION BELT ブ リ プーリー	
6	FA5-5422-000		1	STACK PRESSURE PLATE カミ オサエ パン	
7	FA5-5423-000		1	MOUNT, SEPARATION SHAFT, FRONT ブ リ パン, メ	
8	FA5-5425-000		1	MOUNT, SEPARATION SHAFT, REAR ブ リ パン, ウシロ	
9	FA6-8670-000		1	COVER, SWITCH スイチ カバー	
10	FA5-5427-000		6	BELT, SEPARATION ブ リ ベルト	
11	FA5-5428-000		1	PLATE, LED MOUNTING LED ダイ	
12	FA5-5429-000		1	PLATE, PHOTOSENSOR MOUNTING センサ ダイ	
13	FA5-5521-000		1	SPRING, LEAF, FRONT イタ バネ (メ)	
14	FA5-5522-000		1	SPRING, LEAF, REAR イタ バネ (ウシロ)	
15	FS3-0203-000		1	GEAR, 20T 20T ギア	
16	FS3-0204-000		1	CLUTCH, ONE WAY ワンウェイ クラッチ	
17	FS3-0205-000		1	GEAR, 29T 29T ギア	
18	FS3-2179-000		2	SPRING, TENSION ヒツバリ バネ	
19	FS3-2180-000		2	SPRING, TENSION ヒツバリ バネ	
20	FS2-9020-000		4	SCREW, STEPPED, M3X2.2 ダンベ ス	
21	FS2-1052-000		1	BUSHING ブ ヅシグ	
22	FS1-1189-000		3	BUSHING ブ ヅシグ	
24	FH6-3230-000		1	LED LED	
25	FH6-3231-000		1	SWITCH カバー スイッチ	SW51
26	FF2-0794-000		1	PLATE, WEIGHT MOUNTING, REAR オモリ アーム, ウシロ	
27	FF2-0795-000		1	PLATE, WEIGHT MOUNTING, FRONT オモリ アーム, メ	
28	FF2-4630-000		1	PLATE, PAPER GUIDE ブ リ ケイ パン	
28A	FA6-8705-000		3	SHEET, SEPARATION ブ リ シート	
29	FF2-4624-000		1	PLATE, END, REAR ブ リ ソクパン (ウシロ)	
30	FA5-5461-000		1	HOLDER, SWITCH, FRONT スイチ ホルダー (メ)	
31	FF2-0792-000		1	COVER, SENSOR センサ カバー	
32	FH6-3229-000		1	PHOTO-TRANSISTOR フォト トランジスタ	PTR52
33	XB6-1301-209		2	SETSCREW, M3X12 ロツカクアサンキ トメネジ	
34	XB1-2300-309		1	SCREW, MACH., TRUSS HEAD, M3X9 バインド ネジ	

FIGURE 80 CONTROL CARD V KIT (SUB FEEDER)
 コントロールカードVキット (サブフィーダ)

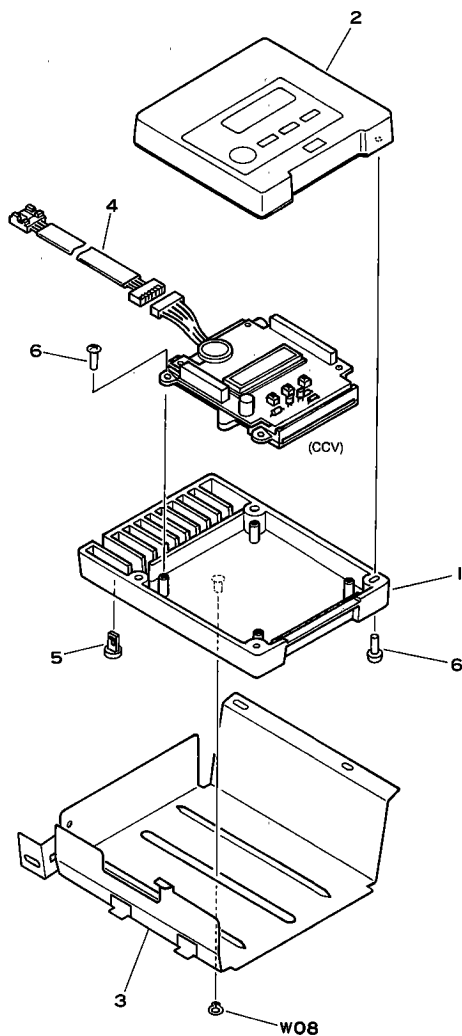


FIGURE 90 RF CONTROLLER P.C.B. ASSEMBLY
RFコントローラ回路基板

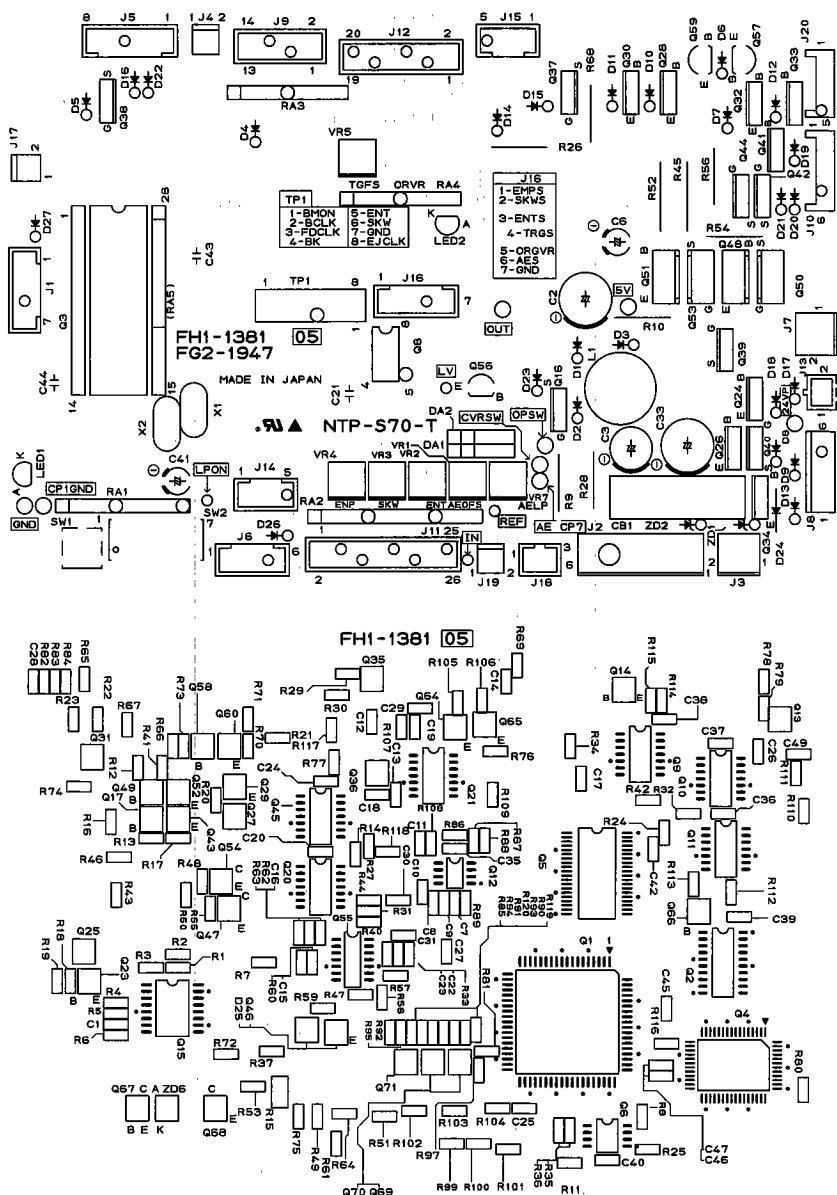


FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
90 -	FG2-1947-060		1	RF CONTROLLER PCB ASSEMBLY RF コントローラ カイロ キパン	
C 1	WM4-2835-222		1	CAPACITOR, 2200PF, 50V コンデンサ	
C 2	VC1-2351-477		1	CAPACITOR, 470UF, 35V コンデンサ	
C 3	VC1-2351-107		1	ELECT. CAPACITOR, 100UF, 35V コンデンサ	
C 6	VC1-2501-475		1	CAPACITOR, 4.7UF, 50V コンデンサ	
C 7	WM4-2835-221		1	CAPACITOR, 220PF, 50V コンデンサ	
C 8	WM4-2835-221		1	CAPACITOR, 220PF, 50V コンデンサ	
C 9	WM4-2835-221		1	CAPACITOR, 220PF, 50V コンデンサ	
C 10	WM4-2835-221		1	CAPACITOR, 220PF, 50V コンデンサ	
C 11	WM4-2835-221		1	CAPACITOR, 220PF, 50V コンデンサ	
C 12	WM4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 13	WM4-2037-104		1	CAPACITOR, 0.1UF, 50V コンデンサ	
C 14	WM4-2835-102		1	CAPACITOR, 1000PF, 50V コンデンサ	
C 15	WM4-2037-104		1	CAPACITOR, 0.1UF, 50V コンデンサ	
C 16	WM4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 17	WM4-2835-102		1	CAPACITOR, 1000PF, 50V コンデンサ	
C 18	WM4-2835-221		1	CAPACITOR, 220PF, 50V コンデンサ	
C 19	WM4-2835-221		1	CAPACITOR, 220PF, 50V コンデンサ	
C 20	WM4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 21	VC5-5850-155		1	CAPACITOR, 1.5UF, 65V コンデンサ	
C 22	WM4-2037-104		1	CAPACITOR, 0.1UF, 50V コンデンサ	
C 23	WM4-2037-104		1	CAPACITOR, 0.1UF, 50V コンデンサ	
C 24	WM4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 25	WM4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 26	WM4-2835-221		1	CAPACITOR, 220PF, 50V コンデンサ	
C 27	WM4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 28	WM4-2835-102		1	CAPACITOR, 1000PF, 50V コンデンサ	
C 29	WM4-2835-102		1	CAPACITOR, 1000PF, 50V コンデンサ	
C 30	WM4-2835-102		1	CAPACITOR, 1000PF, 50V コンデンサ	
C 31	WM4-2835-102		1	CAPACITOR, 1000PF, 50V コンデンサ	
C 33	VC1-2351-477		1	CAPACITOR, 470UF, 35V コンデンサ	
C 35	WM4-2037-104		1	CAPACITOR, 0.1UF, 50V コンデンサ	
C 36	WM4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 37	WM4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 38	WM4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
90 -C 39	W4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 40	W4-2027-104		1	CAPACITOR, 0.1UF 50V コンデンサ	
C 41	VC1-2501-475		1	CAPACITOR, 4.7UF, 50V コンデンサ	
C 42	W4-2835-102		1	CAPACITOR, 1000PF, 50V コンデンサ	
C 43	VC5-5850-155		1	CAPACITOR, 1.5UF, 65V コンデンサ	
C 44	VC5-5850-155		1	CAPACITOR, 1.5UF, 65V コンデンサ	
C 45	W4-2835-102		1	CAPACITOR, 1000PF, 50V コンデンサ	
C 46	W4-2234-300		1	CAPACITOR, 30PF, 50V コンデンサ	
C 47	W4-2234-300		1	CAPACITOR, 30PF, 50V コンデンサ	
C 49	W4-2234-221		1	CAPACITOR, 220PF, 50V コンデンサ	
CB 1	WD3-0040-000		1	CIRCUIT BREAKER, 3.15A サーキットブレーカ	
CP 1	WT1-0122-000		1	PIN ピン	
CP 7	WT1-0122-000		1	PIN ピン	
D 1	WA1-5140-000		1	DIODE, 1SS205 ダイオード	
D 2	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 3	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 4	WA1-5140-000		1	DIODE, 1SS205 ダイオード	
D 5	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 6	WA1-0972-000		1	DIODE, S5688B ダイオード	
D 7	WA1-5140-000		1	DIODE, 1SS205 ダイオード	
D 8	WA1-0972-000		1	DIODE, S5688B ダイオード	
D 9	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 10	WA1-0972-000		1	DIODE, S5688B ダイオード	
D 11	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 12	WA1-0972-000		1	DIODE, S5688B ダイオード	
D 13	WA1-5140-000		1	DIODE, 1SS205 ダイオード	
D 14	WA1-5140-000		1	DIODE, 1SS205 ダイオード	
D 15	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 16	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 17	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 18	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 19	WA1-5140-000		1	DIODE, 1SS205 ダイオード	
D 20	WA1-0777-000		1	DIODE, AK04 ダイオード	
D 21	WA1-0972-000		1	DIODE, S5688B ダイオード	
D 22	WA1-0777-000		1	DIODE, AK04 ダイオード	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
90 -D 23	WA1-5140-000		1	DIODE, 1SS205 ダイオード	
D 24	WA1-0814-000		1	DIODE, 40VR, 0.1AF ダイオード	
D 26	WA1-5140-000		1	DIODE, 1SS205 ダイオード	
D 27	WA1-5140-000		1	DIODE, 1SS205 ダイオード	
DA 1	WA1-0023-000		1	DIODE ARRAY, DAN401 ダイオード アレイ	
DA 2	WA1-0024-000		1	DIODE ARRAY, DAP401 ダイオード アレイ	
J 1	VS1-0848-007		1	CONNECTOR, 7P コネクタ	
J 2	VS1-0093-006		1	CONNECTOR, 6P コネクタ	
J 3	VS1-5351-002		1	CONNECTOR, 2P コネクタ	
J 4	VS1-0571-002		1	CONNECTOR, 2P コネクタ	
J 5	VS1-0848-008		1	CONNECTOR, 8P コネクタ	
J 6	VS1-0848-006		1	CONNECTOR, 6P コネクタ	
J 7	VS1-0093-002		1	CONNECTOR コネクタ	
J 8	VS1-0571-006		1	PIN ASSEMBLY, 6P ピン アセンブリ	
J 9	VS1-5205-014		1	CONNECTOR, 14P コネクタ	
J 10	VS1-0715-006		1	CONNECTOR, 6P コネクタ	
J 11	VS1-5205-026		1	CONNECTOR, 26P コネクタ	
J 12	VS1-5205-020		1	CONNECTOR, 20P コネクタ	
J 13	VS1-0437-002		1	CONNECTOR, 2P コネクタ	
J 14	VS1-0848-005		1	CONNECTOR, 5P コネクタ	
J 15	VS1-0848-005		1	CONNECTOR, 5P コネクタ	
J 16	VS1-0848-007		1	CONNECTOR, 7P コネクタ	
J 17	VS3-0582-000		1	PIN ASSEMBLY, 2P ピン アセンブリ	
J 18	VS1-0848-003		1	CONNECTOR, 3P コネクタ	
J 19	VS1-0571-002		1	CONNECTOR, 2P コネクタ	
J 20	VS1-0715-005		1	PIN ASSEMBLY, 5P ピン アセンブリ	
L 1	FH3-0253-000		1	COIL コイル	
LED 1	WG1-0238-000		1	LED, QL-3PR8 LED	
LED 2	WG1-0238-000		1	LED, QL-3PR8 LED	
Q 1	WA3-5559-000		1	CPU, UPD78213GJ-5BJ CPU	
Q 2	WA3-4464-000		1	IC, 74HC573AF IC	
Q 3	FF2-4863-080		1	EP-ROM, M5L27C, 256K EP-ROM	
Q 4	WA3-4330-000		1	IC, M37409M2-FP IC	
Q 5	WA3-5558-000		1	IC, TMP82C55AM2 IC	
Q 6	WA4-0928-000		1	IC, MB3773FP IC	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T. Y	DESCRIPTION	SERIAL NUMBER/REMARKS
90 -Q 8	WA3-5604-000		1	IC, M6M80011P IC	
Q 9	WA3-5256-000		1	IC, TC74HC00AF IC	
Q 10	WA3-4465-000		1	IC, TC74HC14AF IC	
Q 11	WA3-5033-000		1	IC, TC74HC04AF IC	
Q 12	WA4-0937-000		1	IC, UPC393G IC	
Q 13	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 14	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 15	WA4-5222-000		1	IC, UPC494G IC	
Q 16	WA2-5249-000		1	IC, 2SJ133 IC	
Q 17	WA2-1292-000		1	TRANSISTOR, 2SC3735 トランジスタ	
Q 20	WA3-4127-000		1	IC, TC74HC08AF IC	
Q 21	WA3-5034-000		1	IC, TC74HC74AF IC	
Q 23	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 24	WA2-5182-000		1	TRANSISTOR, 2SB1150 15W トランジスタ	
Q 25	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 26	WA2-5182-000		1	TRANSISTOR, 2SB1150 15W トランジスタ	
Q 27	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 28	WA2-5182-000		1	TRANSISTOR, 2SB1150 15W トランジスタ	
Q 29	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 30	WA2-5182-000		1	TRANSISTOR, 2SB1150 15W トランジスタ	
Q 31	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 32	WA2-5182-000		1	TRANSISTOR, 2SB1150 15W トランジスタ	
Q 33	WA2-5182-000		1	TRANSISTOR, 2SB1150 15W トランジスタ	
Q 34	WA2-0808-000		1	TRANSISTOR, 2SD1658 トランジスタ	
Q 35	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 36	WA2-5190-000		1	TRANSISTOR, RN1427 トランジスタ	
Q 37	WA2-5181-000		1	TRANSISTOR, 2SK701 15W トランジスタ	
Q 38	WA2-5181-000		1	TRANSISTOR, 2SK701 15W トランジスタ	
Q 39	WA2-5181-000		1	TRANSISTOR, 2SK701 15W トランジスタ	
Q 40	WA2-5181-000		1	TRANSISTOR, 2SK701 15W トランジスタ	
Q 41	WA2-0808-000		1	TRANSISTOR, 2SD1658 トランジスタ	
Q 42	WA2-5181-000		1	TRANSISTOR, 2SK701 15W トランジスタ	
Q 43	WA2-1292-000		1	TRANSISTOR, 2SC3735 トランジスタ	
Q 44	WA2-5181-000		1	TRANSISTOR, 2SK701 15W トランジスタ	
Q 45	WA3-4127-000		1	IC, TC74HC08AF IC	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
90 -Q 46	WA2-0502-000		1	TRANSISTOR, UN2111 トランジスタ	
Q 47	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 48	WA2-1393-000		1	TRANSISTOR, 2SA1444K 30W トランジスタ	
Q 49	WA2-5190-000		1	TRANSISTOR, RN1427 トランジスタ	
Q 50	WA2-1266-000		1	TRANSISTOR, 2SK659, 35W トランジスタ	
Q 51	WA2-1393-000		1	TRANSISTOR, 2SA1444K 30W トランジスタ	
Q 52	WA2-5190-000		1	TRANSISTOR, RN1427 トランジスタ	
Q 53	WA2-1266-000		1	TRANSISTOR, 2SK659, 35W トランジスタ	
Q 54	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 55	WA4-1248-000		1	OP-AMP, UPC324G2 オペアンプ	
Q 56	WA2-5247-000		1	TRANSISTOR, 2SC2120 トランジスタ	
Q 57	WA2-5248-000		1	TRANSISTOR, 2SB1116K トランジスタ	
Q 58	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 59	WA2-5248-000		1	TRANSISTOR, 2SB1116K トランジスタ	
Q 60	WA2-1292-000		1	TRANSISTOR, 2SC3735 トランジスタ	
Q 64	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 65	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 66	WA2-1292-000		1	TRANSISTOR, 2SC3735 トランジスタ	
Q 67	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 68	WA2-0505-000		1	TRANSISTOR, UN2211 トランジスタ	
Q 69	WA2-0502-000		1	TRANSISTOR, UN2111 トランジスタ	
Q 70	WA2-0502-000		1	TRANSISTOR, UN2111 トランジスタ	
Q 71	WA2-0502-000		1	TRANSISTOR, UN2111 トランジスタ	
R 1	VR7-0983-831		1	RESISTOR, 3.83KOHM, 1/10W タイコウ	
R 2	VR7-0983-831		1	RESISTOR, 3.83KOHM, 1/10W タイコウ	
R 3	VR7-0982-001		1	RESISTOR, 2KOHM, 1/10W タイコウ	
R 4	VR7-0982-001		1	RESISTOR, 2KOHM, 1/10W タイコウ	
R 5	VV1-7118-513		1	RESISTOR, 51KOHM, 1/10W タイコウ	
R 6	VV1-7118-822		1	RESISTOR, 8.2KOHM, 1/10W タイコウ	
R 7	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 8	VV1-7118-472		1	RESISTOR, 4.7KOHM, 1/10W タイコウ	
R 9	VR1-1121-821		1	RESISTOR, 820 OHM, 1/2W タイコウ	
R 10	VR9-5049-000		1	RESISTOR, 0.47 OHM, 1/2W タイコウ	
R 11	VV1-7118-104		1	RESISTOR, 100KOHM, 1/10W タイコウ	
R 12	VV1-7118-222		1	RESISTOR, 2.2KOHM, 1/10W タイコウ	


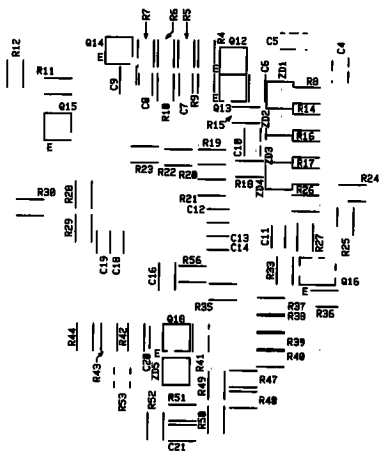
FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
90 -R 13	VV1-7118-220		1	RESISTOR, 22 OHM, 1/10W テイク	
R 14	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 15	VV1-6148-331		1	RESISTOR, 330 OHM, 1/4W テイク	
R 16	VV1-7118-100		1	RESISTOR, 10 OHM, 1/10W テイク	
R 17	VV1-7118-220		1	RESISTOR, 22 OHM, 1/10W テイク	
R 18	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 19	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 20	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 21	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 22	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 23	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 24	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 25	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 26	VR5-0810-360		1	RESISTOR, 36 OHM, 1W テイク	
R 27	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 28	VR5-4590-479		1	FUSE ヒューズ	
R 29	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 30	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 31	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 32	VV1-7118-472		1	RESISTOR, 4.7KOHM, 1/10W テイク	
R 33	VV1-7118-473		1	RESISTOR, 47KOHM, 1/10W テイク	
R 34	VV1-7118-682		1	RESISTOR, 6.8KOHM, 1/10W テイク	
R 35	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 36	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 37	VV1-7118-102		1	RESISTOR, 1KOHM, 1/10W テイク	
R 40	VV1-7118-105		1	RESISTOR, 1MOHM, 1/10W テイク	
R 41	VV1-7118-222		1	RESISTOR, 2.2KOHM, 1/10W テイク	
R 42	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W テイク	
R 43	VV1-7118-331		1	RESISTOR, 330 OHM, 1/10W テイク	
R 44	VV1-7118-474		1	RESISTOR, 470KOHM, 1/10W テイク	
R 45	VR5-6640-471		1	RESISTOR, 470 OHM, 2W テイク	
R 46	VV1-7118-100		1	RESISTOR, 10 OHM, 1/10W テイク	
R 47	VV1-7118-102		1	RESISTOR, 1KOHM, 1/10W テイク	
R 48	VV1-7118-331		1	RESISTOR, 330 OHM, 1/10W テイク	
R 49	VV1-7118-561		1	RESISTOR, 560 OHM, 1/10W テイク	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
90 -R 50	VV1-7118-331		1	RESISTOR, 330 OHM, 1/10W タイコウ	
R 51	VV1-7118-562		1	RESISTOR, 5.6KOHM, 1/10W タイコウ	
R 52	VR5-6640-471		1	RESISTOR, 470 OHM, 2W タイコウ	
R 53	VV1-7118-102		1	RESISTOR, 1KOHM, 1/10W タイコウ	
R 54	VR9-5009-000		1	RESISTOR, 0.22 OHM, 1W タイコウ	
R 55	VV1-7118-331		1	RESISTOR, 330 OHM, 1/10W タイコウ	
R 56	VR9-5009-000		1	RESISTOR, 0.22 OHM, 1W タイコウ	
R 57	VV1-7118-332		1	RESISTOR, 3.3KOHM, 1/10W タイコウ	
R 58	VV1-7118-222		1	RESISTOR, 2.2KOHM, 1/10W タイコウ	
R 59	VV1-7118-472		1	RESISTOR, 4.7KOHM, 1/10W タイコウ	
R 60	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 61	VR7-0981-002		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 62	VR7-0981-272		1	RESISTOR, 2.7KOHM, 1/10W タイコウ	
R 63	VV1-7118-104		1	RESISTOR, 100KOHM, 1/10W タイコウ	
R 64	VV1-7118-153		1	RESISTOR, 15KOHM, 1/10W タイコウ	
R 65	VV1-7118-752		1	RESISTOR, 7.5KOHM, 1/10W タイコウ	
R 66	VV1-7118-752		1	RESISTOR, 7.5KOHM, 1/10W タイコウ	
R 67	VV1-7118-752		1	RESISTOR, 7.5KOHM, 1/10W タイコウ	
R 68	VR5-0780-339		1	RESISTOR, 3.3KOHM, 1W タイコウ	
R 69	VV1-7118-331		1	RESISTOR, 330 OHM, 1/10W タイコウ	
R 70	VV1-7118-101		1	RESISTOR, 100 OHM, 1/10W タイコウ	
R 71	VV1-7118-101		1	RESISTOR, 100 OHM, 1/10W タイコウ	
R 72	VV1-7118-122		1	RESISTOR, 1.2KOHM, 1/10W タイコウ	
R 73	VV1-7118-222		1	RESISTOR, 2.2KOHM, 1/10W タイコウ	
R 74	VV1-7118-122		1	RESISTOR, 1.2KOHM, 1/10W タイコウ	
R 75	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 76	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 77	VV1-7118-472		1	RESISTOR, 4.7KOHM, 1/10W タイコウ	
R 78	VV1-7118-102		1	RESISTOR, 1KOHM, 1/10W タイコウ	
R 79	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 80	VV1-7118-222		1	RESISTOR, 2.2KOHM, 1/10W タイコウ	
R 81	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 82	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 83	VV1-7118-472		1	RESISTOR, 4.7KOHM, 1/10W タイコウ	
R 84	VV1-7118-331		1	RESISTOR, 330 OHM, 1/10W タイコウ	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
90 -R 85	VV1-7118-472		1	RESISTOR, 4.7KOHM, 1/10W タイコウ	
R 86	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 87	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 88	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 89	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 90	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 91	VV1-7118-272		1	RESISTOR, 2.7KOHM, 1/10W タイコウ	
R 92	VV1-7118-272		1	RESISTOR, 2.7KOHM, 1/10W タイコウ	
R 93	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 94	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 95	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R 99	VV1-7118-331		1	RESISTOR, 330 OHM, 1/10W タイコウ	
R100	VV1-7118-331		1	RESISTOR, 330 OHM, 1/10W タイコウ	
R101	VV1-7118-331		1	RESISTOR, 330 OHM, 1/10W タイコウ	
R102	VV1-7118-181		1	RESISTOR, 180 OHM, 1/10W タイコウ	
R103	VV1-7118-181		1	RESISTOR, 180 OHM, 1/10W タイコウ	
R104	VV1-7118-181		1	RESISTOR, 180 OHM, 1/10W タイコウ	
R105	VV1-7118-221		1	RESISTOR, 220 OHM, 1/10W タイコウ	
R106	VV1-7118-221		1	RESISTOR, 220 OHM, 1/10W タイコウ	
R107	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R108	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R109	VV1-7118-151		1	RESISTOR, 150 OHM, 1/10W タイコウ	
R110	VV1-7118-102		1	RESISTOR, 1KOHM, 1/10W タイコウ	
R111	VV1-7118-102		1	RESISTOR, 1KOHM, 1/10W タイコウ	
R112	VV1-7118-102		1	RESISTOR, 1KOHM, 1/10W タイコウ	
R113	VV1-7118-472		1	RESISTOR, 4.7KOHM, 1/10W タイコウ	
R114	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R115	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R116	VV1-7118-105		1	RESISTOR, 1MOHM, 1/10W タイコウ	
R117	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R118	VV1-7118-224		1	RESISTOR, 220KOHM, 1/10W タイコウ	
R119	VV1-7118-103		1	RESISTOR, 10KOHM, 1/10W タイコウ	
R120	VV1-7118-472		1	RESISTOR, 4.7KOHM, 1/10W タイコウ	
RA 1	VR4-1084-103		1	RESISTOR, ARRAY タイコウ アレイ	
RA 2	VR9-5060-000		1	RESISTOR, ARRAY, RKC12T472 タイコウ アレイ	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
90 -RA 3	VR9-5061-000		1	RESISTOR, ARRAY, RKC8T472 タイコウ アレイ	
RA 4	VR9-5061-000		1	RESISTOR, ARRAY, RKC8T472 タイコウ アレイ	
SW 1	WC8-0234-000		1	SWITCH, TACT タクト スイッチ	
SW 2	WC8-0162-000		1	SWITCH, DIGITAL スイッチ	
TP 1	VS3-0034-008		1	CONNECTOR, 8P コネクタ	
VR 1	VR5-0700-103		1	VARIABLE RESISTOR, 10KOHM タイコウ	
VR 2	VR5-0700-502		1	VARIABLE RESISTOR, 5KOHM タイコウ	
VR 3	VR5-0700-502		1	VARIABLE RESISTOR, 5KOHM タイコウ	
VR 4	VR5-0700-502		1	VARIABLE RESISTOR, 5KOHM タイコウ	
VR 5	VR5-0700-502		1	VARIABLE RESISTOR, 5KOHM タイコウ	
VR 7	VR5-0700-201		1	VARIABLE RESISTOR, 200 OHM タイコウ	
X 1	WK2-5077-000		1	QUARTZ, CERAMIC セラミック シンド ウシ	
X 2	WK2-0150-000		1	QUARTZ, CERAMIC セラミック シンド ウシ	
ZD 1	WA1-0822-000		1	DIODE, ZENER, HZS12A2 ツェナー ダイオード	
ZD 2	WA1-0822-000		1	DIODE, ZENER, HZS12A2 ツェナー ダイオード	

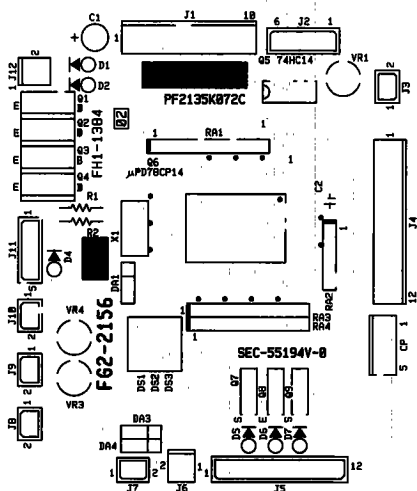FIGURE 95 SUB FEEDER CONTROLLER PCB ASSEMBLY
 サブフィーダコントローラ回路基板



NOTE: For this unit, only major parts are given parts Nos.

注: このユニットは、主要部品のみパーツ設定しています。

FIGURE B LIST OF CONNECTORS (1/2)
 コネクター一覧表 (1/2)

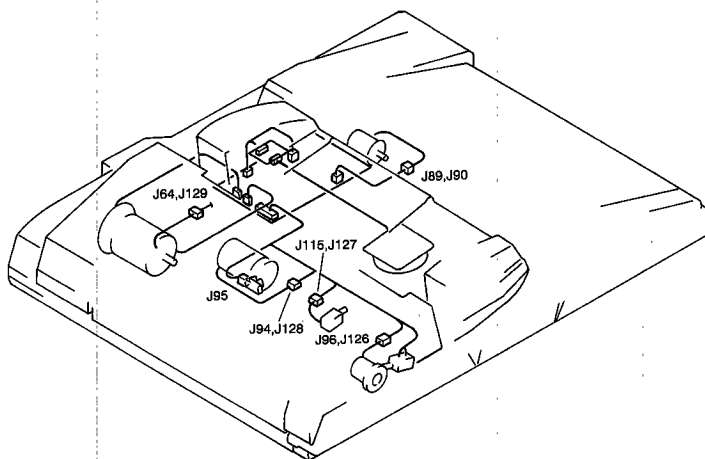
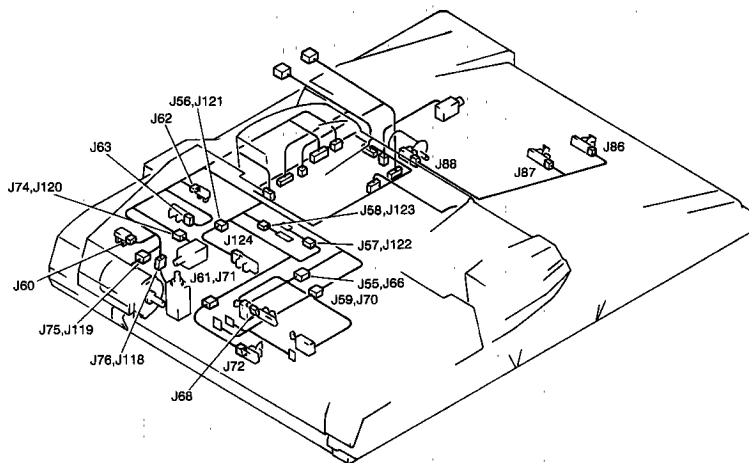


FIGURE B LIST OF CONNECTORS (2/2)
コネクタ一覧表 (2/2)

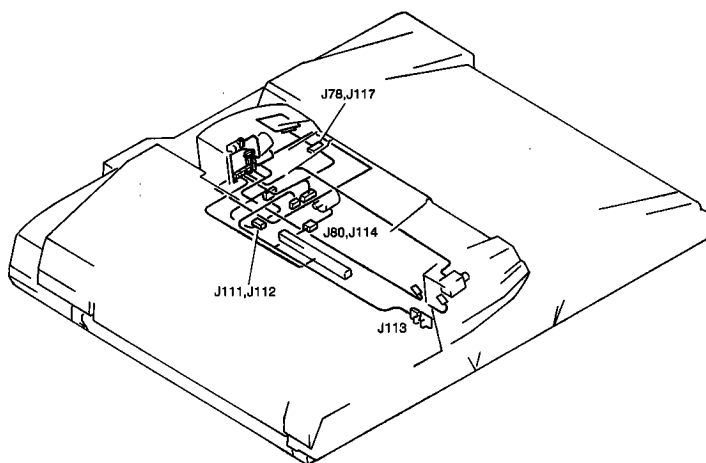


FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
B -	NPN		RF	LIST OF CONNECTORS コネクタ イチラン	
J 50	VS3-0143-007		1	CONNECTOR, 7P コネクタ	
	WS3-1105-000		7	CONTACT コンタクト	
J 51	VS3-5002-006		1	CONNECTOR, 6P コネクタ	
	WS3-0962-000		6	SOCKET, CONTACT, 18-24AWG ソケット コンタクト	
J 52	FH2-5821-000		1	CONNECTOR, 12P コネクタ	
	FH2-5822-000		9	SOCKET CONTACT, 22-26AWG ソケット コンタクト	
	FH2-5823-000		1	GROMMET ケーブル クランプ	
	FH2-5826-000		3	SOCKET CONTACT, 16-20AWG ソケット コンタクト	
J 53	VS3-5002-002		1	CONNECTOR, 2P コネクタ	
	WS3-0962-000		2	SOCKET, CONTACT, 18-24AWG ソケット コンタクト	
J 54	VS3-0297-026		1	CONNECTOR, 28P コネクタ	
	WS3-1288-000		24	CONTACT コンタクト	
J 55	VS4-0003-008		1	CONNECTOR, 8P, FEMALE コネクタ (メス)	
	WS3-0885-000		7	PIN CONTACT, 20-30AWG ピン コンタクト	
J 56	VS4-0003-003		1	CONNECTOR, 3P, FEMALE コネクタ (メス)	
	WS3-0885-000		3	PIN CONTACT, 20-30AWG ピン コンタクト	
J 57	VS4-0004-002		1	CONNECTOR, 2P, FEMALE, BK コネクタ (メス)	
	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コンタクト	
J 58	VS4-0003-002		1	CONNECTOR, 2P, FEMALE コネクタ (メス)	
	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コンタクト	
J 59	VS4-0003-010		1	CONNECTOR, 10P, FEMALE コネクタ (メス)	
	WS3-0885-000		10	PIN CONTACT, 20-30AWG ピン コンタクト	
J 60	VS3-0178-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
J 61	VS4-0003-003		1	CONNECTOR, 3P, FEMALE コネクタ (メス)	
	WS3-0885-000		3	PIN CONTACT, 20-30AWG ピン コンタクト	
J 62	VS3-0178-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
J 63	VS3-0178-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
J 64	VS3-0214-002		1	CONNECTOR, 2P, FEMALE, BK コネクタ (メス)	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 66	VS1-0279-008		1	CONNECTOR, 8P コネクタ	
	WS3-1153-000		7	PIN CONTACT, 22-26AWG ピン コンタクト	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
B -J 68	VS3-0178-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
J 70	VS1-0279-010		1	CONNECTOR, 10P コネクタ	
	WS3-1153-000		10	PIN CONTACT, 22-26AWG ピン コンタクト	
J 71	VS1-0279-003		1	CONNECTOR, 3P コネクタ	
J 72	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
	VS3-0178-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
	VS1-0279-002		1	CONNECTOR, 2P コネクタ	
J 75	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 76	VS3-0175-002		1	CONNECTOR, 2P コネクタ	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 77	VS3-0297-020		1	CONNECTOR, 20P コネクタ	
	WS3-1288-000		20	CONTACT コンタクト	
J 78	VS4-0003-006		1	CONNECTOR, 6P, MALE コネクタ (オス)	
J 79	WS3-0885-000		6	PIN CONTACT, 20-30AWG ピン コンタクト	
	VS4-0003-012		1	CONNECTOR, 12P, FEMALE コネクタ (メス)	
	WS3-0885-000		12	PIN CONTACT, 20-30AWG ピン コンタクト	
	VS1-0279-002		1	CONNECTOR, 2P コネクタ	
J 80	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 84	VS1-0279-002		1	CONNECTOR, 2P コネクタ	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 85	VS1-0279-014		1	CONNECTOR, 14P コネクタ	
	WS3-1288-000		11	CONTACT コンタクト	
J 86	VS1-0279-003		1	CONNECTOR, 3P コネクタ	
J 87	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
	VS1-0279-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
	VS3-0178-003		1	CONNECTOR, 3P コネクタ	
J 88	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
J 89	VS1-0279-002		1	CONNECTOR, 2P コネクタ	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 90	VS4-0003-002		1	CONNECTOR, 2P, FEMALE コネクタ (メス)	
	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コンタクト	
J 91	VS1-0279-002		1	CONNECTOR, 2P コネクタ	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
B - J 91	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 92	VS3-0178-002		1	CONNECTOR, 2P コネクタ	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 93	VS3-5002-002		1	CONNECTOR, 2P コネクタ	
	WS3-0962-000		2	SOCKET, CONTACT, 18-24AWG ソケット コンタクト	
J 94	VS1-0279-002		1	CONNECTOR, 2P コネクタ	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 95	VS3-0178-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コンタクト	
J 96	VS1-0279-002		1	CONNECTOR, 2P コネクタ	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コンタクト	
J 98	VS1-0279-005		1	CONNECTOR, 5P コネクタ	
	WS3-1153-000		5	PIN CONTACT, 22-26AWG ピン コンタクト	
J 99	VS1-0279-006		1	CONNECTOR, 6P コネクタ	
	WS3-1153-000		6	PIN CONTACT, 22-26AWG ピン コンタクト	
J100	VS3-0143-012		1	CONNECTOR, 12P コネクタ	
	WS3-1105-000		12	CONTACT コンタクト	
J108	VS1-0279-012		1	CONNECTOR, 12P コネクタ	
	WS3-1153-000		12	PIN CONTACT, 22-26AWG ピン コンタクト	
J110	VS3-0143-005		1	CONNECTOR, 5P コネクタ	
	WS3-1105-000		5	CONTACT コンタクト	
J113	VS3-0101-003		1	CONNECTOR, 3P コネクタ	
	WS3-1239-000		3	CONTACT コンタクト	
J114	VS4-0003-002		1	CONNECTOR, 2P, FEMALE コネクタ (メス)	
	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コンタクト	
J115	VS3-0200-002		1	CONNECTOR, 2P コネクタ	
	WS3-0907-000		2	CONTACT コンタクト	
J117	VS1-0279-006		1	CONNECTOR, 6P コネクタ	
	WS3-1153-000		6	PIN CONTACT, 22-26AWG ピン コンタクト	
J118	VS4-0003-002		1	CONNECTOR, 2P, FEMALE コネクタ (メス)	
	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コンタクト	
J119	VS4-0003-002		1	CONNECTOR, 2P, FEMALE コネクタ (メス)	
	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コンタクト	
J120	VS4-0003-002		1	CONNECTOR, 2P, FEMALE コネクタ (メス)	
	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コンタクト	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
B -J121	VS1-0279-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コタクト	
J122	VS1-0279-002		1	CONNECTOR, 2P コネクタ	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コタクト	
J123	VS1-0279-002		1	CONNECTOR, 2P コネクタ	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コタクト	
J124	VS1-0178-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コタクト	
J126	VS4-0003-002		1	CONNECTOR, 2P, FEMALE コネクタ (メス)	
	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コタクト	
J127	VS3-0236-002		1	CONNECTOR, 2P コネクタ	
	WS3-1115-000		2	CONTACT コタクト	
J128	VS4-0003-002		1	CONNECTOR, 2P, FEMALE コネクタ (メス)	
	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コタクト	
J129	VS4-0003-002		1	CONNECTOR, 2P, FEMALE コネクタ (メス)	
J130	WS3-0885-000		2	PIN CONTACT, 20-30AWG ピン コタクト	
	VS1-0279-002		1	CONNECTOR, 2P コネクタ	
	WS3-1153-000		2	PIN CONTACT, 22-26AWG ピン コタクト	
J131	VS3-0143-008		1	CONNECTOR, 8P コネクタ	
	WS3-1105-000		8	CONTACT コタクト	
J132	VS1-0279-010		1	CONNECTOR, 10P コネクタ	
	WS3-1153-000		10	PIN CONTACT, 22-26AWG ピン コタクト	
J133	VS3-0143-003		1	CONNECTOR, 3P コネクタ	
	WS3-1105-000		3	CONTACT コタクト	
J134	VS3-0143-005		1	CONNECTOR, 5P コネクタ	
J135	WS3-1105-000		5	CONTACT コタクト	
	VS3-0198-008		1	HOUSING, CONNECTOR コネクタ ハウジング	
	WT1-0345-000		8	CONTACT コタクト	
J136	VS3-0061-002		1	CONNECTOR, 2P コネクタ	
	WS3-0935-000		2	PIN CONTACT ピン コタクト	
J137	VS3-0061-002		1	CONNECTOR, 2P コネクタ	
	WS3-0935-000		2	PIN CONTACT ピン コタクト	
J138	VS3-0178-003		1	CONNECTOR, 3P コネクタ	
	WS3-1153-000		3	PIN CONTACT, 22-26AWG ピン コタクト	
J139	VS3-0178-002		1	CONNECTOR, 2P コネクタ	

FIGURE BA LIST OF CONNECTORS コネクタ一覧表

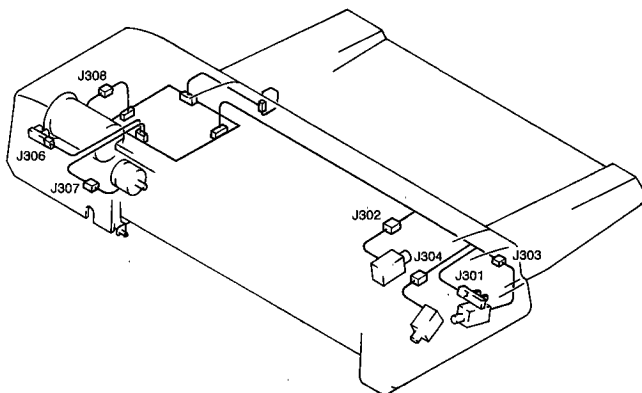


FIGURE & KEY NO.	PART NUMBER	R A N K	O T Y	DESCRIPTION	SERIAL NUMBER/REMARKS
BA-	NPN		RF	LIST OF CONNECTORS コネクタ イチラン	
J301	NPN			PHOTO INTERRUPTER フォトインタラプ タ	S51
	VS3-0103-003	1		CONNECTOR, 3P コネクタ	
	WS3-0998-000	3		SOCKET CONTACT ソケット コンタクト	
J302	NPN			SOLENOID ソレノイド	SL51
J303	NPN			SOLENOID ソレノイド	SL52
	VS1-0279-002	1		CONNECTOR, 2P コネクタ	
	WS4-0181-000	2		SOCKET, CONTACT ソケット コンタクト	
J304	NPN			SOLENOID ソレノイド	SL53
J306	NPN			PHOTO INTERRUPTER フォトインタラプ タ	S52
J307	VS3-0178-003	1		CONNECTOR, 3P コネクタ	
	WS3-1264-000	3		PIN CONTACT ピン コンタクト	
	NPN			CLUTCH, ELECTROMAGNETIC デ ンジ クラッチ	CL51
	VS1-0279-002	1		CONNECTOR, 2P コネクタ	
	WS3-1153-000	2		PIN CONTACT, 22-26AWG ピン コンタクト	
J308	NPN			MOTOR モータ	M51
	VS1-0279-002	1		CONNECTOR, 2P コネクタ	
	WS3-1153-000	2		PIN CONTACT, 22-26AWG ピン コンタクト	
J311	- -			TO RF-A1 RF-A1	
	VS1-0279-002	1		CONNECTOR, 2P コネクタ	
J312	WS3-1153-000	2		PIN CONTACT, 22-26AWG ピン コンタクト	
	- -			TO RF-A1 RF-A1	
	VS3-0143-008	1		CONNECTOR, 8P コネクタ	
	WS3-1105-000	8		CONTACT コンタクト	
J313	PCB			SUB FEEDER CONTROLLER サブ フィーダ コントローラ カイロキパン	
J314	PCB			SUB FEEDER CONTROLLER サブ フィーダ コントローラ カイロキパン	
J315	PCB			SUB FEEDER CONTROLLER サブ フィーダ コントローラ カイロキパン	
	VS1-0279-002	1		CONNECTOR, 2P コネクタ	
	WS3-1153-000	2		PIN CONTACT, 22-26AWG ピン コンタクト	
J316	PCB			SUB FEEDER CONTROLLER サブ フィーダ コントローラ カイロキパン	

C LIST OF STANDARD FASTENERS

機械標準部品一覧表

I. SCREWS	C-2	I. ネジ	C-2
A. Machine screws		A. 精密機器用小ネジ	C-3
(for precision use)	C-3	B. ナベ小ネジ	C-3
B. Pan head machine screws	C-3	E. バインド小ネジ	C-4
E. Binding head machine screws	C-4	F. サラ小ネジ	C-4
F. Flat head machine screws	C-4	G. タッピンネジ	C-5
G. Self-tapping screws	C-5	H. パネ座金付き十字ナベ小ネジ	C-5
H. Pan head machine screws with		K. TP小ネジ	C-6
captive spring washer	C-5	L. 六角穴付き止めネジおよび	
K. Washer head machine screws	C-6	六角穴付きボルト	C-6
L. Hex socket setscrews and socket head		II. ナット	C-7
cap screws	C-6	M. 六角ナット	C-7
II. NUTS	C-7	III. ワッシャ	C-8
M. Hexagon nuts	C-7	N. S & T. 標準ワッシャ	C-8
III. WASHERS AND SHIM WASHERS	C-8	U. 平座金, パネ座金および	
N, S & T. Shim washers	C-8	歯付き座金	C-10
U. Plain washers, spring washers &		IV. 止め輪	C-11
toothed lock washers	C-10	V. E形止め輪	C-11
IV. RETAINING RINGS	C-11	W. グリップ止め輪	C-11
V. E rings	C-11	X. C形止め輪	C-12
W. Grip rings	C-11	V. ビン	C-13
X. C rings	C-12	Y. スプリングビンおよび	
V. PINS	C-13	平行ビン	C-13
Y. Spring and dowel pins	C-13	VI. スペーサ	C-14
VI. SPACERS	C-14	Z. スペーサ	C-14
Z. Spacers	C-14		

I. SCREWS

ネジ

How to read Part Numbers

部品番号の見方

Screws (except socket head cap screws)

ネジ（六角穴付ボルトを除く）

X B 1 - 2 4 0 0 - 6 0 9

Classification symbol Binding head machine screw
 類別番号 バインドネジ
 Nominal diameter (d) M4.0
 呼び径(d)
 Length (e) 6.0 mm
 長さ(ℓ)
 Material and surface Steel (black zinc plated)
 treatment see table 1.
 材料および表面処理 鋼材（黒色亜鉛メッキ）
 表 1 参照

Socket head cap screws

六角穴付きボルト

X B 7 - 1 0 8 0 - 4 0 9

Classification symbol Socket head cap screw
 類別番号 六角穴付きボルト
 Nominal diameter (d) M8
 呼び径(d)
 Length (e) 40 mm
 長さ(ℓ)
 Material and surface Steel (black zinc plated)
 treatment See table 1
 材料および表面処理 鋼材（黒色亜鉛メッキ）
 表 1 参照

Material and surface treatment

No.	Material	Surface treatment	Color
1	Stainless	Blackened	Black
2		Without surface treatment	White
3	Brass	Nickel plated	White
4		Black nickel plated	Black
5	Steel	Zinc plated	Yellow
6		Nickel and chrome plated	White
7		Nickel plated	White
8		Phosphated	Black
9		Black zinc plated	Black

Table 1

材料および表面処理

番号	材質	表面処理	色
1	ステンレス	黒着	黒
2		なし	白
3	黄銅	ニッケルメッキ	白
4		黒色ニッケルメッキ	黒
5	鋼	亜鉛メッキ	黄
6		ニッケルクロムメッキ	白
7		ニッケルメッキ	白
8		鉄鋼磷酸塩被膜	黒
9		黒色亜鉛メッキ	黒


表 1

A. MACHINE SCREWS (FOR PRECISION USE)

精密機器用小ネジ

Pan head machine screws

 
ナベ小ネジ



Key No.	Part Number
A22	XA1-1200-307
A26	XA1-1200-409
A28	XA1-1200-509
A30	XA1-1200-607
A33	XA1-1200-809
A45	XA1-1260-309
A47	XA1-1261-609

Flat head machine screws

 
サラ小ネジ



Key No.	Part Number
A82	XA1-3200-407
A85	XA1-3300-609

B. PAN HEAD MACHINE SCREWS

 
ナベ小ネジ



Key No.	Part Number	Key No.	Part Number
*B23	XB1-1300-505	B51	XB1-1400-602
B25	XB1-1300-509	B53	XB1-1400-604
B27	XB1-1300-606	B54	XB1-1400-609
B29	XB1-1300-609	B56	XB1-1400-807
B32	XB1-1300-807	B57	XB1-1400-809
B33	XB1-1300-809	B58	XB1-1401-009
B34	XB1-1301-007	B60	XB1-1401-207
B36	XB1-1301-009	B61	XB1-1401-609
B39	XB1-1301-209	B63	XB1-1402-503
B40	XB1-1301-603	B64	XB1-1403-009
B42	XB1-1301-609		
B43	XB1-1302-009	B82	XB1-1501-209
B44	XB1-1302-507		
*B45	XB1-1302-007		

E. BINDING HEAD MACHINE SCREWS

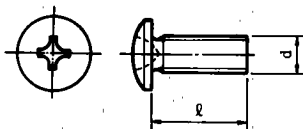
バインド小ネジ



Key No.	Part Number	Key No.	Part Number	Key No.	Part Number
E01	XB1-2200-403	E38	XB1-2302-003	E76	XB1-2401-609
E02	XB1-2200-809	E41	XB1-2302-009	E78	XB1-2402-006
E03	XB1-2200-407	E42	XB1-2302-503	E79	XB1-2402-009
E04	XB1-2200-409	E43	XB1-2302-507	*E80	XB1-2402-506
E05	XB1-2201-009	E44	XB1-2302-509	E81	XB1-2402-509
E06	XB1-2300-403	E45	XB1-2303-003	E82	XB1-2403-509
E07	XB1-2300-404	E46	XB1-2303-009	E83	XB1-2403-009
E08	XB1-2300-406	E47	XB1-2303-509	E84	XB1-2403-505
E09	XB1-2300-407	E48	XB1-2304-507	E85	XB1-2404-009
E10	XB1-2300-409	E49	XB1-2400-406	E86	XB1-2404-507
E11	XB1-2300-502	E50	XB1-2400-409	E88	XB1-2500-603
E12	XB1-2300-503	E51	XB1-2400-506	E90	XB1-2500-609
E13	XB1-2300-504	E52	XB1-2400-509	E91	XB1-2500-809
E14	XB1-2300-506	E53	XB1-2400-602	E93	XB1-2501-009
E15	XB1-2300-509	E54	XB1-2400-603	E94	XB1-2501-609
E16	XB1-2300-601	E55	XB1-2400-604	E95	XB1-2502-009
E17	XB1-2300-604	E56	XB1-2400-606	E96	XB1-2502-509
E18	XB1-2300-603	E57	XB1-2400-607	E98	XB1-2504-009
E19	XB1-2300-606	E58	XB1-2400-609	E99	XB1-2505-009
E20	XB1-2300-607	E59	XB1-2400-605		
E21	XB1-2300-609	E60	XB1-2400-804		
E22	XB1-2300-801	E61	XB1-2400-806		
E23	XB1-2300-804	E62	XB1-2400-809		
E24	XB1-2300-307	E63	XB1-2401-002		
E25	XB1-2300-807	E64	XB1-2401-004		
E26	XB1-2300-809	E65	XB1-2401-006		
E28	XB1-2301-007	E66	XB1-2401-007		
E29	XB1-2301-009	E67	XB1-2401-009		
E30	XB1-2301-202	E68	XB1-2401-203		
E31	XB1-2301-204	E69	XB1-2401-204		
E32	XB1-2301-209	E70	XB1-2401-206		
E33	XB1-2301-603	E71	XB1-2401-207		
E34	XB1-2301-604	E72	XB1-2401-209		
E35	XB1-2301-409	E73	XB1-2401-602		
E36	XB1-2301-407	E74	XB1-2401-604		
E37	XB1-2301-609	E75	XB1-2401-606		

F. FLAT HEAD MACHINE SCREWS

 サラ小ネジ




Key No.	Part Number	Key No.	Part Number
F16	XB1-3200-609	F62	XB1-3400-609
F20	XB1-3300-409	F64	XB1-3400-804
F21	XB1-3300-502	F65	XB1-3400-806
F22	XB1-3300-509	F66	XB1-3400-809
F23	XB1-3300-601	F67	XB1-3401-006
F24	XB1-3300-604	F68	XB1-3401-009
F25	XB1-3300-606	F69	XB1-3401-206
F26	XB1-3300-609	F70	XB1-3402-005
F27	XB1-3300-802	F71	XB1-3402-509
F28	XB1-3300-806		
F29	XB1-3300-807		
F30	XB1-3300-809		
F31	XB1-3301-002		
F32	XB1-3301-006		
F33	XB1-3301-009		
F34	XB1-3301-202		
F35	XB1-3301-209		
F39	XB1-3302-505		

G. SELF-TAPPING SCREWS

タッピンネジ

Pan head self-tapping screws

 
ナベタッピンネジ



Key No.	Part Number	Key No.	Part Number
G11	XB3-1300-509	G21	XB3-1400-809
G12	XB3-1300-609	G22	XB4-6200-507
G13	XB3-1300-809	*G23	XB4-7400-607
G14	XB3-1301-009	G24	XB4-7400-609
G15	XB4-7300-806	G25	XB4-7400-809
G16	XB4-7300-609	G26	XB4-7400-209
G17	XB4-7300-809	G27	XB4-7401-607
G18	XB4-7301-009	G28	XB4-7505-507
G19	XB4-7301-209	G29	XB4-7401-207
G20	XB4-7300-509	G30	XB4-7401-009

Binding head self-tapping screws

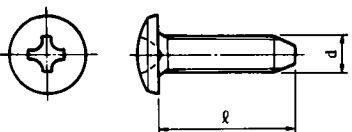
バインドタッピンネジ



Key No.	Part Number	Key No.	Part Number
G31	XB3-2260-509	G61	XB5-2300-609
G40	XB3-2300-806	G65	XB5-2400-609
G41	XB3-2300-609	G67	XB5-2400-809
G42	XB3-2300-809	G69	XB5-2401-009
G43	XB3-2301-009		
G44	XB3-2302-009		
G51	XB3-2400-609		
G52	XB3-2400-809		
G53	XB3-2401-009		
G54	XB3-2401-209		
G55	XB3-2402-009		

Flat head self-tapping screws

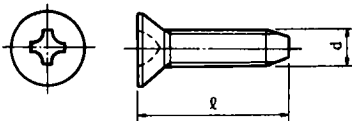
サラタッピンネジ



Key No.	Part Number
G71	XB3-3300-609
G72	XB3-3300-809
G81	XB3-3400-809
G82	XB3-3401-209
G97	XB4-8260-807
G98	XB4-8300-806

H. PAN HEAD MACHINE SCREWS WITH CAPTIVE SPRING WASHER

 
バネ座金付き十字ナベ小ネジ



Key No.	Part Number
H40	XB6-6400-609
H41	XB6-6300-609
H42	XB6-6300-505
H43	XB6-6300-605
H44	XB6-6300-805
H45	XB6-6301-005
H46	XB6-6301-205
H47	XB6-6301-605
H48	XB6-6302-005
H61	XB6-6400-605
H62	XB6-6400-805
H63	XB6-6401-005
H64	XB6-6401-205
H65	XB6-6401-605
H66	XB6-6402-005
H81	XB6-6500-805
H82	XB6-6501-005
H83	XB6-6501-205
H85	XB6-6502-005

K. WASHER HEAD MACHINE SCREWS

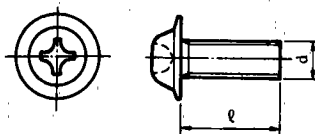TP 小ネジ



Key No.	Part Number	Key No.	Part Number
K01	XB6-7200-809	K49	UN USE
K02	XB6-7201-009	K61	XB6-7400-409
K10	XB5-6400-609	K62	XB6-7400-509
		K63	XB6-7400-609
K20	XB6-7260-409	K64	XB6-7400-809
K21	XB6-7260-509	K65	XB6-7401-009
		K66	XB6-7401-209
K40	XB6-7300-305	K67	XB6-7401-609
K41	XB6-7300-409	K68	XB6-7402-009
K42	XB6-7300-509	K69	XB6-7402-509
K43	XB6-7300-609		
K44	XB6-7300-809	K81	XB6-7500-609
K45	XB6-7301-009	K82	XB6-7500-809
K46	XB6-7301-209	K83	XB6-7501-009
K47	XB6-7301-609	K84	XB6-7501-609
K48	XB6-7302-009	K85	XB6-7502-009

 
L. HEX SOCKET SETSCREWS

AND SOCKET HEAD CAP SCREWS

六角穴付き止めネジおよび六角穴付きボルト

Hex socket setscrews


六角穴付き止めネジ



Key No.	Part Number	Key No.	Part Number
L01	XB6-1400-608	L12	XB6-2401-208
L02	XB6-2300-408	L14	XB6-2500-508
L03	XB6-2300-508	L16	XB6-2500-808
L04	XB6-2300-608	L17	XB6-2300-808
L05	XB6-2300-409		
L06	XB6-1400-408	L23	XB6-2601-008
L07	XB6-2400-408		
L08	XB6-2400-508		
L09	XB6-2400-608		
L10	XB6-2400-808		
L11	XB6-2401-008		
L13	XB6-2400-809		

Socket head cap screws

 六角穴付きボルト




Key No.	Part Number	Key No.	Part Number
L52	XB7-1030-069	L74	XB7-1050-169
L53	XB7-1030-089	L75	XB7-1050-209
L54	XB7-1030-109	L77	XB7-1050-309
L55	XB7-1030-129	L78	XB7-1050-809
L56	XB7-1030-169		
L58	XB7-1030-259	L81	XB7-1060-109
		L82	XB7-1060-129
L62	XB7-1040-069	L83	XB7-1060-169
L63	XB7-1040-089	L86	XB7-1060-309
L64	XB7-1040-109		
L65	XB7-1040-129	*L90	XB7-1080-209
L66	XB7-1040-169	L91	XB7-1080-129
L67	XB7-1040-209	L92	XB7-1080-169
L68	XB7-1040-259	L93	XB7-1082-509
		*L94	XB7-1080-359
L71	XB7-1050-089	L95	XB7-1100-209
L72	XB7-1050-109		
L73	XB7-1050-129		

II. NUTS ナット

M. HEXAGON NUTS 六角ナット

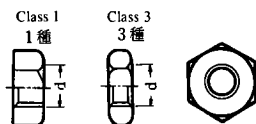How to read Part Numbers 部品番号の見方



X B 7 - 2 1 0 0 - 3 0 9

Hexagon nut
六角ナット

Nominal diameter (d).....M3
呼び径(d)

Material and surface
treatment Steel (black
zinc plated)
材料および表面処理 鋼材 (黒色亜
鉛メッキ)

XB7-210 Class 1
1種

XB7-220 Class 3
3種


Key No.	Part Number (Class 1)	Key No.	Part Number (Class 3)
M03	XB7-2100-309	M53	XB7-2200-309
M04	XB7-2100-409	M54	XB7-2200-409
M05	XB7-2100-509	M55	XB7-2200-509
M06	XB7-2100-609	M57	XB7-2200-809
M07	XB7-2100-809	M58	XB7-2201-009
M11	XB7-2101-009		

III. WASHERS AND SHIM WASHERS

ワッシャ

N, S & T. SHIM WASHERS

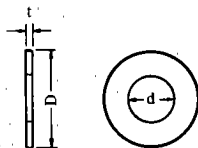標準ワッシャ



d (mm)	D (mm)		
	Class 1 1種	Class 2 2種	Class 3 3種
1.5	—	2.6	3.2
1.8	2.7	3.1	3.7
2.1	3.2	3.6	4.2
2.3	3.6	4	4.6
2.6	4	4.4	5
3.1	4.6	5	5.6
3.6	5.4	5.8	6.4
4.1	5.7	6.6	8
4.6	6.4	7.4	9
5.2	7.2	8.2	10
5.7	7.8	9	11
6.2	8.5	9.8	12
6.7	9.2	10.5	13
7.2	10	11.4	14
7.7	10.6	12.2	15
8.2	11.4	13	16
8.7	12	13.8	17
9.2	12.8	14.6	18
9.7	13.5	15.4	19

Table 2 表 2

How to read Part Numbers

部品番号の見方

X D 1 - 1 1 0 2 - 6 2 5

Shim washer
標準ワッシャ

Inner diameter (d) 2.6 mm
内径(d)

Outer diameter (D) Class 2
外径(D) (See table 2)
2種
(表 2 参照)

Thickness code 0.5 mm
板厚番号 See table 3
表 3 参照

* Material: Brass
材料: 黄銅

Thickness code 板厚番号	t (mm)
0	0.05
1	0.1
2	0.2
3	0.3
4	0.4
5	0.5
6	0.6
7	0.7
8	0.8
9	1

Table 3 表 3


Key No.	Part Number	Key No.	Part Number	Key No.	Part Number
N11	XD1-1102-112	S10	XD1-1105-221	T14	XD1-1107-224
N15	XD1-1102-121	S16	XD1-1105-230	T15	XD1-1107-225
		S17	XD1-1105-231	T18	XD1-1107-228
		S18	XD1-1105-232	T22	XD1-1107-232
N38	XD1-1103-119	S20	XD1-1105-234	T23	XD1-1107-233
N40	XD1-1103-121	S21	XD1-1105-235	T25	XD1-1107-235
N41	XD1-1103-122	S22	XD1-1105-236	T53	XD1-1108-213
N42	XD1-1103-123	S23	XD1-1105-237		
N43	XD1-1103-124			T55	XD1-1108-215
N44	XD1-1103-125			T56	XD1-1108-216
N48	XD1-1103-131	S45	XD1-1105-738	T59	XD1-1108-219
N50	XD1-1103-133	S46	XD1-1105-739	T61	XD1-1108-221
N52	XD1-1103-135	S49	XD1-1106-213	T62	XD1-1108-222
N57	XD1-1103-139			T63	XD1-1108-223
		S52	XD1-1106-216	T64	XD1-1108-224
		S55	XD1-1106-219	T65	XD1-1108-225
N61	UN USE	S57	XD1-1106-221	*T66	XD1-1108-226
N62	XD1-1103-625	S58	XD1-1106-222	T68	XD1-1108-228
N65	XD1-1103-629	S59	XD1-1106-223	T69	XD1-1108-229
N74	XD1-1103-639	S61	XD1-1106-225	T72	XD1-1108-232
		S64	XD1-1106-228	T75	XD1-1108-235
		S65	XD1-1106-229	T79	XD1-1108-239
N75	XD1-1104-111	S67	XD1-1106-231		
N76	XD1-1104-112	S68	XD1-1106-232		
N77	XD1-1104-113	S69	XD1-1106-233	T88	XD1-1109-235
N79	XD1-1104-115	S71	XD1-1106-235	T90	XD1-1109-239
N82	XD1-1104-123	S75	XD1-1106-239		
N84	XD1-1104-125				
*N85	XD1-1104-127				
N88	XD1-1104-129	S88	XD1-1106-728		
N90	XD1-1104-132	S92	XD1-1106-732		
N91	XD1-1104-133	S95	XD1-1106-735		
N92	XD1-1104-135	S99	XD1-1106-739		
N93	XD1-1104-136				
N94	XD1-1104-139				
N95	XD1-1104-615				
N96	XD1-1104-632				
*N97	XD1-1104-134				

U. PLAIN WASHERS, SPRING WASHERS & TOOTHED LOCK WASHERS

平座金, バネ座金および歯付き座金

Plain washers

 平座金



Key No.	Part Number
U01	XD1-2100-207
U03	XD1-2100-307
U04	XD1-2100-407
U05	XD1-2100-507
U06	XD1-2100-607
U07	XD1-2100-807
U08	XD1-2101-007

How to read Part Numbers

部品番号の見方

XD1-2100-307

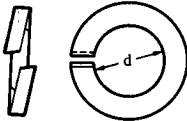
Plain
washer
平座金

Inner diameter (d) 3.0 mm
呼び径(d)

Material and surface
treatment Steel (nickel plated)
材料および表面処理 鋼材 (ニッケルメッキ)

Spring washers

バネ座金



How to read Part Numbers

部品番号の見方

XD1-3100-507

Spring
washer
バネ座金

Inner diameter (d) 5.0 mm
呼び径(d)

Material and surface
treatment Steel (nickel plated)
材料および表面処理 鋼材 (ニッケルメッキ)

Key No.	Part Number
U51	XD1-3100-207
U53	XD1-3100-307
U54	XD1-3100-407
U55	XD1-3100-507
U56	XD1-3100-607
U57	XD1-3100-807
*U58	XD1-3100-609


Key No.	Part Number
*U59	XD1-3100-809
U61	XD1-3101-007

Toothed lock washers

歯付き座金

Inner toothed
type 内歯形

 Outer toothed
type 外歯形



How to read Part Numbers

部品番号の見方

XD1-4100-302

Toothed lock
washer
歯付き座金

Inner diameter (d) 3 mm
呼び径(d)

Material and surface
treatment Stainless (without
surface treatment)
材料および表面処理 ステンレス (表面
処理なし)

XD1-410 Inner toothed type
内歯形

XD1-420 Outer toothed type
外歯形

Key No.	Part Number
U81	XD1-4100-202
U83	XD1-4100-302
U84	XD1-4100-402
U85	XD1-4100-502
U86	XD1-4100-602
U87	XD1-4100-802


Key No.	Part Number
U91	XD1-4200-302
U92	XD1-4200-402
U93	XD1-4200-502
U94	XD1-4200-602
U95	XD1-4200-802

IV. RETAINING RINGS

止め輪

V. E RINGS

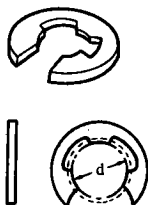E 形止め輪



How to read Part Numbers
部品番号の見方

XD 2 - 1 1 0 0 - 1 7 2

E ring
E 形止め輪

Inner diameter (d)
呼び径(d) 1.7 mm

Material and surface treatment
材料および表面処理

XD2-110 Class 1

1 種

XD2-120 Class 2

2 種

2 ... Stainless (without surface treatment)
ステンレス (表面処理なし)

7 ... Steel (nickel plated)
鋼材 (ニッケルメッキ)

Key No.	Part Number (Class 1)
V04	XD2-1100-172
V06	XD2-1100-242
V07	XD2-1100-282
V08	XD2-1100-322
V09	XD2-1100-372
V10	XD2-1100-402
V11	XD2-1100-422
V12	XD2-1100-502
V13	XD2-1100-582
V14	XD2-1100-602
V15	XD2-1100-642
V16	XD2-1100-742
V17	XD2-1100-802

Key No.	Part Number (Class 2)
V56	XD2-1200-302
V57	XD2-1200-402
V58	XD2-1200-502
V61	XD2-1200-802
V70	XD2-1200-907

W. GRIP RINGS

グリップ止め輪



How to read Part Numbers
部品番号の見方

XD 2 - 2 1 0 0 - 5 0 2

Grip ring
グリップ
止め輪


Inner diameter (d) 5.0 mm
呼び径(d)

Material and surface.....Stainless (without surface treatment)
材料および表面処理 ステンレス (表面処理なし)

Key No.	Part Number
W01	XD2-2100-202
W03	XD2-2100-302
W05	XD2-2100-402
W07	XD2-2100-502
W08	XD2-2100-602
W10	XD2-2100-802
W12	XD2-2101-002

X. C RINGS

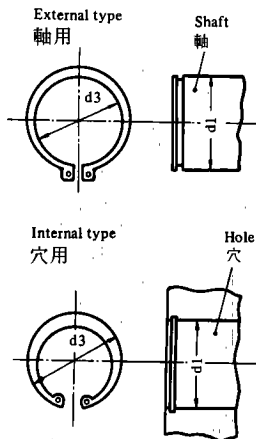C 形止め輪



How to read Part Numbers 部品番号の見方

XD2-3100-202

Nominal diameter (d1) 20 mm
呼び径 (d1)

Material and surface treatment
材料および表面処理

C ring
C 形止め輪

2 Stainless (without surface treatment)
ステンレス (表面処理なし)

8 Steel (phosphated)
鋼材 (鉄鋼磷酸塩被膜)

XD2-310 ... External type
軸用

XD2-320 ... Internal type
穴用

External type 軸用

Nominal diameter 呼び径	d1 (mm)	d3 (mm)
010	10	9.3
012	12	11.1
014	14	12.9
015	15	13.8
016	16	14.7
017	17	15.7
018	18	16.5
020	20	18.5
022	22	20.5
025	25	23.2
028	28	25.9
030	30	27.9
032	32	29.6
035	35	32.2

Table 4 表 4

Internal type 穴用

Nominal diameter 呼び径	d1 (mm)	d3 (mm)	Nominal diameter 呼び径	d1 (mm)	d3 (mm)
010	10	10.7	040	40	43.5
011	11	11.8	042	42	45.5
012	12	13	045	45	48.5
014	14	15.1	047	47	50.5
016	16	17.3	050	50	54.2
018	18	19.5	052	52	56.2
019	19	20.5	055	55	59.2
020	20	21.5	060	60	64.2
022	22	23.5	062	62	66.2
025	25	26.9	068	68	72.5
028	28	30.1	072	72	76.5
030	30	32.1	075	75	79.5
032	32	34.4	080	80	85.5
035	35	37.8	085	85	90.5
037	37	39.8	090	90	95.5
			095	95	100.5

Table 5 表 5

Key No.	Part Number
X01	XD2-3100-102
X03	XD2-3100-122
X06	XD2-3100-148
X07	XD2-3100-152
X10	XD2-3100-168
X11	XD2-3100-172
X13	XD2-3100-182
X15	XD2-3100-202
X16	XD2-3100-208
X18	XD2-3100-228
X20	XD2-3100-258
X24	XD2-3100-308

Key No.	Part Number
X39	XD2-3200-162
X47	XD2-3200-222
X48	XD2-3200-228
X50	XD2-3200-258
X52	XD2-3200-288
X53	XD2-3200-302
X56	XD2-3200-328

Key No.	Part Number
X60	XD2-3200-378
X63	XD2-3200-422
X64	XD2-3200-428
X74	XD2-3200-558
X75	XD2-3200-602
X79	XD2-3200-682
X80	XD2-3200-688

V. PINS

 
 
ピン

Y. SPRING AND DOWEL PINS

スプリングピンおよび平行ピン

Spring pins

スプリングピン

How to read Part Numbers
部品番号の見方



X D 3 - 1 2 0 0 - 1 2 2

Spring pin
スプリングピンNominal diameter (D) 2.0 mm
呼び径(D)Length (l) 12 mm
長さ(l)Material and surface treatment Stainless (without surface treatment)
材料および表面処理 ステンレス(表面処理なし)

Key No.	Part Number	Key No.	Part Number
Y04	XD3-1120-102	Y33	XD3-1250-162
Y14	XD3-1160-122	Y41	XD3-1300-062
Y15	XD3-1160-142	Y42	XD3-1300-082
		Y43	XD3-1300-102
Y21	XD3-1200-052	Y44	XD3-1300-122
Y22	XD3-1200-062	Y45	XD3-1300-142
Y23	XD3-1200-082	Y46	XD3-1300-162
Y24	XD3-1200-102	Y47	XD3-1300-202
Y25	XD3-1200-122	Y49	XD3-1300-322
Y26	XD3-1200-142		
Y27	XD3-1200-162	Y51	XD3-1400-182
Y28	XD3-1200-182		
Y29	XD3-1200-202		

Dowel pins

  平行ピン

How to read Part Numbers
部品番号の見方

X D 3 - 2 2 0 0 - 0 8 2

Dowel pin
平行ピンNominal diameter (d) 2.0 mm
呼び径(d)Length (l) 8. mm
長さ(l)Material and surface treatment Stainless (without surface treatment)
ステンレス(表面処理なし)


Key No.	Part Number	Key No.	Part Number
Y62	XD3-2100-082	Y80	XD3-2200-252
Y71	XD3-2200-082	Y81	XD3-2300-142
Y72	XD3-2200-102	Y82	XD3-2300-162
Y73	XD3-2200-122	Y83	XD3-2300-182
Y74	XD3-2200-142	Y84	XD3-2300-202
Y75	XD3-2200-162	Y85	XD3-2300-222
Y76	XD3-2200-182	Y86	XD3-2300-122
		*Y87	XD3-2300-082

VI. SPACERS

スパーサ

Z. SPACERS

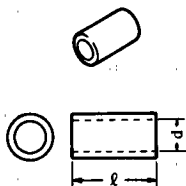スパーサ



How to read Part Numbers

部品番号の見方

XZ1-1300-305

Spacer
スパーサNominal diameter (d) 3.0 mm
呼び径(d)Length (ℓ) 3.0 mm
長さ(ℓ)Material and
surface treatment Steel (zinc plated)
材料および表面処理 鋼(亜鉛メッキ)

Key No.	Part Number	Key No.	Part Number	Key No.	Part Number
Z21	XZ1-1300-305	Z41	XZ1-1400-205	Z61	XZ1-1500-605
Z22	XZ1-1300-405	Z42	XZ1-1400-305	Z63	XZ1-1501-205
Z24	XZ1-1300-605	Z43	XZ1-1400-405	Z64	XZ1-1501-605
Z25	XZ1-1300-705	Z44	XZ1-1400-505	Z69	XZ1-1600-805
Z26	XZ1-1300-805	Z45	XZ1-1400-605	Z81	XZ1-1800-455
Z29	XZ1-1301-205	Z46	XZ1-1400-705		
Z30	XZ1-1301-605	Z47	XZ1-1400-805		
Z31	XZ1-1301-805	Z48	XZ1-1400-905		
		Z49	XZ1-1401-005		
		*Z50	XZ1-1401-105		
		Z51	XZ1-1401-205		
		Z52	XZ1-1401-605		
		Z53	XZ1-1401-805		
		Z54	XZ1-1402-505		

D NUMERICAL INDEX

部品索引表

PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.
—	BA-J311	FA5-5480-000	13 - 3	FA6-7495-000	10 - 1B	FA6-8712-000	16 - 11
FA2-3597-000	BA-J312	FA5-5486-000	12 - 36	FA6-7496-000	15 - 78A	FA6-8716-000	80 - 1
FA2-3648-000	15 - 24	FA5-5489-000	12 - 17A	FA6-7497-000	15 - 78B	FA6-8722-000	85 - 1A
	15 - 44	FA5-5490-000	12 - 7B			FA6-8723-000	85 - 1B
	65 - 45	FA5-5491-000	12 - 12	FA6-7532-000	62 - 5B	FA6-8724-000	62 - 10
FA3-4508-000	18 - 20	FA5-5492-000	12 - 13	FA6-7534-000	40 - 28A	FE9-0027-000	16 - 44
FA3-4509-000	18 - 21	FA5-5495-000	12 - 1	FA6-7536-000	12 - 41	FE9-0153-000	15 - 91
FA3-4518-000	18 - 25		62 - 7	FA6-7538-000	16 - 48	FF2-0791-000	13 - 7
FA3-4552-000	18 - 41	FA5-5499-000	18 - 44	FA6-7540-000	16 - 37A	FF2-0792-000	40 - 31
FA3-4683-000	18 - 19	FA5-5501-000	15 - 28	FA6-7543-000	18 - 56		75 - 31
FA3-4725-000	18 - 23	FA5-5505-000	12 - 38	FA6-7544-020	17 - 11	FF2-0793-020	15 - 86
FA5-5365-020	18 - 3	FA5-5507-000	15 - 27	FA6-7545-000	16 - 50		16 - 28
FA5-5368-000	18 - 4	FA5-5508-000	12 - 2	FA6-7546-000	16 - 51		40 - 25
FA5-5367-000	18 - 5		62 - 6	FA6-7548-000	18 - 22	FF2-0794-000	75 - 26
FA5-5368-000	18 - 6	FA5-5521-000	40 - 13	FA6-7552-000	60 - 1B	FF2-0794-020	40 - 26
FA5-5369-000	18 - 7		75 - 13	FA6-7555-000	15 - 18	FF2-0795-000	75 - 27
FA5-5372-000	18 - 10	FA5-5522-000	40 - 14	FA6-7558-000	15 - 56	FF2-0795-020	40 - 27
FA5-5375-000	18 - 12		75 - 14	FA6-7561-020	30 - 5	FF2-0796-000	15 - 46
FA5-5376-000	18 - 13	FA5-5532-000	30 - 7B	FA6-7562-000	30 - 2	FF2-0797-000	20 - 5
FA5-5377-000	18 - 14	FA5-5537-000	13 - 6	FA6-7565-000	35 - 1	FF2-0800-000	41 - 8
FA5-5381-030	15 - 1	FA5-5543-000	13 - 1B	FA6-7566-000	15 - 61	FF2-0801-000	15 - 85
FA5-5388-000	15 - 4	FA5-5544-000	13 - 1C	FA6-7567-000	15 - 62	FF2-0802-000	15 - 47
FA5-5389-000	15 - 5	FA6-2238-000	12 - 35	FA6-7568-000	15 - 63	FF2-0805-000	22 - 6
FA5-5390-000	15 - 6	FA6-2513-000	15 - 90	FA6-7569-000	18 - 1	FF2-0807-000	40 - 29
FA5-5391-000	15 - 7	FA6-5173-000	22 - 8	FA6-7570-000	18 - 2	FF2-0808-000	15 - 48
FA5-5392-000	15 - 8	FA6-5174-000	22 - 1	FA6-7571-000	18 - 8	FF2-0809-000	15 - 49
FA5-5394-000	35 - 5	FA6-5181-000	12 - 17C	FA6-7572-000	18 - 9	FF2-0810-000	21 - 9
FA5-5395-020	35 - 6		12 - 18A	FA6-7573-000	18 - 37	FF2-0813-000	15 - 82
FA5-5398-000	15 - 9	FA6-5826-000	18 - 42	FA6-7576-000	12 - 24	FF2-0814-000	15 - 84
FA5-5403-000	13 - 4	FA6-5827-000	18 - 43	FA6-7582-000	15 - 70	FF2-0816-000	40 - 32
FA5-5404-000	13 - 5	FA6-5844-000	12 - 6A	FA6-7583-000	15 - 71	FF2-0817-000	40 - 30
	17 - 6	FA6-5845-000	12 - 6A	FA6-7584-000	15 - 72	FF2-0820-000	15 - 52
	30 - 3	FA6-5846-000	12 - 6A	FA6-7585-000	15 - 73	FF2-0824-000	12 - 19
FA5-5407-000	15 - 10	FA6-5847-000	12 - 6A	FA6-7587-000	15 - 74	FF2-0829-000	12 - 26
	65 - 43	FA6-7376-000	18 - 1	FA6-7589-000	15 - 75	FF2-0830-000	12 - 27
FA5-5408-000	15 - 11	FA6-7378-000	15 - 17	FA6-7593-000	18 - 47A	FF2-0832-000	62 - 20
	65 - 44	FA6-7379-000	18 - 3	FA6-8814-020	65 - 34	FF2-0833-000	12 - 9
FA5-5409-000	15 - 12	FA6-7381-000	18 - 4	FA6-8815-000	65 - 64		62 - 8
	65 - 46	FA6-7383-000	16 - 5	FA6-8817-000	63 - 1	FF2-0875-000	30 - 10
FA5-5410-000	15 - 13	FA6-7384-000	16 - 6	FA6-8818-000	62 - 1	FF2-3198-020	13 - 1
	65 - 42	FA6-7385-000	16 - 7	FA6-8819-000	65 - 35	FF2-3887-000	41 - 7
FA5-5411-000	15 - 14	FA6-7386-000	16 - 8	FA6-8822-020	65 - 1	FF2-4601-030	12 - 6
FA5-5413-000	40 - 1	FA6-7387-020	18 - 9	FA6-8823-000	65 - 2	FF2-4602-030	12 - 6
	15 - 1	FA6-7388-000	16 - 10	FA6-8824-020	65 - 3	FF2-4603-030	12 - 6
FA5-5416-000	40 - 2	FA6-7391-000	16 - 12	FA6-8825-000	65 - 6	FF2-4604-030	12 - 8
FA5-5417-000	40 - 3	FA6-7392-000	18 - 13	FA6-8826-000	65 - 7	FF2-4605-000	12 - 17
FA5-5418-000	40 - 4	FA6-7400-000	17 - 7	FA6-8827-000	65 - 86	FF2-4606-000	12 - 18
	75 - 4	FA6-7401-000	17 - 1	FA6-8828-000	65 - 8	FF2-4608-000	15 - 50
FA5-5419-000	40 - 5	FA6-7402-000	17 - 2	FA6-8829-000	65 - 85	FF2-4609-000	15 - 51
	75 - 5	FA6-7407-000	17 - 3	FA6-8831-000	65 - 4	FF2-4610-000	15 - 16
FA5-5422-000	75 - 5	FA6-7408-000	17 - 4	FA6-8832-000	65 - 5	FF2-4611-000	18 - 26
FA5-5423-000	40 - 6	FA6-7409-000	17 - 5	FA6-8833-000	65 - 9	FF2-4613-000	18 - 47
	75 - 7	FA6-7417-000	35 - 2	FA6-8834-000	65 - 12	FF2-4614-000	18 - 48
FA5-5426-000	40 - 8	FA6-7418-000	35 - 3	FA6-8835-000	65 - 13	FF2-4615-000	12 - 25
	75 - 8	FA6-7429-000	12 - 6B	FA6-8836-000	65 - 14	FF2-4616-020	12 - 7
FA5-5426-000	40 - 9	FA6-7430-000	12 - 6B	FA6-8837-000	65 - 66	FF2-4617-000	35 - 4
	75 - 36	FA6-7431-000	12 - 3	FA6-8839-000	65 - 15	FF2-4618-000	16 - 27
FA5-5427-000	40 - 10	FA6-7434-000	12 - 10	FA6-8840-000	65 - 16	FF2-4621-000	65 - 63
	75 - 10	FA6-7435-000	12 - 11	FA6-8841-000	65 - 17	FF2-4622-000	83 - 7
FA5-5428-000	40 - 11	FA6-7436-000	18 - 29	FA6-8842-000	65 - 18	FF2-4624-000	75 - 29
	75 - 11	FA6-7437-000	18 - 30	FA6-8843-000	65 - 19	FF2-4625-000	75 - 35
FA5-5429-000	40 - 12	FA6-7439-000	10 - 2	FA6-8844-000	65 - 20	FF2-4626-000	65 - 76
	75 - 12	FA6-7442-000	18 - 31	FA6-8845-000	65 - 21	FF2-4629-000	12 - 47
FA5-5432-000	40 - 37	FA6-7443-000	18 - 35	FA6-8848-000	70 - 5	FF2-4630-000	75 - 28
FA5-5434-000	15 - 85A	FA6-7445-000	18 - 34	FA6-8849-000	70 - 3	FF2-4632-000	65 - 78
FA5-5443-000	65 - 68	FA6-7450-000	15 - 2	FA6-8850-000	65 - 22	FF2-4634-020	16 - 37E
FA5-5445-000	65 - 69	FA6-7451-000	15 - 3	FA6-8851-000	70 - 1	FF2-4635-020	63 - 3
FA5-5448-020	15 - 19	FA6-7457-000	12 - 6C	FA6-8852-000	70 - 4	FF2-4637-000	65 - 62
FA5-5450-000	41 - 5A	FA6-7458-000	12 - 6D	FA6-8853-000	70 - 2	FF2-4638-000	65 - 11
FA5-5451-000	41 - 5C		62 - 5A	FA6-8855-000	65 - 75	FF2-4639-000	16 - 47
	41 - 6A	FA6-7460-000	16 - 34	FA6-8857-000	65 - 23	FF2-4640-000	62 - 5
FA5-5453-000	41 - 1	FA6-7461-000	12 - 5	FA6-8858-000	65 - 24	FF2-4658-000	40 - 28
FA5-5454-000	41 - 2	FA6-7462-000	30 - 1	FA6-8859-000	65 - 25	FF2-4659-020	30 - 4
FA5-5455-000	41 - 3	FA6-7463-000	18 - 39	FA6-8860-000	65 - 28	FF2-4660-000	41 - 5
FA5-5456-000	41 - 4	FA6-7465-000	16 - 14	FA6-8861-000	65 - 29	FF2-4661-000	30 - 7
FA5-5457-000	15 - 20	FA6-7466-000	18 - 38	FA6-8862-000	65 - 30	FF2-4662-000	15 - 79
	65 - 47	FA6-7467-000	16 - 15	FA6-8863-020	65 - 31	FF2-4663-080	90 - Q 3
FA5-5459-000	15 - 21	FA6-7470-000	16 - 33	FA6-8864-000	65 - 32	FF2-4669-000	80 - 2
	16 - 45	FA6-7472-000	15 - 55	FA6-8867-020	65 - 67	FF2-4670-020	80 - 3
FA5-5460-000	15 - 22	FA6-7475-000	16 - 16	FA6-8870-000	75 - 9	FF2-4690-000	20 - 7
FA5-5461-000	15 - 23	FA6-7476-000	12 - 22	FA6-8871-000	63 - 2	FF2-4691-000	60 - 3
	75 - 30	FA6-7477-000	15 - 54	FA6-8873-000	65 - 26	FF2-4693-000	16 - 46
FA5-5462-000	15 - 24	FA6-7478-000	15 - 51A	FA6-8885-000	60 - 2	FF2-4694-000	12 - 21
FA5-5463-000	15 - 25	FA6-7479-000	13 - 1A	FA6-8886-000	75 - 37B	FF2-4695-000	15 - 78
FA5-5465-000	21 - 1		63 - 3A	FA6-8888-000	65 - 10	FF2-4696-000	10 - 1
FA5-5466-000	21 - 2	FA6-7485-000	15 - 19A	FA6-8890-000	65 - 27	FF2-4699-000	16 - 39
	70 - 10		16 - 9A	FA6-8891-000	62 - 2	FF2-5383-000	16 - 32
FA5-5467-000	21 - 3	FA6-7487-020	40 - 6	FA6-8892-000	62 - 5C	FG2-1913-030	17 -
FA5-5468-000	21 - 4	FA6-7488-000	12 - 34	FA6-8897-000	65 - 82	PG2-1919-000	60 - 1
FA5-5469-000	18 - 52	FA6-7490-000	16 - 40	FA6-8700-000	65 - 89	PG2-1935-000	12 - 30
FA5-5473-000	20 - 1	FA6-7491-000	17 - 10	FA6-8705-000	75 - 28A	PG2-1938-030	10 -
FA5-5479-000	13 - 2	FA6-7493-000	41 - 8	FA6-8710-000	16 - 37B	PG2-1939-020	30 -
		FA6-7494-000	10 - 1A	FA6-8711-000	16 - 37F	PG2-1940-000	35 -

PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.
FG2-1947-060	90 -	FS2-3471-000	16 - 42	VR5-0700-201	90 -VR 7	VS3-0178-003	B -J141
FG2-1949-020	13 -	FS2-3474-000	65 - 40	VR5-0700-502	90 -VR 2	BA-J306	B -J135
FG2-2186-000	95 -	FS2-3475-000	65 - 41		90 -VR 3	VS3-0198-008	B -J135
FG2-2186-000	41 -	FS2-3476-000	70 - 9		90 -VR 4	VS3-0200-002	B -J115
FG2-2195-000	35 - 7	FS2-9019-000	15 - 41		90 -VR 5	VS3-0214-002	B -J 64
FG2-2197-000	12 - 28		16 - 23	VR5-0780-339	90 -R 68	VS3-0236-002	B -J 77
FG2-2202-030	75 -		18 - 53	VR5-0810-380	90 -R 26	VS3-0297-020	B -J 54
FG2-2203-000	70 -		30 - 6	VR5-4590-479	90 -R 28	VS3-0297-026	B -J 54
FG2-2204-020	63 -	FS2-9020-000	12 - 15	VR5-6640-471	90 -R 45	VS3-5002-002	B -J 53
FG2-2404-000	80 - 4		15 - 65		90 -R 52		B -J 93
FG2-2608-020	16 - 37		40 - 20	VR7-0981-002	90 -R 61	VS3-5002-006	B -J 51
FH2-5821-000	B -J 52		63 - 8	VR7-0981-272	90 -R 62	VS4-0003-002	B -J 58
FH2-5822-000	B -J 52		65 - 71	VR7-0982-001	90 -R 3		B -J 90
FH2-5823-000	B -J 52		75 - 20		90 -R 4		B -J114
FH2-5826-000	B -J 52	FS2-9357-000	12 - 33	VR7-0983-831	90 -R 1		B -J118
FH3-0253-000	90 -L 1	FS3-0195-000	16 - 15		90 -R 2		B -J119
FH4-3388-020	95 -Q 6	FS3-0196-000	15 - 28	VR9-5009-000	90 -R 54		B -J120
FH6-3208-020	15 - 82		65 - 52		90 -R 56		B -J126
FH6-3210-000	16 - 31	FS3-0197-000	15 - 29	VR9-5049-000	90 -R 10		B -J128
FH6-3211-020	15 - 69	FS3-0198-000	15 - 31	VR9-5060-000	90 -RA 2		B -J129
FH6-3214-000	30 - 9	FS3-0200-000	15 - 32	VR9-5061-000	90 -RA 3	VS4-0003-003	B -J 56
FH6-3216-000	18 - 32	FS3-0201-000	15 - 33		90 -RA 4		B -J 61
FH6-3218-000	12 - 29	FS3-0202-000	15 - 34	VS1-0093-002	90 -J 7	VS4-0003-006	B -J 55
FH6-3221-000	22 - 10		65 - 53	VS1-0093-006	90 -J 2	VS4-0003-008	B -J 55
FH6-3222-000	65 - 90	FS3-0203-000	40 - 15	VS1-0178-002	B -J140	VS4-0003-010	B -J 59
FH6-3226-000	65 - 33		75 - 15	VS1-0178-003	B -J124	VS4-0003-012	B -J 79
FH6-3227-000	65 - 84	FS3-0204-000	40 - 16	VS1-0279-002	B -J 75	VS4-0004-002	B -J 57
FH6-3228-000	65 - 85		75 - 16		B -J 80	VR1-8148-331	90 -R 15
FH6-3229-000	75 - 24	FS3-0205-000	40 - 17		B -J 84	VV1-7118-100	90 -R 16
FH6-3230-000	75 - 24		75 - 17		B -J 89		90 -R 48
FH6-3231-000	75 - 25	FS3-0206-000	22 - 2		B -J 91	VV1-7118-101	90 -R 70
FH6-3232-000	12 - 39	FS3-0902-000	16 - 18		B -J 94		90 -R 71
FH6-3237-000	16 - 52	FS3-0903-000	16 - 19		B -J 96	VV1-7118-102	90 -R 37
FH6-3249-000	12 - 46	FS3-0904-000	15 - 30		B -J122		90 -R 47
FH6-3250-000	62 - 9	FS3-0905-000	15 - 76		B -J123		90 -R 53
FH7-1601-000	16 - 29	FS3-0906-000	18 - 40		B -J130		90 -R100
	21 - 11	FS3-0912-000	12 - 42		BA-J303		90 -R110
FH7-1737-000	22 - 7	FS3-0913-000	12 - 43		BA-J307		90 -R111
FH7-1786-000	15 - 79	FS3-0914-000	12 - 44		BA-J308		90 -R112
FH7-1787-000	12 - 45	FS3-0917-000	65 - 38		BA-J311	VV1-7118-103	90 -R 7
FH7-5159-000	70 - 14	FS3-0918-000	70 - 7		BA-J315		90 -R 14
FH7-5174-000	40 - 36	FS3-0919-000	65 - 37	VS1-0279-003	B -J 71		90 -R 18
FH7-5175-020	12 - 16	FS3-0920-000	65 - 38		B -J 86		90 -R 19
FH7-5280-000	21 - 10	FS3-0921-000	70 - 8		B -J 87		90 -R 20
FH7-5294-000	15 - 68	FS3-0975-000	70 - 6		B -J121		90 -R 21
FH7-5295-000	16 - 49	FS3-2173-000	18 - 17	VS1-0279-005	B -J 98		90 -R 22
FH7-5296-000	15 - 58	FS3-2174-000	15 - 36	VS1-0279-006	B -J 99		90 -R 23
FH7-5297-000	65 - 57		18 - 16		B -J117		90 -R 24
	65 - 74	FS3-2176-000	15 - 35	VS1-0279-008	B -J 66		90 -R 25
FH7-5300-000	65 - 56		65 - 49	VS1-0279-010	B -J 70		90 -R 27
FH7-5337-000	20 - 37D	FS3-2177-000	15 - 36		B -J132		90 -R 29
FH7-7087-020	16 - 36		65 - 50	VS1-0279-012	B -J108		90 -R 30
FH7-7094-000	15 - 87	FS3-2178-000	15 - 37	VS1-0279-014	B -J 85		90 -R 31
FH7-7108-000	16 - 35	FS3-2179-000	40 - 19		B -J 13		90 -R 35
FH7-7160-000	40 - 24		75 - 19	VS1-0437-002	B -J 4		90 -R 36
FH7-7247-000	15 - 80	FS3-2180-000	75 - 19	VS1-0571-002	90 -J 19		90 -R 42
FH7-7249-000	15 - 80	FS3-2180-020	40 - 19		90 -J 8		90 -R 60
FS1-1189-000	65 - 55	FS3-2182-000	65 - 73	VS1-0715-005	90 -J 20		90 -R 75
	12 - 8	FS3-2184-000	21 - 5	VS1-0715-006	90 -J 10		90 -R 76
	15 - 45	FS3-2185-000	12 - 14	VS1-0848-003	90 -J 18		90 -R 79
	40 - 22	FS3-2186-000	18 - 36	VS1-0848-005	90 -J 14		90 -R 81
	65 - 79		65 - 51		B -J 15		90 -R 82
	70 - 15	FS3-2705-000	15 - 69	VS1-0848-006	90 -J 6		90 -R 86
	75 - 22	FS3-2869-000	18 - 20	VS1-0848-007	90 -J 1		90 -R 87
FS1-1213-000	15 - 81	FS3-2870-000	15 - 64		90 -J 16		90 -R 88
	16 - 21	FS3-2872-000	16 - 43	VS1-0848-008	90 -J 5		90 -R 89
	40 - 21	FS3-2873-000	12 - 32	VS1-5205-014	90 -J 9		90 -R 90
	65 - 81		65 - 39	VS1-5205-020	90 -J 12		90 -R 93
	70 - 16	FS3-2877-000	65 - 83	VS1-5205-026	90 -J 11		90 -R 94
FS1-1528-000	16 - 38	FS3-5011-000	18 - 19	VS1-5351-002	90 -J 3		90 -R 95
	16 - 49	FS3-5012-000	16 - 37G	VS3-0034-006	90 -TP 1		90 -R107
FS1-9003-000	12 - 23	FS3-5013-000	12 - 40	VS3-0061-002	B -J136		90 -R108
	16 - 22	FS3-5014-000	16 - 37C		B -J137		90 -R114
FS1-9005-000	15 - 77	FS8-8252-000	30 - 7A	VS3-0101-003	B -J113		90 -R115
FS1-9009-000	15 - 66	FS8-8253-000	41 - 5B	VS3-0103-003	BA-J301		90 -R117
	40 - 23	FS9-8736-000	13 - 8	VS3-0143-003	B -J133		90 -R119
	65 - 70	FY1-0769-000	10 - 3	VS3-0143-005	B -J110	VV1-7118-104	90 -R 11
FS1-9167-000	15 - 67	FY1-0770-000	65 - 87		B -J134		90 -R 63
	65 - 72	PCB	BA-J313	VS3-0143-007	B -J 50	VV1-7118-105	90 -R 40
FS1-9199-000	18 - 57		BA-J314	VS3-0143-008	B -J131		90 -R116
FS2-1052-000	15 - 42		BA-J315		BA-J312	VV1-7118-122	90 -R 72
	75 - 80		BA-J316	VS3-0143-012	B -J100		90 -R 74
	75 - 21	VC1-2351-107	90 -C 3	VS3-0175-002	B -J 76	VV1-7118-151	90 -R109
FS2-3052-000	15 - 39	VC1-2351-477	90 -C 2	VS3-0178-002	B -J 92	VV1-7118-153	90 -R 64
FS2-3053-000	22 - 3		90 -C 33		B -J139	VV1-7118-181	90 -R102
FS2-3054-000	21 - 6	VC1-2501-475	90 -C 6	VS3-0178-003	B -J 60		90 -R103
	22 - 4		90 -C 41		B -J 62		90 -R104
	70 - 11	VC5-5850-155	90 -C 21		B -J 63	VV1-7118-220	90 -R 13
FS2-3055-000	15 - 40		90 -C 43		B -J 68		90 -R 17
FS2-3056-000	21 - 8		90 -C 44		B -J 72	VV1-7118-221	90 -R105
FS2-3057-000	20 - 2	VR1-1121-821	90 -R 9		B -J 88		90 -R106
FS2-3058-000	20 - 3	VR4-1084-103	90 -RA 1		B -J 95	VV1-7118-222	90 -R 12
FS2-3470-000	16 - 17	VR5-0700-103	90 -VR 1		B -J138		90 -R 41

PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.
VV1-7118-222	90 -R 58	WA1-5140-000	90 -D 7	WS3-0885-000	B -J 56	XB1-2231-008	65 - 88
	90 -R 73		90 -D 13		B -J 57	XB1-2260-409	35 - 8
	90 -R 80		90 -D 14		B -J 58	XB1-2300-309	40 - 34
VV1-7118-224	90 -R118		90 -D 19		B -J 59		75 - 34
VV1-7118-272	90 -R 91		90 -D 23		B -J 61	XB4-7300-606	80 - 6
	90 -R 92		90 -D 26		B -J 78	XB6-1301-209	75 - 33
VV1-7118-331	90 -R 43		90 -D 27		B -J 79	XB6-2301-209	40 - 33
	90 -R 48	WA2-0502-000	90 -Q 46		B -J 90	XB6-6301-609	18 - 54
	90 -R 50		90 -Q 69		B -J114	XB6-7300-309	15 - 69
	90 -R 55		90 -Q 70		B -J118		21 - 12
	90 -R 69		90 -Q 71		B -J119	XF9-0237-000	18 - 33
	90 -R 84	WA2-0505-000	90 -Q 13		B -J120	XF9-0238-000	15 - 43
	90 -R 99		90 -Q 14		B -J126	XF9-0239-000	20 - 4
	90 -R100		90 -Q 23		B -J129	XF9-0240-000	21 - 7
	90 -R101		90 -Q 25		B -J129	XF9-0241-000	22 - 5
VV1-7118-332	90 -R 57		90 -Q 27	WS3-0907-000	B -J115	XF9-0333-000	16 - 24
VV1-7118-472	90 -R 8		90 -Q 29	WS3-0935-000	B -J136	XF9-0335-000	65 - 54
	90 -R 32		90 -Q 31		B -J137	XF9-0336-000	70 - 12
	90 -R 59		90 -Q 35	WS3-0962-000	B -J 51	XG9-0237-000	15 - 57
	90 -R 77		90 -Q 47		B -J 53		16 - 25
	90 -R 83		90 -Q 54		B -J 93		18 - 55
	90 -R 85		90 -Q 58	WS3-0998-000	BA-J301	XZ9-0326-000	16 - 26
	90 -R113		90 -Q 64	WS3-1105-000	B -J 50		
	90 -R120		90 -Q 86		B -J100		
VV1-7118-473	90 -R 33		90 -Q 67		B -J110		
VV1-7118-474	90 -R 44		90 -Q 68		B -J131		
VV1-7118-513	90 -R 5	WA2-0540-000	95 -Q 1		B -J133		
VV1-7118-561	90 -R 49		95 -Q 3		B -J134		
VV1-7118-562	90 -R 51	WA2-0808-000	90 -Q 34		BA-J312		
VV1-7118-682	90 -R 34		90 -Q 41	WS3-1115-000	B -J127		
VV1-7118-752	90 -R 65	WA2-1266-000	90 -Q 50	WS3-1153-000	B -J 60		
	90 -R 66		90 -Q 53		B -J 62		
	90 -R 67	WA2-1292-000	90 -Q 17		B -J 63		
VV1-7118-822	90 -R 6		90 -Q 43		B -J 64		
VW4-2027-104	90 -C 12		90 -Q 80		B -J 66		
	90 -C 16		90 -Q 86		B -J 68		
	90 -C 20	WA2-1393-000	90 -Q 48		B -J 70		
	90 -C 24		90 -Q 51		B -J 71		
	90 -C 25	WA2-5181-000	90 -Q 37		B -J 72		
	90 -C 27		90 -Q 38		B -J 75		
	90 -C 36		90 -Q 39		B -J 76		
	90 -C 37		90 -Q 40		B -J 80		
	90 -C 38		90 -Q 42		B -J 84		
	90 -C 39		90 -Q 44		B -J 86		
	90 -C 40		95 -Q 7		B -J 87		
VW4-2037-104	90 -C 13		95 -Q 9		B -J 88		
	90 -C 15	WA2-5182-000	90 -Q 24		B -J 89		
	90 -C 22		90 -Q 26		B -J 91		
	90 -C 23		90 -Q 28		B -J 92		
	90 -C 35		90 -Q 30		B -J 94		
VW4-2234-221	90 -C 49		90 -Q 32		B -J 95		
VW4-2234-300	90 -C 46		90 -Q 33		B -J 96		
VW4-2835-102	90 -C 47	WA2-5190-000	90 -Q 36		B -J 98		
	90 -C 14		90 -Q 49		B -J 99		
	90 -C 17		90 -Q 52		B -J108		
	90 -C 28	WA2-5247-000	90 -Q 56		B -J117		
	90 -C 29	WA2-5248-000	90 -Q 57		B -J121		
	90 -C 30		90 -Q 59		B -J122		
	90 -C 31	WA2-5249-000	90 -Q 16		B -J123		
	90 -C 42	WA2-5250-000	95 -Q 8		B -J124		
	90 -C 45	WA3-4127-000	90 -Q 20		B -J130		
VW4-2835-221	90 -C 7		90 -Q 45		B -J132		
	90 -C 8	WA3-4330-000	90 -Q 4		B -J138		
	90 -C 9	WA3-4464-000	90 -Q 2		B -J139		
	90 -C 10	WA3-4465-000	90 -Q 10		B -J140		
	90 -C 11	WA3-5033-000	90 -Q 11		B -J141		
	90 -C 18	WA3-5034-000	90 -Q 21		BA-J307		
	90 -C 19	WA3-6256-000	90 -Q 9		BA-J308		
	90 -C 26	WA3-5558-000	90 -Q 5		BA-J311		
VW4-2835-222	90 -C 1	WA3-5559-000	90 -Q 1		BA-J315		
WA1-0023-000	90 -DA 1	WA3-5604-000	90 -Q 8	WS3-1239-000	B -J113		
WA1-0024-000	90 -DA 2	WA4-0928-000	90 -Q 6	WS3-1264-000	BA-J306		
WA1-0777-000	90 -D 2	WA4-0937-000	90 -Q 12	WS3-1288-000	B -J 54		
	90 -D 3	WA4-1246-000	90 -Q 55		B -J 77		
	90 -D 5	WA4-5222-000	90 -Q 15		B -J 85		
	90 -D 9	WC4-0150-000	65 - 59	WS4-0181-000	BA-J303		
	90 -D 11	WC4-0215-000	15 - 53	WT1-0122-000	90 -CP 1		
	90 -D 15	WC4-0216-000	18 - 28		90 -CP 7		
	90 -D 16	WC8-0162-000	90 -SW 2	WT1-0345-000	B -J135		
	90 -D 17	WC8-0234-000	90 -SW 1	WT2-0001-006	65 - 60		
	90 -D 18	WD3-0040-000	90 -CB 1	WT2-0200-000	65 - 62		
	90 -D 20	WG1-0238-000	90 -LED 1	WT2-0242-000	15 - 60		
	90 -D 22		90 -LED 2		40 - 35		
WA1-0814-000	90 -D 24	WG8-0164-000	15 - 15	WT2-0351-000	65 - 61		
WA1-0822-000	90 -ZD 1		18 - 30	WT2-0403-000	80 - 5		
	90 -ZD 2		18 - 51	WT2-0431-000	18 - 27		
WA1-0972-000	90 -D 6		22 - 9	WT2-0510-000	18 - 46		
	90 -D 8		30 - 8	XA9-0285-000	21 - 13		
	90 -D 10		65 - 58	XA9-0308-000	13 - 1D		
	90 -D 12	WK2-0150-000	90 -X 2	XA9-0458-000	15 - 88		
	90 -D 21	WK2-5077-000	90 -X 1		75 - 37		
WA1-5140-000	90 -D 1	WS3-0582-000	90 -J 17	XA9-0519-000	18 - 45		
	90 -D 4	WS3-0885-000	B -J 55	XB1-2200-309	12 - 37		